

Fisher-Price®



P7695



P8600



P7687

Please keep this instruction sheet for future reference as it contains important information.

Requires three "AAA" batteries (included) for operation.


Adult assembly is required for battery replacement.

Tool required for battery replacement: Phillips screwdriver (not included).

Each sold separately and subject to availability.

Illustrations and photos included in this instruction sheet may be different from the toy you have purchased.

Battery Replacement

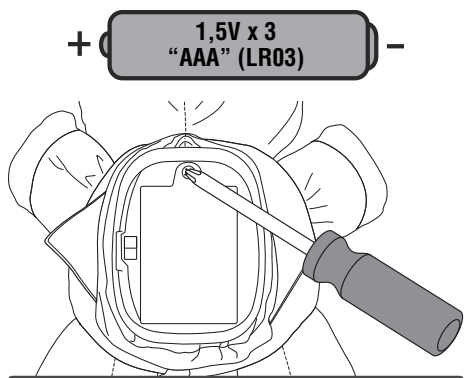

For best performance, we recommend replacing the batteries that came with this toy with three, new "AAA" (LR03) alkaline batteries.

- Open the fasteners on the back of the toy and locate the battery compartment inside.
- Loosen the screw in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Remove the exhausted batteries and throw them away.
- Insert three new "AAA" (LR03) **alkaline** batteries.
- Replace the battery compartment door and tighten the screw. Close the fasteners on the toy.
- If this product begins to operate erratically, you may need to reset the electronics. Slide the power/volume switch off and then back on.
- When sounds from this toy become faint or stop, it's time for an adult to change the batteries.




- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Fun Songs and Friendly Animal Sounds

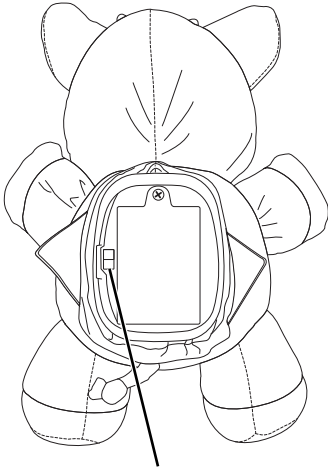

Power/Volume Switch



Press for music and sounds!

-
- Open the fasteners on the back of the toy.
 - Slide the power/volume switch to ON with low volume 🔊 or ON with high volume 🔊.
 - Press the tummy to hear a fun song. Press again for a friendly animal sound.
 - When finished playing with this toy, slide the power/volume switch OFF ○.

Care

- Wipe this toy with a clean cloth dampened with a mild soap and water solution. Do not immerse this toy.
- This toy has no consumer serviceable parts. Do not take this toy apart.

Consumer Information

Great Britain: Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk

Australia: Mattel Australia Pty. Ltd.,
658 Church Street, Locked Bag #870,
Richmond, Victoria 3121 Australia.
Consumer Advisory Service 1300 135 312.

New Zealand: 16-18 William Pickering
Drive, Albany 1331, Auckland.

Asia: Mattel East Asia Ltd, Room 1106,
South Tower, World Finance Centre,
Harbour City, Tsimshatsui, HK, China.

Malaysia: Diimport & Diedarkan Oleh:
Mattel SEA Ptd Ltd. (993532-P) Lot 13.5,
13th Floor, Menara Lien Hoe, Persiaran
Tropicana Golf Country Resort, 47410 PJ.
Tel: +603-3341 9052.