

Fisher-Price®

P9130



Please keep these instructions for future reference
as they contain important information.

Requires two "AA" batteries (included).


 
Adult assembly is required for battery replacement.

Tool required for battery replacement:

Phillips screwdriver (not included)

www.fisher-price.co.uk

Battery Replacement

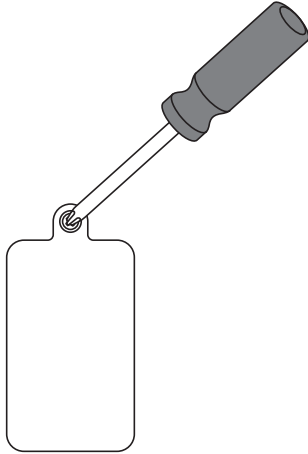

For best performance, we recommend replacing the batteries that came with this toy with two new "AA" (LR6) alkaline batteries.

- Locate the battery compartment on the bottom of the vehicle.
- Loosen the screw with a Phillips screwdriver and remove the battery compartment door.
- Remove the exhausted batteries and throw them away.
- Insert two "AA" (LR6) **alkaline** batteries.
- Replace the battery compartment door and tighten the screw. Do not over-tighten.
- If this product begins to operate erratically, you may need to reset the electronics. Remove the batteries and replace them in the toy.
- When sounds from this toy become faint or stop, it's time for an adult to change the batteries.



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Learn Your ABCs and Fun Tunes



Put a figure in the driver's seat and press for songs and sound effects.



Hear fun sounds when you open the truck door.



Count the cards when you drop them in the slot!

Care

- Wipe the toy with a clean, damp cloth. Do not immerse.
- This toy has no consumer serviceable parts. Do not take this toy apart.

Consumer Information

Great Britain: Vanwall Business Park,
Maidenhead SL6 4UB.

Helpline: 01628 500303.

www.service.mattel.com/uk.

Australia: Mattel Australia Pty. Ltd.,
658 Church Street, Locked Bag #870,
Richmond, Victoria 3121 Australia.
Consumer Advisory Service 1300 135 312.

New Zealand: 16-18 William Pickering
Drive, Albany 1331, Auckland.

Asia: Mattel East Asia Ltd, Room 1106,
South Tower, World Finance Centre,
Harbour City, Tsimshatsui, HK, China.

Malaysia: Diimport & Diedarkan Oleh:
Mattel SEA Ptd Ltd. (993532-P) Lot 13.5,
13th Floor, Menara Lien Hoe, Persiaran
Tropicana Golf Country Resort, 47410 PJ.
Tel: +603-3341 9052.