



L4810 M2126



Please keep this instruction sheet for future reference, as it contains important information.

For proper function of this toy, you must complete assembly of the nose and landing gear.

Requires four "AA" batteries (included).

Adult assembly is required.

Tool required for battery replacement: Phillips screwdriver (not included).



theplanetheroes.com

ASSEMBLY



- **“Snap”** the nose gear, both main landing gear pieces and the handle to the bottom of the shuttle.

BATTERY REPLACEMENT



For best performance, we recommend replacing the batteries that came with this toy with four, new alkaline “AA” (LR6) batteries.

- Locate the battery compartment on the bottom of the toy.
- Loosen the screw in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Insert four, new “AA” (LR6) **alkaline** batteries.

Hint: We recommend using **alkaline** batteries for longer battery life.

- Replace the battery compartment door and tighten the screw.
- If this toy begins to operate erratically, you may need to reset the electronics. Slide the power switch off and then back on again.
- When lights, sounds or movement become faint or stop, it’s time for an adult to change the batteries!



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.



CONSUMER ASSISTANCE

Call toll free: 1-800-432-5437 (US & Canada only)
M-F 9AM to 7PM / SAT 11AM to 5PM (EST)

 service.fisher-price.com

Write to us at: Fisher-Price® Consumer Relations,
636 Girard Avenue, East Aurora, New York 14052.

Hearing-impaired consumers using TTY/TDD equipment,
please call 1-800-382-7470.

For countries outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303,
www.service.mattel.com/uk

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.
Consumer Advisory Service 1300 135 312.

New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.

Asia: Mattel East Asia Ltd, Room 1106, South Tower,
World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Fisher-Price, Inc., a subsidiary of Mattel, Inc.,
East Aurora, NY 14052 U.S.A.

©2008 Mattel, Inc. All Rights Reserved.

® and ™ designate U.S. trademarks of Mattel, Inc.

SAVING THE UNIVERSE FROM THE FORCES OF DESTRUCTION!



- Locate the power switch on the bottom of the toy. Slide the switch on ●.
- Slide the lever on the side of the shuttle or press the trigger on the handle for turbo takeoff action!



- Press the button on top of the shuttle for laser sounds and the Planet Heroes™' theme.
- When you are finished playing with this toy, slide the power switch off ○.
- This product is not recommended for use on loose dirt or wet surfaces.

SAVING THE UNIVERSE FROM THE FORCES OF DESTRUCTION!

 


- Lift to remove the space pods and hear cool sound effects.
- Press the pods back in place on the wings for another mission!
- Press the button on the pod to open the pinchers.



- Press the button on the pod to launch the arrow.
- Only use projectiles supplied with this toy. Do not launch at people or animals or at point blank range.
- To launch an arrow again, insert the arrow into the slot in the pod until you hear a **“click”**.

BATTERY SAFETY INFORMATION



In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your toy. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy. Dispose of batteries safely. Do not dispose of the product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

CARE

Wipe with a clean cloth dampened with a mild soap and water solution. Do not immerse.

FCC STATEMENT

United States Only

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

ICES-003

This Class B digital apparatus complies with Canadian ICES-003.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.