

Please keep this instruction sheet for future reference, as it contains important information.


Requires three "AA" batteries (included).

Adult assembly is required.

Tool required for assembly:
Phillips screwdriver (not included).



Parts

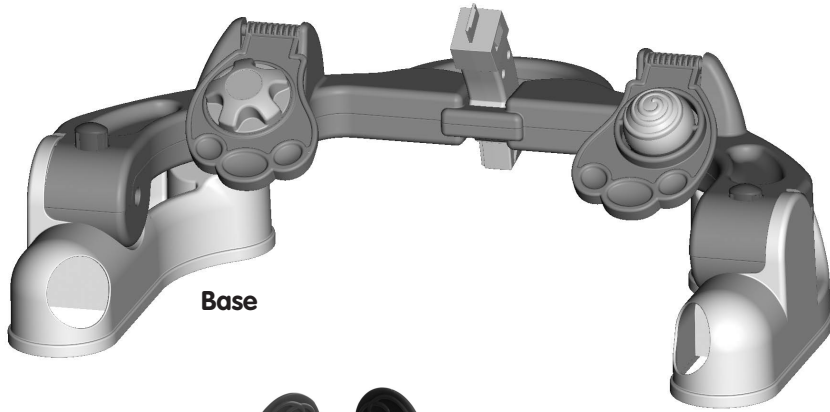

Base



Bear



2 Hanging Toys




Foot



Paddle




2 Chutes

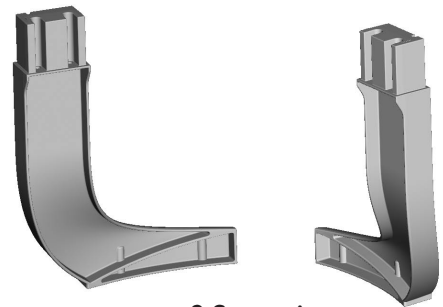

2 Supports




4 Links

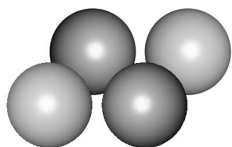

4 Plastic Balls



 Soft Ball




#6 x 1/2" Screws – 13
Shown Actual Size

Note: Tighten and loosen all screws with a Phillips screwdriver. Do not over-tighten screws.


Assembly

⚠ CAUTION


This product contains small parts.
For assembly by an adult. Take extra care
during unpacking and assembly.

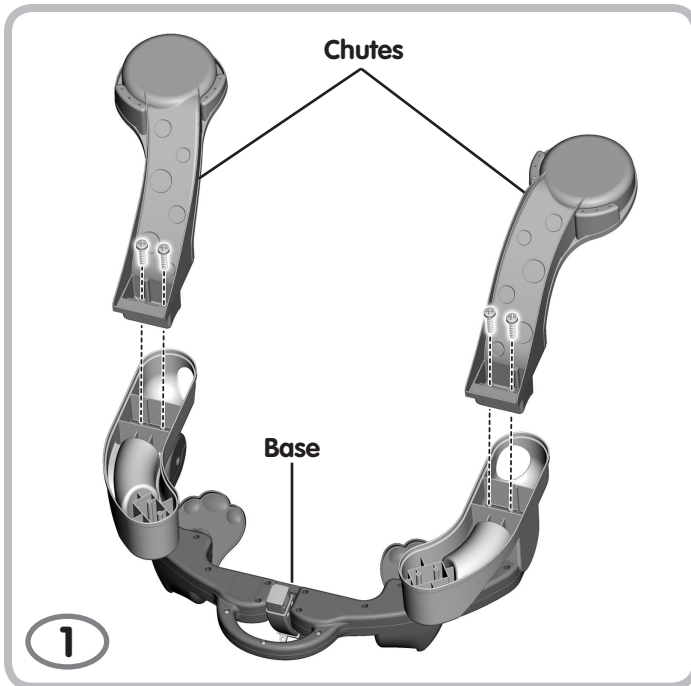


- Position the base upside-down on a flat surface.
- Fit the two chutes into the openings in the base, as shown.
- Insert two screws into each chute and tighten.

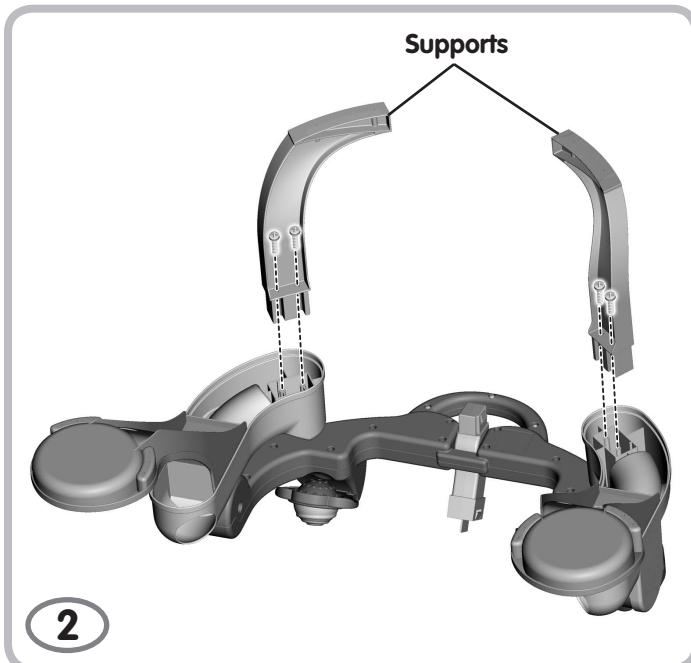

- Fit the two supports into the openings in the base, as shown.
- Insert two screws into each support and tighten.

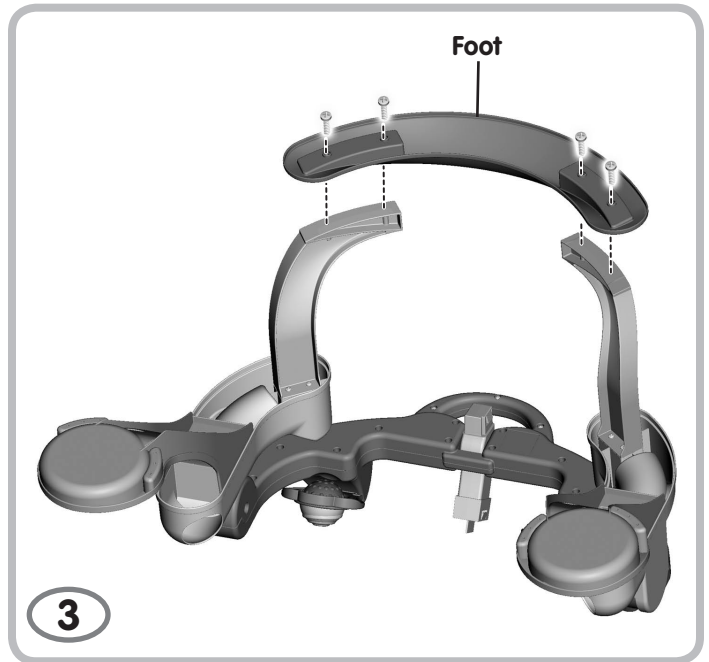


- Fit the foot onto the two supports.
- Insert four screws into the foot and tighten.
- Set the assembly upright.

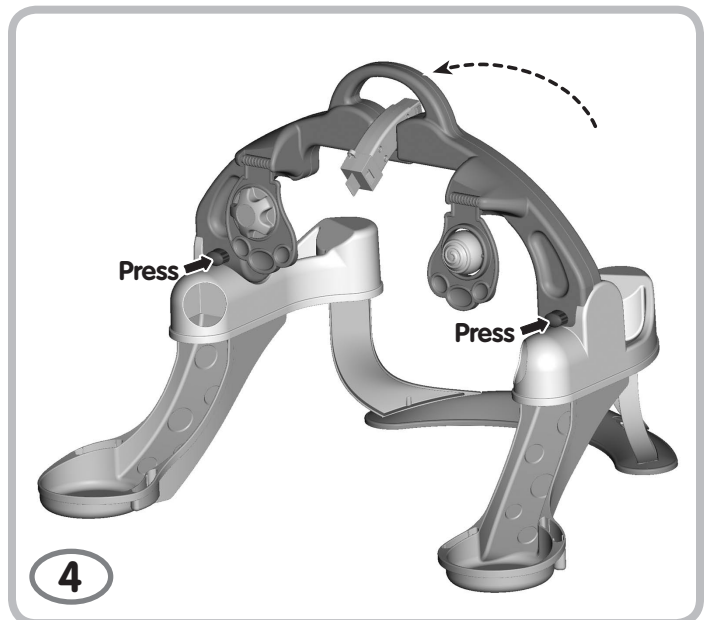


- Press and hold the two buttons on the hubs. Then lift the arch until it "clicks" in place.

Assembly

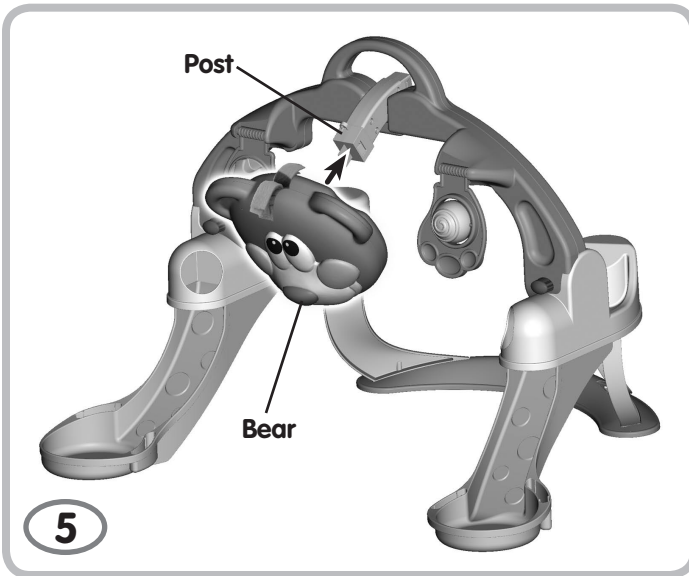


- Press and **"snap"** the bear onto the post on the arch, as shown.


Hint: This may require some force.

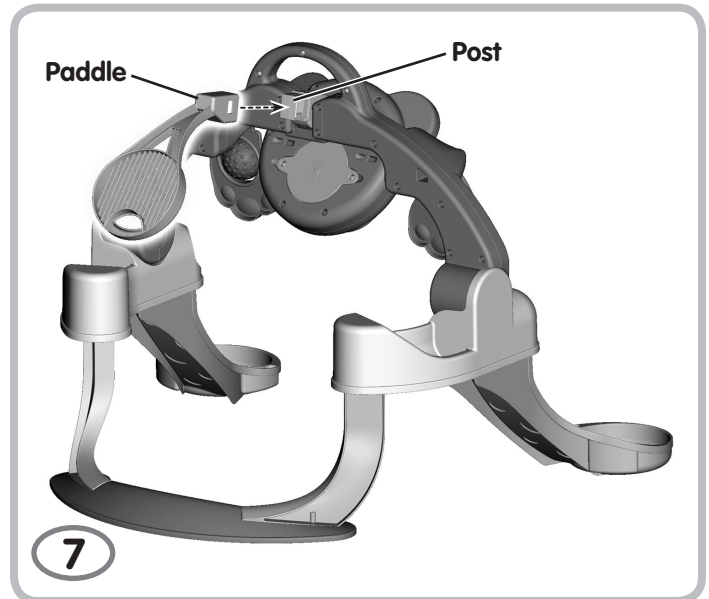

- **"Snap"** the paddle to the post behind the bear.

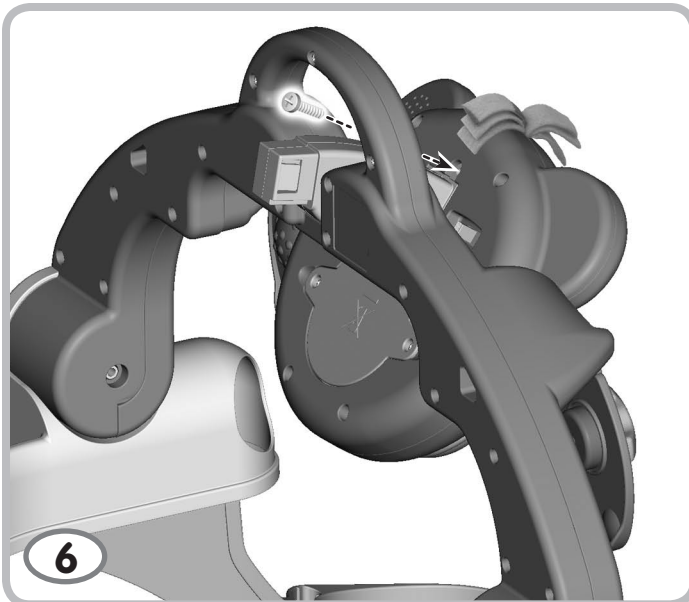


- Insert a screw into the back of the bear and tighten to secure it to the post.

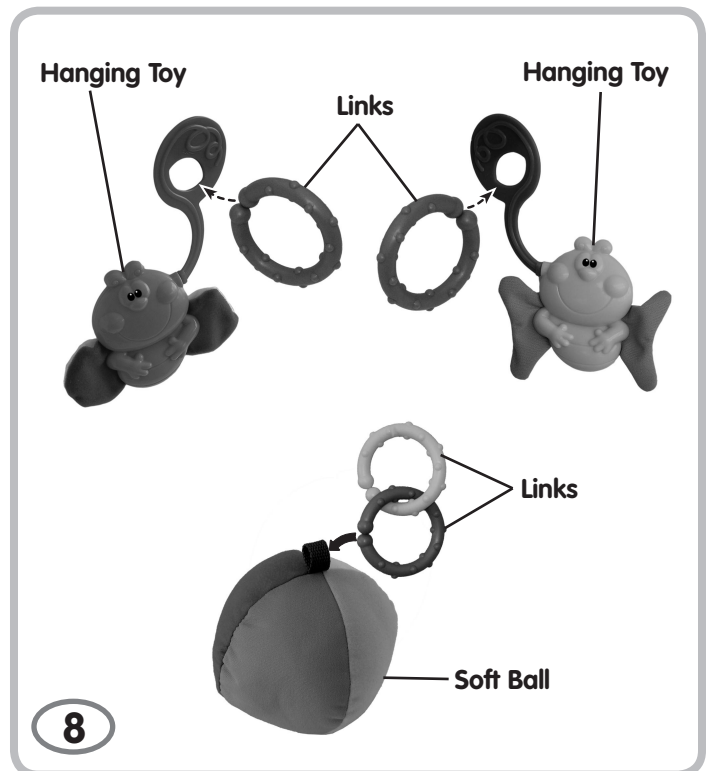


- Connect one link to each hanging toy.
- Connect two links together and attach them to the loop on the soft ball.

Assembly

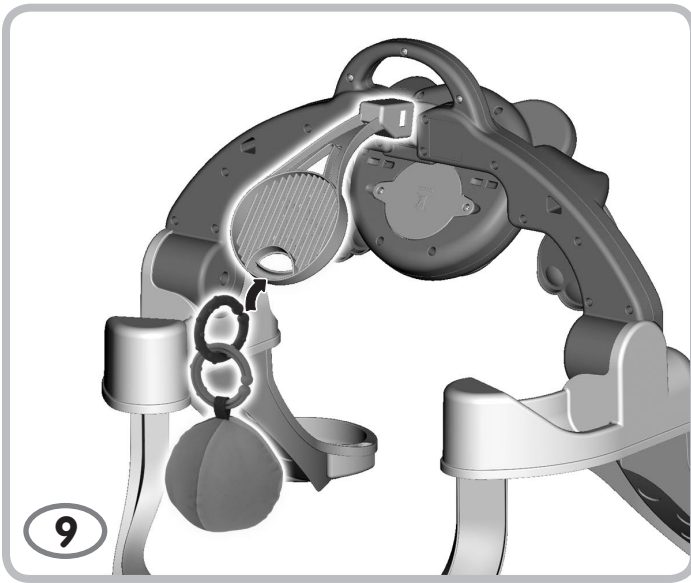

- Attach the soft ball and links to the paddle.

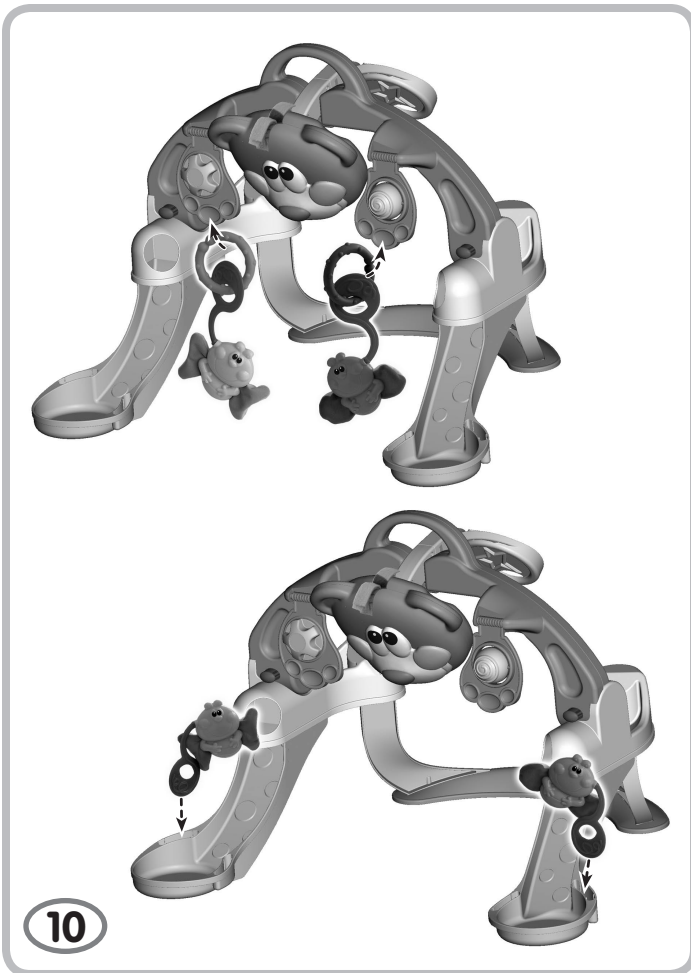

- Attach the hanging toys to the bear's "paws."
- Or, remove the links and fit the hanging toys into the slots in the chutes, as shown.
- The gym is now set up for "Overhead Gym" mode.


Before Use

CAUTION

Please keep small parts such as plastic tabs out of children's reach. Throw the plastic tab away.

Note: A plastic tab was attached to the toy for in-store demonstration purposes. While the tab may have already been removed, check back of the bear to be sure. If the plastic tab is still attached, pull and remove the tab from the toy. Throw the plastic tab away.

Battery Replacement

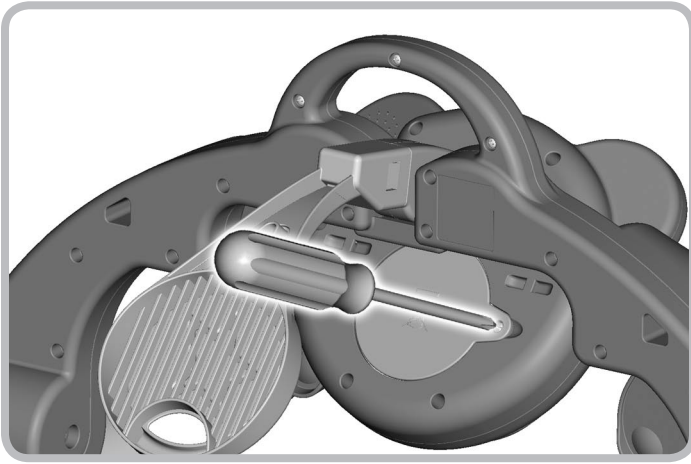

For best performance, we recommend that you replace the batteries that came with this toy, with three, new "AA" (LR6) alkaline batteries.

- Locate the battery compartment on the back of the bear.
- Loosen the screws in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Insert three "AA" (LR6) **alkaline** batteries.

 
Hint: We recommend using **alkaline** batteries for longer battery life.

- Replace the battery compartment door and tighten the screws.
- When lights or sounds become faint or stop, it's time for an adult to change the batteries!



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.


Battery Safety Information





In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your toy. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy. Dispose of batteries safely. Do not dispose of the product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.


Overhead Gym to Sit-Up Activity Center

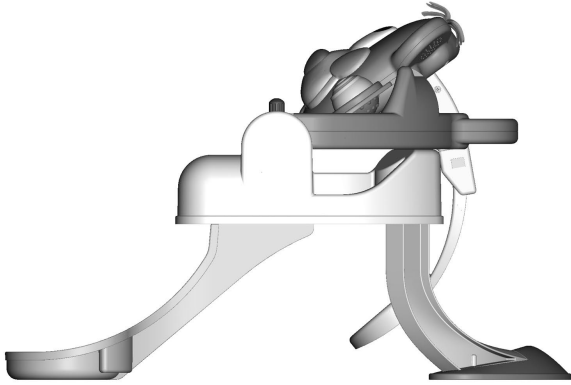

Sit-Up Activity Center to Overhead Gym

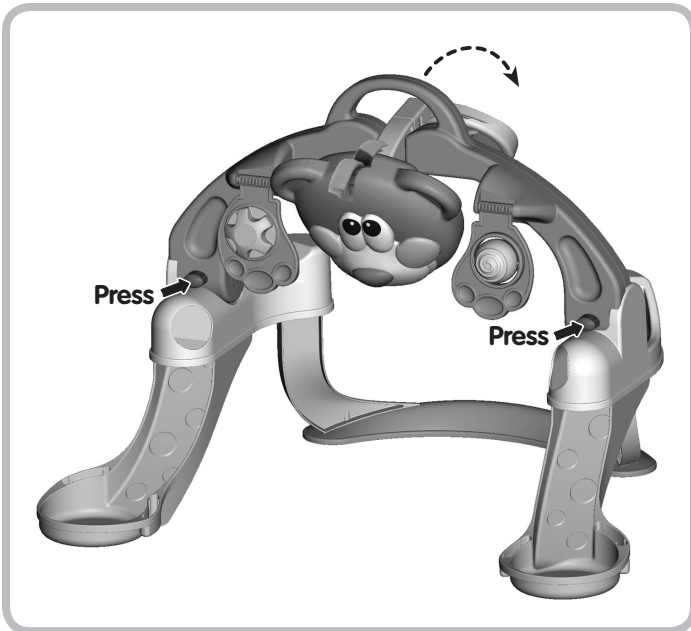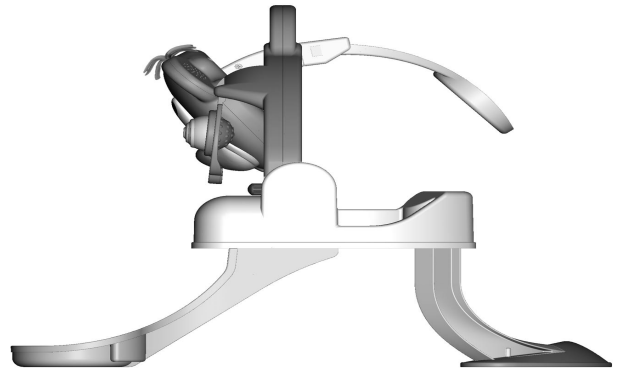

- First, remove the soft ball from the paddle, then press and hold the two buttons on the hubs. Lower the arch down until it **"clicks"** into position.

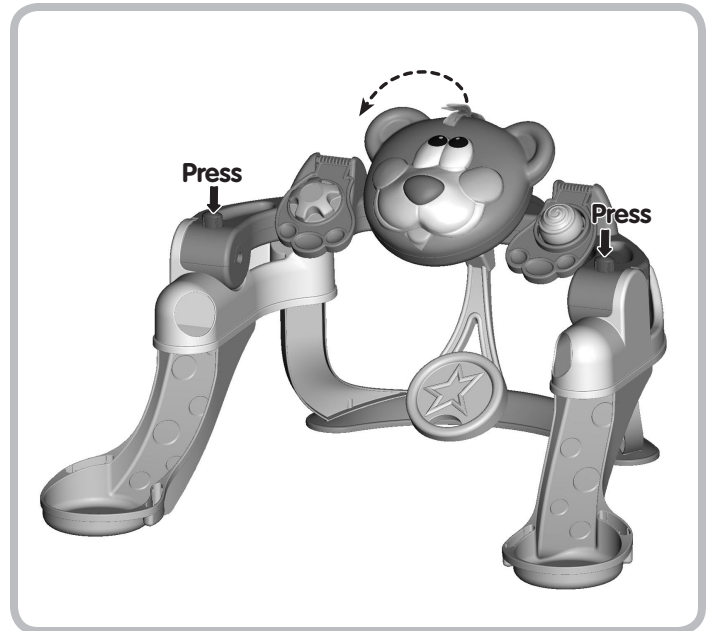







- Press and hold the two buttons on the hubs, then lower the arch down until it **"clicks"** into position.
- Attach the soft ball to the paddle.

Flashing Lights and Lively Music!

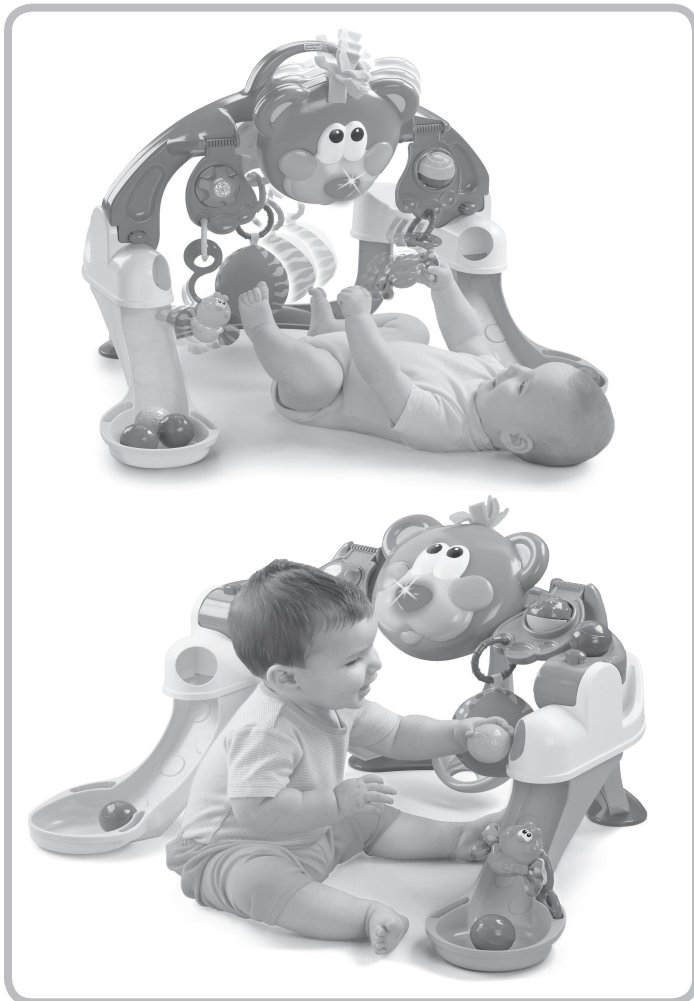WARNING

To prevent entanglement injury, never place the gym in a crib or playpen. Never add strings, ties or other products to the gym.



- Slide the power/volume switch on the back of the bear to on with low volume ; on with high volume  or off .
- Slide the mode switch on the back of the bear to either short play music  or long play music .
- When baby kicks the soft ball on the paddle, the bear's head bobs and fun music plays.
- Press the bear's nose for more fun music and lights.

Care

Wipe with a clean cloth dampened with a mild soap and water solution. Do not immerse.

FCC Statement

United States Only

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.



CONSUMER ASSISTANCE

Call toll free: 1-800-432-5437 (US & Canada only)
M-F 9AM to 7PM / SAT 11AM to 5PM (EST)

service.fisher-price.com

Write to us at: Fisher-Price® Consumer Relations,
636 Girard Avenue, East Aurora, New York 14052.

Hearing-impaired consumers using TTY/TDD equipment,
please call 1-800-382-7470.

For countries outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.
Consumer Advisory Service 1300 135 312.

New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.

Asia: Mattel East Asia Ltd, Room 1106, South Tower,
World Finance Centre, Harbour City, Tsimshatsui, HK, China.