 


Battery Replacement

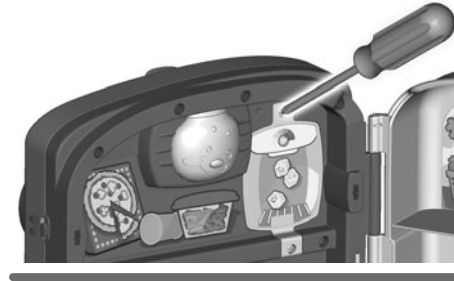

For best performance, we recommend replacing the batteries that came with this toy with three, new “AA” (LR6) alkaline batteries.

- Locate the battery compartment on the back of the fridge.
- Loosen the screws in the battery compartment door and remove the door.
- Remove the exhausted batteries and throw them away.
- Insert three, new “AA” (LR6) alkaline batteries.

Hint: We recommend *alkaline* batteries for longer battery life.

- Replace the battery compartment door and tighten the screws.
- If this product begins to operate erratically, you may need to reset the electronics. Slide the power switch off then back on.
- When sounds and lights from this toy become faint or stop, it's time for an adult to change the batteries.



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

 
- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision

Assembly




CAUTION


This package contains small parts in its unassembled state. Adult assembly is required.

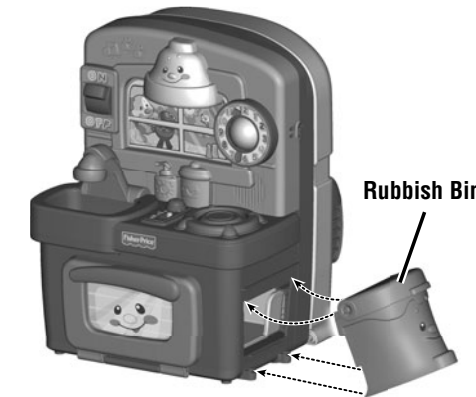

Rubbish Bin

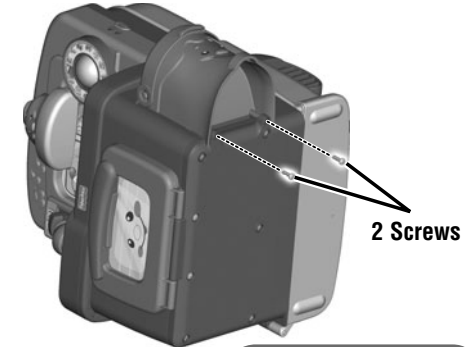 

2 Screws

 

- At an angle, fit the tabs on the top of the rubbish bin into the opening on the side of the kitchen.
- Then, push the bottom of the rubbish bin onto the posts on the kitchen.

- Turn the kitchen over and insert two #6 x 1,3 cm screws into the holes. Tighten the screws with a Phillips screwdriver. Do not over-tighten.



Please keep this instruction sheet for future reference, as it contains important information.

Requires three “AA” batteries (included) for operation.

Adult assembly is required.

Tool required for assembly: Phillips screwdriver (not included).

Care

- Wipe this toy with a clean cloth dampened with a mild soap and water solution. Do not immerse this toy.
- This toy has no consumer serviceable parts. Do not take this toy apart.

Consumer Information



 
AUSTRALIA: Mattel Australia Pty. Ltd.,
658 Church Street, Locked Bag #870,
Richmond, Victoria 3121 Australia.
Consumer Advisory Service 1300 135 312.
NEW ZEALAND: 16-18 William Pickering
Drive, Albany 1331, Auckland.



Volume Switch

- Slide the volume switch to low or high volume.

Cook Up Some Learning Fun!

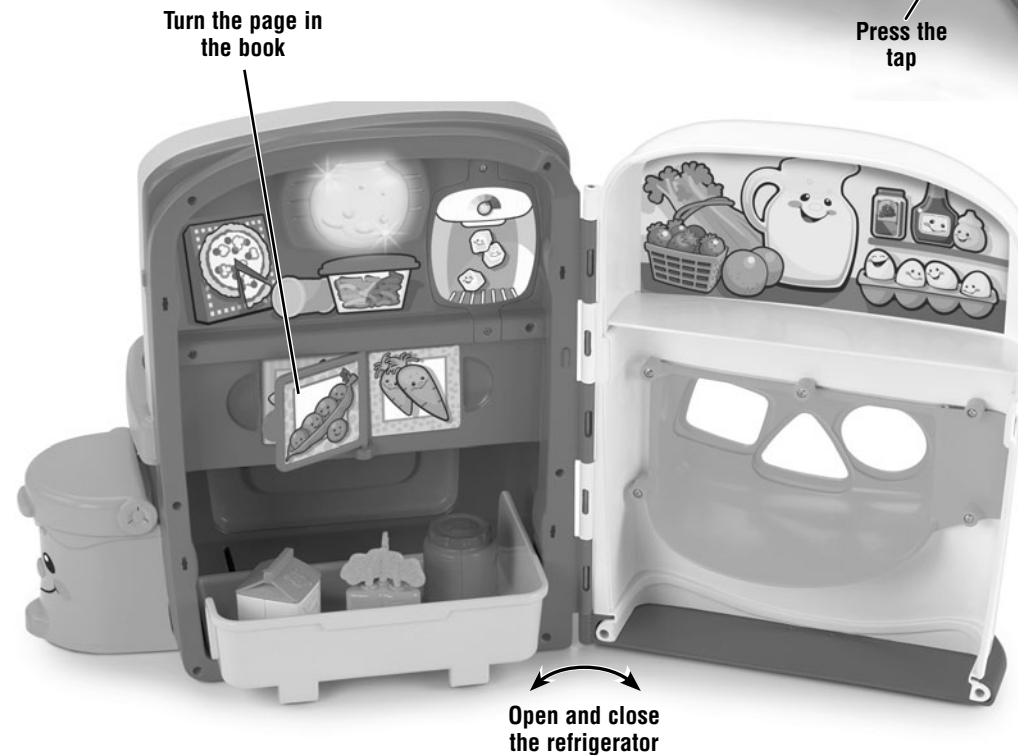

Power/Mode Switch

- Slide the power/mode switch to **ABC Learning**, **Music** or **Imagination** mode.
- ABC Learning** – Learn about opposites and hear fun learning songs!
- Music** – Listen to fun songs and musical tunes!
- Imagination** - Listen to real kitchen sounds!
- When you are finished playing with this toy, slide the power/mode switch OFF .