




Please keep these instructions for future reference,
as they contain important information.

Requires three “AA” batteries (included) for operation.

Adult assembly is required.

Tool required for assembly: Phillips screwdriver (not included).

Assembled Parts

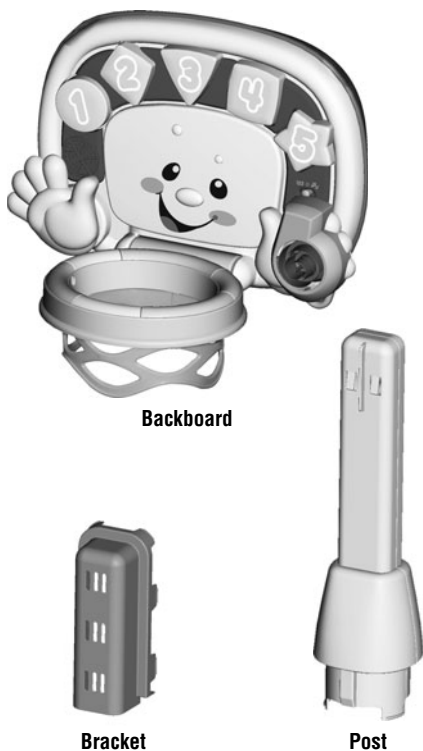


Assembly




CAUTION

This product contains small parts in its unassembled state. Adult assembly is required.

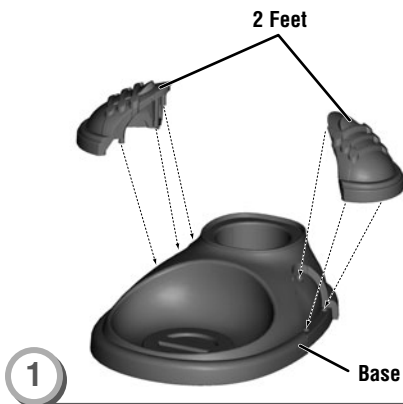

- Fit the feet onto the base, as shown.

Hint: The feet are designed to fit onto the base one way. If they do not seem to fit, turn them around and try again!

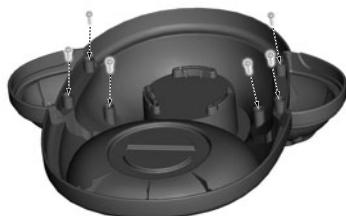

BOTTOM VIEW


- Turn the base assembly over and insert six screws into the holes in the base. Tighten the screws.



#6 x 1,6 cm Screw – 6


Tighten and loosen all screws with a Phillips screwdriver. Do not over-tighten.

Assembly

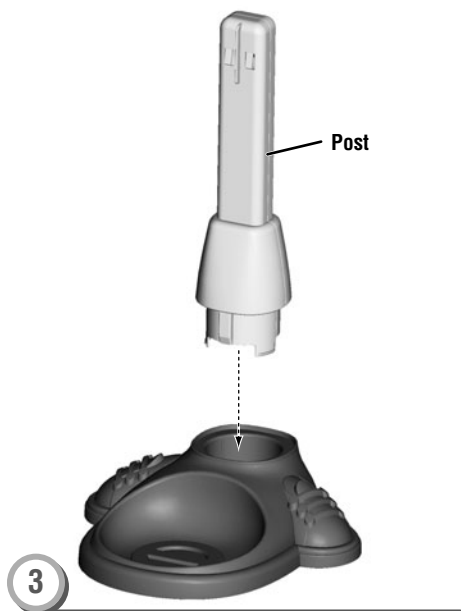

- Turn the base assembly upright.
- Fit the post into the base. Push to “snap” the post in place. Pull up on the post to be sure it's secure.

Hint: The post is designed to fit into the base one way. If it does not seem to fit, turn it around and try again.

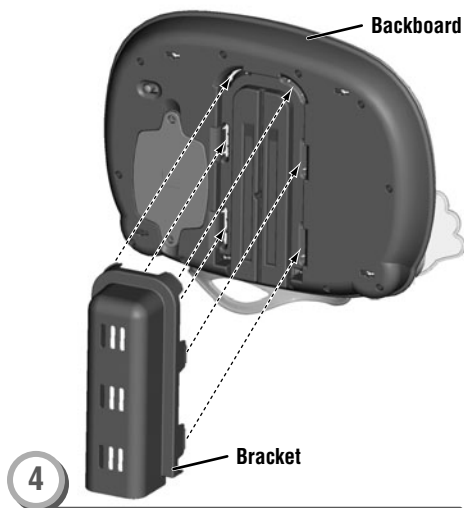

- Fit the tabs on the bracket into the slots on the back of the backboard.
- Push to “snap” the bracket in place.



- Slide the backboard assembly onto the post.

Battery Replacement



For best performance, we recommend replacing the batteries that came with this toy with three, new "AA" (LR6) alkaline batteries.

- Locate the battery compartment on the back of the toy.
- Loosen the screws in the battery compartment door and remove the door.
- Remove the exhausted batteries and throw them away.
- Insert three, new "AA" (LR6) **alkaline** batteries.

Hint: We recommend **alkaline** batteries for longer battery life.

- Replace the battery compartment door and tighten the screws.
- If this product begins to operate erratically, you may need to reset the electronics. Slide the power/mode switch off then back on.
- When sounds and lights from this toy become faint or stop, it's time for an adult to change the batteries.




- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Height Adjust

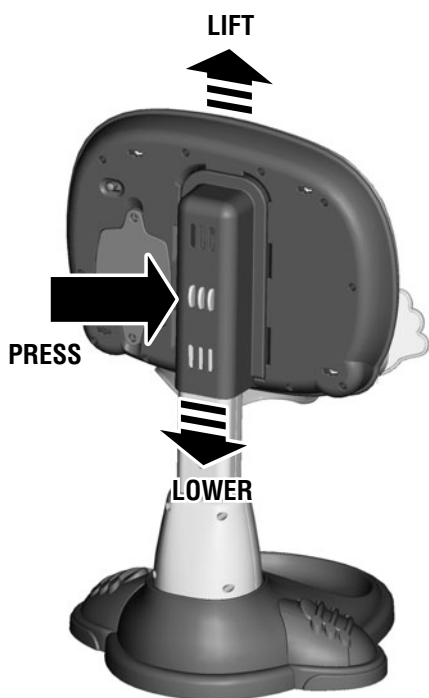

- The backboard can be adjusted to three different heights.
- Press the button on the back of the post and slide the backboard all the way down for Sit & Play or all the way up for Stand & Shoot.

Learning Fun is a Slam Dunk!



- Slide the power/mode switch to learning **123** or music 🎵 mode.
- Slide the volume switch to low volume 🔊 or high volume 🔊.

123 Learning

- Throw the basketball through the hoop. Count how many baskets you can score!
- Push the hoop for fun phrases and songs.
- Press the buttons on the backboard to learn colours, shapes and numbers!

🎵 Music

- Throw the basketball through the hoop, push the hoop or press the buttons for fun songs and lights!
- When you are finished playing with this toy, slide the power/mode switch OFF ○.

Care

- Wipe this toy with a clean cloth dampened with a mild soap and water solution. Do not immerse this toy.
- This toy has no consumer serviceable parts. Do not take this toy apart.



Great Britain: Vanwall Business Park,
Maidenhead SL6 4UB.

Helpline: 01628 500303.

www.service.mattel.com/uk.

Australia: Mattel Australia Pty. Ltd.,
658 Church Street, Locked Bag #870,
Richmond, Victoria 3121 Australia.
Consumer Advisory Service 1300 135 312.

New Zealand: 16-18 William Pickering
Drive, Albany 1331, Auckland.

Asia: Mattel East Asia Ltd, Room 1106,
South Tower, World Finance Centre,
Harbour City, Tsimshatsui, HK, China.

Malaysia: Diimport & Diedarkan Oleh:
Mattel SEA Ptd Ltd. (993532-P) Lot 13.5,
13th Floor, Menara Lien Hoe, Persiaran
Tropicana Golf Country Resort, 47410 PJ.
Tel: +603-3341 9052.

Mattel Europa, B.V., Gondel 1, 1186 MJ
Amstelveen, Nederland.