

Fisher-Price®

K2866

Time-to-Learn Preschool™

Please keep this instruction sheet for future reference, as it contains important information.

Requires three "AA" batteries (included).


Adult assembly is required.

Tool required for battery replacement:
Phillips screwdriver (not included).



www.fisher-price.com

Before Use

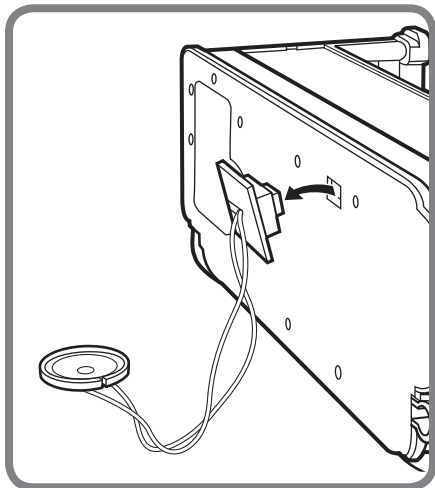

- Volume is louder for in-store demonstration. Volume will lower when product is removed from package.
- A speaker was attached to this product for demonstration purposes only and is not a toy. Pull to remove the speaker and throw it away immediately.

Consumer Information


GREAT BRITAIN: Mattel UK Ltd,
Vanwall Business Park, Maidenhead
SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk

AUSTRALIA: Mattel Australia Pty. Ltd.,
658 Church Street, Locked Bag #870,
Richmond, Victoria 3121 Australia.
Consumer Advisory Service 1300 135 312.

NEW ZEALAND: 16-18 William
Pickering Drive, Albany 1331, Auckland.

ASIA: Mattel East Asia Ltd, Room 1106,
South Tower, World Finance Centre,
Harbour City, Tsimshatsui, HK, China.

Battery Replacement

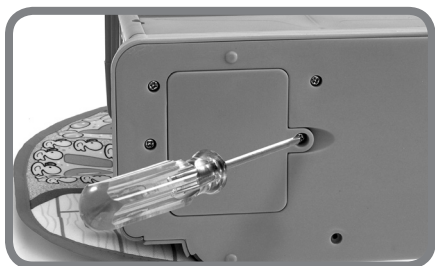


For best performance, we recommend replacing the batteries that came with this toy with three, new "AA" (LR6) alkaline batteries.

- Locate the battery compartment on the bottom of the toy.
- Loosen the screw in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door. Remove the worn batteries and throw them away.
- Insert three "AA" (LR6) **alkaline** batteries.
- Replace the battery compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten.
- When sounds or lights become faint or stop, it's time for an adult to change the batteries!



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).

 Battery Safety Information



Shown Actual Size



In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Care

- Wipe the toy or figures with a clean cloth dampened with a mild soap and water solution. Do not immerse this toy.
- This toy has no consumer serviceable parts. Do not take this toy apart.

Hint: To remove wrinkles in the mat, place

Slide the mode switch to either count **123**,
 colour  or off .



Count 123

- Slide the beads from one side to the other to hear the number as it's counted.
- Press a number to hear the number spoken along with a fun sound effect.



and Playtime Too!

Place a few books on top of the mat overnight.



Colour 🌈

- Slide the beads from one side to learn the colours of the beads.
- Press a number to hear the number and learn its colour.



Music 🎵

Press the music button 🎵 to hear a fun song.



Quiz ?

Press the question mark ? and you'll be asked to find numbers and colours on the mat.



Shapes ★ ◀ ● ◼

Press a shape button to learn the shape and its colour.