



Glacier Creek™ 10'x14'


Instructions apply to Part Number 9230-014

When You Are Ready To Set Up Your Tent


- Select a level campsite clear of rocks, branches and other hard or sharp objects.
- Do not set up your tent under trees.
- For best results in windy conditions, position the end of tent into the wind.

POLE ASSEMBLY PARTS


(4) Ridge Poles
Part No. 9230-1031

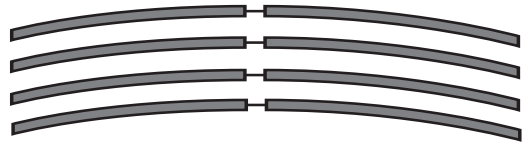

(4) Center Poles
Part No. 9230-1041

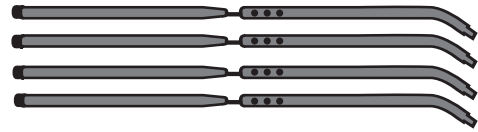

 (4) Side Pole Part
No. 9230-1051




(1) Rainfly Pole
No. 9230-1061

Rainfly Part No.
9230-1071



1 Layout & Positioning of Tent

- Layout and position tent with door facing desired direction. (illus. 1)
- Stake down tent, starting with the corners. Do not stretch too tight. Angle the stakes slightly toward the tent. (illus. 2) Keep the floor taut.
- Stake down the remainder of the stake loops.
- Unzip the door.

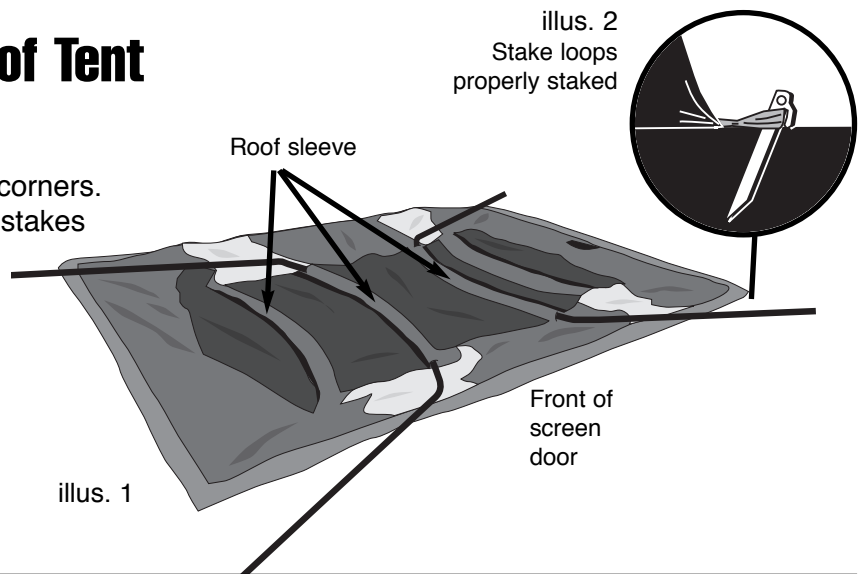

2 Assemble & Place Roof Poles


- Assemble all shock-corded ridge poles. When assembled will form a continuous arch with both ends pointing down. (illus. 3)
- Insert ridge poles through the four roof sleeves. (illus. 4)

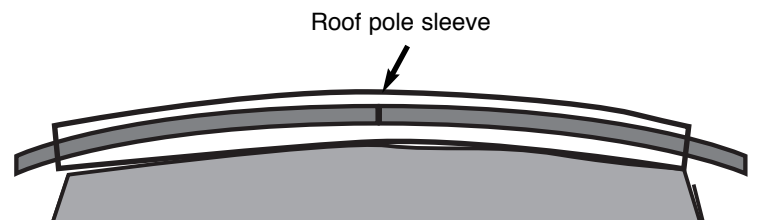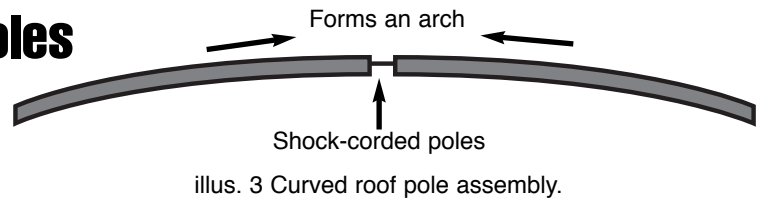


illus. 4 Curved roof pole system shown inserted through pole sleeve.

3 Raise Tent

 - Assemble all shock-corded brace poles. Poles should be initially adjusted to the inner most hole “A”. (illus. 7)
- Insert square end of Center (longer) brace poles into curved roof poles and raise tent upright. (illus. 5, 6, 7)
- Brace poles should attach to squeeze pins at bottom of tent. (illus. 6, 9)
- Repeat for remaining center brace poles.
- Insert side (shorter) brace poles into end roof assemblies. **MAKE SURE** when attaching brace poles to curved poles that the bottom of the brace pole naturally points the tent. (illus. 5, 9)
- Brace poles should attach to squeeze pins at bottom of tent. (illus. 6)
- Adjust poles to accommodate for terrain.
- Attach Frame Clips. (illus. 8)




illus. 7 Poles should be initially adjusted to the inner most hole “A”.

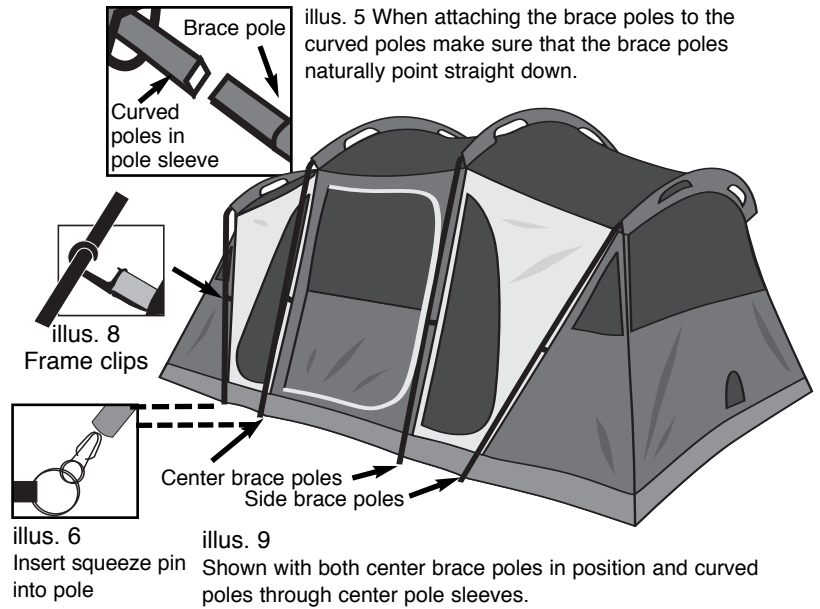

illus. 5 When attaching the brace poles to the curved poles make sure that the brace poles naturally point straight down.

 illus. 8 Frame clips




illus. 6 Insert squeeze pin into pole

illus. 9 Shown with both center brace poles in position and curved poles through center pole sleeves.

4 Attach Rainfly

- Layout rainfly underside up. Assemble and insert long Rainfly pole into sleeve over door.
- Drape rainfly over the tent, pole side down. The rainfly pole goes in front. Attach hooks on rainfly into the brace poles. (illus. 11)
- Insert one end onto the pin on the stake loop. Go to opposite end of pole and gradually apply pressure to form an arch until you are able to insert the pin into the end.
- Connect rainfly to tent poles with hook and loop connectors.
- Stake out rainfly front. (illus. 11)
- Attach and stake out side guylines at the ends of the rainfly.

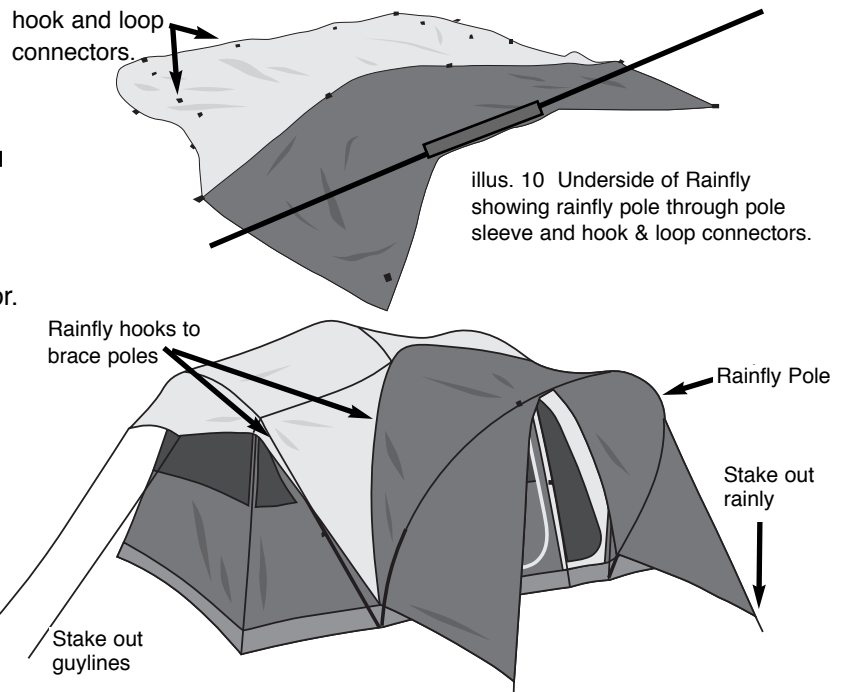

illus. 10 Underside of Rainfly showing rainfly pole through pole sleeve and hook & loop connectors.

illus. 11 Tent shown completely set-up. Note the different angles of the end brace poles.

Things You Should Know

- Under certain conditions (cold weather, high humidity, etc.) condensation will form on the inside surfaces of your tent. Condensation is caused by water vapor from your breath, perspiration, or any wet clothing inside your tent. It is NOT LEAKAGE through the tent fabric. It can be minimized by removing wet clothing from your tent and by providing good ventilation through the tent.

- Never store tent, even for a short period of time, without drying it thoroughly and brushing off caked dirt. Do not pack stakes or poles inside your tent. Use a separate storage bag.

- STAKES SHOULD BE REMOVED BY PULLING ON THE STAKE ITSELF. NEVER PULL ON THE TENT FABRIC OR TENT STAKE LOOP TO REMOVE STAKE.

- TENT POLES SHOULD NOT BE LEFT TELESCOPED TOGETHER DURING STORAGE.

- Do not leave your tent set-up for weeks at a time, be aware that exposure to the ultraviolet rays of the sun can seriously damage material and/or cause it to become discolored.

WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC. This tent meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.



THE COLEMAN CO., INC.

3600 N. Hydraulic • Wichita, Kansas 67219
1-800-835-3278 • www.coleman.com

MADE IN CHINA