



CORVUS™ 9' X 8' MODEL 9234-809

Before you begin

Read all instructions before set up.

- Select a level campsite clear of rocks, branches, and other hard or sharp objects, to install your tent.

⚠ WARNING: Keep clear of overhead power lines.

- Do not set up your tent under trees.
- For best results in windy conditions, position end of tent into the wind.
- Enlist the help of at least one other person to assist you when it is time to assemble the tent.

Parts and Components

Description	Part Number
Main Poles (2)	9234-1081
Ridge Pole (1)	9234-1091
Rainfly Pole, Gray (1)	9234-1101
Rainfly	9234-1111

To Set Up Tent

1. Unfold tent and spread out on a clean, level surface with the door facing the desired direction. Unzip door.
2. Assemble main tent poles by interlocking both longer, black shock-corded, poles.
3. Insert black poles through sleeves in top of tent forming an "X" as shown. (Fig. 1)

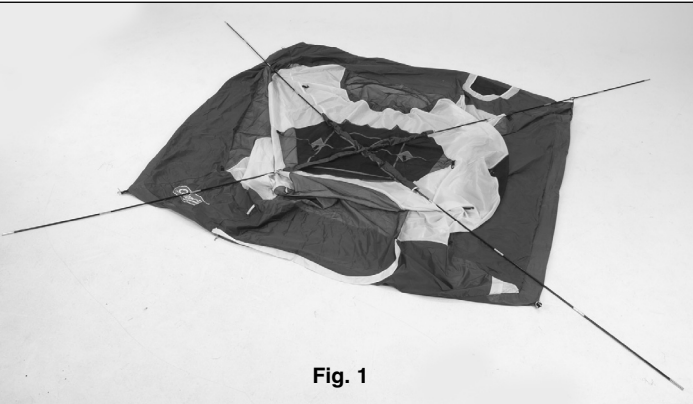


Fig. 1

4. Insert one end of each black pole into pins in rear corners of tent. (Fig. 2)

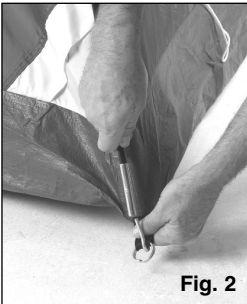


Fig. 2

5. Go to opposite end of each pole and gradually apply pressure to the pole forming an arch. Insert the pin into the pole end at the tent corners. (Fig. 3)



Fig. 3

6. Stretch corners of tent until floor is taut then hammer stakes through loops to secure.
7. Attach frame clips along edges of tent to frame poles. (Fig. 4)



Fig. 4

To Attach Rainfly

1. Assemble both interlocking shock-corded poles (gray rainfly pole and black ridge pole).
2. Drape rainfly over tent. Make sure colored-fabric end is centered over the door with the web pockets facing down.
3. Slide black ridge pole with rounded tips under rainfly and insert each end into web pockets located at front and back. (Fig. 5)

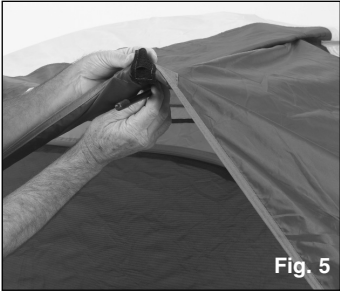


Fig. 5

4. At the sides of the tent with triangular shaped windows, slide remaining gray pole under rainfly. Insert the metal end of the pole into the hooks located on the tent to secure. (Fig. 6)



Fig. 6

5. Hook clips on elastic cords at corner of rainfly to the rings in the four corners of the tent. (Fig. 7)

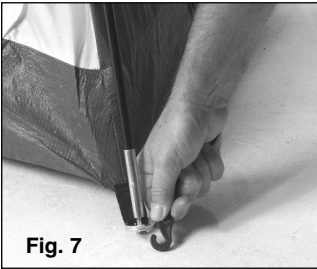


Fig. 7

6. Tie the guylines onto web straps located on the rainfly, stretch until taut, and secure with stakes. (Fig 8 & 9)



Fig. 8

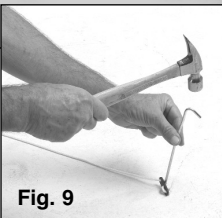


Fig. 9

(continued on other side)

Door and Window Vents

1. To open door fully, unzip, then roll up and insert toggle through fabric loop. (Fig. 10)



Fig. 10

2. To use the door vent, undo other zipper to expose vent, then roll up door flap and fasten with toggle and fabric loop.
3. To open back and side window vents for more ventilation, unzip, then roll up and insert toggles through fabric loops. (Fig. 11 & 12)



Fig. 11

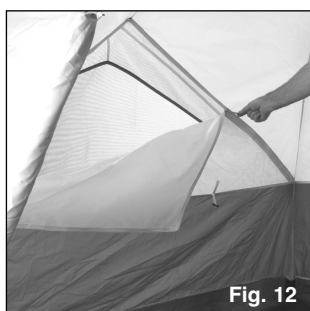


Fig. 12

Cooler Access

The smaller zippered opening at the rear of the tent is designed for added ventilation and easy access to your beverage cooler.

1. To use as a vent, unzip flap to expose screen. (Fig.13)
2. To use as a cooler access, unzip other flap to make an avenue to bring beverages into the tent. (Fig.14)

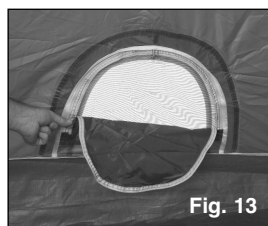


Fig. 13



Fig. 14

Attaching the Gear Loft

1. Attach gear loft by inserting toggles through the fabric loops on the tent ceiling. (Fig. 15)



Fig. 15

Electical Cord Access

1. Unzip access panel in the lower right corner of tent and bring in electrical cord. Use only UL approved cords that are rated for outdoor usage. (Fig. 16)

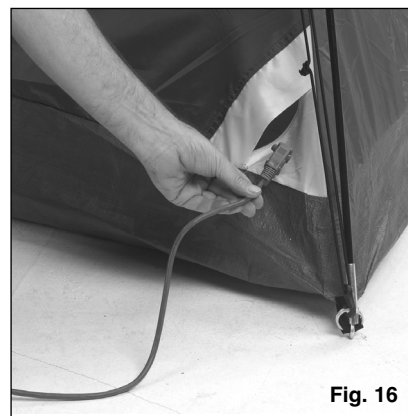


Fig. 16

To Store

1. All metal poles and stakes must be placed in the storage bag to prevent damage to the fabric items placed in the carry case.
2. Make sure tent is clean and dry before placing in carry case.
3. Neatly fold tent and rainfly, place poles and stakes in storage bags, then roll tightly and place in carry case.
4. Store in a clean, dry area.

Things You Should Know:

- Under certain conditions (cold weather, high humidity, etc.) condensation will form on the inside of your tent. Condensation is caused by water vapor from your breath, perspiration, or any wet clothing inside the tent. It is NOT LEAKAGE through the tent fabric. It can be minimized by removing wet clothing from your tent and by providing good ventilation through the tent.
- Never store tent, even for a short period of time, without drying it thoroughly and brushing off caked dirt. Do not pack stakes or poles inside your tent. Use a separate storage bag.
- Stakes should be removed by pulling on the stake itself. Never pull on the tent to remove stake.
- TENT POLES SHOULD NOT BE LEFT TELESKOPED TOGETHER DURING STORAGE.
- Do not leave your tent set-up for weeks at a time. Be aware that exposure to ultraviolet rays from the sun can seriously damage material and/or cause it to become discolored.

⚠ WARNING: Keep all flame and heat sources away from this tent fabric.

This tent meets the flammability requirements of CPAI-84. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.



The Coleman Company, Inc. • 3600 N. Hydraulic • Wichita, Kansas 67219
1-800-835-3278 • www.coleman.com

MADE IN CHINA • PRINTED IN CHINA

© 2006 The Coleman Company, Inc.

Coleman® and  are registered trademarks of The Coleman Company, Inc.