



AMERICAN HERITAGE[®] WEATHERMASTER[®] CABIN 12'X9'

Instructions apply to Part Number 9232D129


When You Are Ready To Set Up Your Tent

- Select a level campsite clear of rocks, branches and other hard or sharp objects.
- Do not set up your tent under trees.
- For best results in windy conditions, position the end of tent into the wind.

POLE ASSEMBLY PARTS


(2) Center Adjustable Poles
(Red Sticker) Part No. 9232-1301

(4) End Adjustable Poles
(Green Sticker) Part No. 9232-1311

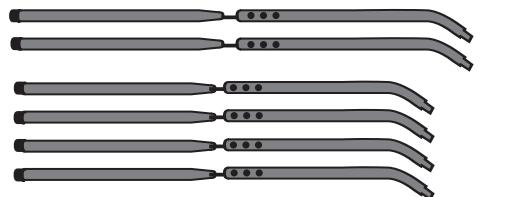

(1) Curved Ridge Roof Poles
(Red Sticker) Part No. 9232-1321

(2) Curved End Roof Poles
(Green Sticker) Part No. 9232-1331

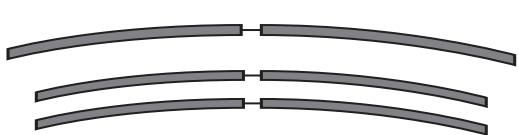

Vertical Hinged Door Pole
Part No. 9232-1351

Hinged Door Pole
Part No. 9232-1361




Rainfly Part No. 9232-1341




1 Layout & Positioning of Tent

- Layout and position tent with door facing desired direction. (illus. 1)
- Stake down tent, starting with the corners. Do not stretch too tight. Angle the stakes slightly toward the tent.
- (illus. 2) Keep the floor taught.
- Unzip the door.

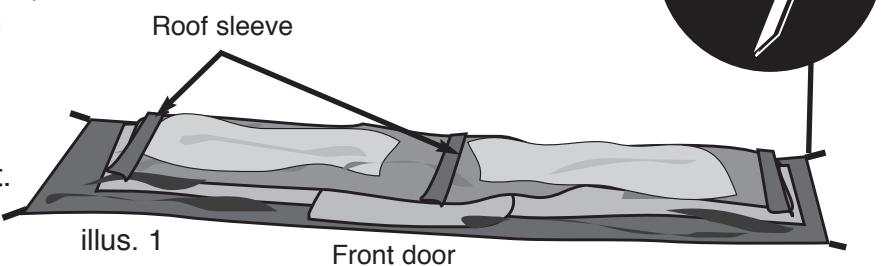


2 Assemble & Place Roof Poles

- Assemble all shock-corded roof poles. When assembled will form a continuous arch with both ends pointing down. (illus. 3)
- Insert the curved ridge roof pole through center roof pole sleeve. (illus. 4)
- Insert the curved End roof poles through end roof pole sleeves. (illus. 4)

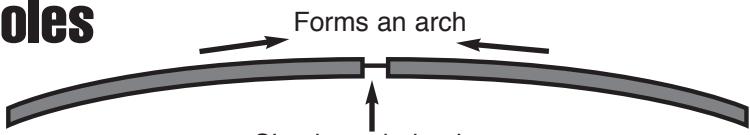


illus. 3 Curved roof pole assembly.

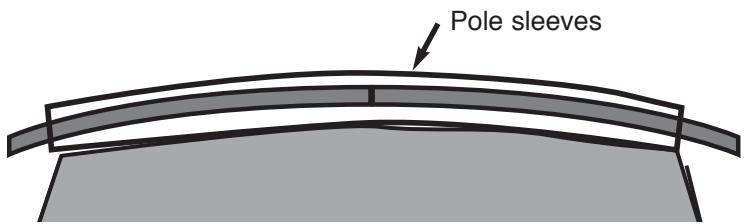


illus. 4 Curved roof pole system shown inserted through pole sleeves. (3 total)

3 Raise Center of Tent

 
- Assemble center adjustable poles (red sticker, longer poles). Pole should be initially adjusted to the inner most hole "A". (illus. 7)
- Insert square end of brace poles into curved roof poles and raise tent upright. (illus. 5, 6, 7)
- Adjustable poles should attach to squeeze pins at bottom of tent. (illus 8)
- Repeat for other center adjustable pole.



illus. 7 Poles should be initially adjusted to the inner most hole "A".

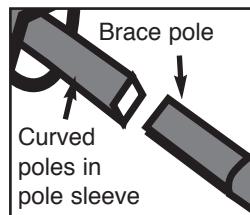


illus. 6 When attaching the brace poles to the curved poles make sure that the brace poles naturally point straight down.

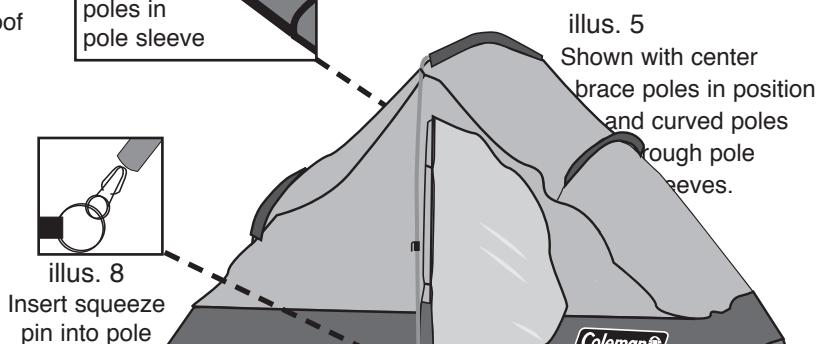


4 Raise Sides of Tent

- Assemble shock-corded adjustable end poles.
- Insert brace poles into end curved roof poles.
- MAKE SURE** when attaching the brace poles to the curved poles that the bottom of the brace pole naturally points down and toward the center of the tent. (illus. 9)
- End poles should attach to squeeze pins at bottom of tent. (illus. 8)
- Drape rainfly over tent and attach "S" hooks on rainfly into holes in brace poles. (illus. 9)
- Assemble and insert (short) Vertical Hinged Door Pole through vertical sleeve and into bottom pole stop. Gently apply pressure to insert top end into top pole stop and zip sleeve closed. (illus. 9, 10)
- Assemble and insert (long) Hinged Door Pole through curved door sleeve and into top pole stop. Gently apply pressure to insert bottom end into bottom pole stop and zip sleeve closed. (illus. 10, 11)
- Attach guylines to the ends of the rainfly, 3 guylines at each end, and stake out. (illus. 9)

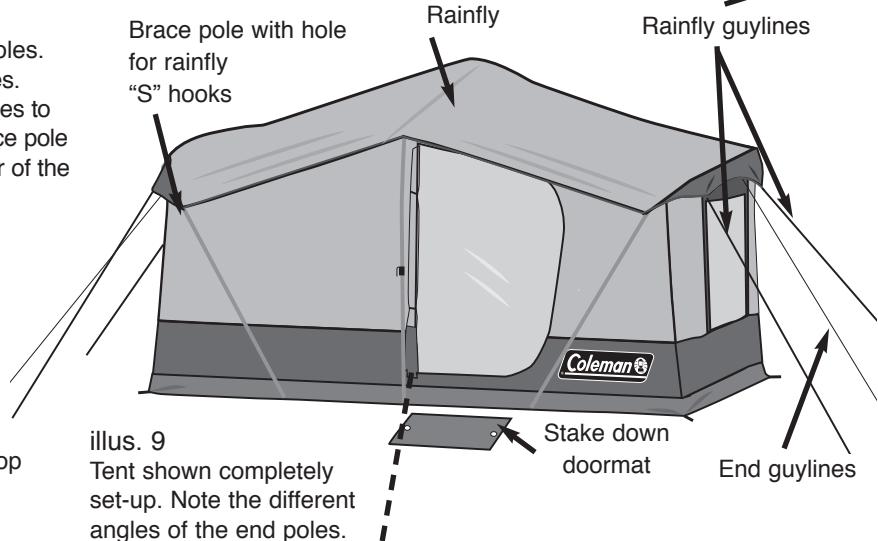


illus. 9
Tent shown completely set-up. Note the different angles of the end poles.

Vertical Door Pole inserts into sleeve and zips in

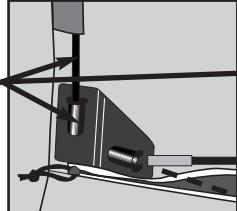

illust. 10 Hinged Door Pole Stop

Long Door Pole inserts into sleeve and pole stops, then zips in.

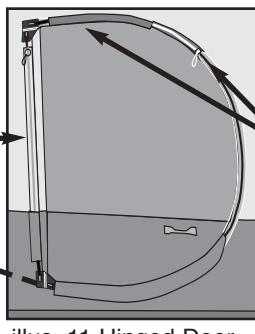

illust. 11 Hinged Door

Things You Should Know

- Under certain conditions (cold weather, high humidity, etc.) condensation will form on the inside surfaces of your tent. Condensation is caused by water vapor from your breath, perspiration, or any wet clothing inside your tent. It is NOT LEAKAGE through the tent fabric. It can be minimized by removing wet clothing from your tent and by providing good ventilation through the tent.
- Never store tent, even for a short period of time, without drying it thoroughly and brushing off caked dirt. Do not pack stakes or poles inside your tent. Use a separate storage bag.
- STAKES SHOULD BE REMOVED BY PULLING ON THE STAKE ITSELF. NEVER PULL ON THE TENT FABRIC OR TENT STAKE LOOP TO REMOVE STAKE.
- TENT POLES SHOULD NOT BE LEFT TELESCOPED TOGETHER DURING STORAGE.

- Do not leave your tent set-up for weeks at a time, be aware that exposure to the ultraviolet rays of the sun can seriously damage material and/or cause it to become discolored.

WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC. This tent meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.



THE COLEMAN CO., INC.

3600 N. Hydraulic • Wichita, Kansas 67219
1-800-835-3278 • www.coleman.com

MADE IN SRI LANKA