



CIQALA™ TENT 12' X 10'

MODEL 2000001200

Before you begin

Read all instructions before set up.

- Select a level campsite clear of rocks, branches, and other hard or sharp objects, to install your tent.

⚠ WARNING: Keep clear of overhead power lines.





- Do not set up your tent under trees.
- For best results in windy conditions, position end of tent into the wind.
- Enlist the help of at least one other person to assist you when it is time to assemble the tent.

Parts and Components

Description	Part Number
Main Poles, Long, Black (2)	5010000386
Ridge Pole, Gray (1)	5010000387
Back Awning Pole w/Metal Tips, Black (1)	5010000388
Front Awning Pole, Long, Black (1)	5010000389
Rainfly	5010000400

To Set Up Tent



1. Unfold tent and spread out on a clean, level surface with the door facing the desired direction.
2. Assemble the interlocking shock-corded poles (two black main tent poles and the gray ridge pole).
3. Insert both, long, black poles through sleeves in top front and center locations on tent as shown. (Fig. 1)
4. Insert the gray ridge pole through sleeve on top of tent that runs from front to back. (Fig. 1)
5. Insert metal tip on gray ridge pole into metal grommet located at front of tent. (Fig. 2)
6. Insert one end of front and center black poles into pins in front corner and side of tent. (Fig. 3 & 3A)
7. Go to opposite end of each pole and gradually apply pressure to the poles forming arches. Insert the pin into the pole end at the front corner and side of tent. (Fig. 3)
8. Go to back of tent and gradually apply pressure on the gray ridge pole forming an arch; then insert metal tip of pole into metal grommet on web strap at back of tent. (Fig. 3)
9. Stretch corners and sides of tent until floor is taut then hammer stakes through loops to secure. (Fig. 3B)

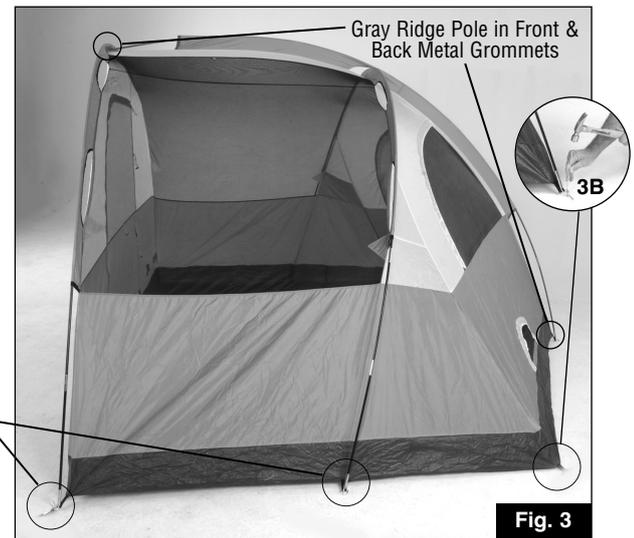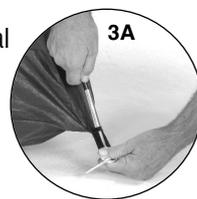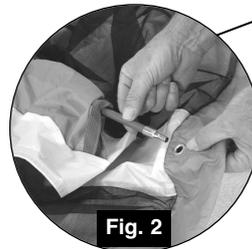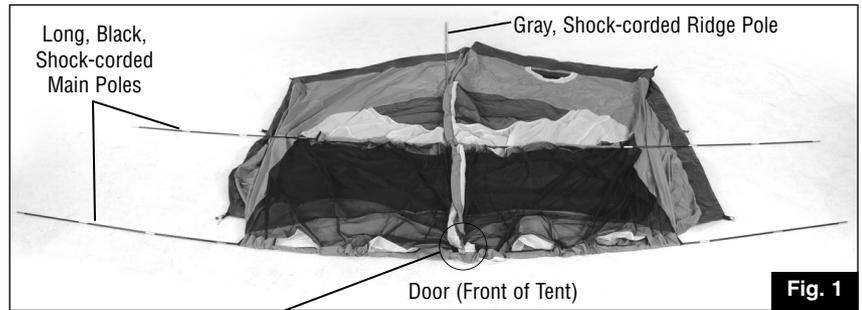

To Attach Rainfly

1. Assemble long, thin, black interlocking shock-corded front awning pole.
2. Unfold rainfly. Locate the sleeve, along front edge, and the hook & loop fasteners on the underside of rainfly.
3. Drape rainfly over tent. Make sure the sleeve is centered over the door and the hook & loop fasteners, on the underside of the rainfly, are positioned over the black main poles and gray pole. (Fig. 4)
4. Slide front awning pole through sleeve at front of the rainfly. (Fig. 4)
5. Insert one end of front awning pole into pin in front corner of tent. (Fig. 5A)
6. Go to opposite end of front awning pole and gradually apply pressure until pole forms an arch. Insert the pin into the pole end at the front corner of tent (Fig. 5 & 5B). Drive stakes through straps on vestibule flap. (Fig. 5C)


(continued on other side)

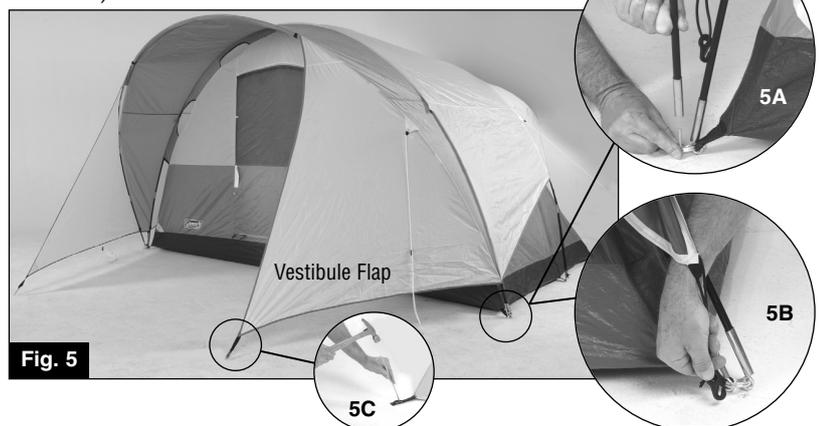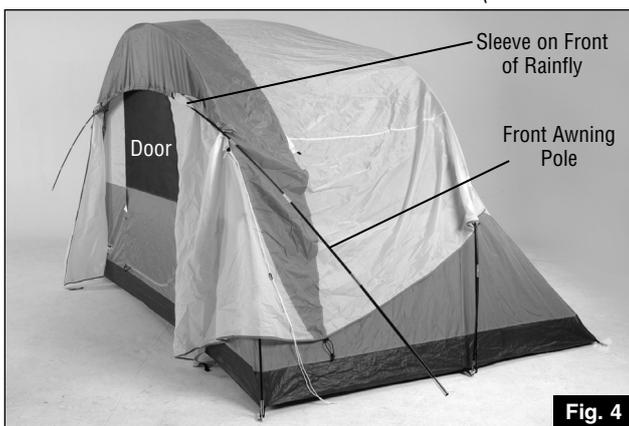

STITCH LINE

To Attach Rainfly continued


7. Assemble the interlocking, shock-corded back awning pole, with metal tips on the angled end pieces.
8. Insert back awning pole through sleeve in rainfly awning at back of tent as shown. (Fig. 6)
9. Insert metal tip, on back awning pole, into metal grommet in upper corner. (Fig. 6 & 6A)
10. Go to opposite end of back awning pole and gradually apply pressure to the pole to form an arch. Insert the metal tip on the awning pole into the metal grommet. (Fig. 6)
11. Locate all hook & loop fasteners on seams on underside of rainfly and wrap around black main poles to secure. (Fig. 7A)
12. Tie guylines through loops on web straps on the rainfly. (Fig. 7 & 7B)
13. Stretch guylines until taut, then secure with stakes. (Fig. 7C)

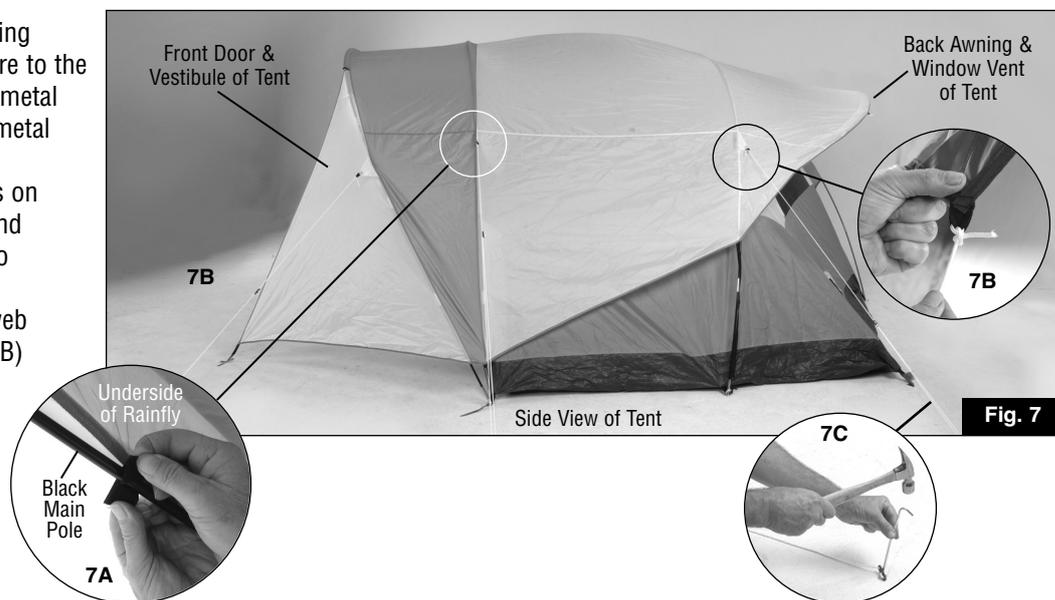

Cooler Access

The smaller zippered opening at the rear of the tent is designed for added ventilation and easy access to your beverage cooler.

1. To use as a vent, unzip flap to expose screen. (Fig. 8)
2. To use as a cooler access, unzip other flap to make an avenue to bring beverages into the tent. (Fig. 9)

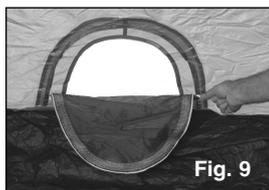

Electrical Cord Access

1. Unzip access panel in the lower left corner of tent and bring in electrical cord. Use only UL approved cords that are rated for outdoor usage. (Fig. 10)



To Store

1. All metal poles and stakes must be placed in the storage bag to prevent damage to the fabric items placed in the carry case.
2. Make sure tent is clean and dry before placing in carry case.
3. Remove rainfly, spread out on floor of tent, then unzip door & vents before taking tent down for storage.
4. Neatly fold tent to width of pole storage bag, place on tent, roll tightly, and place in carry case.
5. Store in a clean, dry area.

Things You Should Know:

- Under certain conditions (cold weather, high humidity, etc.) condensation will form on the inside of your tent. Condensation is caused by water vapor from your breath, perspiration, or any wet clothing inside the tent. It is NOT LEAKAGE through the tent fabric. It can be minimized by removing wet clothing from your tent and by providing good ventilation through the tent.
- Never store tent, even for a short period of time, without drying it thoroughly and brushing off caked dirt. Do not pack stakes or poles inside your tent. Use a separate storage bag.
- STAKES SHOULD BE REMOVED BY PULLING ON THE STAKE ITSELF. NEVER PULL ON THE TENT TO REMOVE STAKE.
- TENT POLES SHOULD NOT BE LEFT TELESCOPED TOGETHER DURING STORAGE.
- Do not leave your tent set-up for weeks at a time. Be aware that exposure to ultraviolet rays from the sun can seriously damage material and/or cause it to become discolored.

⚠ WARNING: Keep all flame and heat sources away from this tent fabric.

This tent meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.



The Coleman Company, Inc. • 3600 N. Hydraulic • Wichita, Kansas 67219
1-800-835-3278 • www.coleman.com

MADE IN CHINA • PRINTED IN CHINA

© 2007 The Coleman Company, Inc.

Coleman® and are registered trademarks of The Coleman Company, Inc.