



DURANGO™ 15' X 10' MODEL 2000000143

Before you begin

Read all instructions before set up.

- Select a level campsite clear of rocks, branches, and other hard or sharp objects, to install your tent.

⚠ WARNING: Keep clear of overhead power lines.

- Do not set up your tent under trees.
- For best results in windy conditions, position end of tent into the wind.
- Enlist the help of at least one other person to assist you when it is time to assemble the tent.

Parts and Components

Description	Part Number
Main Poles, Black (2)	9163-1051
Side Pole, Gray (1)	9163-1061
Roof Ridge Pole, Black (1)	9163-1071
Rainfly Pole, Black (1)	9163-1081
Rainfly	9163-1091


To Set Up Tent

1. Unfold tent and spread out on a clean, level surface with the door facing the desired direction. Unzip door.
2. Stretch out corners and sides of tent. Secure with stakes driven in at an angle to better anchor the tent. (Fig. 1 & 2)


Note: Staking the corners and sides will make it easier to raise and tear-down the tent.




3. Assemble roof ridge pole (3-section, black, shock-corded pole) and insert through sleeve in center of tent.
4. Place one end of roof ridge pole in brass grommet. Carefully apply pressure on pole to allow other end of pole to bow and be inserted into other brass grommet. (Fig. 3 & 4)

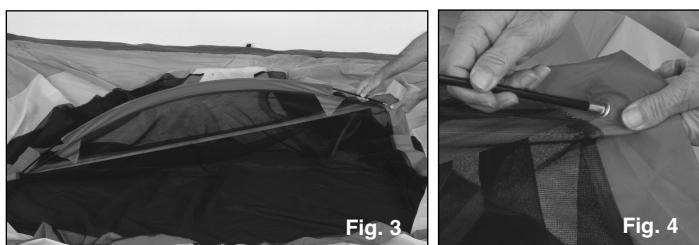

5. Assemble the 2 long, black shock-corded poles and insert through sleeves in top of tent forming an "X" as shown. (Fig. 5)

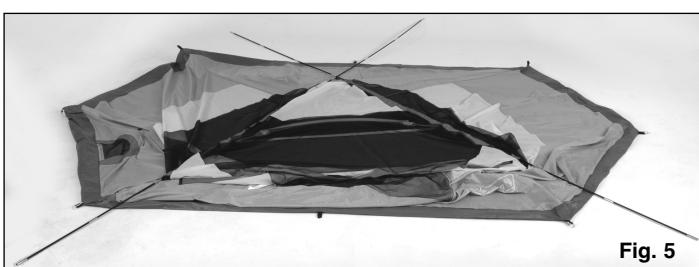

6. Assemble gray, shock-corded, side pole and insert through sleeve in front of tent as shown. (Fig. 6)

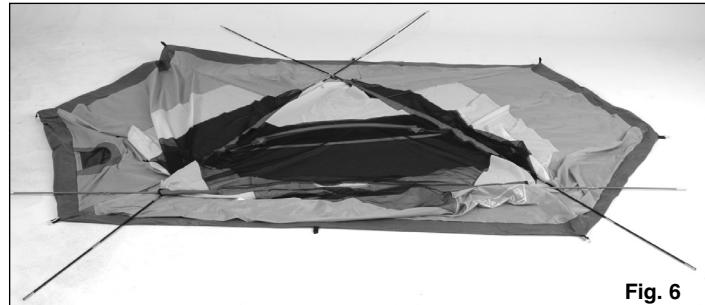

7. Insert one end of each black pole into pins located on the ring in center location at the back of the tent. (Fig. 7)
8. Insert other end of black poles into pins at front corners of tent; and end of gray pole into pins on sides of tent to form arches as shown. (Fig. 8)



9. Attach frame clips along tent seams to gray side pole and both black poles. (Fig. 9 & 10)



To Attach Rainfly

1. Drape rainfly over tent. Make sure end with logo is centered over the door and the rainfly seams are centered over the gray and black poles. (Fig. 11)



(continued on
other side)

To Attach Rainfly continued

- Clip hooks on elastic cords on rainfly to rings at bottom of tent. (Fig. 12)



Fig. 12

- Secure rainfly with hook & loop fasteners located on underside of fly to gray and black poles. (Fig 13)



Fig. 13

- Assemble black, shock-corded, rainfly pole and slide through sleeve on underside of rainfly. (Fig 14)

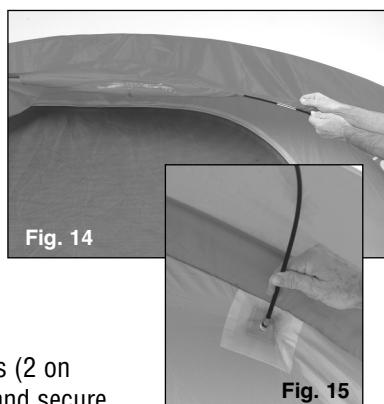


Fig. 14

Fig. 15

- Insert ends of rainfly into brass grommets on tent to form an arch over doorway. (Fig. 15)

- Tie guylines at 4 locations (2 on front, 2 on back) of tent and secure with stakes. (Fig. 16 & 17)

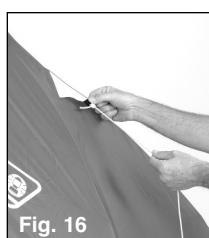


Fig. 16



Fig. 17

COMPLETED TENT

- To open door fully, unzip, then roll up and insert toggle through fabric loop. (Fig. 18)

- To use the door vent, undo other zipper to expose vent, then roll up door flap and fasten with toggle and fabric loop.



Fig. 18

Attaching Room Divider

- Room divider panel can be installed by inserting toggles through the fabric loops. (Fig. 19 & 20)



Fig. 19



Fig. 20

Overhead Storage

- Convenient overhead storage compartment is located at the back of the tent. (Fig. 21)
- Small storage pockets are located on each side of tent.

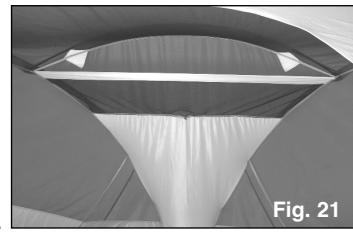


Fig. 21

Electrical Cord Access

- Unzip access panel in the lower right corner of tent and bring in electrical cord. Use only UL approved cords that are rated for outdoor usage. (Fig. 22)

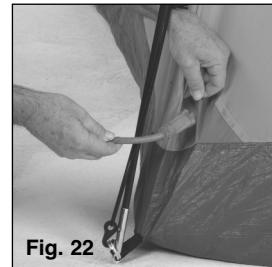


Fig. 22

Cooler Access

The smaller zippered opening at the side of the tent is designed for added ventilation and easy access to your beverage cooler.

- To use as a vent, unzip flap to expose screen. (Fig. 18)
- To use as a cooler access, unzip other flap to make an avenue to bring beverages into the tent. (Fig. 23)

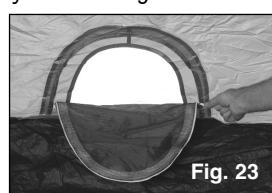


Fig. 23

To Store

- All metal poles and stakes must be placed in the storage bag to prevent damage to the fabric items placed in the carry case.
- Make sure tent is clean and dry before placing in carry case.
- Remove rainfly, spread out on floor of tent, then unzip door & vents before taking tent down for storage.
- Neatly fold tent to width of pole storage bag, place on tent, roll tightly, and place in carry case.
- Store in a clean, dry area.

Things You Should Know:

- Under certain conditions (cold weather, high humidity, etc.) condensation will form on the inside of your tent. Condensation is caused by water vapor from your breath, perspiration, or any wet clothing inside the tent. It is NOT LEAKAGE through the tent fabric. It can be minimized by removing wet clothing from your tent and by providing good ventilation through the tent.
- Never store tent, even for a short period of time, without drying it thoroughly and brushing off caked dirt. Do not pack stakes or poles inside your tent. Use a separate storage bag.
- Stakes should be removed by pulling on the stake itself. Never pull on the tent to remove stake.
- TENT POLES SHOULD NOT BE LEFT TELESCOPED TOGETHER DURING STORAGE.
- Do not leave your tent set-up for weeks at a time. Be aware that exposure to ultraviolet rays from the sun can seriously damage material and/or cause it to become discolored.

⚠ WARNING: Keep all flame and heat sources away from this tent fabric.

This tent meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.



The Coleman Company, Inc. • 3600 N. Hydraulic • Wichita, Kansas 67219
1-800-835-3278 • www.coleman.com

MADE IN CHINA • PRINTED IN CHINA

© 2006 The Coleman Company, Inc.

Coleman® and are registered trademarks of The Coleman Company, Inc.

Rev09/07