



WEATHERMASTER™ 17'x9'

Instructions apply to Part Number 9232E199

POLE ASSEMBLY PARTS

When You Are Ready To Set Up Your Tent


- Select a level campsite clear of rocks, branches and other hard or sharp objects.
- Do not set up your tent under trees.
- For best results in windy conditions, position the end of tent into the wind.

(2) Center Curved Roof Poles (Red Sticker) Part No. 9232E302

(2) End Curved Roof Poles (Blue Sticker) Part No. 9232E303

(4) Center Brace Poles (Red Sticker) Part No. 9232E304


(4) End Brace Poles (Blue Sticker) Part No. 9232E305

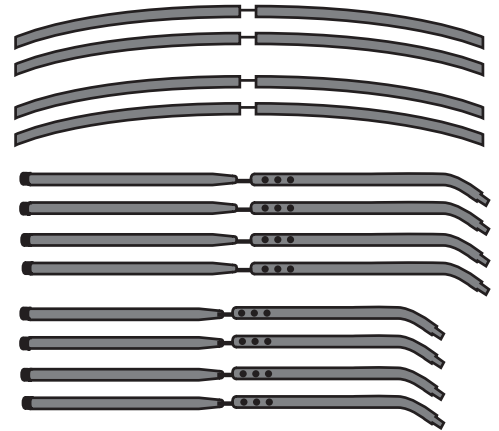

Rainfly Part No. 9232E307



1 Layout & Positioning of Tent

- Layout and position tent with door facing desired direction. (illus. 1)
- Stake down tent, starting with the corners. Do not stretch too tight. Angle the stakes slightly toward the tent. (illus. 2) Keep the floor taut.
- Unzip the door.

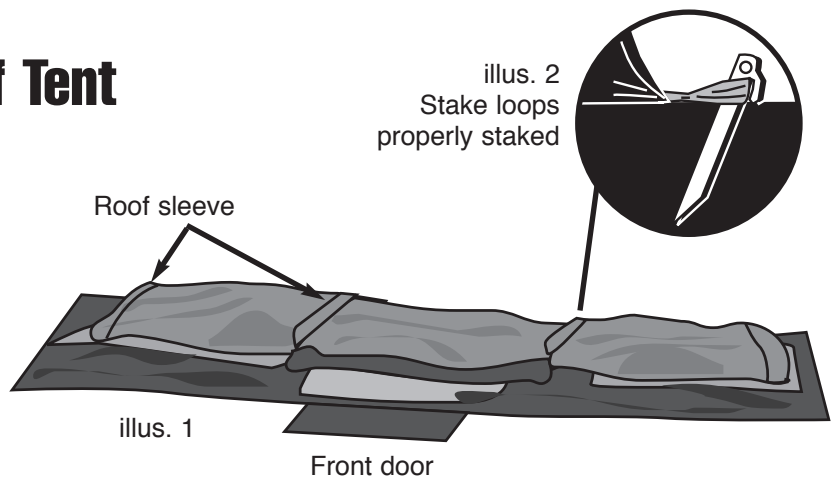

2 Assemble & Place Roof Poles


- Assemble all shock-corded roof poles. When assembled will form a continuous arch with both ends pointing down. (illus. 3)
- Select center roof poles with red stickers and square ends. Then insert them through the two center roof sleeves. (illus. 4)
- Select end roof poles with blue stickers and round ends. Then insert them through the roof sleeves at each end of the tent. (illus. 4)

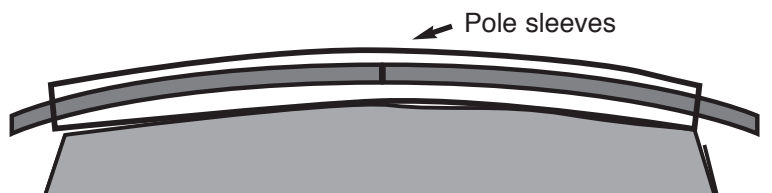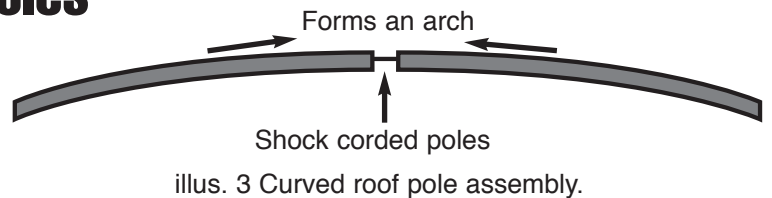


illus. 4 Curved roof pole system shown inserted through pole sleeves. Square end, red sticker poles go into two center pole sleeves. Round end, blue sticker poles go into two end pole sleeves.

3 Raise Center of Tent



- Assemble center shock-corded brace poles (red sticker, longer poles). Pole should be initially adjusted to the inner most hole "A". (illus. 7)
- Insert square end of brace poles into curved roof poles and raise tent upright. (illus. 5, 6, 7)
- Brace poles should attach to squeeze pins at bottom of tent. (illus. 8)

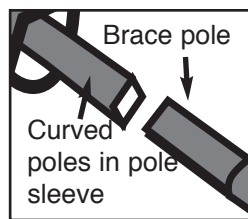

illus. 6 When attaching the brace poles to the curved poles make sure that the brace poles naturally point straight down.

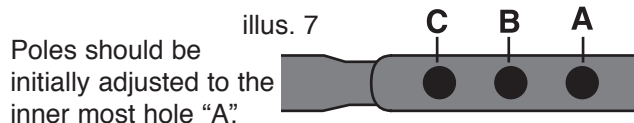


illus. 5
Shown with both center brace poles in position and curved poles through both center pole sleeves.

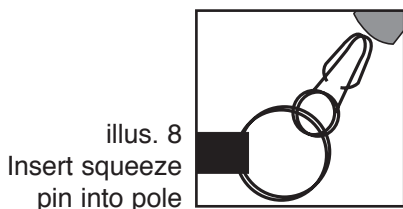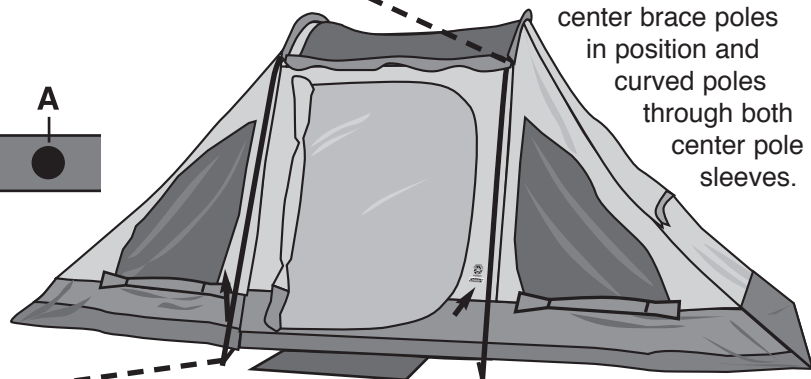

4 Raise Sides of Tent

- Assemble end (blue sticker, round ends) shock-corded brace poles.
- Insert (blue sticker) brace poles into end roof assemblies. **MAKE SURE** when attaching the brace poles to the curved poles that the bottom of the brace pole naturally points down and toward the center of the tent. (illus. 9)
- Brace poles should attach to squeeze pins at bottom of tent. (illus. 8)
- Can be adjusted to accommodate for terrain
- Drape rainfly over tent and attach "S" hooks on rainfly into holes in brace poles. (illus. 9)

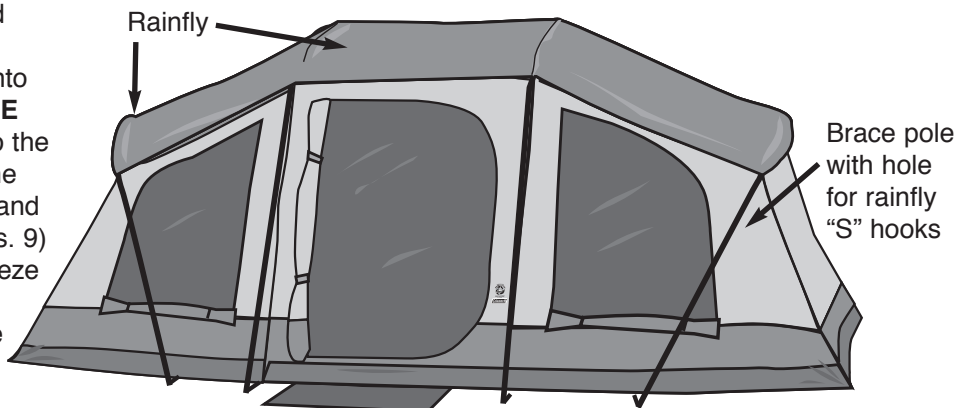

illus. 9 Tent shown completely set-up.

Things You Should Know

- Under certain conditions (cold weather, high humidity, etc.) condensation will form on the inside surfaces of your tent. Condensation is caused by water vapor from your breath, perspiration, or any wet clothing inside your tent. It is NOT LEAKAGE through the tent fabric. It can be minimized by removing wet clothing from your tent and by providing good ventilation through the tent.
- Never store tent, even for a short period of time, without drying it thoroughly and brushing off caked dirt. Do not pack stakes or poles inside your tent. Use a separate storage bag.
- STAKES SHOULD BE REMOVED BY PULLING ON THE STAKE ITSELF. NEVER PULL ON THE TENT FABRIC OR TENT STAKE LOOP TO REMOVE STAKE.
- TENT POLES SHOULD NOT BE LEFT TELESKOPED TOGETHER DURING STORAGE.
- Seam sealer has not been provided with your tent. For additional protection we recommend seam sealing your tent prior to camping. Seam sealer may be purchased through your local retailer or at your local sporting goods store.

- Do not leave your tent set-up for weeks at a time, be aware that exposure to the ultraviolet rays of the sun can seriously damage material and/or cause it to become discolored.

WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC. This tent meets the flammability requirements of CPAI-84. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.



THE COLEMAN CO., INC.

3600 N. Hydraulic • Wichita, Kansas 67219
1-800-835-3278 • www.coleman.com

MADE IN SRI LANKA