

# Care, Use and Installation booklet

TUMBLE DRYER

EN

English 1

ASL65VXS

## Contents

EN

### Warnings and Safety Instructions, 2

Important safety instructions

Grounding instructions

### Dryer Description, 3

The front

The back

Control panel

### Start and Programs, 4-6

Choosing a program

Table of programs

The controls

### Laundry, 7-8

Sorting your laundry

Wash care labels

Special clothing items

Drying times

### Maintenance and Care, 9

When to switch off the electricity

Clean the filter after each cycle

Clean the drum after each load

Cleaning the dryer

### Troubleshooting, 10-11

Spare parts

### Installation, 13-14

Electrical

Where to put your dryer

Exhaust ducting

Stacking kit



# Warnings and Safety Instructions


EN

! The appliance has been designed and built according to international safety standards. These warnings are given for safety reasons and must be read carefully.

## Important safety instructions

### WARNING:

To reduce the risk of fire, electric shock or injury to persons when using your appliance, follow the basic precautions, including the following:

- Read all instructions before using the appliance.
- Do not dry articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents or other flammable or explosive substances, as they give off vapours that could ignite or explode.
- Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.
- Before the appliance is removed from service or discarded, remove the door to the drying compartment.
- Do not reach into the appliance if the drum is moving.
- Do not install or store this appliance where it will be exposed to the weather.
- Do not tamper with the controls.
- Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in the user-maintenance instructions.
- Do not use fabric softeners or products to eliminate static unless recommended by the manufacturer of the fabric softener or product.
- Do not use heat to dry articles containing foam rubber or similarly textured rubber-like materials.
- Clean the lint filter before and after each load (*see Maintenance*).
- Keep the area around the exhaust opening and adjacent surroundings free from the accumulation of lint, dust and dirt.
- The interior of the appliance and exhaust duct should be cleaned periodically by qualified service personnel.
- Do not place items exposed to cooking oils in your dryer. Items contaminated with cooking oils may contribute to a chemical reaction that could cause a load to catch fire.
- This tumble dryer has been designed for home, and not professional, use.
- This dryer must be used by adults, and the instructions in this booklet should be followed carefully.
- Do not touch the appliance while barefoot or with wet hands or feet.
- The appliance must be installed correctly and have proper ventilation. The air intake vents behind the machine, the outlet vents should never be obstructed (*see Installation*).
- Check to see if the dryer is empty before loading it.
-  The back of the dryer could become very hot. Never touch it while in use.

- Do not use the dryer unless the filter is securely in place (*see Maintenance*).
- Do not overload the dryer (*see Laundry* for maximum loads).
- Do not load items that are dripping wet.
- Tumble dry items only if they have been washed with detergent and water, rinsed and been through the spin cycle. It is a fire hazard to dry items that have not been washed with water.
- Carefully check all instructions on clothing labels (*see Laundry*).
- Do not tumble dry large, very bulky items.
- Do not tumble dry acrylic fibres at high temperatures.
- Complete each program with its Air Fluff phase.
  
- Never climb on top of the dryer. It could result in damage.
- Comply with specified electrical requirements (*see Installation*).
- Always buy original spare parts and accessories (*see Troubleshooting*).

## Grounding instructions (*see installation*)

### WARNING:

THIS APPLIANCE MUST BE GROUNDED. Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service representative or personnel if you are in doubt as to whether the appliance is properly grounded!

In the event of malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current. This appliance is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

DO NOT modify the plug provided with the appliance: if it will not fit the outlet, have a proper outlet installed by a qualified electrician or exchange the cord with an appropriate one rated for the dryer.

### REFER TO THE RATING PLATE FOR VOLTAGE AND CURRENT REQUIREMENTS (*see diagram for location*).

The dryer should be connected to the mains supply via a suitable socket which is **accessible** after installing your dryer. This dryer must be connected to 30A INDIVIDUAL BRANCH CIRCUIT.


For full details see Installation Instruction sections of this book.

**IF IN DOUBT ABOUT ANY OF THE ABOVE CONSULT A QUALIFIED ELECTRICIAN**


**SAVE THESE INSTRUCTIONS**

# Dryer Description


## The front

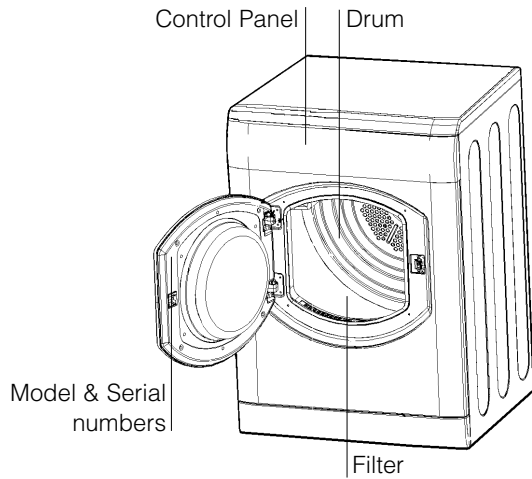

## The back

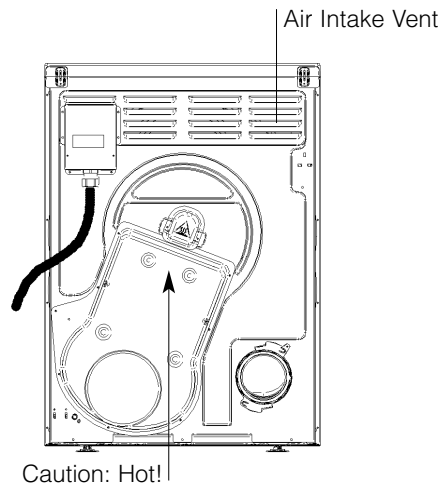

## Control panel

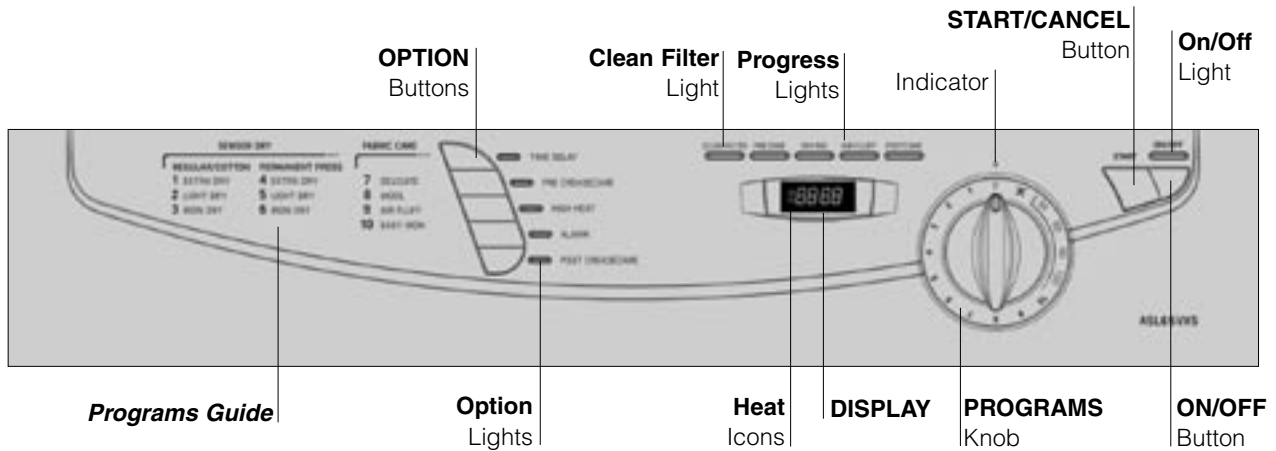

The **START/CANCEL** button starts a selected program. When you press this button there will be one beep and the progress lights will flash to confirm the action. If you have not set a program, the buzzer will beep three times. When a program is running, holding in this button cancels the program and stops the dryer (*see Start and Programs*).

The **OPTION** buttons select available options for your selected program (*see Start and Programs*).

The **Option** lights indicate that the option has been selected by the button to the left of the appropriate light.

The **Programs Guide** allows you to consult a user friendly table of the available programs.

The **Clean Filter** light gives a reminder before every program that it is essential to clean the filter every time the dryer is used (*see Maintenance and Care*).

The **On/Off** indicator light signals that your dryer is in use or ready to select a program.

The **ON/OFF** button: If the dryer is running and this button is pressed, the dryer stops. Press again, the dryer restarts.

The **Progress** lights show you the status of the program. As each stage of the program starts the corresponding light turns on.

The **Heat** Icons indicate the heat setting of the selected program. High or Low . Does not light if a Wool, Airing or Air Fluff program has been selected.

The **PROGRAMS** knob sets the program: rotate it until the indicator is pointing to the program you want to select (*see Start and Programs*).

# Start and Programs

EN

## Choosing a program

1. Plug the dryer into the electrical socket.
2. Sort your laundry according to fabric type (*see Laundry*).
3. Open the door and make sure the filter is clean and in place (*see Maintenance*).
4. Load the machine and make sure that the items are not in the way of the door seal. Close the door.
5. If the On/Off light is not lit: Press the ON/OFF button.
6. Choose a program by checking the Programs guide (*see Programs*) as well as the indications for each type of fabric (*see Laundry*).  
- Select a program by rotating the PROGRAMS knob.
7. Set a delay time and other options if necessary.
8. If you wish to select the buzzer to sound, at the end of the program, press the ALARM Option button.
9. Press the START button to begin. The display will show the estimated time to end.  
During the drying program, you can check on your laundry and take out the items that are dry while others continue drying. When you close the door again, press the START button in order to resume drying.
10. During the last few minutes of Drying Programs, before the program is completed, the final AIR FLUFF phase is entered (fabrics are cooled), this phase should always be allowed to complete.
11. The buzzer (if Alarm Option was selected) will warn you when the program is complete.  
Open the door, take your laundry out, clean the filter and replace it (*see Maintenance*).  
If the Post Creasecare Option has been selected and you do not take the clothes out immediately, the clothes will tumble occasionally for 10 hours or until you open the door.
12. Unplug the dryer.

## Easy Iron Program

Easy Iron is a short 10 minute programme (8 minutes of heat followed by a 2 minute Air Fluff period) which fluffs the fibers of clothing that have been left in the same position/location for an extended period of time. The cycle relaxes the fibers and makes them easier to iron and fold.

! Easy Iron is **not a drying program** and should not be used for wet articles of clothing.

For best results:

1. Do not load more than the maximum capacity.


These numbers refer to the dry weight:

<b>Fabric</b>	<b>Maximum load</b>
Regular Cotton and Regular Cotton mix	5.5 lb / 2.5 kg
Permanent Press	4 lb / 2 kg
Denim	4 lb / 2 kg

2. Unload the dryer immediately after the end of the program, hang, fold or iron the articles and put them away.  
Should this not be possible, repeat the program.

The Easy Iron effect varies from one fabric to the next. It works very well on traditional fabrics like Regular Cottons or Regular Cotton mix, and less well on acrylic fibers.

## Wool Program

- This is a program for tumble dryer safe garments marked with the symbol .
- It can be used for load sizes up to 2 lb / 1 kg (approximately 3 sweaters).
- We recommend that garments are turned inside out before drying.
- This program will take about 20 to 40 minutes, but may take longer depending on the size and density of the load and the spin speed used in your washer.
- Loads dried using this program are usually ready to wear, but on some heavier garments the edges may be slightly damp. Allow these to dry naturally as over-drying could damage garments.








 


! Unlike other materials, the mechanism of wool shrinkage is irreversible; i.e. it will not stretch back to original size and shape.

! This programme is not suitable for Acrylic garments.

## Programs

EN

! If the On/Off light is not lit; Press the ON/OFF button and then select program.

Program	What it does...	How to set it...	Note:
<b>Sensor Dry Cottons</b> Extra Dry	Dries your clothes on High heat setting  , ready for putting away.	1. Position the PROGRAMS knob on <b>1</b> . 2. Select any Options, if required. 3. Press the START button.	<b>Options available:</b> Alarm, Delayed start, Pre Creasecare, Post Creasecare.
<b>Sensor Dry Cottons</b> Light Dry	Dries your clothes on High heat setting  , ready for hanging.	1. Position the PROGRAMS knob on <b>2</b> . 2. Select any Options, if required. 3. Press the START button.	<b>Options available:</b> Alarm, Delayed start, Pre Creasecare, Post Creasecare.
<b>Sensor Dry Cottons</b> Iron Dry	Dries your clothes on High heat setting  , ready for ironing.	1. Position the PROGRAMS knob on <b>3</b> . 2. Select any Options, if required. 3. Press the START button.	<b>Options available:</b> Alarm, Delayed start, Pre Creasecare, Post Creasecare.
<b>Sensor Dry Permanent press</b> Extra Dry	Dries your clothes on High heat setting  , ready for putting away.	1. Position the PROGRAMS knob on <b>4</b> . 2. Select any Options, if required. 3. Press the START button.	<b>Options available:</b> Alarm, Delayed start, Pre Creasecare, Post Creasecare.
<b>Sensor Dry Permanent press</b> Light Dry	Dries your clothes on High heat setting  , ready for hanging.	1. Position the PROGRAMS knob on <b>5</b> . 2. Select any Options, if required. 3. Press the START button.	<b>Options available:</b> Alarm, Delayed start, Pre Creasecare, Post Creasecare.
<b>Sensor Dry Permanent press</b> Iron Dry	Dries your clothes on High heat setting  , ready for ironing.	1. Position the PROGRAMS knob on <b>6</b> . 2. Select any Options, if required. 3. Press the START button.	<b>Options available:</b> Alarm, Delayed start, Pre Creasecare, Post Creasecare.
<b>Timed Drying</b> (120, 90, 60 or 30 minutes)	Dries wet clothing that you wish to dry on low heat or small loads (less than 2 lb / 1 kg).  Can be used with high heat option if you prefer to use a timed program.	1. Position the PROGRAMS knob on the desired time: <b>120, 90, 60 or 30</b> . 2. Select any Options, if required. 3. Press the START button.	<b>Options available:</b> Alarm, High Heat  , Delayed Start, Pre Creasecare Post Creasecare.  Consult suggested drying times ( <i>see Laundry</i> ). The last 10 minutes of these programs is the air fluff phase ( <i>see below</i> ).
<b>Fabric Care Delicates</b>  (e.g. Acrylics)	Dries your clothes on Low heat setting  , ready to be worn.	1. Position the PROGRAMS knob on <b>7</b> . 2. Select any Options, if required. 3. Press the START button.	<b>Options available:</b> Alarm, Delayed start, Pre Creasecare, Post Creasecare
<b>Fabric Care Wool</b>	Dries your Woollen clothes, ( <i>see previous page</i> ).	1. Position the PROGRAMS knob on <b>8</b> . 2. Select any Options, if required. 3. Press the START button.	<b>Options available:</b> Alarm
 <b>Air Fluff</b>	Brief program (approximately 10 minutes) that cools fibers of clothing.	1. Position the PROGRAMS knob on  . 2. Select any Options, if required. 3. Press the START button.	<b>Options available:</b> Alarm
<b>Fabric Care Air Fluff</b>	Aires your clothes with cool air, use also to cool warm clothes (20 minute program)	1. Position the PROGRAMS knob on <b>9</b> . 2. Select any Options, if required. 3. Press the START button.	<b>Options available:</b> Alarm
<b>Fabric Care Easy Iron</b>	Brief program (approximately 10 minutes) that softens fibers of clothing that is ready for ironing.	1. Position the PROGRAMS knob on <b>10</b> . 2. Select any Options, if required. 3. Press the START button.	<b>! This is not a drying program (<i>see previous page</i>).</b> <b>Options available:</b> Alarm.


# Start and Programs

EN

## The Controls

### • PROGRAMS knob

**! Warning**, if after pressing the start button, the programs knob position has changed, the new position will **NOT** change the program selected.

**! Position 0**, turning the knob to position 0 resets and cancels a program, the display shows .



### • OPTION buttons / lights

These buttons are used to customize the selected program to your requirements. A program must have been selected on the programs knob before an option can be selected. Not all options are available for all programs (*see Start and Programs*). If an option is not available and you press the button, the buzzer will beep three times. If the option is available there will be one beep and the option light next to the button lights to confirm the selection.

After the start button has been pressed only the Alarm, Pre Creasecare and Post Creasecare options can be changed.

#### Time Delay

The start of some programs (*see Start and Programs*) can be delayed for up to 18 hours.

Press this button, the display shows  and the option light comes on. Press again and a 1 hour delay is selected and the display indicates 1hr, each further press of the button adds 1hr to the delay. When 18hr is displayed a further press and the display shows  and after a couple of seconds cancels the delay. You can also cancel the delay by turning the programs knob to 0, wait for the buzzer to beep and then turn back to your selected program.

#### Pre Creasecare

This option is only available if a delayed start has been selected. It tumbles the clothes occasionally during the delayed period to help prevent creases developing.

#### High Heat

When available this button selects high heat. Press this button and a high heat setting is selected and the light alongside the button comes on.

Timed programs have a default of low heat, if the light alongside the button is on then pressing the button selects a low heat setting and the light goes out. The heat icon on the display will also change.

#### Alarm

Available on all programs and allows the buzzer to give a signal at the end of the drying cycle, to remind you that the clothes are ready to be removed.

Press the button and the light will show that the option is selected.

#### Post Creasecare

When available and selected, the clothes are occasionally tumbled after the end of the drying and air fluff cycles, to help prevent creases developing should you not be available to remove the load immediately the program is complete.

### • DISPLAY


The display shows either the amount of time delay remaining or an indication of the amount of time left for a drying program.

The delay time is displayed in hours and counts down each hour.

The time to end is displayed in hours and minutes and counts down each minute, this time includes the air fluff phase. When timed programs are selected the time displayed throughout the cycle is the actual time remaining.

When a sensing program is selected the time displayed is an estimate of the time remaining. When the program is selected the display shows the time required to dry a full load, after around 10 minutes the controller calculates a better estimate of the cycle time.

The colons between the hours and minutes in the display flash to show that the time is counting down.

When the program finishes its air fluff phase the display will show .

The display also shows if there is a problem with your dryer, if this occurs the display will show F followed by a fault code number (*see Troubleshooting*).

### • Door Opening

Opening the door during a program will stop the dryer and have the following effects:

- All 4 progress lights come on.
- During a delay phase the delay will continue to count down. The start button **must** be pressed to resume the delay program. The progress lights will change to show current status.
- During the drying part of the program, the time to end count continues but the colons do not flash. The start button **must** be pressed to resume the program. The progress lights will change to show the current status.
- During the air fluff or post creasecare phase of a drying program and anytime during an Airing or Air fluff program, the program will finish. Pressing the start button will re-start a new program at the beginning.
- Changing the programs knob will select a new program, after you press the start button. You can use this to select the Air Fluff program to cool the clothes, if you find them dry enough.

### • Note

If you have a power outage, switch off the power or remove the plug, press the START button and the program will resume.

## Sorting your laundry

- Check symbols on clothing labels to make sure that the articles can be tumble dried.
- Sort laundry by fabric type.
- Empty pockets and check buttons.
- Close zippers and hooks and tie loose belts and strings.
- Wring out each item in order to eliminate as much excess water as possible.

! Do not load dripping wet clothes into the dryer.

## Maximum load size

Do not load more than maximum capacity.

These numbers refer to dry weight:

Natural fibres: 6 kg max (13 lb)

Synthetic fibres: 3 kg max (6.6 lb)

! DO NOT overload the dryer as this could result in reduced drying performance.

## Typical weights





Clothes			
Blouse	Cotton	150 g	5 oz
	Other	100 g	3 oz
Dress	Cotton	500 g	1 lb 2 oz
	Other	350 g	12 oz
Jeans		700 g	1 lb 6 oz
10 Diapers		1000 g	2 lb 3 oz
Shirt	Cotton	300 g	10 oz
	Other	200 g	7 oz
T-Shirt		125 g	4 oz

Household Items			
Duvet cover (Double)	Cotton	1500 g	3 lb 5 oz
	Other	1000 g	2 lb 3 oz
Large Tablecloth		700 g	1 lb 6 oz
Small Tablecloth		250 g	9 oz
Tea Towel		100 g	3 oz
Bath Towel		700 g	1 lb 6 oz
Hand Towel		350 g	12 oz
Double Sheet		500 g	1 lb 2 oz
Single Sheet		350 g	12 oz


At the end of a drying cycle, cottons could still be damp if you grouped cottons and permanent press items together. If this happens simply give them an additional short period of drying.

## Wash Care Labels

Look at the labels on your garments, especially when tumble drying for the first time. The following symbols are the most common:

-  May be tumble dried
-  Do **not** tumble dry
-  Tumble dry at high heat setting
-  Tumble dry at low heat setting

## What not to tumble dry in your dryer:

- Articles that contain rubber or rubber-like materials or plastic film (pillows, cushions, or PVC rainwear), any other flammable objects or objects that contain flammable substances (towels soiled with hair spray).
- Glass fibres (certain types of draperies).
- Items which have been dry cleaned.
- Items with the ITCL Code (*see Special clothing items*) . These can be cleaned with special at-home dry cleaning products. Follow instructions carefully.
- Large bulky items (quilts, sleeping bags, pillows, cushions, large bedspreads etc). These expand when drying and would prevent airflow through the dryer.

# Laundry

EN

## Special clothing items

**Blankets and Bedspreads:** acrylic items (Acilan, Courtelle, Orion, Dralon) **must be dried** with special care on LOW heat setting. Avoid drying for a long period of time.

**Pleated or creased garments:** read the manufacturer's drying instructions on the garment.

**Starched articles:** do not dry these with non-starched items. Make sure that as much of the starch solution is removed from the load as possible before placing it in the dryer. Do not over-dry: the starch will become powdery and leave your clothing limp, which defeats the purpose of starch.

## Drying times

The table below presents APPROXIMATE drying times in minutes. Weights refer to dry garments:

<b>Regular Cottons</b>					
High (full) Heat					
Drying times 800-1000rpm in washing machine					
		Half Load			Full Load
2 lb	4 lb	7 lb	9 lb	11 lb	13 lb
1 kg	2 kg	3 kg	4 kg	5 kg	6 kg
20-30	35-45	45-60	60-70	70-80	80-100
<b>Permanent press</b>					
High (full) Heat					
Drying times on reduced spin in washing machine					
		Half Load			Full Load
2 lb		4 lb			7 lb
1 kg		2 kg			3 kg
20-40		30-50			40-70
<b>Delicates (e.g.Acrylics)</b>					
Low (gentle) Heat					
Drying times on reduced spin in washing machine					
Half Load			Full Load		
2 lb			4 lb		
1 kg			2 kg		
50-70			90-130		

Times are approximate and can vary depending upon:

- Amount of water retained in clothes after spin cycle: towels and delicates retain a lot of water.
- Fabrics: items that are the same type of fabric but different textures and thicknesses may not have the same drying time.
- Quantity of laundry: single items or small loads may take longer to dry.
- Dryness: If you are going to iron some of your clothes, they can be taken out while still a bit damp. Others can be left longer if you need them to be completely dry.
- Heat setting.
- Room temperature: if the room where the dryer is located is cold, it will take longer for the dryer to dry your clothes.
- Bulk: some bulky items can be tumble dried with care. We suggest that you remove these items several times, shake them out, and return them to the dryer until finished.

! Do not over-dry your clothes.

All fabrics contain a little natural moisture, which keeps them soft and fluffy.




## When you should switch off the electricity


Unplug the dryer when not using it, when cleaning it and during maintenance activities.

## Clean the filter after each cycle

The filter is an important part of your dryer: it accumulates lint and fluff that is formed while drying. Small items could also become trapped in the filter. When finished drying, therefore, clean the filter by rinsing it under running water or with your vacuum cleaner. Should the filter become clogged up, the airflow inside the dryer will be seriously compromised: drying times lengthen and you will consume more energy. It may also damage your dryer.

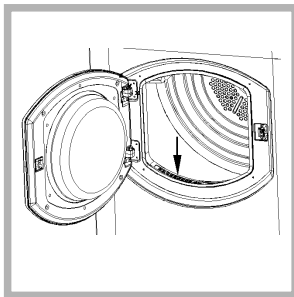

The filter is found in front of the dryer trim (*see diagram*).

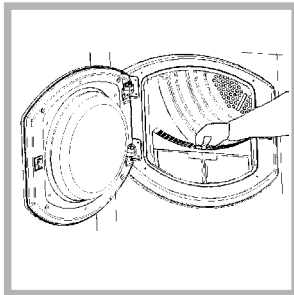

Removing the filter:  
1. Pull the plastic grip of the filter upwards (*see diagram*).  
2. Clean the filter and replace it correctly. Ensure the filter is fully located flush into the tumble dryer trim.

! Do not use the dryer without replacing the filter..

## Check the drum after each cycle

Turn the drum manually in order to remove small items (handkerchiefs) that could have been left behind.

## Cleaning the drum

! Do not use abrasives, steel wool or stainless steel cleaning agents to clean the drum.

A coloured film may start to appear on the stainless steel drum, this may be caused by a combination of water and, or cleaning agents such as fabric conditioner from the wash. This coloured film will not affect the dryer performance.

## Cleaning the dryer

- External parts in metal or plastic and rubber parts can be cleaned with a damp cloth.
- Periodically check the vent tube and any permanent venting fixture to make sure that there has been no accumulation of fluff or lint, and remove it.
- Remove lint that collects around the filter and the outlet vents.

! Do not use solvents or abrasives.

! Your dryer uses special bearing components which do not need lubrication.

! Have your dryer checked regularly by authorized technicians to ensure electrical and mechanical safety.

# Troubleshooting

EN

Before you call our Customer Care Department, go through the following troubleshooting suggestions:

## Problem:

## Possible causes / Solution:

### The dryer won't start.

- The plug is not plugged into the socket, or not making contact.
- There has been a power outage.
- The fuse has blown. Try to plug another appliance into the socket.
- You are using an extension cord? Try to plug the dryer's power cord directly into the socket.
- The door is not closed securely?
- The PROGRAMS knob has not been set properly (*see Start and Programs*).
- The START button has not been pressed (*see Start and Programs*).

### Drying cycle will not begin.

- You have set a delay time (*see Start and Programs*).

### Its taking a long time to dry.

- The filter has not been cleaned (*see Maintenance*).
- The correct program has not been selected for the type of fabric you are drying (*see Start and Programs*).
- The exhaust duct is obstructed (*see Installation*).
- The air intake vent is obstructed (*see Installation*).
- The permanent ventilation flap on the storm cover is obstructed (*see Installation*).
- The items were too wet (*see Laundry*).
- The dryer was overloaded (*see Laundry*).

### Program finishes and clothes are damper than expected.

! For safety the dryer has a maximum program time of 3 hours. If an automatic program has not sensed the required final moisture in this time the dryer will complete the program and stop. Check the above points and run the program again, if the results are still damp, contact our Customer Care Department.

### The display shows a fault code F followed by one or two numbers.

- Note down the code and contact the our Customer Care Department.

**If you still have a problem, call our Customer Care Department at: 1-800-356-0766**

# Troubleshooting

---

## Spare Parts

This dryer is a complex machine. Repairing it yourself or having a non-authorized person try to repair it could cause harm to one or more persons and to the machine, and could invalidate the spare parts warranty. Call an authorized service center if you experience problems while using the machine.

**Contact number:** 1-800-356-0766

# Notes

---

# Installation Instructions

Read these instructions with care.

These instructions are provided for use by qualified installers, in addition the installation must comply with:


- In the United States, in accordance with the National Electric Code ANSI/NFPA70 - latest edition and any State, Municipal or local codes.
- In Canada, in accordance with the Canadian Electric Code C22.1 - latest edition and any Provincial, Municipal or local codes.

## Electrical

The dryer comes with a four-wire power supply cord fitted with a 14-30P (plug), a receptacle should be fitted in a location accessible after the dryer is installed. The four wire dryer wire cord assembly fitted must be used when the appliance is installed in a location where grounding through the neutral is prohibited. Grounding through the neutral is prohibited for; new branch-circuit installations; mobile homes, recreational vehicles and areas where local codes do not allow grounding through the neutral conductor. If a 10-30R (receptacle) is installed a locally obtained 3 wire dryer cord kit minimum ratings 240V, 30A, 90C and marked for clothes dryers (ring terminals) should be fitted

To fit a 10-30P dryer cord assembly follow the steps below:

1. Make sure the dryer is not plugged into a power outlet.
2. Remove the cover from the cable junction box located on the rear of the dryer.
3. Remove Green link wire from ground terminal.
4. Loosen the nut securing the cable bush, disconnect and discard the existing cable and bush.
5. Fit one end of the Green link to the ground terminal using washer and nut. Position the link wire to the Neutral terminal (N), but do not fit securing screw at this stage.

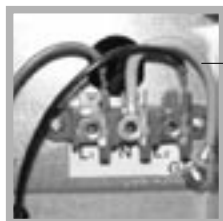

Green link wire.

6. Follow any instructions provided with the kit and fit the cable using the strain relief supplied with the kit, do not fully tighten the strain relief at this stage.

7. Connect the L1, N and L2 wires.

On flat cords the center wire is the Neutral conductor, fit to the terminal marked 'N'. On round cords the Green or White conductor should be fitted to the terminal marked 'N'.



8. Fully tighten the terminal block screws and ground connection nut, position the cord, finally fully tighten the strain relief.
9. Refit the cover to the box.

## Grounding

Some local codes may require a separate ground. In such cases the required ground wire, clamp and screw must be purchased separately.

**NEVER** ground the dryer to plastic plumbing lines, gas lines or water pipes.

NOTE: IF IN DOUBT ABOUT ANY OF THE ABOVE CONSULT A QUALIFIED ELECTRICIAN.

## Where to put your dryer

(For RV and Marine installations, see pg. 14)

Check local codes before choosing a location. Some codes do not permit installation in a garage, closet, mobile home or bedroom.

**DO NOT** install the dryer in an area where gasoline or other inflammable materials are kept or stored.

When operating the dryer, there has to be adequate ventilation to avoid the back flow of gases into the room from appliances burning other fuels, including open fires.

Min. Installation Clearances	CLOSET	CLOSET (Alternative)	UNDER COUNTER
SIDES	¾" (15mm)	0"	¾" (15mm)
TOP	½" (10mm)	4" (100mm)	½" (10mm)
REAR	¾" (15mm)	¾" (15mm)	¾" (15mm)
FRONT	¾" (15mm)	¾" (15mm)	not applicable
Vent opening distance from top of closet	6" (150mm)	2" (50mm)	not applicable

If installed in a closet it must have the following dimensions and have two ventilation openings each having an area 72 sq.ins. (450 sq.cm) located 6" (150mm) from top and bottom of the door. It must NEVER be installed in a closet with a solid door. The dryer has adjustable height feet, use these to level the dryer after fitting into its final position.

# Installation Instructions

EN

## Exhaust ducting

The ducting system for the dryer must be as short and straight as possible and with as few elbows as possible. Four-inch rigid metal ducting should be used, metal flexible ducting can be used but the maximum length of ducting if using this type will be reduced and bends in the duct will reduce this length further. **Never** use plastic ducting. All elbows must also be a minimum of 4-inch (100mm) diameter. Joints must be secured with ducting tape. **Do not use** screws, as lint can collect on the screws.

Maximum length of duct:

Number of Elbows:	Rigid Duct	Flexible Duct
0	22 ft. (6.6m)	15 ft. (4.5m)
1	18 ft. (5.4m)	12 ft. (3.6m)
2	14 ft. (4.2m)	9 ft. (2.7m)
3	6 ft. (1.8m)	4 ft. (1.2m)

The above assumes that an approved venting hood is used and that the flap on this hood must **not** have magnetic catches.

### WARNING:

- The appliance **MUST NOT** be exhausted into a chimney, a wall, a ceiling, or a concealed space of a building.
- To reduce the risk of fire, this appliance **MUST BE EXHAUSTED OUTDOORS**.
- Do not discharge the exhaust air into a flue, which is used for exhausting fumes from other appliances burning gas or other fuel.

Depending on the frequency of use it is essential that the ducting is checked periodically and any fluff or debris removed.

**RV/Marine Installations** - When locating the appliance in a towable trailer or watercraft, position the machine over the axles or mid-ship where movement is at a minimum. Block the machine to prevent extreme movement or tipping.

## Stacking kit - Residential

The dryer is provided with a stacking kit, which allows the dryer to be fitted to the top of an Ariston washing machine:

Model AW125NA  
Model AW129NA  
Model AW149NA

The kit contains all the necessary brackets and screws.  
Tools needed:

No.2 Philips Screwdriver  
2mm drill, power or hand drill

### SAFETY

**For personal safety, DO NOT try to fit the dryer on top of the washing machine on your own. A second person should help to lift the tumble dryer onto the washing machine and to relocate the stacked washer and dryer.**

1. You will need to get to the sides of the washing machine to fit the stacking kit and dryer. If necessary pull the machine away from its location to gain access to the machine to fit the stacking kit and dryer.
2. Follow the instructions provided with the stacking kit.

## Stacking Kit - RV/Marine

RV/Marine Stacking Kit #SK02 available from Westland Sales: 1-800-356-0766.

# Notes

---



© Copyright 2006, Westland Sales, Clackamas, OR 97015

**1-800-356-0766**

[www.westlandsales.com](http://www.westlandsales.com)