 


Electrolux

SPIN DRYER SD10

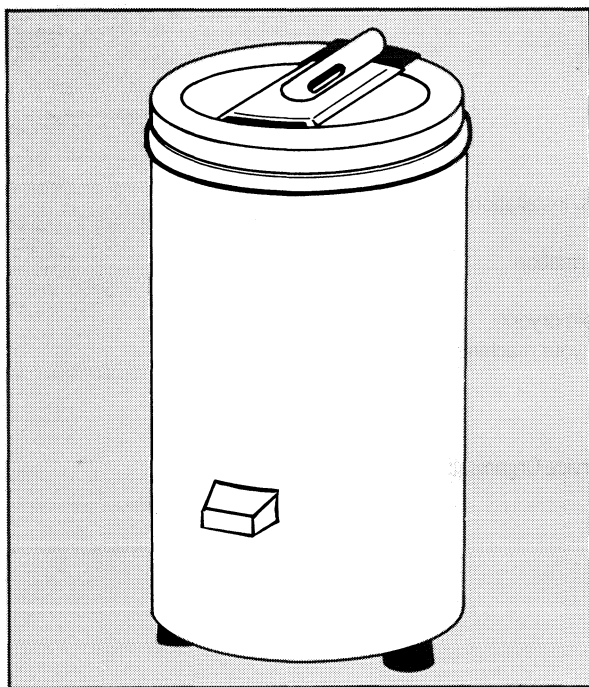

User's Handbook

Welcome to the family of Electrolux users. This booklet not only tells you how to operate your new Electrolux spin dryer, but also contains a number of helpful tips on how to get the best results. **SO PLEASE READ IT THROUGH CAREFULLY BEFORE YOUR FIRST WASH. IT ALSO INCLUDES AN IMPORTANT CHECKLIST OF WHAT TO DO SHOULD A FAULT OCCUR, PLUS A LIST OF ELECTROLUX SERVICE OFFICES WHERE SERVICE CAN BE OBTAINED IF NEEDED.** Before requesting service please check whether your problem is covered on page 6 under 'Servicing' and that you are operating the machine according to the instructions. If our engineer finds that the problem is due to misuse or incorrect installation you may be charged for his visit even though your machine is under guarantee.

CONTENTS

Page

- | | |
|---|--|
| 3 | Specifications/Installation |
| 4 | Electrical Information |
| 5 | Using your spin dryer/
Looking after your machine |
| 6 | Servicing |
| 7 | Electrolux Service Organisation |
| 8 | Guarantee |

Specifications

Dimensions

Height	570mm 22.5"	Capacity (dry)	2.2kg (5lb) 10 litres
Width	345mm 13.6"	Spin speed	2800 rpm
Weight	11kg (24.2lb)	Power Consumed	280W
		Voltage	220/240V

Installation

Before you use the appliance for the first time, remove the cardboard **inside** the drum of the spin dryer. We advise you to wipe the inside of the drum with a damp cloth.

Electrical Information

Connecting to the mains

Before you use your spin dryer check that the voltage shown on the data plate conforms with your mains supply.

The mains lead of the spin dryer is fitted with a non-rewireable moulded-on 13 amp plug containing a 13 amp fuse. In the event of the fuse requiring replacement, the fuse cover/carrier should be removed, using a small screw driver to lever it out. The old fuse should be replaced by a 13 amp ASTA approved BS1362 fuse and the fuse cover/carrier **must** be refitted before the plug is used again.

If the fuse cover/carrier is lost, a replacement can be obtained from the Electrolux Service Shops and offices listed on page 7. The fuse cover/carrier must be of the same colour as that of the coloured insert in the base of the plug. **In no circumstances must the plug be used without a correct fuse cover/carrier fitted.**

If the plug supplied on the mains lead is not suitable for the socket outlet in your home it should be cut off and disposed of safely, or destroyed, to avoid any possible shock hazard resulting from the plug being inserted into a 13 amp socket elsewhere in the house. A suitable replacement plug should be fitted (as shown opposite).

WARNING —

THIS APPLIANCE MUST BE EARTHED.

IMPORTANT

The wires in the mains lead of this appliance are coloured in accordance with the following code:—

 
GREEN-and-YELLOW: EARTH
BLUE : NEUTRAL
BROWN : LIVE

As the colours of the wires in the mains lead may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:—

Connect the GREEN-and-YELLOW coloured wire to the plug terminal marked letter E or earth symbol $\equiv$ or coloured green or green-and-yellow.

Connect the BROWN coloured wire to the plug terminal marked letter L or coloured red.

Connect the BLUE coloured wire to the plug terminal marked letter N or coloured black.

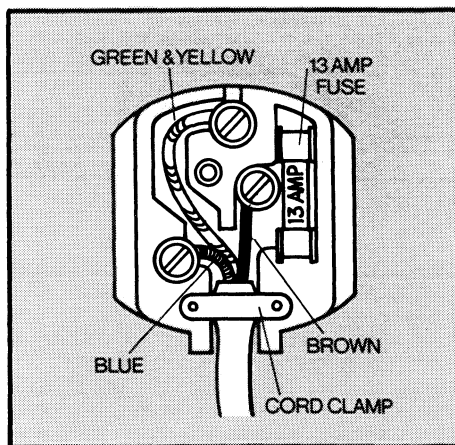

Using your spin dryer

Loading

The drum may be partly or completely filled with washing. Make sure the washing is evenly distributed inside the drum. None of the washing must be above the top of the drum. It is recommended that you cover the washing with a cloth.

Spinning

Place a bowl under the spout situated at the front of the machine. Connect to the power point, close the lid and lock with the lever, by pulling it towards the front, until it clicks into position on the lid. The spin dryer is now in operation. It will only take a few minutes to spin dry your clothes; you can see when spin drying is finished as only a few drops of water will come out of the spout. Non-iron fabrics only require a very short spin. To do this, turn the spin dryer off shortly before it has reached its maximum speed. Pull the locking lever to the right; the built-in brake will bring the drum to a halt. Remove the washing, switch off and pull the plug out of the socket.

IMPORTANT

Only laundry washed in water should be dried in the dryer.

In particular, the following fabrics should not be loaded into the dryer.

Clothes which have been dry cleaned or cleaned with chemical solvents.

Woolens or mixed woolens which will shrink with heat.

Extremely delicate fabrics, such as silk and synthetic curtains.

Articles containing foam rubber or rubber like materials should not be dried in the dryer.

Looking after your machine

Important: Make sure that the machine is unplugged before undertaking any kind of maintenance.

General Care and Cleaning

When you have finished spin drying the last load of clothes, wipe the drum dry with a cloth. If dirty water has been spun out of the dryer, it is necessary to rinse the drum with clean water, to prevent the next load of washing becoming dirty. Washing that has been treated with bleach or stain removers should be rinsed thoroughly before placing in the spin dryer.

The outside of the dryer should be wiped with a damp cloth and rubbed dry. This will help the machine retain its good looks.

On models with stainless steel drums a brown film can develop after a while, even "rust" deposits can appear. This is caused by iron particles which have entered the drum with washing, or water with a rust or iron content. This "rust" can be removed by cleaning with a fine abrasive cleaning agent such as JIF. If operated correctly, your spin dryer should require no special maintenance.

WARNING: Keep hands out until spinner stops.

Servicing

If, having followed these instructions carefully, your machine fails to work properly contact your local Electrolux Service office. Before you do that, though, it is worth making a few simple checks yourself.

If the dryer won't start . . .

Make sure that the dryer is firmly shut, and that the lever is in the locked position.

Make sure that the dryer is properly plugged in and that the socket switch (if any) is in the "on" position.

Check that there is power at the socket by plugging in an appliance you know to be working – a small lamp, for example. If this too fails to work, check the main circuit fuses in your home's consumer unit or main fuse box.

If the machine vibrates badly, or is too noisy . . .

Check that the machine is absolutely level.
Check that your washing is evenly distributed.

Failure to observe these checks could result in your being charged for the service call when requested.

WARNING

Do not attempt to repair the spin dryer yourself. Repairs carried out by unauthorised or inexperienced persons might cause injury and more serious malfunctioning.

Cautionary Notes

1) It is very important to follow carefully each garment manufacturers washing and drying instructions.

2) Woollen garments and those manufactured from synthetic/wool mixtures should always be dried to the garment manufacturers instructions which usually state that they should be gently pulled into shape and dried on a flat surface.

3) Never put dripping wet clothes into the dryer.

4) Children have been known to climb into unattended spin dryers when not in use. Always remove the plug or switch off at the socket outlet.

5) Never put clothes into the dryer which are contaminated with flammable liquids, such as petrol and cleaning fluids, or hair lacquers, creams, cooking fat, oils, wax or paint. This is important because even small remaining traces of these substances can cause fires under certain circumstances. For the same reason you should not tumble dry articles containing foam rubber or rubber-like materials, plastic or plastic foam, nappy pants or polythene bags.

Electrolux Service Organisation

ELECTROLUX SERVICE OFFICES

Should any breakdown occur with your appliance simply telephone your nearest Service Office or Service Shop, explain the nature of your problem and quote your Model number.

REGIONAL SERVICE OFFICES

Scotland & North Eastern Region

Electrolux Service, Epic House, 28-32 Cadogan Street, Glasgow G2 7LR. 041-204 0411

Northern Region (Inc. N. Ireland)

Electrolux Ltd., Altham Lane, Altham, Accrington, Lancs., BB5 5XY. Padiham 74621 (STD Code 0282)

Midlands & South Wales Region

Electrolux Ltd., 3 Strensham Hill, Moseley, Birmingham B13 8AQ. 021-449 5252

London Region

Electrolux Ltd., 842 Coronation Road, Park Royal, London NW10 7QA. 01-965 9699

Southern Region

Electrolux Ltd., Hippodrome House, Birchett Rd., Aldershot, Hants. GU11 1LU. Aldershot 24505 (STD Code 0252)

ELECTROLUX SERVICE SHOPS

Aberdeen 695761 (STD Code 0224)

Ayr 262242 (STD Code 0292)

Bedford 219000 (STD Code 0234)

Belfast 740 296/7 (STD Code 0232)

Brighton 694341 (STD Code 0273)

Bristol 211876 (STD Code 0272)

Cardiff 387444 (STD Code 0222)

Carlisle 44568 (STD Code 0228)

Cheltenham 584051 (STD Code 0242)

Chester 312038 (STD Code 0244)

Dundee 22630 (STD Code 0382)

Edinburgh 031-229 1232

Exeter & E. Devon 217138 (STD Code 0392)

Gateshead 4600440 (STD Code 091)

High Wycombe 41042 (STD Code 0494)

Inverness 223056 (STD Code 0463)

Jersey (St. Saviour) Central 22138 (STD Code 0534)

Leeds 608511 (STD Code 0532)

Liverpool 051-220 8014

Luton 575966 (STD Code 0582)

Maidstone 677727 (STD Code 0622)

Manchester 061-798 9689

Northampton 69222 (STD Code 0604)

Norwich 667017 (STD Code 0603)

Nottingham 396927 (STD Code 0602)

Plymouth 58161 (STD Code 0752)

Sheffield 338674 (STD Code 0742)

 
Southampton 785231 (STD Code 0703)

Southend 354313 (STD Code 0702)

Stockton-on-Tees 674848 (STD Code 0642)

Stoke-on-Trent 413414 (STD Code 0782)

Swansea 51848 (STD Code 0792)

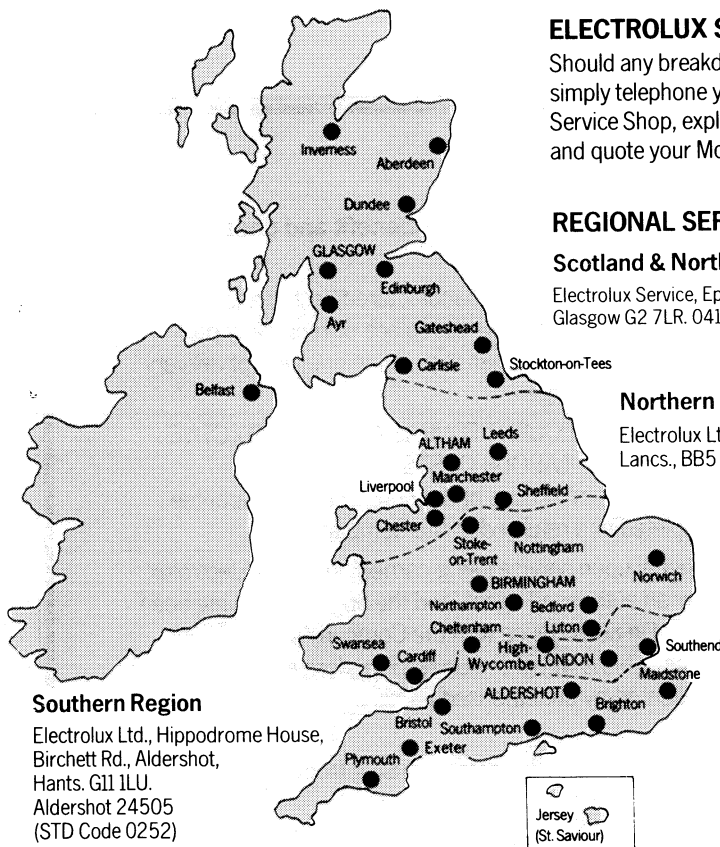

Guarantee

This Guarantee is offered to you as an extra benefit and does not affect your legal rights.

Electrolux products are carefully designed, manufactured, tested and inspected and in consequence we undertake to replace or repair any part found to be defective in material or workmanship, within one year of delivery to the original purchaser, free of charge.

ADDITIONALLY, DURING THE SUBSEQUENT FOUR YEARS, ANY DEFECTIVE PARTS WILL BE REPLACED FREE – LABOUR COSTS ONLY BEING CHARGEABLE, provided that within 14 days of the purchase the Guarantee Registration card is completed and returned to the Company.

This Guarantee is conditional upon service being carried out by an Electrolux Service representative or an authorised agent, and the appliance having been correctly installed and used in accordance with the Company's instructions under normal domestic conditions within the United Kingdom or the Republic of Ireland. It may be invalidated by unauthorised repair or modification of the appliance.

The Company does not accept liability for defects arising from neglect, misuse, or accident.

Proof of the date of purchase will be required before service under guarantee is provided. Addresses or telephone numbers for service requests are listed opposite.

SPIN DRYER SD10 — A LUX MODEL, MADE IN GERMANY

These appliances conform with the requirements of EEC Directive No. 82/499 relating to radio interference.



ELECTROLUX LTD., LUTON, BEDS. LU4 9QQ

In accordance with its policy of progressive product design the Company reserves the right to alter specifications.

T501

©Electrolux Ltd., 7/87

Publication No. 8220024

Printed in England.

247 249 100 - 0288 - HWT