


# Use and Care Guide

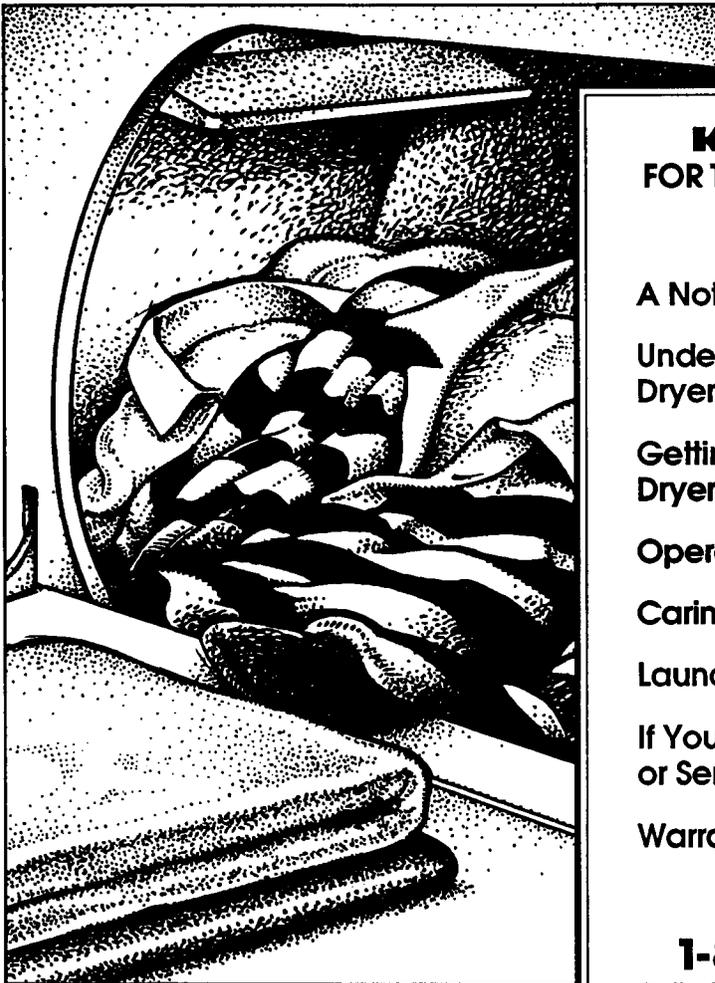

**KitchenAid®**  
FOR THE WAY IT'S MADE.™

A Note to You.....	2
Understanding Dryer Safety .....	3
Getting to Know Your Dryer .....	5
Operating Your Dryer ....	6
Caring for Your Dryer ...	12
Laundry Tips .....	16
If You Need Assistance or Service .....	22
Warranty .....	24

**1-800-422-1230**

Call with questions or comments.

## KITCHENAID® Dryers

Models: KEYW770B KEYW777B KEYW778B  
          KGYW770B KGYW777B KGYW778B

11/94

# A Note to You

*Thank you for buying a KitchenAid® appliance!*

KitchenAid appliances have everything you would expect of a superior appliance, plus the distinct style and thoughtful details which contribute to the overall look of your home and your enjoyment of it. To ensure that you enjoy many years of trouble-free operation, we developed this Use and Care Guide. It contains valuable information concerning how to operate and maintain your new appliance properly and safely. Please read it carefully.

Also, please complete and mail the enclosed Product Registration Card.

## Your safety is important to us.

This guide contains safety statements under warning symbols. Please pay special attention to these symbols and follow any instructions given. Here is an example of the use of the symbol.

### **WARNING**

This symbol will help alert you to such dangers as personal injury, burns, fire, and electrical shock.

## Our Consumer Assistance Center telephone number, 1-800-422-1230, is toll-free 24 hours a day.

If you have a question concerning your home appliance's operation, or if you need service, call our toll-free Consumer Assistance Center telephone number for help. When calling, you will need to know your appliance's complete model number and serial number. You can find this information on the model and serial number label (see diagram on page 5). Record these numbers and purchase information below. You will need this information if you require service. Keep this book and the sales slip together in a safe place for future reference.

**NOTE:** You must provide proof of purchase or installation date for in-warranty service.

Model Number \_\_\_\_\_

Builder/Dealer Name \_\_\_\_\_

Serial Number \_\_\_\_\_

Address \_\_\_\_\_

Date Installed \_\_\_\_\_

Phone \_\_\_\_\_

# Understanding Dryer Safety

## **⚠ WARNING**

For your safety, the information in this manual must be followed to minimize the risk of fire or explosion or to prevent property damage, personal injury, or loss of life.

-Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

### -WHAT TO DO IF YOU SMELL GAS:

- Do not try to light any appliance.
- Do not touch any electrical switch; do not use any phone in your building.
- Clear the room, building, or area of all occupants.
- Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.

Installation and service must be performed by a qualified installer, service agency, or the gas supplier.



# Understanding Dryer Safety

## IMPORTANT SAFETY INSTRUCTIONS

### **⚠ WARNING**

To reduce the risk of fire, electrical shock, or injury to persons when using your dryer, follow basic precautions, including the following:

- Read all instructions before using your dryer.
- Do not machine wash or machine dry items cleaned, washed, soaked in, or spotted with wax, paint, gasoline, oil, dry cleaning solvents, and other flammable fluids. The fumes can create a fire hazard or explosion. Always hand wash and line dry items containing these materials.
- Do not allow children to operate, play with, or crawl inside your dryer. Supervise children when your dryer is used near children.
- Do not reach into a dryer if the drum is moving.
- When removing from service or discarding a dryer, always remove the door to prevent accidental entrapment.
- Do not dry rubber, rubber-like, and heat-sensitive materials with heat.
- Install and/or store dryer where it will not be exposed to the weather.
- Do not tamper with the controls.
- You are responsible for making sure that your dryer is installed, repaired, and has parts replaced by a qualified person.
- Use only fabric softeners specifically labeled as not being harmful to the dryer.
- Do not allow lint to build up inside the dryer or exhaust system. Cleaning should be done periodically by a qualified person.
- Clean lint screen before or after each load.
- Do not let dust, lint, paper, rags, chemicals, etc. pile up around or under the dryer.
- Dryer must be electrically grounded. See the Installation Instructions.


### Understanding your responsibilities

- Never operate the dryer if:
    - it is not working right (i.e. noisy, too hot).
    - it is damaged.
    - parts are missing.
    - all panels are not in place.
    - the lint screen is loose, damaged, or missing.
  - Unplug the power supply cord or turn off electrical power before attempting to service your dryer. Shut off gas valve if you have a gas dryer.
  - Do not wash or dry items that are soiled with vegetable or cooking oil. These items may contain some oil after laundering. Due to the remaining oil, the fabric may smoke or catch fire by itself.
  - Store flammable solvents or fluids away from your dryer.
  - Dry cleaning solvents or fluids should never be put directly into your dryer.
  - Be sure that your dryer:
    - is properly installed and leveled on a floor that can support the weight in a well-ventilated room.\*
    - is connected to the proper outlet and electrical supply.\*
    - is properly connected to fuel and exhaust systems (gas dryers must be vented outdoors).\*
    - is not installed against draperies or curtains, or on carpet.\*
    - is located in an area where the temperature is above 45°F (7°C).
    - is properly maintained.
    - is used only for jobs normally expected of home clothes dryers.
    - is not used by anyone unable to operate it properly.
- \* See the Installation Instructions for complete information.

– SAVE THESE INSTRUCTIONS –

# Getting to Know Your Dryer

The parts and features of your dryer are illustrated below. Become familiar with all parts and features before using your dryer. Page references are included next to some features. Refer to those pages for more information about the features.

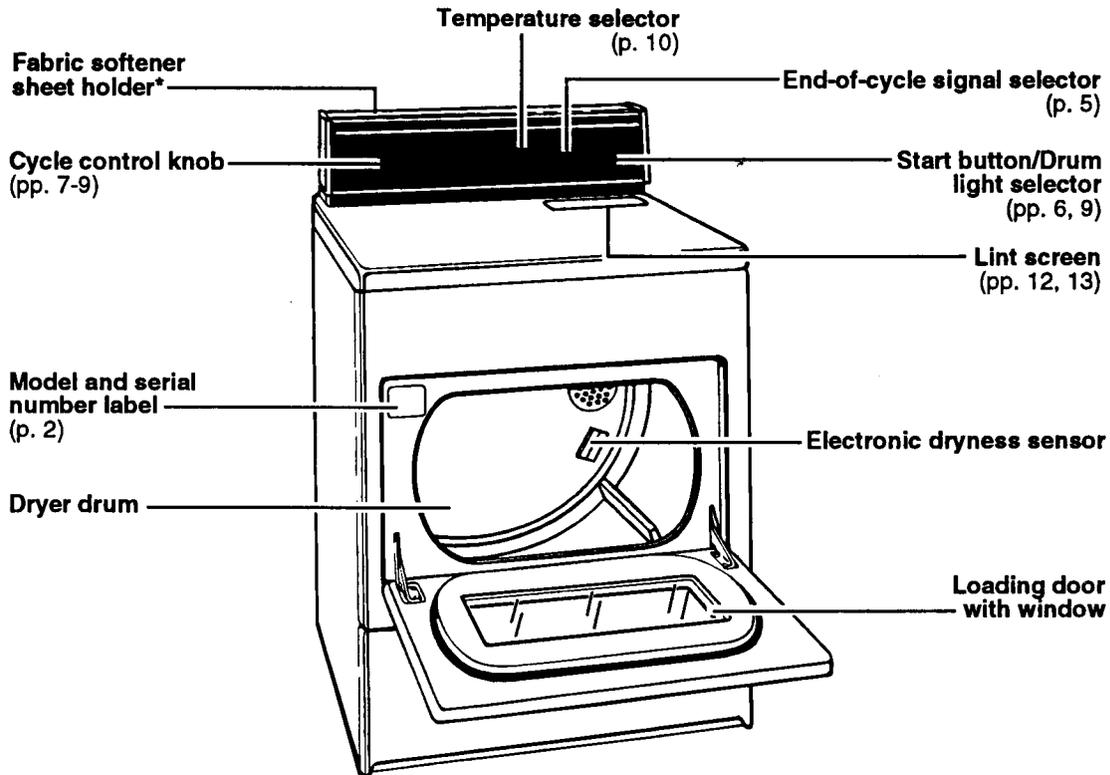

## Other features not shown:

End-of-cycle signal  
Lint signal  
SMOOTH GUARD™ cycle (see page 9)  
Drum light (see page 9)  
Drying rack (see page 11)

## \*Optional accessory:


Fabric softener sheet holder  
(Part No. 3388894)  
See page 23 for ordering information.

---

## End-of-cycle signal

Your dryer sounds a signal to let you know when the selected cycle is finished. The signal is helpful when drying permanent press, synthetics, and other items that should be removed from the dryer as soon as it stops.

The signal is adjustable and can be turned off. (See illustration.)

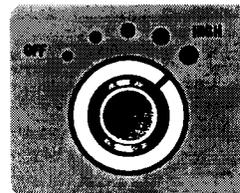

End-of-Cycle Signal Selector

# Operating Your Dryer

This section tells you how to operate your dryer. Operating your dryer properly enables you to obtain the best possible results.

## IN THIS SECTION

Before starting your dryer .....	6	Understanding your cycles .....	7
Starting your dryer .....	6	Drum Light .....	9
Stopping your dryer .....	6	Selecting the right cycle and setting .....	10
Restarting your dryer .....	7	Using the dryer rack .....	11

## Before starting your dryer


Wipe the dryer drum with a damp cloth before using to remove dust from storing and shipping.

**NOTE:** If your dryer has a Consumer Buy Guide, remove it and place it with your Use and Care Guide.

## Starting your dryer

1. Load clothes into the dryer and close the door.
2. Turn the Cycle Control Knob either way to the desired setting.
3. Set the Temperature Selector to the desired setting (see page 10).
4. Push the Start Button. (The Drum Light Selector is part of the Start Button. See page 9.)

**NOTE:** Your dryer stops automatically when a cycle ends.

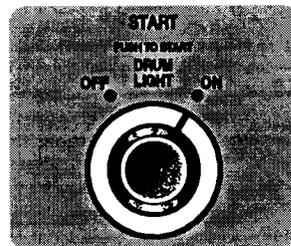


Push to start

## Stopping your dryer

You can stop your dryer any time during a cycle. Open the dryer door or turn the Cycle Control Knob to OFF.

**NOTE:** The Cycle Control Knob should point to an OFF area when the dryer is not in use. If you want to stop the dryer before the cycle is finished, turn the Cycle Control Knob to an OFF area.

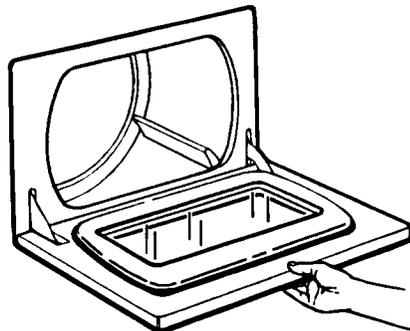

## Restarting your dryer



1. Close the door.
2. Select a new cycle and temperature (if necessary).
3. Push the Start Button.

## Understanding your cycles

See the chart below for descriptions of the cycles that are on your dryer. See page 10 for help in selecting the right cycle.





### NOTES:



- Use the Energy Preferred Automatic Setting (\*) to dry most loads. (See page 8.)
- The last few minutes of all cycles are without heat to make the load easier to handle.
- To help reduce wrinkling, remove the load from the dryer as soon as tumbling stops. This is important for permanent press, knits, and synthetic fabrics.
- Shaded areas in the illustrations show cycle locations.
- In the automatic cycles, the CUSHIONED HEAT™ Drying System automatically reduces the heat setting to prevent overdrying of fabrics.

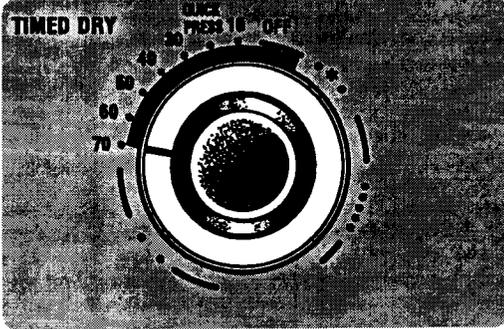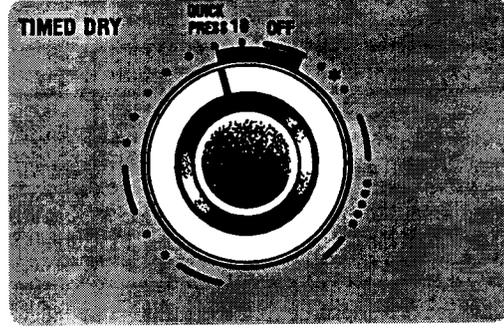CYCLES	CYCLE CONTROL KNOB
<p><b>Timed Dry</b></p> <p>Use this cycle to complete drying if some items are damp after Automatic drying. Timed drying is also useful to dry delicate items that require a short drying time.</p>	
<p><b>QUICK PRESS™ cycle</b></p> <p>The QUICK PRESS cycle removes wrinkles from clothes that have been packed in a suitcase, or from items not removed from the dryer at the end of a cycle. As soon as the dryer stops, fold or put the items on hangers.</p>	

continued on next page

# Operating Your Dryer

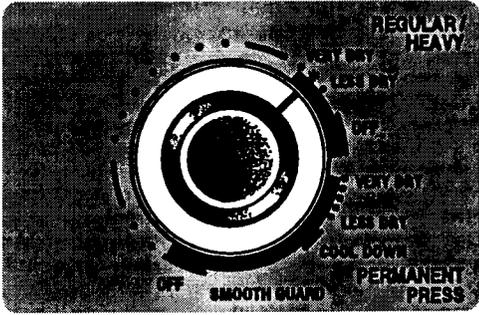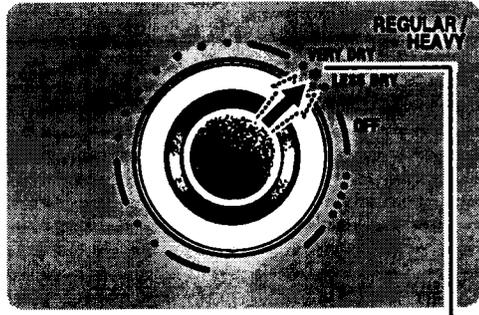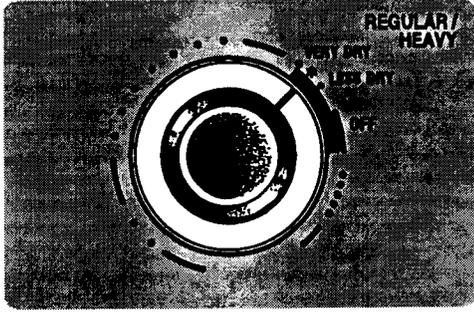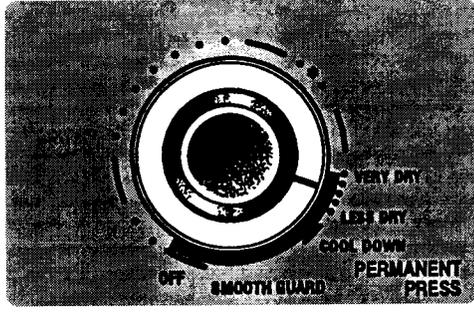
CYCLES	CYCLE CONTROL KNOB
<p><b>Automatic cycles</b></p> <p>Use an automatic cycle to dry most loads.</p> <ul style="list-style-type: none"> <li>Your automatic cycle shuts off when the selected dryness is reached.</li> <li>The Cycle Control Knob will not move until the load is almost dry. After the cool-down, the Cycle Control Knob automatically moves to an OFF area and tumbling stops.</li> </ul> <p><b>Dry most loads using the Energy Preferred Automatic Setting (*).</b></p> <ul style="list-style-type: none"> <li>If the load is drier than you like, select LESS DRY the next time you dry a similar load.</li> <li>If the load is not as dry as you like, complete drying using the Timed Dry cycle. Select VERY DRY the next time you dry a similar load.</li> </ul>	  <p>Energy preferred automatic setting</p>
<p><b>Automatic Regular/Heavy</b></p> <p>The (*) indicates the Energy Preferred Automatic Setting. This cycle can be used for heavyweight and mediumweight cotton items, such as towels, blue jeans, corduroys, bedspreads, and linens.</p>	
<p><b>Automatic Permanent Press</b></p> <p>Use this cycle to dry permanent press items, knits, and other synthetic fabrics.</p> <p>If you are unable to unload the dryer within 5 minutes after tumbling stops, the SMOOTH GUARD™ cycle automatically takes over to protect your clothing from wrinkles. See Page 9 for more information.</p>	

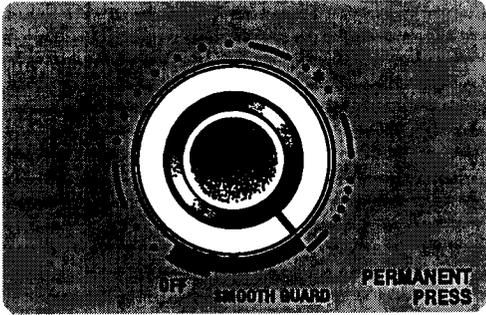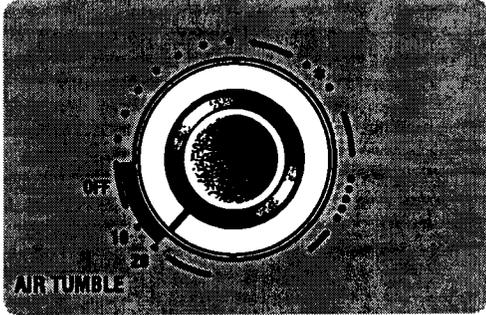CYCLES	CYCLE CONTROL KNOB
<p><b>Understanding the SMOOTH GUARD™ cycle</b></p> <p>When you are unable to remove a load from the dryer as soon as it stops, wrinkles can form. The SMOOTH GUARD cycle tumbles the load without heat every few minutes for up to 40 minutes after the Permanent Press cycle ends. This tumbling rearranges and fluffs the load to avoid the wrinkles that set in when the load remains in the dryer after the automatic Permanent Press cycle.</p> <p>You do not have to set the Cycle Control Knob for the SMOOTH GUARD cycle. If you do not open the door within a few minutes after the automatic Permanent Press cycle stops, the SMOOTH GUARD cycle takes over to protect the load.</p> <p>A signal sounds every few minutes during the SMOOTH GUARD cycle. The signal stops and the cycle ends when the dryer door is opened.</p>	
<p><b>Air Tumble (no heat)</b></p> <p>Use this unheated cycle to fluff or air dry bedding, plastic tablecloths, foam pillows, sneakers, etc. See Warning on page 10.</p>	

## Drum light

The Drum Light Selector is part of the Start Button. Use the Selector to turn the dryer drum light On or Off before or during a drying cycle.

**NOTE:** The drum light automatically comes on when you open the dryer loading door, even if the Drum Light Selector is turned to Off.

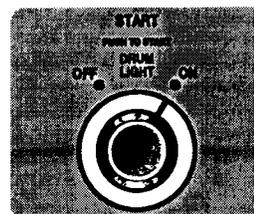


Start Button/Drum Light Selector

## Selecting the right cycle and setting

Use the chart below to guide you when making drying selections.

- Do not overdry items. Overdrying can cause shrinkage, static cling, and damage to some fabrics.

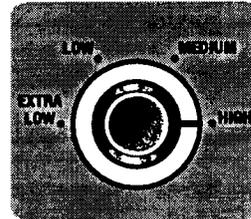

Temperature Selector

Refer to the chart below for the recommended settings.

### **WARNING**

#### **Fire Hazard**

Do not dry heat-sensitive fabrics, plastic, rubber, or some stuffed items with heat. Use Air Tumble, or line dry.

Failure to do so could result in fire or damaged items.

**NOTE:** Follow care label instructions when available.

TYPE OF LOAD	CYCLE	TEMPERATURE OR TIME
<b>COTTONS AND LINENS</b> Extra Heavy—Bedspreads, mattress pads, quilts Heavyweight—Towels, jeans, corduroys, work clothes Mediumweight—Sheets, cotton underwear, diapers Lightweight—Batistes, organdies, lingerie	Regular/Heavy Regular/Heavy Regular/Heavy Permanent Press	High High Medium Low
<b>PERMANENT PRESS, SYNTHETICS, AND BLENDS</b> Heavyweight—Work clothes, jackets, raincoats Mediumweight—Shirts, play clothes, sheets, slacks Lightweight—Lingerie, blouses, dresses	Permanent Press Permanent Press Permanent Press	High Medium Low
<b>KNITS</b> Heavyweight—Cottons, rayons, blends, T-shirts, slacks, shirts Mediumweight—Synthetics (polyester, acrylic, etc.), dress slacks, skirts, sweaters Lightweight—Synthetics (polyester, acrylic, etc.) and blends, lingerie, blouses, dresses	Permanent Press Permanent Press Permanent Press	High Medium Extra Low
<b>DELICATE FABRICS</b> Sheer curtains (2 or 3 panels), gauze, lace, etc.	Permanent Press	Extra Low
<b>RUBBER, PLASTIC, HEAT-SENSITIVE FABRICS</b> Foam Rubber—Pillows, bras, stuffed toys Plastic—Shower curtains, tablecloths Rubber-backed rugs Olefin, Polypropylene, Sheer nylon	Air Tumble Air Tumble Air Tumble Air Tumble	20-30 min. 20-30 min. 40-50 min. 10-20 min.

## Using the drying rack

The drying rack lets you dry items that you may not want to tumble. The rack does not move, but the drum turns.

1. Press the two supports at the rear of the rack into indentations in the back wall of the dryer.
2. Lower the front so the legs rest on the dryer opening.
3. Put wet items on top of the rack. Leave space between them so air can reach all surfaces.



**NOTE:** Make sure nothing hangs over the edge of the rack.

4. Close the door.
5. Select the Air Tumble or Timed Dry cycle (and temperature if needed). Push the Start Button. See the chart below for suggested cycles and settings.

**NOTE:** The rack must be removed for normal tumbling.

### Drying rack suggestions

Drying time will depend on how much moisture the items hold. The following chart suggests cycles and settings for the different kinds of items that might best be rack dried.

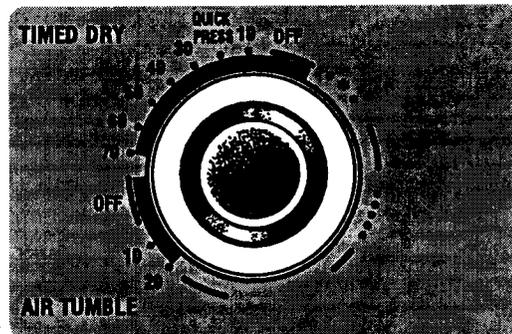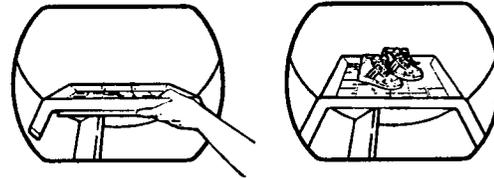

### **⚠ WARNING**

#### **Fire Hazard**

Do not dry heat-sensitive fabrics, plastic, rubber, or some stuffed items with heat. Use Air Tumble or line dry.

Failure to do so could result in fire or damaged items.

RACK DRY	CYCLE	TEMPERATURE	TIME
<b>Wool sweaters</b> (Block to shape and lay flat on the rack)	Timed	Extra Low	60 min.
<b>Stuffed toys or pillows</b> (Cotton or polyester fiber filled)	Timed	Extra Low	60 min.
<b>Stuffed toys or pillows</b> (Foam rubber filled) <b>Sneakers or canvas shoes</b>	Air Tumble	No temperature needs to be selected. Cycle is unheated.	90 min.*

\*Reset cycle as needed to complete drying.

# Caring for Your Dryer

Dryers require regular maintenance. Follow the suggestions below to maintain your dryer properly.

## IN THIS SECTION

Maintenance—every load ..... 12    Maintenance—as needed ..... 13

## Maintenance—every load


### Cleaning the lint screen

The lint screen is located under a lid on top of the dryer. **Clean it before each load.** A screen blocked by lint can increase drying time.

**NOTE:** Do not run the dryer with the lint screen loose, damaged, blocked, or missing.

Doing so can cause overheating and damage to both the dryer and fabrics.


1. Open the lid and pull the lint screen straight out.
2. Roll lint off the screen with your fingers. Do not rinse or wash the screen to remove lint. Wet lint is hard to remove.
3. Push the lint screen firmly back into place and close the lid.

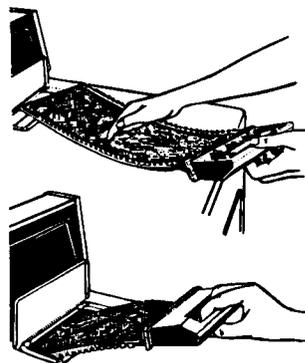

### Lint signal

Restricted airflow reduces drying efficiency. The signal (a whistle tone) lets you know if the airflow is restricted. When you hear the signal, turn off the dryer and **immediately** clean the lint screen.

**NOTE:** Clean your lint screen before each load. Do not wait for the lint signal. The lint signal indicates excessive lint present on your lint screen. If you wait for the lint signal before you clean the lint screen, drying efficiency will be reduced.

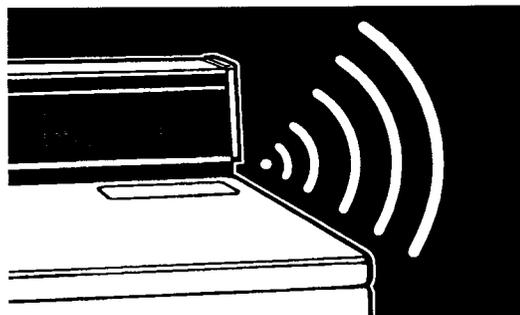


## Maintenance—as needed

Use the following suggestions about cleaning and lint removal to maintain your dryer and keep it operating efficiently.

### Cleaning a clogged lint screen

Laundry detergents and fabric softeners can cause a residue buildup on the lint screen. A clogged lint screen can extend drying times. Clean the lint screen every six months or more frequently if it becomes clogged due to a residue buildup. Use the following method:

1. Wet both sides of lint screen with hot water.
2. Wet a nylon brush with hot water and liquid detergent.
3. Scrub lint screen with the brush until all residue buildup is removed.
4. Rinse with hot water.
5. **Thoroughly** dry lint screen with a clean towel and replace in dryer.

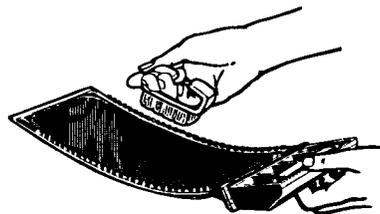

### Cleaning the dryer exterior

Wipe with a soft, damp cloth.

### Cleaning the dryer interior

Garments which contain unstable dyes, such as denim blue jeans or brightly colored cotton items, may discolor the dryer interior. If you want to remove stains from dryer drum, use powdered laundry detergent.

1. Make a paste with detergent and very warm water.
2. Apply paste to a soft cloth and scrub area until all excess dye is removed.
3. Wipe thoroughly with a damp cloth.
4. Tumble a load of rags to dry.



#### **⚠ WARNING**

##### **Electrical Shock, Personal Injury, Fire, and Explosion Hazard**

- Turn off the electrical power before cleaning the interior.
- Make sure the dryer is cool.
- Use nonflammable cleaner.


Failure to do so could result in electric shock or injury, fire, or explosion.



# Caring for Your Dryer

## Cleaning the dryer window

Clean the window with a soft, damp cloth. Wipe dry with a soft cloth.

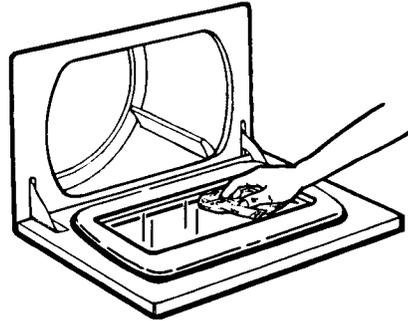

## Removing accumulated lint

Lint can gather inside the dryer and be a fuel for fire. It is recommended that lint be removed every 2 to 3 years, or more often, depending on dryer usage. Cleaning should be done by a qualified person. If you have any questions, please call our Consumer Assistance Center at 1-800-422-1230.


1. Unplug the power supply cord or turn off the electrical power.
2. Remove back panel (electric) or lower front access panel (gas). See the Installation Instructions.
3. Remove lint from shaded area in illustration with a soft brush or vacuum cleaner. Avoid damaging wires, thermostats (electric), funnel (gas), or ignitor (gas).
4. Replace panel; reconnect and level dryer again, if necessary.

**⚠ WARNING**


**Electrical Shock and Personal Injury Hazard**

- Unplug the power supply cord or turn off the electrical power before removing dryer panels.
- Make sure the dryer is cool.
- Dryer parts can have sharp edges. Use care when handling.

Failure to do so could result in electrical shock or personal injury.

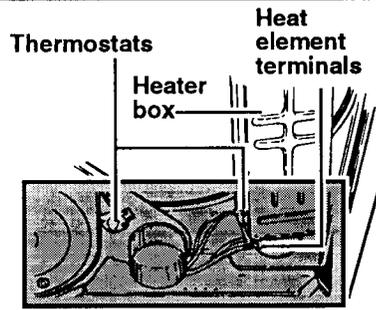

Electric dryer with back panel removed

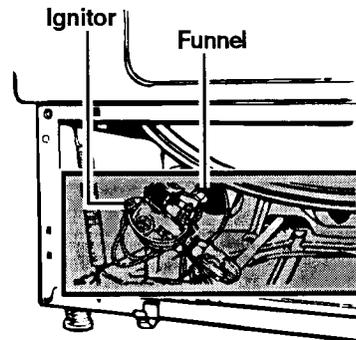

Gas dryer with lower front access panel removed

## Changing the drum light

### **⚠ WARNING**

#### **Electrical Shock and Fire Hazard**

- Before removing light bulb, either unplug the dryer or disconnect the dryer at the main power supply.
- The bulb cover must be in place during dryer operation to prevent overheating and possible damage to fabrics.  
Operating the dryer with the bulb cover removed can cause the dryer to fail or create a fire hazard.

#### **To change the drum light:**

1. Unplug the dryer or disconnect the electricity leading to the dryer at the main power supply.
2. Open the dryer door and remove the light bulb cover from the back wall of the dryer. Turn the cover clockwise to remove.
3. Remove the light bulb by turning it counterclockwise.
4. Replace the bulb with a 40-watt appliance bulb only.
5. Replace the light bulb cover and lock in place by turning counterclockwise.
6. Reconnect power supply.



Remove  
bulb cover



Replace  
bulb cover



# Laundry Tips

This section reviews proper laundering techniques, gives you drying information, and discusses solutions to common laundering problems.

## IN THIS SECTION

<b>Before you dry</b> .....	<b>16</b>	<b>Saving energy</b> .....	<b>20</b>
<b>Drying special-care items</b> .....	<b>17</b>	<b>Vacation care</b> .....	<b>20</b>
<b>Using dryer fabric softeners</b> .....	<b>20</b>	<b>Solving laundering problems</b> .....	<b>21</b>

## Before you dry

Before using your dryer, see pages 3 and 4 for Important Safety Information.

### Drying tips

- Close zippers, snaps, and hooks to avoid snagging other items. Remove pins, buckles, and other hard objects to avoid scratching the dryer drum. Remove heat-sensitive trim that can be damaged by drying.



- Check garments to make sure all spots and stains were removed during the wash. Do not tumble dry stained items. Heat may permanently set stains. Soiled items can also leave stains on the dryer drum. These stains can be picked up by other items in the load.

- Sharp or metal objects can damage your dryer. Check pockets for pins, clips, money, bolts, nuts, etc. Turn pockets inside out. Do not lay these items on your dryer after emptying pockets.



- Tie strings and sashes so they will not tangle.
- Turn lint takers and dark items inside out to help prevent lint pickup.
- Place small items such as baby socks or hankies in a mesh bag for easier removal.
- Articles to be ironed should be removed from the dryer while still damp.

## Sorting

- Separate dark from light colors; colorfast from noncolorfast. Items properly sorted for washing are usually properly sorted for drying. Separate heavy fabrics (denim, towels) from light fabrics (synthetics, permanent press).
- Separate lint givers (towels, chenille) from lint takers (corduroy, synthetics, permanent press). Turn lint takers inside out.



## Load sizes

- Mix large items with smaller items. Load the dryer by the amount of space items take up, not by their weight. Do not overload the dryer. Overcrowding causes uneven drying and wrinkling, and can cause items to wear out faster (because of pilling).
- You may need to rearrange large items (sheets, blankets, tablecloths) during a cycle to reduce balling or rolling up.
- Reduce wrinkling of permanent press and synthetics by drying smaller loads and removing items from the dryer as soon as tumbling stops.
- For better tumbling action when drying only a few small items, add one or two lint-free towels. This also prevents small, lightweight items from blocking airflow.



## Drying special-care items

Most garments and household textiles have care labels with laundering instructions. Always follow care label directions when they are available. General drying instructions for some special washables are included in this section.

<p><b>Air drying</b> (heat sensitive items)</p>	<p>Heat sensitive fabrics, plastic, rubber, or some stuffed items require drying without heat. Use Air Tumble or line dry. Air Tumble is useful for fluffing bedding and pillows, and dusting draperies and clothing. See Warning on page 10.</p>
<p><b>Heat-sensitive fabrics</b></p> <ul style="list-style-type: none"> <li>• Olefin, polypropylene, sheer nylon</li> <li>• Cotton and canvas shoes</li> </ul>	<p>Follow care label directions.</p> <p>If shoes can be machine laundered:</p> <ol style="list-style-type: none"> <li>1. Place several bath towels in the dryer to act as a buffer, or place shoes on drying rack if your dryer has one.</li> <li>2. If rubber or foam rubber materials are part of the shoe, use Air Tumble. For other materials, see page 10 for cycle, time, or temperature recommendations.</li> <li>3. Remove shoes from dryer while still damp and allow to air dry.</li> </ol>
<p><b>Pillows, stuffed toys</b></p> <ul style="list-style-type: none"> <li>• Feather, foam, polyester</li> </ul>	<p>If manufacturer recommends machine drying, dry one pillow at a time and:</p> <ol style="list-style-type: none"> <li>1. Make sure coverings are securely stitched.</li> <li>2. Shake and fluff the items by hand several times during the cycle.</li> <li>3. Make sure pillows are completely dry. Feather pillows take a long time to dry.</li> </ol>
<p><b>Plastic, rubber items</b></p> <ul style="list-style-type: none"> <li>• Shower curtains, tablecloths, baby panties, scatter rugs</li> </ul>	<p>Follow care label directions.</p>

continued on next page



## Laundry Tips

<p><b>Blankets and woolens</b></p> <hr/> <ul style="list-style-type: none"> <li>• Cotton, rayon, synthetic blankets</li> <li>• Electric blankets, electric sheets, woolen blankets, washable woolen garments</li> </ul>	<p>Machine drying knitted woolens is not recommended. Block to shape when wet and allow to air dry. Line dry blankets in shade on a breezy day over two lines. Pin edges together and straighten them. When partly dry, turn the blanket over, repin, and restraighten. When dry, brush nap.</p> <p>Dry as recommended for permanent press fabrics on page 10.</p> <p>If manufacturer recommends machine drying:</p> <ol style="list-style-type: none"> <li>1. Place one or two dry towels in the dryer and preheat 3-5 minutes on a high setting. This will dry blankets faster and help avoid pilling.</li> <li>2. Put blanket in dryer with warm towels. Set control for 20 minutes.</li> <li>3. Check after 10 minutes. Remove when still damp. Overdrying and long tumbling can cause shrinking and pilling.</li> <li>4. Place blanket on flat surface or over two lines to finish drying. Gently stretch to original size and shape.</li> <li>5. When completely dry, brush gently to raise nap. Press binding with cool iron if needed.</li> </ol>
<p><b>Curtains, slipcovers</b></p> <hr/> <ul style="list-style-type: none"> <li>• Draperies, slipcovers</li> <li>• Sheers, some synthetic curtains</li> <li>• Bonded or laminated fabrics</li> </ul>	<p>Remove drapery weights and hooks before laundering. For slipcovers, replace while still slightly damp. They will dry to fit tightly.</p> <p>Dry only a few minutes.</p> <ol style="list-style-type: none"> <li>1. Leave room in dryer for load to fluff.</li> <li>2. Remove from dryer while slightly damp. Do not overdry.</li> </ol> <p>Dry only a few minutes.</p> <p>Line dry these items.</p>
<p><b>Diapers, baby clothes</b></p>	<p>Wash and dry small items in a mesh bag or pillowcase for convenient handling.</p> <ol style="list-style-type: none"> <li>1. Dry according to manufacturer's instructions.</li> <li>2. Remove diapers and cotton knit items while still slightly damp. They will feel softer, shrink less, and be easier to fold.</li> </ol>
<p><b>Elastic items</b></p>	<p>Remove from dryer while still slightly damp.</p>
<p><b>Fiberglass materials</b></p>	<p>Do not machine wash or dry fiberglass materials. Small particles can stick to fabrics washed or dried in following loads and cause skin irritation.</p>

<p><b>Flame-retardant finishes</b></p>	<p>Some items have been treated with a flame-retardant finish to improve their resistance to burning. Such items are clearly labeled. To retain flame-retardant qualities through continuous use and washing, clean and dry according to the manufacturer's instructions.</p>
<p><b>Napped items</b></p> <hr/> <p>• Corduroy, velveteen</p>	<p>Dry separately or with similar colors to avoid lint transfer. Follow care label directions.</p> <ol style="list-style-type: none"> <li>1. Dry according to manufacturer's instructions.</li> <li>2. Remove from dryer while there is still a trace of moisture.</li> <li>3. Smooth, reshape, and air dry before putting away.</li> </ol>
<p><b>Quilted, down-filled items</b></p>	<p>Follow care label instructions.</p> <ol style="list-style-type: none"> <li>1. Dry one at a time.</li> <li>2. Remove from dryer and shake or fluff the item during the drying cycle.</li> <li>3. Smooth and reshape, before putting away.</li> </ol>
<p><b>Snowsuits, jackets</b></p> <hr/> <p>• Nylon, polyester-base</p>	<p>Check label for fiber content, then follow care label directions.</p> <p>If manufacturer recommends machine drying:</p> <ol style="list-style-type: none"> <li>1. Dry garment for about 10 minutes. Remove and turn inside out. Dry for 10 more minutes.</li> <li>2. Remove from dryer immediately and hang on a nonrusting hanger to finish drying. This will help eliminate wrinkles.</li> </ol>
<p><b>Tinted, dyed, or noncolorfast items</b></p>	<p>Dry according to fabric, weight, and care label instructions. Wipe the dryer drum carefully to remove any dye or lint that can be transferred to other loads. See "Cleaning the dryer interior" on page 13.</p>
<p><b>Towels</b></p>	<p>Select cycle according to fabric type. Some towels, particularly those made of a blend of synthetic fibers and natural fibers (polyester and cotton blends), may shed more lint than other towels, causing your dryer's lint screen to get full faster. Be sure to remove lint from the dryer lint screen before and after drying new towels.</p>
<p><b>Washable knits</b></p>	<p>Do not overdry knits. Overdrying can cause shrinking and static cling.</p> <ol style="list-style-type: none"> <li>1. Select cycle according to fabric and construction.</li> <li>2. Turn synthetics and blends inside out when drying to avoid pilling.</li> <li>3. Remove cotton and rayon knits while still slightly damp. Stretch into shape and lay flat to finish drying.</li> </ol>



---

### Using dryer fabric softeners

Dryer fabric softeners are recommended for reducing static cling (static can also be reduced by not overdrying) and for softening fabrics. Always follow package instructions carefully.

- Put fabric softener sheet on top of the load **before starting the dryer**. Do not add a fabric softener sheet **after** the cycle has started. Instant heat can cause the fabric softener to spot fabrics.
- Clear, grease-like spots can result from the fabric softener sheet becoming tangled in an item during tumbling. If fabric softener causes a stain, wet the stain and rub with liquid detergent or bar soap, rewash.
- Some fabric softeners can clog the lint screen and slow drying. Use fabric softeners labeled as dryer safe.

---

### Saving energy

- Use an automatic cycle to dry most loads.
- Dry only full loads without overdrying.
- Avoid overloading dryer, adding wet items to a partly dried load, or opening the door unnecessarily.
- Plan your laundry to dry one load after another. A warm dryer shortens drying time.
- Shorten drying times by exhausting dryer properly and cleaning exhaust duct and outside exhaust hood as needed.
  - Keep the lint screen clean.
  - Use your dryer in a room where room air temperature is above 45°F (7°C).
  - Sort loads by fabric weight and type.

---

### Vacation care

1. Unplug power supply cord or turn off electrical power supply.
2. Clean lint screen.

## Solving laundering problems

Most laundering problems are easily solved if you understand the cause. Check the following list for common laundry problems. If you need additional help, check the "If You Need Assistance or Service" section of this book.

PROBLEM	CAUSE
<b>Greasy spots</b>	<ul style="list-style-type: none"> <li>• Dryer fabric softener improperly used. (See page 20.)</li> <li>• Drying soiled items.</li> </ul>
<b>Lint</b>	<ul style="list-style-type: none"> <li>• Full lint screen. (See page 12.)</li> <li>• Load not properly sorted.</li> <li>• Overdrying, especially synthetic fabrics that cause lint-attracting static electricity.</li> <li>• Load size too big or heavy. (See page 16.)</li> <li>• Tissue or paper left in pockets.</li> <li>• Pilling (surface fuzz caused by normal wear and laundering) attracts lint.</li> </ul>
<b>Shrinking</b>	<ul style="list-style-type: none"> <li>• Overdrying.</li> <li>• Fabric type and quality inappropriate for drying.</li> <li>• Dryer settings incorrect for fabric type.</li> <li>• Manufacturer's care label instructions not followed.</li> </ul>
<b>Slow drying</b>	<ul style="list-style-type: none"> <li>• Full lint screen. (See page 12.)</li> <li>• Load too large and bulky to dry quickly. (See page 16.)</li> <li>• Dryer located in room with temperature below 45°F(7°C).</li> <li>• Exhaust duct clogged, restricted, or too long. (See Installation Instructions.)</li> </ul>
<b>Stains</b>	<ul style="list-style-type: none"> <li>• Drying soiled items.</li> <li>• Dryer fabric softener improperly used. (See page 20.)</li> <li>• Dryer interior stained. (See page 16 for cleaning procedures.)</li> </ul>
<b>Static electricity</b>	<ul style="list-style-type: none"> <li>• Overdrying.</li> <li>• Dryer fabric softener improperly used. (See page 20.)</li> <li>• Load includes synthetics, synthetic blends, permanent press, and knit fabrics that build up static electricity.</li> </ul>
<b>Wrinkling</b>	<ul style="list-style-type: none"> <li>• Overloading.</li> <li>• Overdrying, especially permanent press and synthetic fabrics.</li> <li>• Clothes left in dryer at end of cycle.</li> </ul>



# If You Need Assistance or Service

Before calling for service, check these:




Is the power cord plugged in?

---




Have you blown a fuse or tripped the circuit breaker?

---

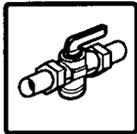


For gas dryers, are the valves open on the dryer and the supply line?

---

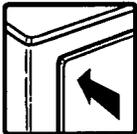

Is the dryer door firmly closed?

---

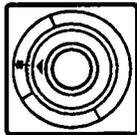


Are the controls set in an ON position?

---




Did you firmly push the Start Button?

---

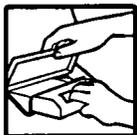

Is lint screen clogged with lint?

---

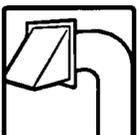

Is exhaust duct or outside exhaust hood clogged with lint?

---

If you still have problems, see page 23.

### 1. If you need assistance\* ...

- Call KitchenAid Consumer Assistance Center:

**1-800-422-1230**

One of our trained consultants can instruct you in how to obtain satisfactory operation from your appliance or, if service is necessary, recommend a qualified service company in your area.

- If you prefer, write to:  
Consumer Assistance Center  
KitchenAid  
2000 N. State Route 63  
Benton Harbor, MI 49022-2692

### 2. If you need service\* ...

- Call your dealer or the repair service he recommends.
- All service should be handled locally by the dealer from whom you purchased the unit or an authorized KitchenAid servicer.
- If you are unable to obtain the name of a local authorized KitchenAid servicer, call our Consumer Assistance Center telephone number (see Step 1).

### 3. If you are not satisfied with the action taken:

- Contact the Major Appliance Consumer Action Panel (MACAP). MACAP is a group of independent consumer experts that voices consumer views at the highest levels of the major appliance industry.
- Contact MACAP only when the dealer, authorized servicer, and KitchenAid have failed to resolve your problem.

Major Appliance Consumer Action Panel  
20 North Wacker Drive  
Chicago, IL 60606

- MACAP will in turn inform us of your action.

---

#### To order an optional accessory, write:

KitchenAid  
Parts Distribution Center  
123 Koomler Drive  
LaPorte, IN 46350  
or call 1-800-422-1230

#### \*When asking for help or service:

Please provide a detailed description of the problem, your appliance's complete model and serial numbers, and the purchase date. (See page 2.) This information will help us respond properly to your request.

**Don't forget, KitchenAid offers a full line of quality home appliances.**

Built-in Refrigerators	Trash Compactors	Ranges & Cooktops
Freestanding Refrigerators	Hot Water Dispensers	Microwave Ovens
50-Pound Ice Makers	Food Waste Disposers	Washers & Dryers
Dishwashers	Built-in Ovens	Mixers & Blenders

For more information on these appliances, or the one you have purchased, call our toll-free Consumer Assistance Center telephone number, **1-800-422-1230**.

# KitchenAid<sup>®</sup> Dryer Warranty


LENGTH OF WARRANTY:	KITCHENAID WILL PAY FOR:	KITCHENAID WILL NOT PAY FOR:
<b>ONE YEAR FULL WARRANTY</b> FROM DATE OF PURCHASE.	Replacement parts and repair labor costs to correct defects in materials or workmanship. Service must be provided by an authorized KitchenAid servicing outlet.	<b>A. Service calls to:</b> <ol style="list-style-type: none"> <li>1. Correct the installation of the dryer.</li> <li>2. Instruct you how to use the dryer.</li> <li>3. Replace house fuses or correct house wiring.</li> <li>4. Correct house plumbing.</li> </ol> <b>B. Repairs when dryer is used in other than normal home use.</b> <b>C. Damage resulting from accident, alteration, misuse, abuse, improper installation, or installation not in accordance with local electrical or plumbing codes.</b> <b>D. Any labor costs during the limited warranties.</b> <b>E. Replacement parts or repair labor costs for units operated outside the United States.</b> <b>F. Pick up and delivery. This product is designed to be repaired in the home.</b> <b>G. Repairs to parts or systems caused by unauthorized modifications made to the appliance.</b>
<b>SECOND YEAR LIMITED WARRANTY</b> FROM DATE OF PURCHASE.	Replacement parts to correct defects in materials or workmanship.	
<b>SECOND THROUGH FIFTH YEAR LIMITED WARRANTY</b> FROM DATE OF PURCHASE.	Replacement parts for any electrical element on electric models or any burner on gas models to correct defects in materials or workmanship. Replacement parts for the cabinet assembly should it rust through due to defects in materials or workmanship. Replacement parts for the "Gold Seal" motor to correct defects in materials or workmanship. For solid state touch control models, replacement parts for the solid state controls if defective in materials or workmanship.	
<b>SECOND THROUGH TENTH YEAR LIMITED WARRANTY</b> FROM DATE OF PURCHASE.	Replacement parts for the dryer drum if it rusts through due to defects in materials or workmanship.	

**KITCHENAID DOES NOT ASSUME ANY RESPONSIBILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.** Some states do not allow the exclusion or limitation of incidental or consequential damages, so this exclusion or limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Outside the United States, a different warranty may apply. For details, please contact your authorized Whirlpool distributor or military exchange.

If you need service, first see the "If You Need Assistance or Service" section of this book. After checking "If You Need Assistance or Service," additional help can be found by calling our Consumer Assistance Center, 1-800-422-1230, from anywhere in the U.S.A.

KitchenAid  
Benton Harbor, Michigan, U.S.A. 49022-2692

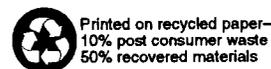

**Part No. 3392992**

© 1994 KitchenAid

© Registered Trademark/TM Trademark of KitchenAid.

Printed in U.S.A.