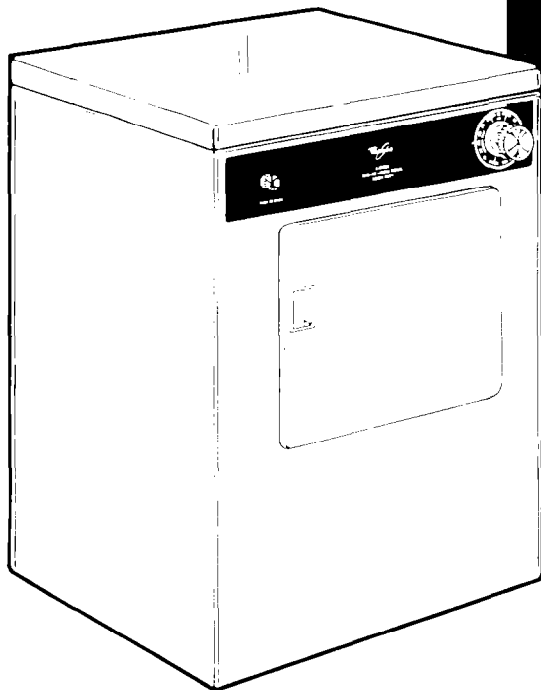 

use & care guide

The Whirlpool logo, consisting of a stylized swirl above the word "Whirlpool" in a serif font, set against a black rectangular background.

AUTOMATIC DRYERS

 
**Compact
Electric Models
LE4900XT (portable)
LE4930XT**

**Gas Model
LG4931XT**

ers. Clothes Dryers. Freezers. Refrigerator-Freezers. Ice Makers. Dishwashers. Built-in Ovens and Surface Units. Ranges. Microwave Ovens. Trash Compac



Parts and features

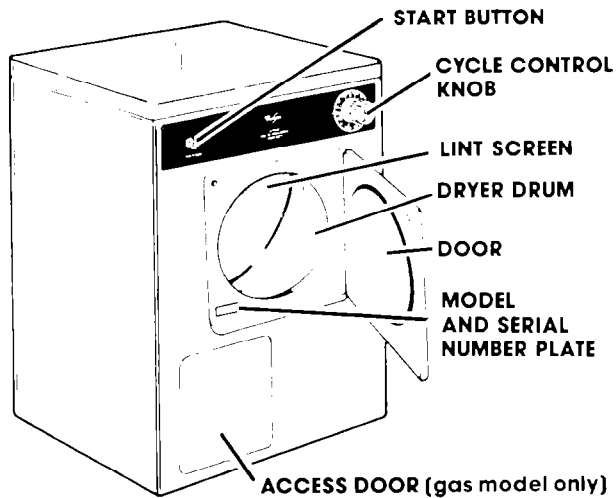

Remove the Consumer Buy Guide label before using your dryer. It will be easier to remove.

Wipe out the dryer drum with a damp cloth to remove dust from storing or shipping.

Copy your Model and Serial Numbers here

When you need service or call with a question, have this information ready:

- 1. Complete** Model and Serial Numbers (from plate located as shown)
- 2.** Purchase date from sales slip.

Copy this information in these spaces. Keep this book in the Laundry Information Center with your "Dryer Guide" and sales slip.

Thank you for purchasing a Whirlpool product. Please complete and mail the Owner Registration Card furnished with this product.

Model Number

Serial Number

Purchase Date

Service Company Phone Number

Contents

	Page		Page
PARTS AND FEATURES	2	LINT REMOVAL	7
IMPORTANT SAFETY INSTRUCTIONS	3	CARING FOR YOUR DRYER	8
OPERATING INSTRUCTIONS	4	Cleaning Dryer Interior	8
Starting Your Dryer	4	Vacation Care	9
Selecting a Cycle	5	Voltage Requirements	9
Drying Times	5	Optional Installation Accessories	9
Mixed Loads	6	IF YOU NEED SERVICE OR ASSISTANCE	10
Suggested Load Sizes	6	WHIRLPOOL DRYER WARRANTY	12
End-of-Cycle Signal	6		
LINT SCREEN	7		

Important safety instructions



WARNING: To reduce the risk of fire, electric shock, or injury to persons when using your dryer, follow basic precautions, including the following:

Read these laundry instructions carefully for important use and safety information before using your dryer.

NEVER dry items cleaned, washed, soaked in or spotted with wax, paint, gasoline, or flammable fluids in the dryer. The fumes can create a **FIRE HAZARD** or **EXPLOSION**. **ALWAYS** hand launder and air dry fabrics containing these materials.

NEVER allow children to operate, play with, or crawl inside the dryer. Close supervision of children is necessary when the dryer is used near children.

When discarding an old dryer, **ALWAYS** remove the door to prevent accidental entrapment.

DO NOT reach into a dryer if the drum is moving.

DO NOT install or store dryer where it will be exposed to the weather.

DO NOT tamper with the controls.

Dryer must be electrically grounded. See the "Installation Instructions."

You are personally responsible for making sure that your dryer is installed, repaired and parts replaced by a qualified person.

Use only fabric softeners specifically labeled as not being harmful to the dryer. **FIRE HAZARD** and **DAMAGE** to materials can result from:

- drying rubber, rubber-like and heat sensitive materials with heat.
- allowing lint build-up inside the dryer or exhaust system – cleaning should be done periodically by a qualified person.

Clean lint screen before or after each load.

DO NOT let dust, lint, paper, rags, chemicals, etc. pile up around or under the dryer.

• **SAVE THESE INSTRUCTIONS** •

Additional Safety Instructions and Your Responsibilities

NEVER operate the dryer if...

- it is not working right (i.e. noisy, too hot).
- it is damaged.
- parts are missing (i.e. door latch)
- all panels are not in place.
- the lint screen is loose, damaged or missing.

FOR YOUR SAFETY

If you smell gas:

- 1. Open windows.**
- 2. Don't touch electrical switches.**
- 3. Extinguish any open flame.**
- 4. Immediately call your gas supplier.**

FOR YOUR SAFETY

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

ALWAYS shut off the gas valve before leaving on vacation.

ALWAYS unplug the power supply cord or turn off electrical power before attempting to service the dryer. Shut off **GAS VALVE** if yours is a gas dryer.

You are personally responsible for making sure that your dryer...

 
- is properly maintained.
- is properly installed and leveled in a well ventilated room* on a floor that can support the weight.
- is located in an area where the temperature is above 45 F (7.2 C).
- is connected to the proper outlet and electrical supply.*
- is properly connected to fuel and exhaust systems.*
- is not installed against drapes or curtains.*
- is used only for jobs normally expected of home clothes dryers.
- is not used by children or anyone unable to operate it properly.

*See "Installation Instructions" for complete information.


Operating instructions

Starting Your Dryer

Before starting your dryer, be sure laundry is sorted and loaded properly (see your "Dryer Guide"). **Be sure the door is tightly closed.**

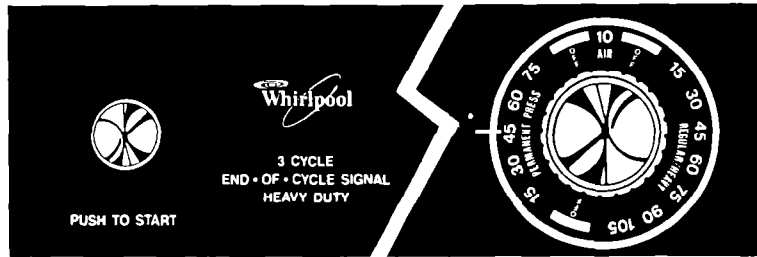


 1. Select a CYCLE

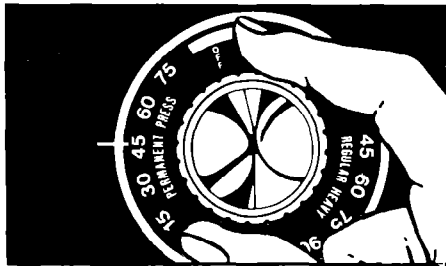


Turn the Control Knob either way to point to the cycle and time setting you want.

 2. Set TEMPERATURE SELECTOR

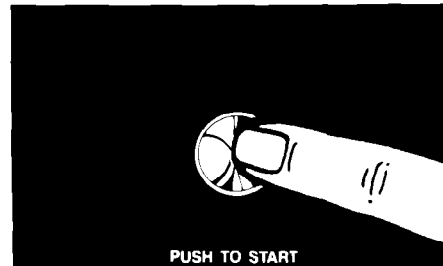

The dryer will start tumbling when you push the START Button.

 
3. Push the START Button

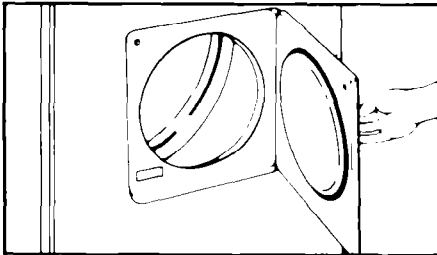

To stop the dryer, open the door (or turn the Control Knob to OFF).

To restart the dryer, close the door, select cycle, if necessary, and push START.

 To stop and restart the dryer

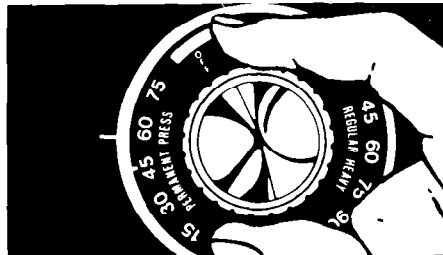

The setting can be changed at any time by turning the Control Knob to a new setting.

The Cycle Control Knob should point to an OFF area when the dryer is not in use. If the dryer is stopped before the cycle is finished, turn the Cycle Control Knob to an OFF area.

Selecting a Cycle

Dryer cycles are designed for the proper drying of different kinds of fabrics. This dryer has 3 cycles:

REGULAR HEAVY – The heat is off during the last 5 *minutes* of tumbling. The load is cooled down for more comfortable handling.

AIR – No heat. This cycle is useful when drying heat-sensitive items or when fluffing pillows and bedding or dusting sheers and curtains.

PERMANENT PRESS – The heat is off during the last 10 *minutes* of tumbling to help keep wrinkles from setting in. Clothing wrinkled from packing in suitcases or closets can be smoothed out by tumbling them in this cycle for about 20 minutes



TYPE OF LOAD	SUGGESTED CYCLE
COTTONS	
HEAVY – Bedspreads, mattress pads, quilts	REGULAR HEAVY
MEDIUM AND LIGHTWEIGHT – Shirts, dresses, sheets, diapers, towels, work clothes	REGULAR HEAVY
PERMANENT PRESS	
HEAVY – Work clothes, jackets, raincoats, etc.	PERMANENT PRESS
MEDIUMWEIGHT – Shirts, uniforms, dresses, slacks, etc.	PERMANENT PRESS
KNITS	
HEAVYWEIGHT – COTTONS, RAYONS, BLENDS – T-Shirts, slacks, polo shirts, etc.	PERMANENT PRESS
LIGHTWEIGHT – SYNTHETIC FIBERS (polyester, acrylic, etc.) AND BLENDS – Lingerie, blouses, dresses, etc.	PERMANENT PRESS
DELICATELY CONSTRUCTED FABRICS –	
Sheer Curtains (2 or 3 panels)	PERMANENT PRESS
RUBBER, PLASTIC, HEAT SENSITIVE MATERIALS	
Foam pillows, bras, etc.	AIR
Plastic shower curtains, tablecloths	AIR
Rubber backed rugs	AIR
Olefin, polypropylene, sheer nylon	AIR

Drying times

Drying times will vary depending on:

- amount of moisture in the clothes.
- type and weight of the fabric.
- size of the load.
- room temperature around the dryer.
- voltage used. See page 9 of this book for voltage information.

See your "Dryer Guide" for more information.

DO NOT OVERDRY. Overdrying can cause shrinkage, static cling, and can damage some fabrics.

Mixed loads

When drying a load with different kinds and weights of fabrics, use the cycle suggested for the lightest fabrics. When the dryer stops, remove dry items and reset the control.


To help reduce wrinkling, take the load from the dryer **as soon as tumbling stops**. This is very important for permanent press, knits and other synthetic fabrics.

Suggested load sizes

Use these load size recommendations for your **compact dryer**. **Do not use** the load sizes for larger capacity dryers that are listed in the "Dryer Guide."

MIXED LOAD	HEAVY WORK CLOTHES	TOWELS
1 pair slacks 2 pillowcases 2 shirts 2 T-shirts	3 work shirts 2 pair pants	9 bath towels – or – 6 bath towels 3 hand towels 6 wash cloths
PERMANENT PRESS	KNITS	DELICATES
6 shirts – or – 2 double sheets 2 pillowcases – or – 2 single sheets 2 pillowcases	2 slacks 2 shirts – or – 3 dresses	1 camisole 2 slips 2 panties 2 bras 1 nightie 1 half slip

 
End-of-cycle signal

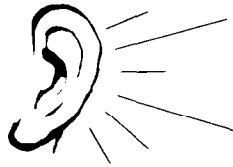

The dryer sounds a signal to let you know when the cycle is finished. The signal cannot be turned off and is not adjustable.

The signal is helpful when you are drying permanent press, synthetics and other items that should be taken out as soon as the dryer stops.

 
Lint screen

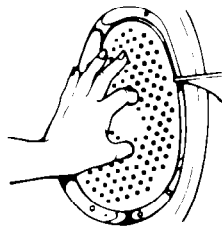

Pull straight out.

The lint screen is inside the dryer drum, on the back wall. **Clean it before each load.** A screen blocked by lint can increase drying time.

 1. Use the finger holes to pull the lint screen straight out.
2. Lightly squeeze the body, as shown, while pulling the cover off.
3. Roll lint off the screen with your fingers. **DO NOT rinse or wash the screen.** Wet lint is hard to remove.
4. Replace the cover on the body of the lint screen.
5. Push the lint screen straight back in until it clicks into place.

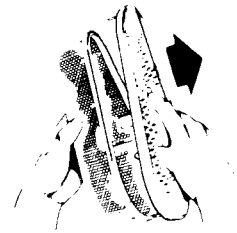


Squeeze body; pull cover off.




WARNING: DO NOT run the dryer with the lint screen loose, damaged, blocked or missing. Doing so can cause overheating, damage fabrics and can be a FIRE HAZARD.

Lint removal

 Lint can gather inside the dryer and create a **FIRE HAZARD**. This lint should be removed at least every 2 to 3 years, or more often, depending on dryer usage.

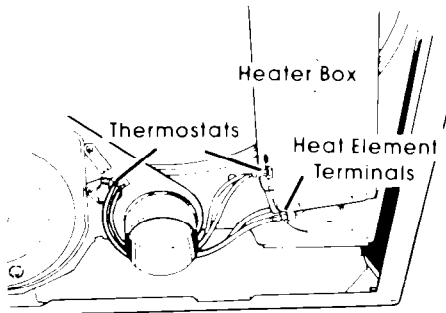

ELECTRIC DRYERS

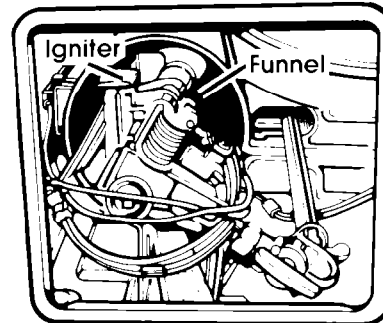 

GAS DRYERS

Cleaning should be done only by a qualified person.

 


WARNING:


- Avoid electrical shock hazard – unplug power supply cord or turn off electrical power.
- Avoid injury or damage – do not put hands inside cabinet.
- Make sure dryer is cool.

1. Remove back panel (electric) or lower access panel (gas).
2. Avoid damaging wires, thermostats, funnel or igniter.
3. Remove lint from shaded area – see art – with a soft brush or vacuum cleaner.
4. Replace panel; reconnect and re-level dryer.


Caring for your dryer

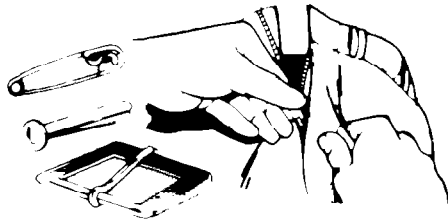

 
Remove loose and sharp objects from pockets and cuffs before drying – pins, buckles, etc. **Close metal zippers.**

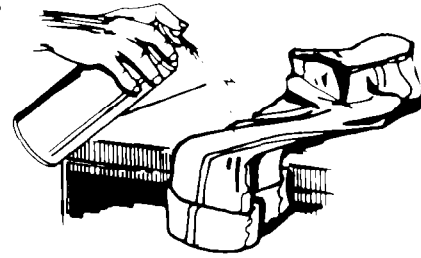

 Some pretreatment products can damage dials, consoles and finish. Do not use these products on or near your dryer.

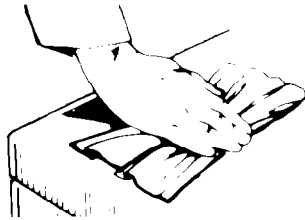

 
Wipe off all spills with a damp, soft cloth. Spills allowed to remain may dull or damage the finish.

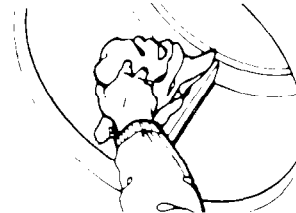


Cleaning dryer interior



 WARNING: Before cleaning interior, unplug power supply cord or, turn off electrical power to avoid electrical shock hazard.

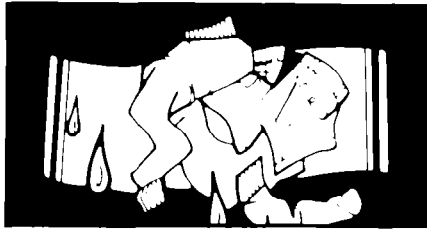

 Never leave wet or damp laundry in your dryer.

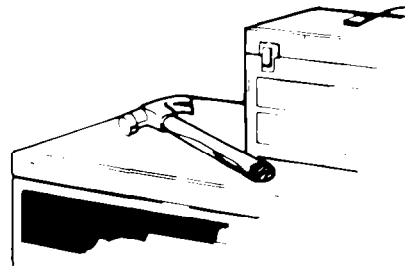

Sharp or heavy objects should never be put on or in the dryer. Check pockets for bolts, nuts, etc.

Garments which contain unstable dyes, such as denim blue jeans or brightly colored cotton items, may discolor the dryer interior. If the interior is discolored, clean with one of the following methods to avoid staining later load items.

 
Powdered laundry detergent and very warm water

Make a paste with detergent and very warm water. Apply paste to a soft cloth and scrub area until all excess dye is removed. Wipe thoroughly with a damp cloth. Tumble a load of rags. – **OR** –


Liquid spray household cleaner

Spray on stained area. Rub with a cloth until all excess dye is removed. Tumble a load of rags.


Vacation care

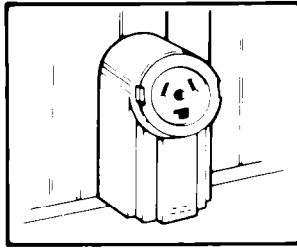

 Unplug power cord or turn off electrical power

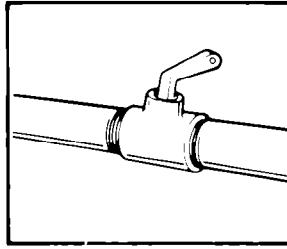

For gas dryers, close gas valve.

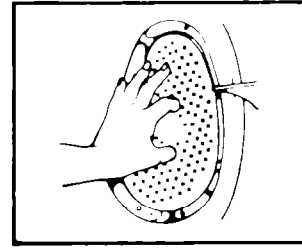 


Clean lint screen.

Voltage Requirements

Dryer Model LE4930XT operates on household current of 240 or 208 volts.

 
Dryer times will be longer if 208 volt current is used.

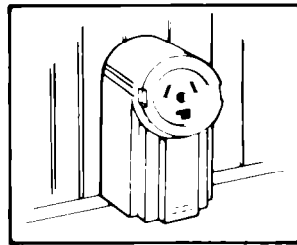

Power supply for
Dryer Model LE4930XT

Dryer Models LE4900XT and LG4931XT operates on household current of 120 volts.

 Drying times will be longer than for dryers that operate on 240 volts.

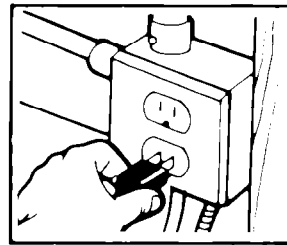

Power supply for
Dryer Models LE4900XT
LE4931XT

Optional Installation Accessories

An EXHAUST DEFLECTOR KIT (Part No. 346001) moves dryer exhaust to the side or up or down.

The dryer can be mounted above the compact washer with one of the following kits:

ELECTRIC DRYERS only

DRYER STAND KIT (Part No. 695570), permanent installation secured to the wall.

STACK RACK (Part No. 346721), free-standing installation.

STACK KITS (Part No. 3390196- almond, 3390175- white) mount dryer permanently onto the washer.

DRYER WALL MOUNT KIT (Part No. 345994), steel bracket secures to wall and supports the dryer. Wall must be solidly constructed to support the dryer. **Do not use in mobile homes.**

GAS DRYERS

DRYER STAND KIT (Part No. 695570), permanent installation secured to the wall.



WARNING: To avoid gas leak and explosion hazard, use only DRYER STAND KIT (Part No. 695570) with a gas dryer.

 
If you need service or assistance, we suggest you follow these five steps:




1. Before calling for assistance...

Performance problems often result from little things you can find and fix yourself without tools of any kind.

IF YOUR DRYER DOES NOT RUN:

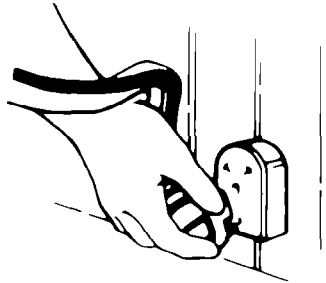

 
- Is the power supply cord plugged into a live circuit with the proper voltage?
- Is the door closed tightly?
- Do you push the START Button?

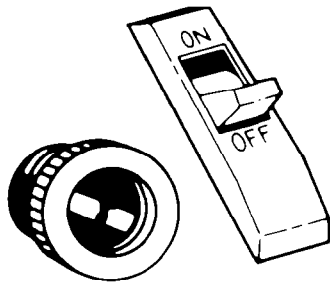

- Have you checked your home's main fuses or circuit breaker box?


IF YOUR DRYER DOES NOT HEAT:

 - The AIR setting is without heat.
- The last minutes of heat settings are without heat.

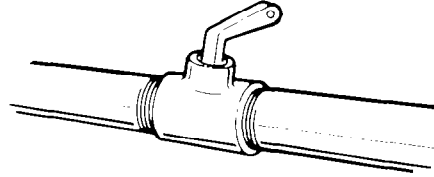


- Is the gas turned on? If not, turn the Control Knob to OFF. Turn on gas. Wait 5 minutes. Reset controls and start.
- An electric dryer uses a circuit breaker or 2 fuses. If one fuse is blown, the dryer may run, but not heat.

 IF DRYING TIME SEEMS LONG:

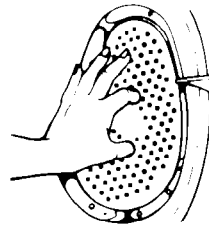

Pull straight out.

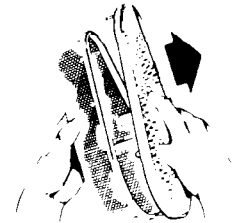 

Squeeze body;
pull cover off.

- Is the lint screen clean? See page 7 of this book for cleaning instructions.
- See page 5 of this book and your "Dryer Guide."

2. If you need assistance*...

Call Whirlpool COOL-LINE® service assistance telephone number. Dial free from anywhere in the U.S.:
1-800-253-1301

and talk with one of our trained Consultants. The Consultant can instruct you in how to obtain satisfactory operation from your appliance or, if service is necessary, recommend a qualified service company in your area.

3. If you need service*...



Whirlpool has a nationwide network of franchised TECH-CARE® Service Companies. TECH-CARE

service technicians are trained to fulfill the product warranty and provide after-warranty service, anywhere in the United States. To locate TECH-CARE service in your area, call our COOL-LINE service assistance telephone number (see Step 2) or look in your telephone directory Yellow Pages under:

APPLIANCES: HOUSEHOLD MAJOR SERVICE & REPAIR OR ELECTRICAL APPLIANCES MAJOR REPAIRING & PARTS

SEE YELLOW PAGES

OR

WASHING MACHINES, DRYERS & IRONERS: SERVICING

SEE YELLOW PAGES

4. If you have a problem*...

Call our COOL-LINE service assistance telephone number (see Step 2) and talk with one of our Consultants, or if you prefer, write to:

Mr. Robert Stanley
 Division Vice President
 Whirlpool Corporation
 2000 M-63
 Benton Harbor, MI 49022

5. If you need FSP® replacement parts*...

FSP is a registered trademark of Whirlpool Corporation for quality parts. Look for this symbol of quality whenever you need a replacement part for your Whirlpool appliance. FSP replacement parts will fit right and work right, because they are made to the same exacting specifications used to build every new Whirlpool appliance.

*If you must call or write, please provide: model number, serial number, date of purchase, and a complete description of the problem. This information is needed in order to better respond to your request for assistance.

WHIRLPOOL® DRYER WARRANTY

DR001

LENGTH OF WARRANTY	WHIRLPOOL WILL PAY FOR
FULL ONE-YEAR WARRANTY From Date of Purchase	FSP® replacement parts and repair labor to correct defects in materials or workmanship Service must be provided by a franchised TECH-CARE® service company
WHIRLPOOL WILL NOT PAY FOR	
A. Service calls to 1. Correct the installation of the dryer 2. Instruct you how to use the dryer 3. Replace house fuses or correct house wiring or plumbing 4. Replace light bulbs.	
B. Repairs when dryer is used in other than normal, single-family household use.	
C. Pick up and delivery This product is designed to be repaired in the home.	
D. Damage to dryer caused by accident, misuse, fire, flood, acts of God or use of products not approved by Whirlpool	

WHIRLPOOL CORPORATION SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow the exclusion or limitation of incidental or consequential damages so this limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Outside the United States, a different warranty may apply. For details, please contact your franchised Whirlpool distributor or military exchange.



Part No. 3390213
©1988 Whirlpool Corporation

Printed in U.S.A.

Whirlpool Corporation
Makers: Dishwashers, Built-In Ovens and Surface Units, Ranges, Microwave Ovens, Trash Compactors, Room Air Conditioners, Dehumidifiers, Automatic

