



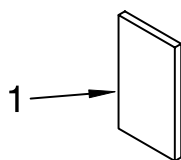

CABINET PARTS

For Models: WED5800SW0, WED5800SG0
(White/Grey) (Biscuit/Gold)

29" ELECTRIC DRYER

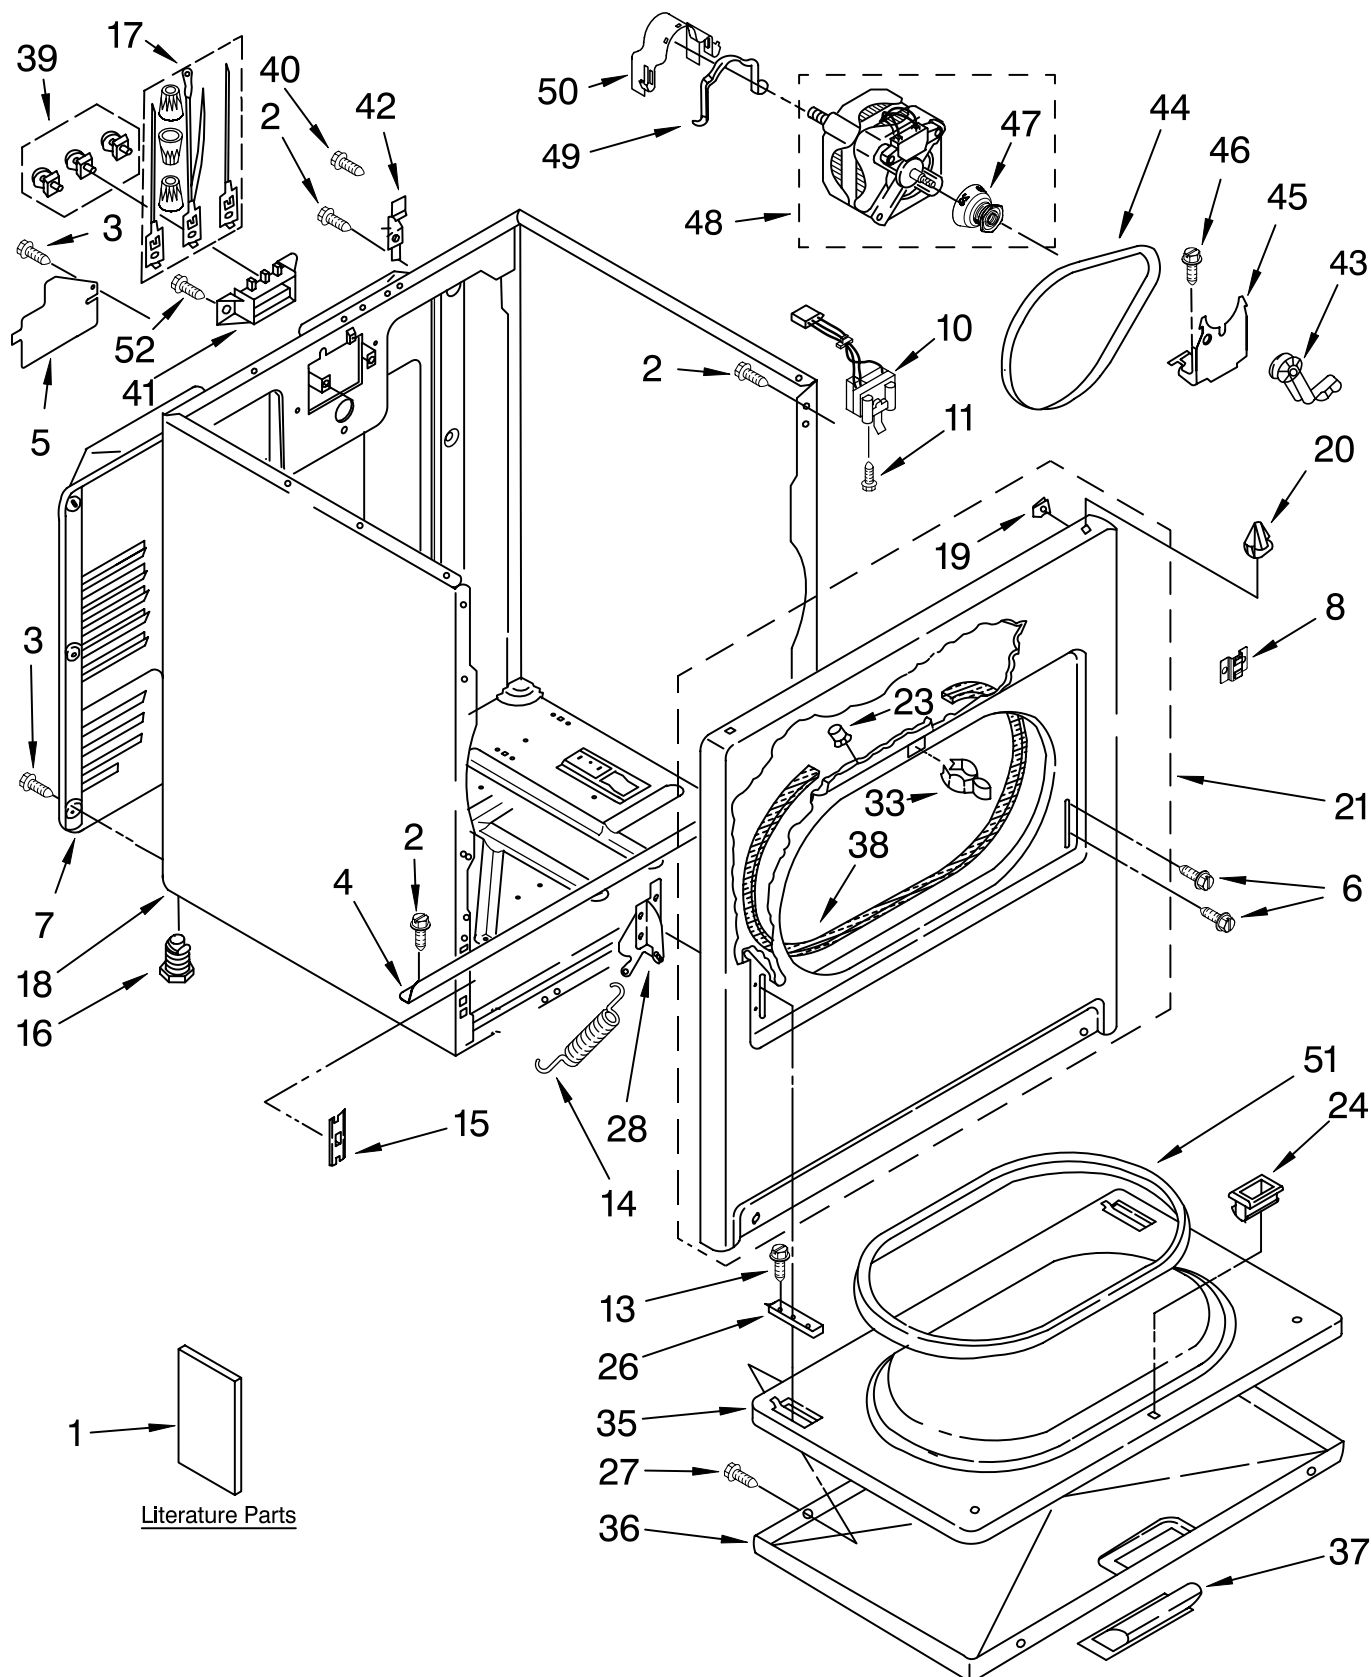

Literature Parts

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CABINET PARTS


For Models: WED5800SW0, WED5800SG0
(White/Grey) (Biscuit/Gold)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1		Literature Parts	15	3394083	Clip, Front Panel (2)	36		Door, Front
	8577188	Instructions, Installation	16	3392100	Foot, Dryer		3393549	White
	W10042950	Sheet, Cycle Feature		279810	Foot-Optional (Extended Length Package of 2) (Not Included)		3977241	Biscuit
	8578183	Use & Care Guide	17	279318	Terminal, Tinned & Brass (3) (Includes Illus. 39)	37		Handle, Door
	3406661	Wiring Diagram					W10095180	White
Following May Be Purchased			18		Cabinet (Includes Illus. 4)		W10095190	Biscuit
DO-IT-YOURSELF REPAIR MANUALS				8530603	White	38	3406129	Seal & Bearing Assembly
	677818	Dryer		8530606	Biscuit	39	279393	Terminal Block Kit (For Terminal Block)
2	343641	Screw, 10-16 x 1/2	19	98234	Clip, Ground	40	697776	Screw, 10-32 x 5/8
3	693995	Screw, 8-18 x 3/8	20	690363	Lock, Front Top (2)	41	3397659	Block, Terminal
4	8541400	Bracket, Cabinet	21		Panel, Front	42	8066217	Hinge, Top (2)
5	3396795	Cover, Block		695620	White	43	691366	Idler & Pulley Assembly
6	342043	Screw, 10-32 x 3/8		3977244	Biscuit	44	8066065	Belt, Drive
7	3396805	Panel, Rear	23	685203	Clip, Felt Pad (3)	45	348780	Base, Motor
8	8546676	Clip, Door Spring	24	3389441	Catch, Door Assembly	46	3400500	Bolt, 5/16-18 x 3/4
10	3406107	Door Switch Assembly	26	337189	Clip, Hinge (2)	47	8066184	Pulley, 60 Hz.
11	697773	Screw, 6-20 x 7/8	27	694091	Screw, 8-18 x 3/8	48	8066206	Motor Assembly 60 Hz.
13	3357011	Screw, 10-16 x 1/2	28	8066056	Hinge, R.H.	49	660658	Clamp, Motor
14	8541401	Spring, Door (2)		8066057	Hinge, L.H.	50	3404162	Clamp, Motor (W/Shield)
			33	696144	Strike, Door	51	3390731	Seal, Door
			35	695737	Door, Rear	52	3393008	Screw, 10-16 x 1/2

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TOP AND CONSOLE PARTS

For Models: WED5800SW0, WED5800SG0
(White/Grey) (Biscuit/Gold)

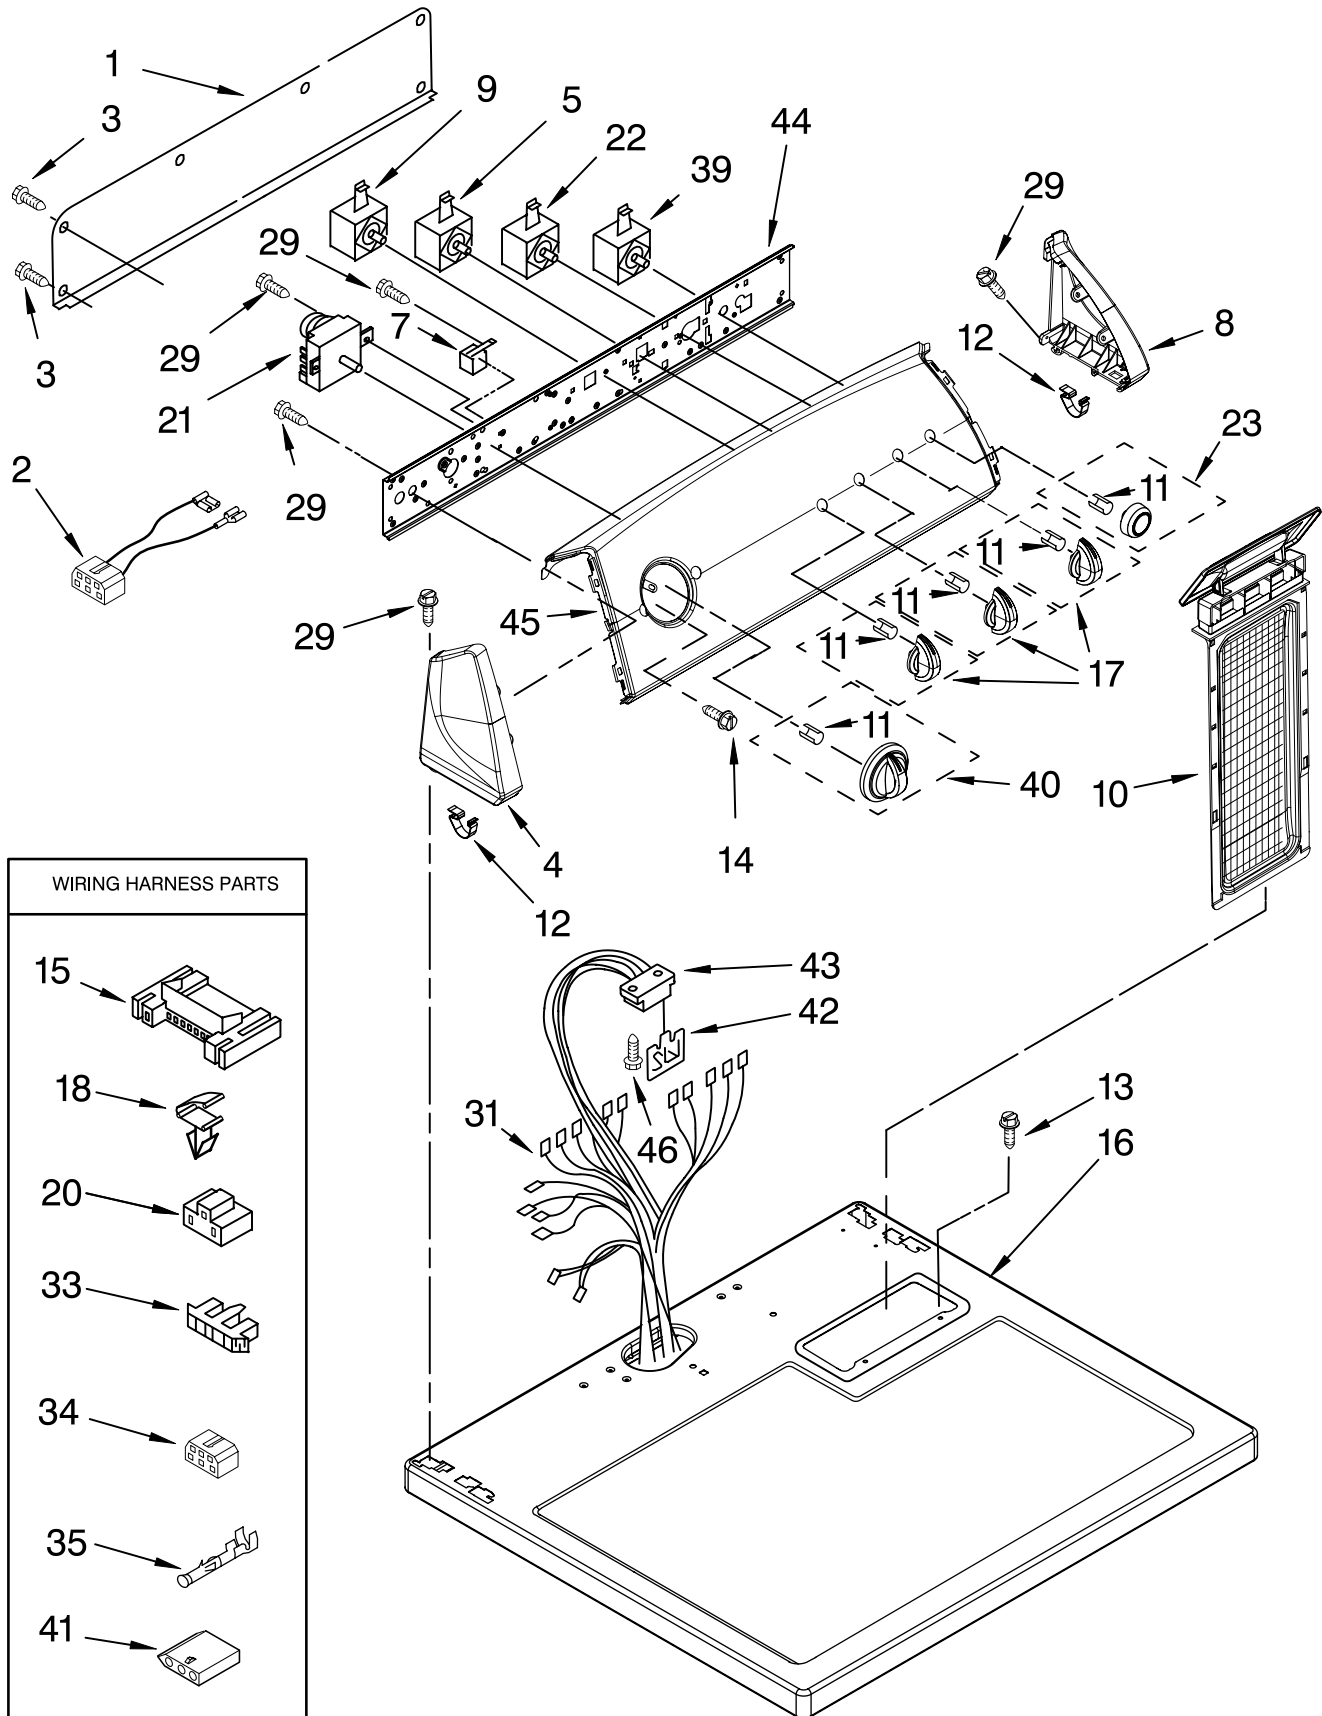

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TOP AND CONSOLE PARTS


For Models: WED5800SW0, WED5800SG0
(White/Grey) (Biscuit/Gold)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	8274261	Panel, Rear Console	13	688983	Screw, 8-18 x 5/8	33	3397269	Connector (Timer)
2	3401695	Wire, Jumper (Buzzer On/Off)	14	8533951	Screw, Grounding	34	3347243	Connector 6-Circuit
3	693995	Screw, Hex Head	15	3395683	Connector (Motor)	35	94614	Terminal
4		Cap, End (L.H.)	16		Top	39	3398094	Switch, Push-To-Start
	8566035	White		8559800	White	40		Timer Knob Assembly
	8566036	Biscuit		8563660	Biscuit		W10034750	Grey
5	3405154	Switch, Wrinkle Shield	17		Knob, Control (3)		W10034760	Biscuit
7	694419	Buzzer, Mini		W10034380	Grey	41	3936144	Connector
8		Cap, End (R.H.)		W10034390	Biscuit	42	8558178	Control, Electronic
	8566032	White	18	3394427	Clip-Harness	43	3391885	Connector, Edge
	8566033	Biscuit	20	3401144	Connector, (PTS Relay)	44	8566052	Bracket, Control
9	8578352	Switch, Temperature	21	3406725	Timer, 60 Hz.	45		Panel, Control (Includes Illus. 24)
10		Screen, Lint	22	3405152	Switch, End Of Cycle		8578860	Grey
	8557857	White	23		Knob, Push-To-Start		8578861	Gold
	8557858	Biscuit		W10034770	Grey	46	343641	Screw, 10-16 x 1/2
11	8536939	Clip, Spring		W10034780	Biscuit			
12	8312709	Clip-Console	29	8533971	Screw, Mounting (8-18 x 5/16)			
			31	W10071290	Harness, Wiring			

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

BULKHEAD PARTS

For Models: WED5800SW0, WED5800SG0
(White/Grey) (Biscuit/Gold)

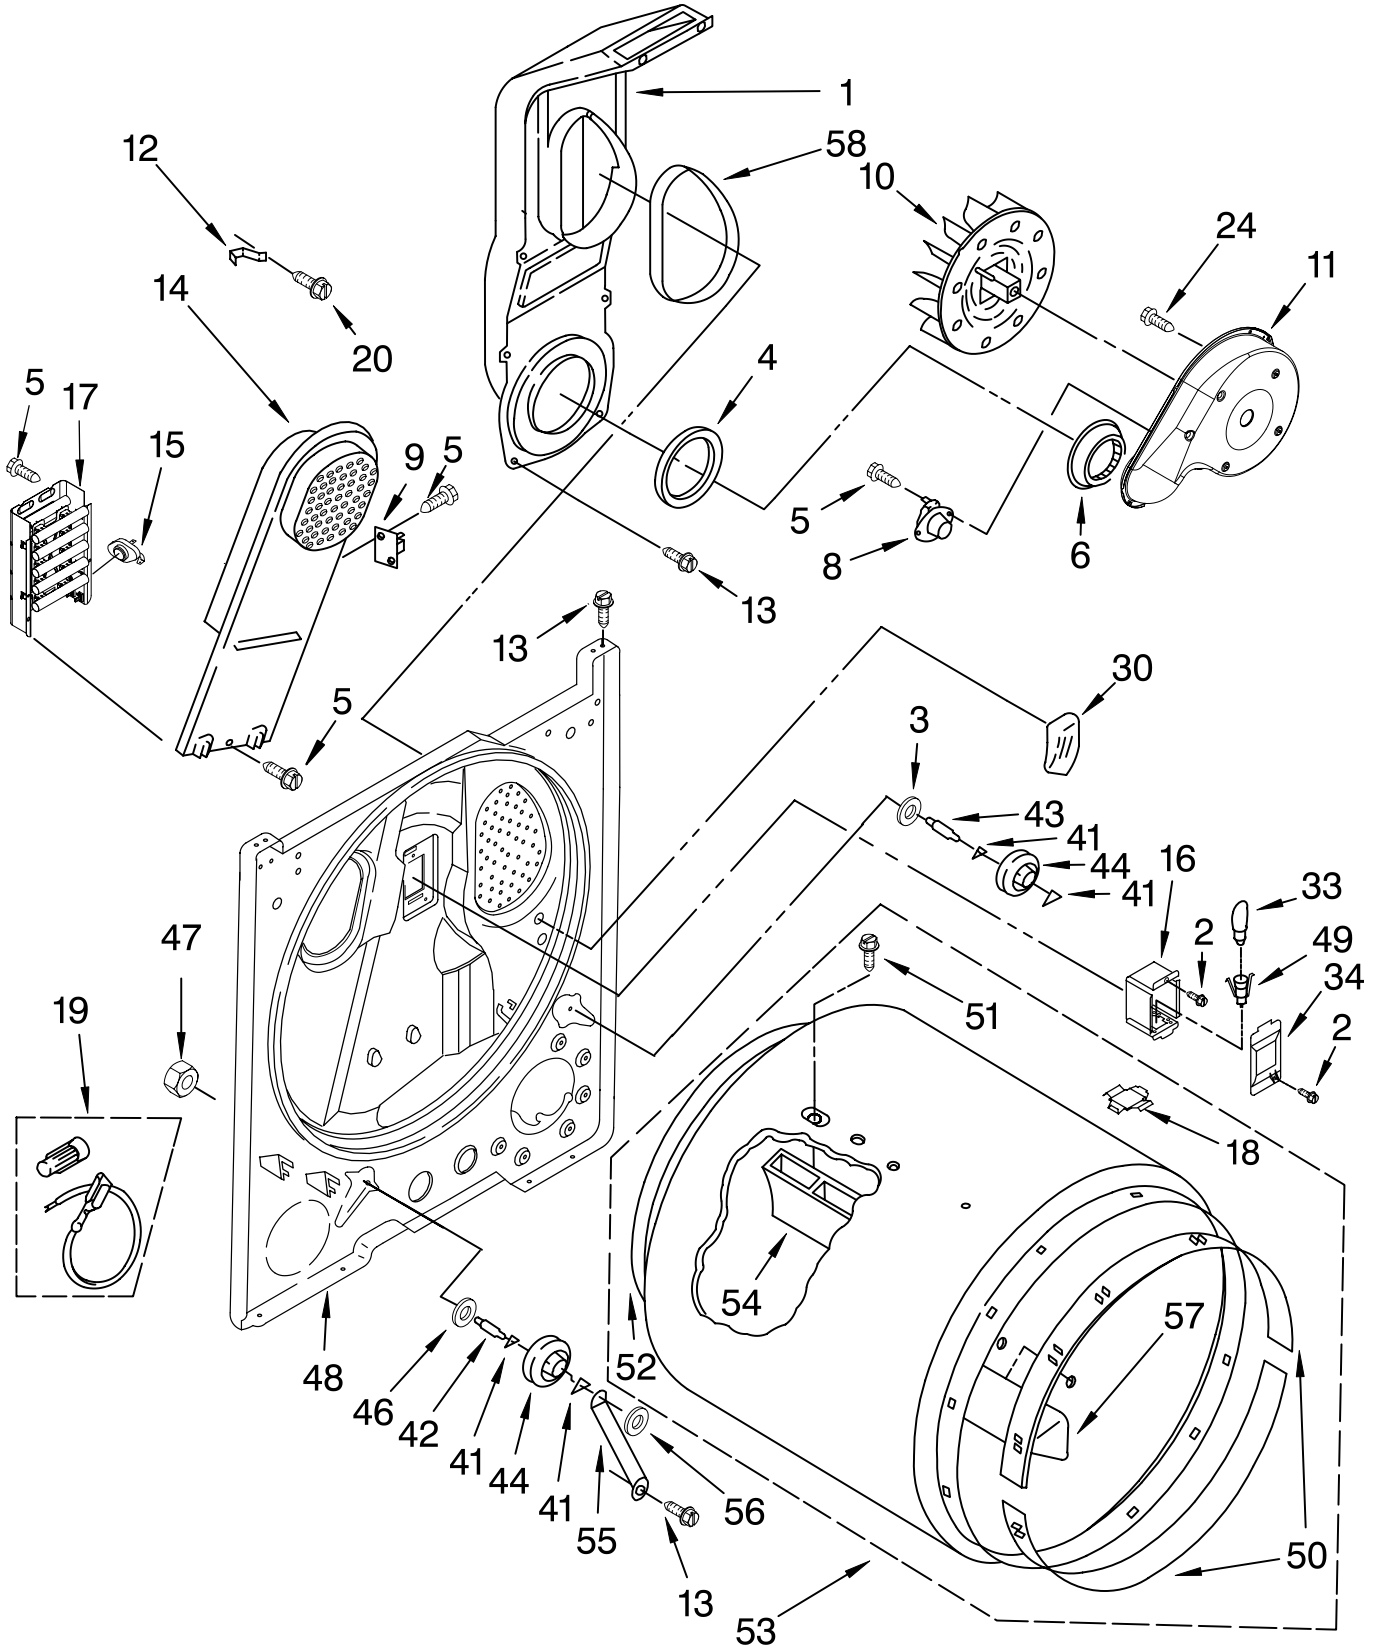

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

BULKHEAD PARTS

For Models: WED5800SW0, WED5800SG0
(White/Grey) (Biscuit/Gold)

Illus. No.	Part No.	DESCRIPTION
1	348368	Lint Chute Assembly
2	487909	Screw, 8-15 x 1/2
3	3388703	Washer-Support
4	347139	Seal, Lint Chute
5	90767	Screw, 8-18 x 3/8
6	696302	Shield, Exhaust
8	8318268	Thermostat, Internal-Bias
9	3977393	Thermal Cut-Off (Includes Illus. 15)
10	694089	Wheel, Blower
11	8577230	Housing, Blower
12	3398161	Clip
13	343641	Screw, 10-16 x 1/2
14	8541818	Box, Heater
15	3977767	Thermostat, 221°F (105°C)
16	3977373	Bracket, Drum Light
17	8565582	Element, Heater
18	8066086	Drum Hole Plug
19	279457	Wire Kit, Terminal (For Heater Element Wiring Harness Repair)
20	489463	Screw, 8-18 x 5/8
24	3390647	Screw, 8-18 x 1/2
30	3976479	Pad, Sensor
33	3406124	Bulb
34	3402841	Lens, Drum Light
41	690997	Ring, Tri
42	3399506	Shaft, L.H.
43	3399507	Shaft, R.H.
44	3397590	Roller, Support
46	348197	Washer, Support
47	3359452	Nut, 3/8-16
48	3403414	Bulkhead
49	3403634	Socket Assembly
50	692526	Ring, Bearing (2)
51	97787	Screw, 11-16 x 3/4
52	3406130	Seal, Rear Drum
53	695587	Drum Assembly
54	692490	Baffle, Drum (2)
55	3976434	Bracket, Support
56	90296	Clip
57	3403636	Baffle, Drum (1)
58	339956	Seal

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS (NOT INCLUDED)

For Models: WED5800SW0, WED5800SG0
(White/Grey) (Biscuit/Gold)

Illus. No.	Part No.	DESCRIPTION
---------------	-------------	-------------

ACCESSORY PARTS

279948 Kit,
Dryer Repair
3406839 Dry Rack
8522199 Kit, Dryer
Vent Testing

PAINT, TOUCH-UP (1/2oz.)

72017 White
4392899 Biscuit

PAINT, PRESSURIZED SPRAY (12 oz.)

350930 White
4392901 Biscuit
350938 Primer, Gray

PAINT, BULK (1 qt.)

799344 White (Uncut)
4392900 Biscuit (Uncut)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST