

CONSTRUCTION

EQUIPMENT

UPTIME MAINTENANCE PLANNER

318D and 320D

As	Required			
 Inspect and clean cooling package 	Check and clean cab fresh air filter—if equipped			
Check tire pressure	 Check and clean cab recirculation air filter—if equipped 			
Check wheel lug nut torque	 Inspect and clean fuel tank vent tube 			
 Add coolant extender as indicated by COOL-GARD[™] II test strip 	S			
Every 10) Hours or Daily			
Check engine oil level	 Check and drain water separator fuel filter 			
Check hydraulic reservoir oil level	 Check and drain auxiliary fuel filter and water separator—if equipped 			
Check coolant level				
Eve	ry 50 Hours			
 Lubricate boom linkage, cylinder pivot points, and Quik-Tatch™ 	linkage			
Initial Ser	vice - 250 Hours ¹			
 Change engine oil and replace filter 				
Ever	y 250 Hours			
 Take engine oil sample 				
Ever	y 500 Hours			
 Change engine oil and replace filter 	Check chain case oil level			
 Replace water separator fuel filter 	 Lubricate steering linkage—if equipped 			
 Replace auxiliary fuel filter and water separator—if equipped 	 Drain fuel tank sump 			
Replace in-line fuel filter	Take hydraulic oil sample			
 Replace primary engine air filter 	Take diesel fuel sample			
 Replace hydraulic oil reservoir breather 	Take engine coolant sample			
Replace hydraulic oil filter				
Every	y 1000 Hours			
Check coolant	Change hydraulic reservoir oil			
 Replace secondary engine air filter 	Change chain case oil			
Every	y 6000 Hours			
 Drain, flush, and refill cooling system 				



CONSTRUCTION

EQUIPMENT

UPTIME MAINTENANCE PLANNER

REQUIRED PARTS								
Description	Part Number	Initial Service - 250 Hours ¹	Every 250 Hours	Every 500 Hours	Every 1000 Hours	Every 6000 Hours		
Engine Oil Filter	RE519626	1		1	1	1		
In-Line Fuel Filter	T257865			1	1	1		
Water Separator Fuel Filter	RE533026			1	1	1		
Auxiliary Fuel Filter and Water Separator—If Equipped	AT365870			1	1	1		
Hydraulic Oil Reservoir Breather	AT101565			1	1	1		
Hydraulic Oil Filter	AT314164			1	1	1		
Primary Engine Air Filter	RE282286			1	1	1		
Secondary Engine Air Filter	RE282287				1	1		
PLUS-50™ II Engine Oil	TY26669 ²	9.0 L (2.4 gal)		9.0 L (2.4 gal)	9.0 L (2.4 gal)	9.0 L (2.4 gal)		
PLUS-50™ II Hydraulic & Hydrostatic Oil	TY26669 ²				19.0 L (5.0 gal)	19.0 L (5.0 gal)		
PLUS-50™ II Chain Case Oil (per side)	TY26669 ²				16.1 L (4.25 gal)	16.1 L (4.25 gal)		
COOL-GARD™ II Pre-Mix	TY26575					9.3 L (2.5 gal)		
Coolant Extender	TY26603 As Required							
Fluid Analysis Kits ³								
Diesel Engine Oil	AT317904		1	1	1	1		
Hydraulic & Hydrostatic Oil	AT303189			1	1	1		
Diesel Fuel	AT180344			1	1	1		
Engine Coolant	AT183016			1	1	1		
COOL-GARD™ II Test Strips	TY26605				1	1		

¹ Perform initial service once after the first 250 hours of operation.

² See operator's manual for recommended oil type and oil viscosities based on operating temperatures.

³Based on fluid analysis results, intervals may need to be adjusted for operating conditions. Consult your local John Deere dealer.