


# JVC

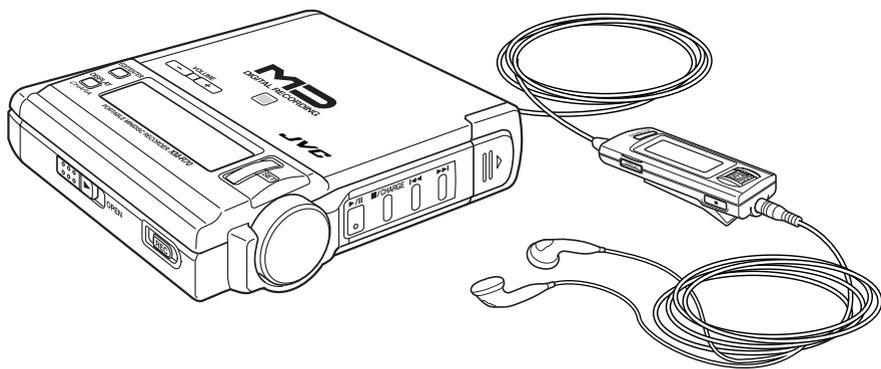


PORTABLE MINIDISC RECORDER

## **XM-R70**SL/BK



**INSTRUCTIONS**

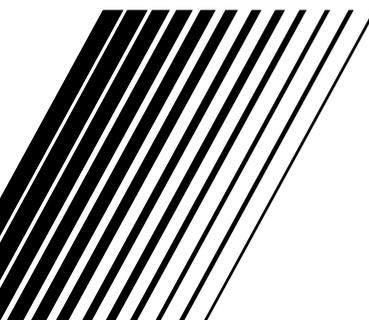

LVT0335-004A  
[B]

**CAUTION!** THIS PRODUCT UTILIZES A LASER.

USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

**WARNING :** TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

**IMPORTANT** for the U.K.

DO NOT cut off the mains plug from this equipment. If the plug fitted is not suitable for the power points in your home or the cable is too short to reach a power point, then obtain an appropriate safety approved extension lead or consult your dealer.

**BE SURE** to replace the fuse only with an identical approved type, as originally fitted.

If nonetheless the mains plug is cut off ensure to remove the fuse and dispose of the plug immediately, to avoid a possible shock hazard by inadvertent connection to the mains supply.

If this product is not supplied fitted with a mains plug then follow the instructions given below:

**IMPORTANT:**

**DO NOT** make any connection to the terminal which is marked with the letter E or by the safety earth symbol or coloured green or green-and-yellow.

The wires in the mains lead on this product are coloured in accordance with the following code:

Blue : Neutral


Brown : Live

As these colours may not correspond with the coloured markings identifying the terminals in your plug proceed as follows:

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

IF IN DOUBT - CONSULT A COMPETENT ELECTRICIAN.

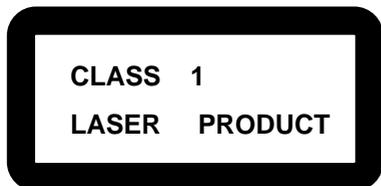

1. CLASS 1 LASER PRODUCT
2. **DANGER:** Invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
3. **CAUTION:** Do not open the top cover. There are no user serviceable parts inside the Unit; leave all servicing to qualified service personnel.

**DANGER:** Invisible laser radiation when open and interlock failed or defeated. AVOID DIRECT EXPOSURE TO BEAM. (e)

**WARNING:** Osynlig laserstrålning när denna del är öppnad och spärren är urkopplad. Beträkta ej strålen. (s)

**ADVARSEL:** Usynlig laserstrålning ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for strålning (d)

**VARO:** Avattaessa ja suo-jalukitus ohitettaessa olet alttiina näkymättömälle lasersäteilylle. Älä katso säteeseen. (f)

● WARNING LABEL, PLACED INSIDE THE UNIT

**NEVER TOUCH THE LENS.**

# SAFETY INSTRUCTIONS

## “SOME DOS AND DON'TS ON THE SAFE USE OF EQUIPMENT”

This equipment has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.

\*\*\*\*\*

Do read the operating instructions before you attempt to use the equipment.

Do ensure that all electrical connections (including the mains plug, extension leads and interconnections between pieces of equipment) are properly made and in accordance with the manufacturer's instructions. Switch off and withdraw the mains plug when making or changing connections.

Do consult your dealer if you are ever in doubt about the installation, operation or safety of your equipment.

Do be careful with glass panels or doors on equipment.

\*\*\*\*\*

DON'T continue to operate the equipment if you are in any doubt about it working normally, or if it is damaged in any way—switch off, withdraw the mains plug and consult your dealer.

DON'T remove any fixed cover as this may expose dangerous voltages.

DON'T leave equipment switched on when it is unattended unless it is specifically stated that it is designed for unattended operation or has a standby mode.

Switch off using the switch on the equipment and make sure that your family know how to do this.

Special arrangements may need to be made for infirm or handicapped people.

DON'T use equipment such as personal stereos or radios so that you are distracted from the requirements of traffic safety. It is illegal to watch television whilst driving.

DON'T listen to headphones at high volume as such use can permanently damage your hearing.

DON'T obstruct the ventilation of the equipment, for example with curtains or soft furnishings.

Overheating will cause damage and shorten the life of the equipment.

DON'T use makeshift stands and NEVER fix legs with wood screws — to ensure complete safety always fit the manufacturer's approved stand or legs with the fixings provided according to the instructions.

DON'T allow electrical equipment to be exposed to rain or moisture.

ABOVE ALL

- NEVER let anyone, especially children, push anything into holes, slots or any other opening in the case -this could result in a fatal electrical shock.;
- NEVER guess or take chances with electrical equipment of any kind
- it is better to be safe than sorry!

Thank you for purchasing this JVC product. Please read these instructions carefully before starting operation to be sure to obtain optimum performance and a longer service life from the unit.




## Table of Contents

|   |   |   |    |
|---|---|---|----|
| Supplied Accessories .....                                    | 1 | Joining Tracks (JOIN Function) .....              | 9  |
| Location of Controls .....                                    | 1 | Moving Tracks (MOVE Function) .....               | 10 |
| Power Supply Preparations .....                               | 2 | Erasing Tracks (ERASE Function) .....             | 10 |
| Accidental Operation Prevention Function<br>(Hold Mode) ..... | 3 | Erasing All the Tracks (ALL ERASE Function) ..... | 10 |
| Normal Play .....   | 3 | Giving Titles to MD (TITLE Function) .....        | 11 |
| Showing the Disc Information .....                            | 5 | Using the Unit with Optional Accessories .....    | 12 |
| Repeat Play and Random Play .....                             | 5 | Cautions .....                                    | 12 |
| Selecting the Operational Options of Remote Control .....     | 6 | Information on MDs (Minidiscs) .....              | 13 |
| Preparation Before Recording .....                            | 6 | MD (Minidisc) Messages .....                      | 14 |
| Check Items Before Starting Recording .....                   | 7 | Minidisc Limitations .....                        | 15 |
| Standard Recording (MONO/STEREO) .....                        | 7 | Rules of Digital Dubbing .....                    | 15 |
| SYNCHRO Recording (SYNCHRO) .....                             | 8 | Maintenance .....                                 | 15 |
| Editing the MD .....  | 8 | Troubleshooting Guide .....                       | 16 |
| Dividing Tracks (DIVIDE Function) .....                       | 9 | Specifications .....                              | 16 |


## Supplied Accessories

|                            |       |  |       |
|----------------------------|-------|--|-------|
| AC adaptor (AA-R554) ..... | 1 pc. | Lithium-ion battery (rechargeable) (BN-R3610) .. | 1 pc. |
| Headphones .....           | 1 pc. | External Battery case .....                      | 1 pc. |
| Remote controller .....    | 1 pc. | Carrying pouch .....                             | 1 pc. |


## Location of Controls

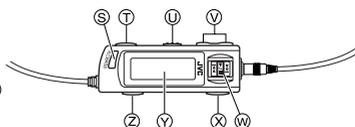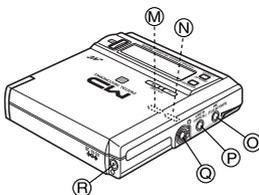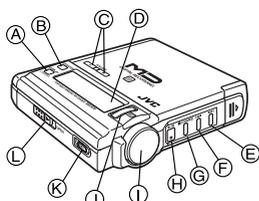

[Display on the unit]

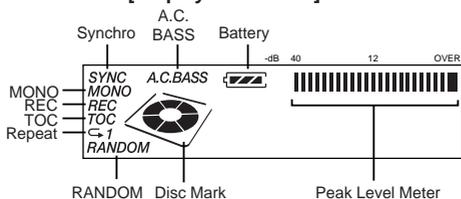

[Display on the remote control]

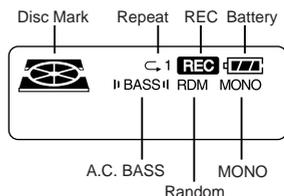

### [On the unit]

- |                                |                              |
|--------------------------------|------------------------------|
| (A) DISPLAY / CHARA. button    | (J) SET button               |
| (B) EDIT/ENTER button          | (K) REC switch               |
| (C) VOLUME +, - button         | (L) OPEN switch              |
| (D) Display                    | (M) HOLD switch              |
| (E) Skip / search button (▶▶)  | (N) REC MODE switch          |
| (F) Skip / search button (◀◀)  | (O) MIC (PLUG IN POWER) jack |
| (G) Stop (■)/CHARGE button     | (P) LINE IN (OPTICAL) jack   |
| (H) Play / pause button (▶/  ) | (Q) Headphones jack (👂)      |
| (I) JOG dial                   | (R) DC IN 6V jack (⚡)        |

### [On the remote control]


- |  |
|--|
| (S) A.C.BASS (Active Clear Bass) button                      |
| (T) P.MODE (Play Mode) button                                |
| (U) HOLD switch  |
| (V) VOLUME +, - button                                       |
| (W) Skip / search buttons (◀◀▶▶), Play / pause button (▶/  ) |
| (X) Stop button (■)  |
| (Y) Display  |
| (Z) DISPLAY button   |

## Power Supply Preparations


As a power supply source, you can use the rechargeable battery and/or dry-cell batteries, or AC adaptor.  
For information on operating times of batteries, refer to the specifications (page 16).

### Using lithium-ion battery (rechargeable battery) (BN-R3610)

#### 1 Insert the rechargeable battery into the unit.

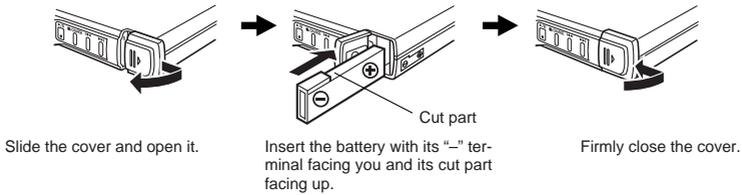

#### 2 To charge the rechargeable battery, connect the supplied AC adaptor.

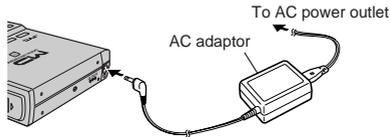

#### 3 Press the /CHARGE button twice on the unit.

“CHARGE” appears on the display and charging starts. When charging is completed, “CHARGE” will disappear.

- “CHARGE” will appear for 5 seconds even when no lithium-ion battery is inserted.

#### 4 Disconnect the AC adaptor.


##### Notes

- Recharging is not made if the unit is being used.
- It takes approximately 2 hours to recharge the rechargeable battery.
- Rechargeable battery has a service life of approximately 500 charge-discharge cycles. If the operating time on one full charge becomes noticeably shorter than it used to be, the battery has reached the end of its service life and should be replaced.
- The AC adaptor may become warm while recharging is in progress. This is not a malfunction.
- Before starting recording, fully charge the rechargeable battery. Otherwise, the unit may shut off during recording.
- Recharging with this unit shall be made at the temperature from +5°C to +35°C. Otherwise, “HIGH TEMP” or “LOW TEMP” will appear on the display.

### Using dry-cell batteries (not included)

#### 1 As explained below, open the battery cover of the battery case and insert three LR6 (UM-3) alkaline batteries into the battery compartment.

#### 2 Turn the knob of the battery case in the direction as shown by the arrow until it stops. (To detach the battery case, turn the knob toward in reverse until the battery case is removed.)

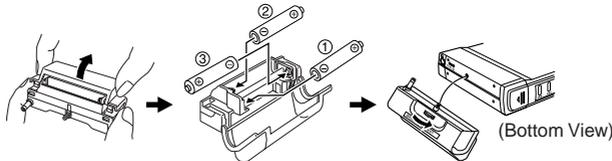

##### Note

To lengthen the battery life, you can use both rechargeable battery and the dry-cell batteries.

### Using the AC adaptor

#### Connect the supplied AC adaptor to the unit.

Refer to the connecting diagram in “Using lithium-ion battery (rechargeable battery)”

When the unit is turned off with a lithium-ion battery inserted, “CHARGE” is displayed and recharging automatically starts.

## Note

The unit is in the standby condition when the AC adaptor is connected. The primary circuit is always “live” as long as the AC adaptor is connected to an electrical outlet.

## Battery indicator

The battery indicator appears on the display of the unit and remote control. When the indication changes as follows, power will be shut off a short while after.



**Rechargeable battery: Recharge it.**  
**Dry-cell batteries: Replace them with new ones.**



## Note

The battery indicator also appears when the AC adaptor is connected, though it has no meaning.

## Accidental Operation Prevention Function (Hold Mode)

This function prevents accidental operation of buttons on the unit.

The unit and remote control have the HOLD switches, each of which works independently.

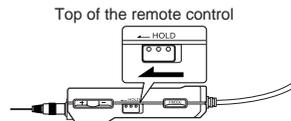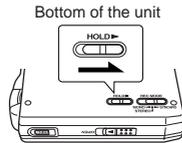

**Slide the HOLD switch in the direction shown by the arrow to activate it.**


When the HOLD switch of the unit or remote control is activated, no button operation is possible on the unit or the remote control.

- Once the HOLD switch of the unit has been activated, “HOLD” will appear each time a button on the unit is pressed.

**To operate the unit or remote control normally, release the HOLD switch.**

## Normal Play

Follow the numbers in the figure to perform normal-play.

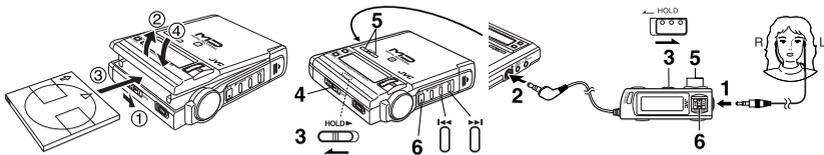

**1 Connect the headphones plug firmly.**

**2 Connect the remote control plug firmly.**

**3 Release the HOLD switches.**

**4 Load an MD.**

① Slide the OPEN switch to open the lid.

② Open the lid by hand.

③ Insert the MD into the MD slot beneath the lid, with its label side facing up. Insert the MD until it stops. Be sure  $\Delta$  or  $\Rightarrow$  mark on the MD are oriented as shown in the figure.

④ Close the lid.


“TOC Reading” appears on the display. Then the track number and playback time appear.

**5 Adjust the volume level between 0 and 25.**

Press the VOLUME+, – button on the unit or remote control. To continuously change the volume level, depress the VOLUME button.

**6 Press the ►/|| button on the unit or remote control.**

Playback will start from the first track and ends after playing all the tracks of the MD.

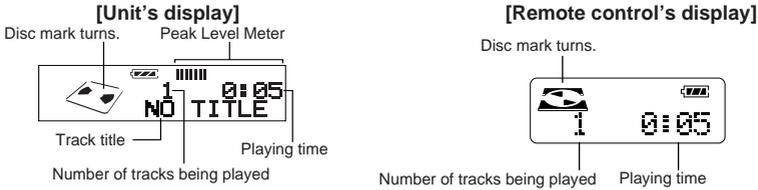

To eject the MD, slide the OPEN switch to open the lid and open it by hand. Then, the MD comes out.

**Notes**

- If no MD is loaded, “NO DISC” appears on the display and the power will be automatically shut off after approx. 10 seconds.
- If the MD is recorded in Monaural mode, “MONO” will appear on the display.

| Operation                              | Button  | Display/reference                        |             |  |
|--|---|--|-------------|--|
| <b>To pause play</b>                   | Press during play.<br>  | Blinks.<br>                              | Blinks.<br> | Press again to restart play.<br>If nothing is done for 2 minutes, the power will be automatically shut off.  |
| <b>To stop play (Stop mode)</b>        | Press during play.<br>  | Stops.<br>                               | Stops.<br>  | Press the ►/   button to restart play.<br>The current track will be played from the beginning (Resume Play).<br>If nothing is done for 45 seconds, the power will be automatically shut off.<br>In this case, to restart play, press the ►/   button for more than one second. |
| <b>To turn off the unit (Off mode)</b> | Push in Stop mode, or press for more than 1 second in any other mode.<br> | <b>POWER OFF</b><br>↓<br>(Blank display) |             | The power is shut off after “POWER OFF” appears on the display.<br>To turn on the unit, press the ►/   button. Then, the last track before turning off the power will be played from the beginning (Resume Play).  |

 
| Operation                    | Button   |             | Display/reference  |
|------------------------------|--|-------------|--|
| <b>Fast forward/ reverse</b> | <b>Skip function (unit)</b><br>Press during play or in Stop mode.  | Reverse<br> | <ul style="list-style-type: none"> <li>• During Random Play, the skip buttons cannot be used to skip back to tracks that were played previously in the random sequence.</li> </ul> |
|                              | <b>Search function (unit)</b><br>Keep depressed during play.   | Forward<br> |  |
|                              | <b>Skip function (remote control)</b><br>Turn to the right or left during play or in Stop mode.                |             |  |
|                              | <b>Search function (remote control)</b><br>Continuously turn to the right or left during play or in Stop mode. | Reverse<br> | Forward<br>  |

**Reinforcing the Bass Sound (A.C.BASS)**

Press the A.C.BASS button on the remote control to activate the active clear bass function.

The “BASS” indicator appears on the display. The bass level is automatically controlled in conjunction with the sound volume.


To cancel the function, press the same button again to light off the “BASS” indicator.



## Showing the Disc Information

Each time you press the DISPLAY / CHARA. (or DISPLAY) button in Stop mode or during playback, the disc information is displayed as follows.

 The DISPLAY / CHARA. button on the unit and the DISPLAY button on the remote control work independently.



### Display change on the unit:

#### In Stop mode:

Disc title\* → total track number, and total playback time of the MD → Recordable capacity (remaining time) of the MD (e.g. REMAIN -69:20) → Normal display → (back to the beginning)

#### During Playback:

Playback remaining time of the track → Normal display → (back to the beginning)

### Display change on the remote control:

#### In Stop mode:

Disc title\* → Total track number and total playback time of the MD → Track title\* → Normal display → (back to the beginning)

#### During Playback:

Track title\* → Normal display → (back to the beginning)

\*: The disc title or track title will scroll if it consists of 11 characters or more. If no title is given, "NO TITLE" appears on the display.

## Repeat Play and Random Play (Using the Remote Control)

You can select Repeat Play or Random Play. In Repeat Play, you can repeat all the tracks or individual track as many times as you like. In Random Play, you can play all the tracks in random order.

### Selecting Repeat Play and Random Play in Stop mode

In Stop mode, press the P.MODE button on the remote control. Each time you press the button, the play mode changes as follows.

◁1 → ▷ → RDM → ▷1 RDM → ▷RDM → Original display → (back to the beginning)

▷1: Repeats 1 track.

▷: Repeats all the tracks.

RDM: Random play

▷1 RDM: Repeats one track randomly selected.

▷RDM: Repeats all the tracks in random order.

(On the unit's display, "RANDOM" indicator lights up instead of "RDM".)

### After selecting one of the above modes, press the ►/|| button.

For example, to start Random Play, press the P.MODE button until "RDM" indicator appears and then press the ►/|| button.

**To exit Repeat Play or Random Play**, stop the MD and then press the P.MODE button until the display returns to the original one.

### Repeat Play during Playback

#### During Normal Play:

Each time you press the P.MODE button, the play mode changes as follows.

▷1 → ▷ → Original display → (back to the beginning)

Select "▷1" to repeatedly play the current track. Select "▷" to repeat all the tracks.

#### During Random Play:

Each time you press the P.MODE button, the play mode changes as follows.

▷1 RDM → ▷RDM → Original display → (back to the beginning)

Select "▷1 RDM" to repeatedly play a randomly selected track. Select "▷RDM" to repeat all the tracks in random order.

(On the unit's display, "RANDOM" indicator lights up instead of "RDM".)

 
**To exit Repeat Play**, stop the MD and then press the P.MODE button until the display returns to the original one.

# Selecting the Operational Options of Remote Control

## Muting a pip tone

When you press the buttons on the remote control, a pip tone is issued except for the A.C.BASS and VOLUME +, - buttons.

To **mute the pip tone**, while pressing and holding the A.C.BASS button in Stop mode or during playback, press the P.MODE button. "BEEP OFF" appears on the display.



To **resume a pip tone**, do the same operation again. "BEEP ON" will appear on the display.

## Turning off the backlight

When you press a button on the remote control, backlight illuminates on the remote control's display for 5 seconds. You can turn off the backlight to save the battery life.

To **turn off the backlight**, while pressing and holding the A.C.BASS button in Stop mode or during playback, press the DISPLAY button. "LIGHT OFF" appears on the display.




To **resume backlighting**, do the same operation again. "LIGHT ON" appears on the display. Turning off the unit will also resume backlighting.

# Preparation Before Recording

## Connection for recording

Connect one of the following music sources to the unit.

- Analog input to the LINE IN (OPTICAL) jack
- Digital input to the LINE IN (OPTICAL) jack
- Microphone input to the MIC (PLUG IN POWER) jack

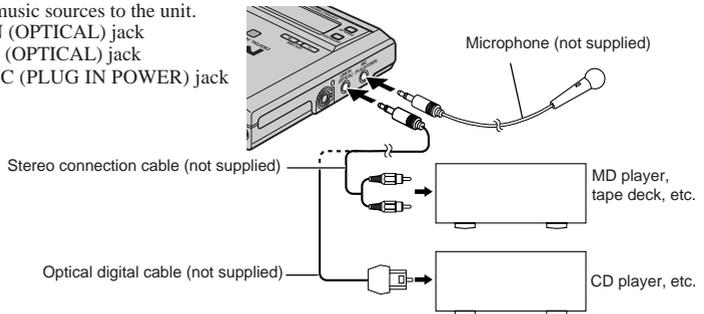


### Notes

- You cannot mix the microphone sound with the LINE IN source.
- Since the priority for each input is as follows, be sure to disconnect the other music source before recording. For example, disconnect the microphone before recording an analog input.  
Digital input (LINE IN) > MIC input > Analog input (LINE IN)
- When you make recording using the microphone, noise may occur depending on the microphone you use, if the AC adaptor is used. If this happens, use the rechargeable battery or alkaline batteries instead of the AC adaptor.


## Things to know before you start recording

- **It should be noted that it may be unlawful to re-record pre-recorded tapes, records, or discs without the consent of the owner of copyright in the sound or video recording, broadcast or cable programme and in any literary, dramatic, musical, or artistic work embodied therein.**
- Carefully read the "Rules of Digital Dubbing" on page 15.
- The MD recorder supports the following sampling frequencies for digital source, LINE IN (OPTICAL).  
32 kHz, 44.1 kHz and 48 kHz
- When recording a digital input or microphone input, the recording level is automatically set correctly. When recording an analog input, it is necessary to adjust the recording level properly. Recording is not affected by the A.C.BASS setting.
- The accidental erasure prevention knob is provided on the back of an MD cartridge to prevent accidental erasure or recording. It must be set to the close position before recording or editing.
- Remote control operation will be disabled during recording or editing.
- Unplugging or plugging of the connection cord or microphone should be avoided during recording.
- Removal of the rechargeable battery should be avoided during recording. Otherwise, you cannot open the lid unless the rechargeable battery is reinserted or AC adaptor is connected to the unit.

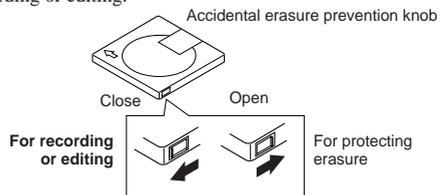

## Check Items Before Starting Recording

 - The MD is not the Play-only type one.
- The accidental erasure prevention knob of the MD cartridge is set to the close position.
- The MD has enough space for recording. If not, carry out ALL ERASE or ERASE function mentioned later to erase all the tracks or desired tracks in the MD. You can check the recordable remaining time of the MD by repeatedly pressing the DISPLAY/CHARA. button on the unit in Standby mode. (See “Showing the Disc Information” on page 5.)
- The REC MODE switch is set correctly. MONO for monaural recording, STEREO for stereo recording, and SYNCHRO for synchro recording in which recording automatically starts when an input is detected.



## Standard Recording (MONO/STEREO)

### CAUTIONS:

- Be sure that the rechargeable battery is fully charged. Otherwise, the unit may shut off, leaving recording unfinished.
- While “UTOC Writing” is displayed, do not disconnect the power source or subject the unit to the vibration to avoid incorrect recording.

### Notes

- The recording operation is possible only with the buttons on the unit.
- When a stereo signal is recorded in MONO mode, stereo sound will be heard though the signal is correctly recorded in MONO mode.

In MONO mode, the recordable time becomes two times longer than the recording time labeled on the MD.

### 1 Check the things before recording.

See “Check items before starting recording” above.

 
### 2 Insert an MD with its label side facing up.

### 3 Select the recording mode with the REC MODE switch (either MONO or STEREO).

### 4 Slide the REC switch.

The unit enters Rec/Standby mode, the REC indicator lights up, and the disc mark blinks. The track number is increased by one.

(Appears only if MONO is selected.)



- To cancel Rec/Standby mode, press the ■/CHARGE button.

### 5 Play the recording source.

### 6 Adjust the recording level for analog input only.

See “Adjusting the recording level” below.

### 7 Press the ►/|| button to start recording.

When the MD becomes full, “UTOC Writing” appears on the display, indicating that the recording is successfully completed. The “TOC” indicator will light up during this period. Then, the MD stops. (The “TOC” indicator goes out.)

To pause, press the ►/|| button. (The track number is increased by one.)

To cancel pause, press the ►/|| button again.

To stop recording, press the ■/CHARGE button. “UTOC Writing” appears on the display and then the MD stops. (The “TOC” indicator goes out.)

## Adjusting the recording level (for analog input only)

The recording level should be adjusted so that the peak level meter does not reach the OVER mark to avoid distorting the recording signal.

### Press the ◀◀ or ▶▶ buttons on the unit to decrease or increase the recording level.

You can change the recording level between “REC LEVEL 01” to “REC LEVEL 24”.

### Note

Even if the recording level is set to “REC LEVEL 01”, the input signal is recorded at a minimum level.

## Track marking

- Whenever playback at the source side advances from one track to another during digital recording, the track number of the MD is automatically incremented by 1.
- Whenever no sound at the playback side continues for 3 or more seconds during analog/digital or microphone recording, the track number of the MD is automatically incremented by 1.
- During analog/digital or microphone recording, you can increment the track number by 1 by sliding the REC button. (By adding the track number in this way, you can edit the recording contents later using the edit functions, such as erase, move, and join. Also, you can quickly locate the desired track using the fast forward or reverse button.)

## SYNCHRO Recording (SYNCHRO)

The synchro recording automatically starts when an input signal is given and ends if no signal condition continues for 30 seconds.

**1 Insert an MD with its label side facing up.**

**2 Set the REC MODE switch to SYNCHRO.**

**3 Slide the REC button.**

“SYNCHRO REC ON” appears and the “SYNC” indicator lights up on the display. Then, the disc mark blinks.

**4 Press the ►/|| button.**

The “SYNC” indicator blinks, indicating that the unit enters Rec/Standby mode.

**5 Play the recording source.**

When an input signal is detected by the unit, recording automatically starts.

The recording will automatically end if no signal condition continues for 30 seconds.

### Note

Once the ►/|| button is pressed during the SYNCHRO recording, the unit enters Rec/Pause mode and the SYNCHRO recording is disabled. To restart the SYNCHRO recording, repeat the above steps.


## Editing the MD (Using the unit)

In addition to its recording and play functions, the unit comes with editing functions. You can divide, join, move, or erase the recorded tracks in the MD as required. Also, you can give a disc title to the MD and track titles to the tracks in the MD.

**Note that you cannot edit the MD in Random Play mode.**


### Dividing tracks (DIVIDE function)

This involves adding a track mark (see Note) at some point during the track which is to be made into the start of an additional track so that the original track is divided into two tracks.

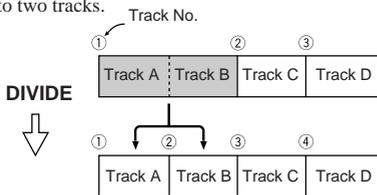


### Erasing tracks (ERASE function)

This enables unnecessary tracks. Narration, etc. to be erased speedily. The erased parts do not remain as silences but are closed up by the subsequent tracks.

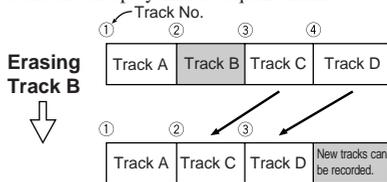


### Joining tracks (JOIN function)

This involves erasing a track mark and turning two adjoining tracks into one track.

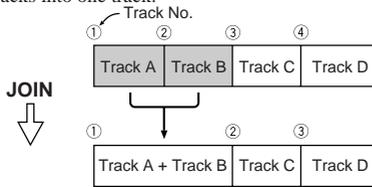


### Erasing all the tracks (ALL ERASE function)

All the tracks can be erased at once without recording fresh material over them.

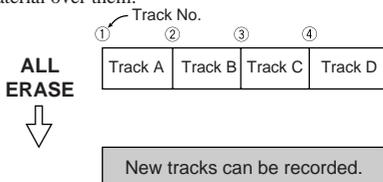

### Moving tracks (MOVE function)

Tracks can be moved around so that they are in the desired sequence.

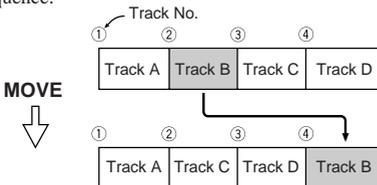

### Note

**Track marks:** These marks are provided to locate the start of each track. Whatever lies between one track mark and the next is considered to a track and the numbers of the tracks (called “track numbers”) are displayed in the sequence in which they are to be played.

 
### Giving titles to discs and tracks (TITLE function)

A title consisting of up to 64 characters can be given to a disc and a track. The title given appears in the display window.

## Dividing Tracks (DIVIDE Function)

Use the unit to carry out this function.

- 1 In Stop mode, press the EDIT/ENTER button and turn the JOG dial until “DIVIDE?” is displayed.
- 2 Press the SET button and then press the ►/II button.



- 3 Turn the JOG dial (or press the ◀◀ or ▶▶ button) to select the track number to be divided.
- 4 Press the SET button at the point where the track is to be divided.




- The recording lasting for 4 seconds starting where the track was divided is repeatedly played for your reference.
  - Movement is possible within the POSITION-128 to +128 range (about 8 seconds before or after the position). To move the point, turn the JOG dial while listening the music.
- 5 Press the EDIT/ENTER button.
- “COMPLETE” and “TOC” appear, indicating successful recording.
  - The selected track is divided into two tracks and the track number will increase by 1.
- When you turn off the power by pressing the ■/CHARGE button, “UTOC Writing” will be displayed and the edited contents are written. (The “TOC” indicator goes out.)

To cancel the operation, press the ■/CHARGE button in step 1 through 4 until the display returns to the original display.


## Joining Tracks (JOIN Function)

 Use the unit to carry out this function.

- 1 In Stop mode, press the EDIT/ENTER button and turn the JOG dial until “JOIN?” is displayed.
- 2 Press the SET button.



 - You can listen to the track by pressing the ►/II button. The selected track is repeatedly played.
- 3 Turn the JOG dial (or press the ◀◀ or ▶▶ button) to select the track number to be joined.



- 4 Press the SET button.
- “PUSH ENTER” appears.

- 5 Press the EDIT/ENTER button.

“COMPLETE” and “TOC” appear, indicating successful recording.

The selected track and the previous track are joined and the track number is decreased by 1.

- When you turn off the power by pressing the ■/CHARGE button, “UTOC Writing” will be displayed and the edited contents are written. (The “TOC” indicator goes out.)


To cancel the operation, press the ■/CHARGE button in step 1 through 4 until the display returns to the original display.

## Moving Tracks (MOVE Function)

 Use the unit to carry out this function.

1 In Stop mode, press the EDIT/ENTER button and turn the JOG dial until “MOVE?” is displayed.

2 Press the SET button.




- You can listen to the track by pressing the ►/|| button. The track to be moved is repeatedly played.

3 Turn the JOG dial (or press the ◀◀ or ▶▶ button) to select the track number to be moved.

4 Press the SET button.



 5 Turn the JOG dial (or press the ◀◀ or ▶▶ button) to select the destination to which the track is to be moved.



- If you are playing back the MD, the destination track is repeatedly played.

6 Press the SET button.

“PUSH ENTER” appears.

7 Press the EDIT/ENTER button.

“COMPLETE” and “TOC” appear, indicating successful recording.

- When you turn off the power by pressing the ■/CHARGE button, “UTOC Writing” will be displayed and the edited contents are written. (The “TOC” indicator goes out.)


**To cancel the operation,** press the ■/CHARGE button in step 1 through 6 until the display returns to the original display.

## Erasing Tracks (ERASE Function)

 Use the unit to carry out this function.

1 In Stop mode, press the EDIT/ENTER button and turn the JOG dial until “ERASE?” is displayed.

2 Press the SET button.



- You can listen to the track by pressing the ►/|| button. The track to be erased is repeatedly played.

3 Turn the JOG dial (or press the ◀◀ or ▶▶ button) to select the track number to be erased.

4 Press the SET button.

“ERASE OK? PUSH ENTER” appears.

5 Press the EDIT/ENTER button.

“COMPLETE” appears, indicating successful erasing.

The selected track is erased and the track number is decreased by 1.

- When you turn off the power by pressing the ■/CHARGE button, “UTOC Writing” will be displayed and the edited contents are written.

**To cancel the operation,** press the ■/CHARGE button in step 1 through 4 until the display returns to the original display.

## Erasing All the Tracks (ALL ERASE Function)

Use the unit to carry out this function.

1 In Stop mode, press the EDIT/ENTER button and turn the JOG dial until “ALL ERASE?” is displayed.

2 Press the SET button.

“ERASE OK? PUSH ENTER” appears.

3 Press the EDIT/ENTER button.

“COMPLETE” appears, indicating successful erasing.

All the tracks in the MD are erased and “BLANK DISC” is displayed.

- When you turn off the power by pressing the ■/CHARGE button, “UTOC Writing” will be displayed and the edited contents are written.

**To cancel the operation,** press the ■/CHARGE button in step 1 or 2.

## Giving Titles to MD (TITLE Function)

Use the unit to carry out this function.

- You can give a disc title to the MD and a track title to the tracks in the MD. Any title name can be give up to 64 characters using the provided character sets.

### 1 In Stop mode, press the EDIT/ENTER button.

“TITLE?” is displayed.

### 2 Press the SET button.



TITLE  
Track to be entitled

- You can listen to the track by pressing the ►/|| button. The track to be entitled is repeatedly played.

### 3 Turn the JOG dial (or press the ◀◀ or ▶▶ button) to select the track number to be entitled.

To select the disc title, turn the JOG dial reverse

(or press the ◀◀ button) until the following disc mark is shown on the display.



### 4 Press the SET button.

Cursor  
Title name area  
Characters to be input

### 5 Input a preferred title (up to 64 characters).

Use the following title editing buttons to input a title.

#### [Title editing buttons on the unit]

| Button                          | Function   |
|---------------------------------|--|
| <b>DISPLAY</b><br><b>CHARA.</b> | Changes the type of characters to be input as follows.<br>Upper-case letters (ABC) → Lower-case letters (abc) → Symbols (space, !) → Numbers (012) → (back to the beginning) |
|                                 | Adds the character being selected to the title name area.  |
| <b>JOG</b><br>(forward)         | Moves the cursor for the character to be input to the right. When continue turning, the characters scroll to the left.   |
| <b>JOG</b><br>(reverse)         | Moves the cursor for the character to be input to the left. When continue turning, the characters scroll to the right.   |
|                                 | Moves the cursor for the title name to the right.  |
|                                 | Moves the cursor for the title name to the left.   |

Example: When input the title “M1”

- Select “M” (put the cursor to the letter M using the JOG dial).
- Press the SET button. The letter M is now displayed in the title name area.
- Press the DISPLAY / CHARA. button until the numbers are displayed.
- Select “1” and press the SET button. The title name “M1” will be displayed.
  - If the wrong character has been input, clear it by pressing the ■/CHARGE button.
  - To clear a particular character which has been input, use the ▶▶ or ◀◀ button to align the cursor with the character, and press the ■/CHARGE button. Then, select the correct character and press the SET button.

### 6. Press the EDIT/ENTER button.

“COMPLETE” and “TOC” appear, indicating successful recording.

- When you turn off the power by pressing the ■/CHARGE button, “UTOO Writing” will be displayed and the edited contents are written. (The “TOC” indicator goes out.)

To cancel the operation, press the ■/CHARGE button in step 1 through 3 or depress it in step 4 or 5, until the display returns to the original display.

#### [Character sets table]

Upper-case letters

|   |   |   |   |   |
|---|---|---|---|---|
| A | B | C | D | E |
| F | G | H | I | J |
| K | L | M | N | O |
| P | Q | R | S | T |
| U | V | W | X | Y |
| Z |   |   |   |   |

Lower-case letters

|   |   |   |   |   |
|---|---|---|---|---|
| a | b | c | d | e |
| f | g | h | i | j |
| k | l | m | n | o |
| p | q | r | s | t |
| u | v | w | x | y |
| z |   |   |   |   |

Symbols

|         |   |   |   |    |
|---------|---|---|---|----|
| (space) | ! | " | # | \$ |
| %       | & | ' | ( | )  |
| *       | + | , | - | .  |
| /       | : | ; | < | =  |
| >       | ? | @ | - | `  |

Numbers


|   |   |   |   |   |
|---|---|---|---|---|
| 0 | 1 | 2 | 3 | 4 |
| 5 | 6 | 7 | 8 | 9 |

## Using the Unit with Optional Accessories

### Listening to MDs with an audio system

You can listen to MDs through your audio system.

- Connect a stereo connection cable (not supplied) as shown on the right after turning off the amplifier.
- Adjust the volume level of the unit to an appropriate level.
- Adjust the volume level on the amplifier.
- Use the unit's buttons for operation. (The remote control will issue a pip tone.)

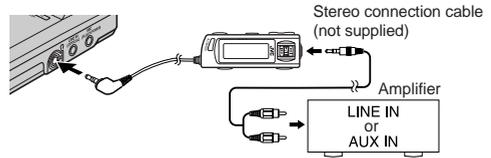

### Listening to MDs with a car audio system


You can listen to MDs through your car audio system. The following options are available for your car audio system.

- Car adaptor (CA-R553)
- Car audio cassette adaptor

#### CAUTION:

Before connecting the car adaptor, remove the rechargeable battery from the unit. Also remove the battery case.

- Connect the car adaptor to the DC input jack as shown on the right.
- Connect the car audio cassette adaptor between the remote control and the cassette slot of your car audio system.
- Adjust the volume level of the unit to an appropriate level.

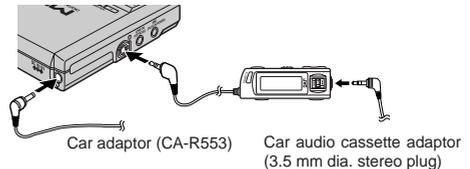

#### Notes

- Since the insertion direction of the car audio cassette adaptor is limited, be sure whether it can be inserted into the cassette slot of your car audio system.
- Depending on the vehicle used, noise may occur. In this case, it is recommended to connect a noise filter available on the market between the remote control and car audio cassette adaptor.
- If your car audio system is equipped with a LINE IN or AUX IN jack, you can connect the output of the remote control to the jack using a stereo mini plug signal cord (not supplied). In this case, you do not need the optional car audio cassette adaptor.

## Cautions

### Batteries

- Before replacing batteries, always turn off the unit.

#### Rechargeable lithium-ion battery (BN-R3610):

- Use only the rechargeable battery (BN-R3610) supplied with the unit.
- If the power delivered by the battery lasts for a very short time after recharging, it means that the battery's service life is over. Do not use it any more.
- Recharging already charged battery will shorten its service life.
- When recharging battery for the first time or when it has not been used for a long period of time, the play time may be shorter than usual. In a case like this, repeatedly recharge and discharge the battery. This will restore it to its regular state.
- Do not allow any metal objects to touch the terminals of rechargeable battery since this may cause short-circuiting which is dangerous.
- Recharging shall be made at the temperature from 0°C to 40°C.

#### Dry cell battery and rechargeable battery:

To prevent damage to the batteries and electrolyte leakage, heed the following points.

- Align the ⊕ and ⊖ polarities properly when inserting the batteries.
- Remove the batteries if you do not plan to use the unit for a long period of time.
- Do not throw batteries into a fire, and do not short-circuit, disassemble or subject them to excessive heat.
- Do not attempt to recharge dry cell batteries.

### Carrying batteries:

When putting dry cell or rechargeable battery in a pocket or bag, ensure that no other metal objects such as a necklace are placed together with them. Contact with metal may cause short-circuiting which, in turn, may cause a fire.

**Notice about the rechargeable battery.**  
**The battery is designated recyclable.**  
**Please follow your local recycling regulations.**

## AC adaptor

---

- Handle the AC adaptor carefully. Improper handling is dangerous.
  - Do not touch it with wet hands.
  - Do not place heavy objects on top of it.
  - Do not forcibly bend it.
- Be sure to connect only the AC adaptor provided with the unit.
- Disconnect the AC adaptor from the power outlet if the unit is not going to be used for a long time.

## Unit

---

### No altering or remodelling

This can cause malfunctioning.

### No dropping or strong impacts

This may damage the unit.

### Locations to be avoided

Avoid using the unit in the following locations since they can cause malfunctioning.

1. Bathrooms and other moisture-prone places.
2. Warehouses and other dusty places.
3. Very hot places near heating appliances, etc.

### Do not leave the unit exposed to direct sunlight for long periods of time

This may deform or discolor the cabinet and may also cause malfunctioning.

## Precautions for Listening with the headphones

---

- Do not play your headset at a high volume. Hearing experts advise against continuous extended play.
- If you experience a ringing in your ears, reduce volume or discontinue use.
- Do not use while operating a motorized vehicle. It may create traffic hazard and is illegal in many areas.
- You should use extreme caution or temporarily discontinue use in potentially hazardous situations.
- Even if your headphones is an open-air type designed to let you hear outside sounds, don't turn up the volume so high that you can't hear what's around you.

## When driving a car

---

In the interest of traffic safety, do not operate the unit while driving.

## Information on MDs (Minidiscs)

This is a new digital audio disc format: it has a diameter of 64 mm and enables up to 80 minutes of playback and recording.

### The cartridge

The diameter of the disc itself is 64 mm, smaller than a CD single. The disc sits inside a 68 × 72 mm cartridge, which also being pocket size, makes minidiscs extremely handy for carrying and storage. Since the disc is protected by the cartridge, dust and dirt cannot easily get into it. And thanks to a shutter which is closed at all times except during use, there is no need to worry about scratches or finger marks, making the handling of minidiscs very simple.

### Two types of minidisc

There are two types of minidisc, "recordable MDs" and "playback-only MDs." The playback method for each is the same: a laser irradiates the disc and the signal is read from the beam which comes back. However, the recording method for each type is different.

### Playback-only MD


This is the type used for commercially-available pre-recorded MDs, on which recording cannot be done. Like a CD, data is recorded based on the presence or absence of small indentations called pits. A disc recorded with this format is called an "optical disc."

### Recordable MDs

These are the so-called "blank" MDs you can use to make your own recordings. Data is recorded by magnetism, which is easily processed, so that recording can be done again and again. By using a laser to heat the disc, the magnetism is erased and the magnetic head records the new data. Discs with this type of recording method are called magneto-optical (MO) discs.

## ATRAC (Adaptive Transform Acoustic Coding)

Within recordings, there are sounds which cannot be readily heard. For example, as the volume decreases, high-pitched sounds and low-pitched sounds become difficult to hear. Also, if a quiet sound comes at the same time as or just after a loud sound, it will not be heard. With minidiscs, data is compressed using a technology called ATRAC (Adaptive Transform Acoustic Coding) which selectively chooses sounds based on human sense of hearing characteristics. With this technology, the recorded data is about one-fifth the volume of the original data, allowing it to fit on a compact minidisc.

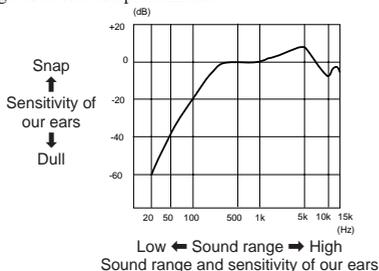

## Sound skip guard memory

With the minidisc, the data of the track being played can be temporarily stored up using a function called "sound skip guard memory". Even when data cannot be collected properly from the disc due to shaking or vibrations, information is stored in the "sound skip guard memory", so that there is no break in the sound which is actually delivered.

## UTOC (User Table Of Contents)

In a minidisc, apart from the recorded tracks, there is the "UTOC". In this area, information such as the position where each track is recorded, the track divisions, and track order are listed. When music search is done, the UTOC is consulted, and the tracks are quickly found and played back. When editing is done, only the UTOC is changed, so there is no need to re-record the tracks.

## MD (Minidisc) Messages

| Message                      | Meaning/Action   |
|------------------------------|--|
| <b>BLANK DISC</b>            | A disc has been inserted with nothing recorded on it.  |
| <b>CANNOT JOIN</b>           | You have tried to join tracks which cannot be joined.  |
| <b>DISC ERROR</b>            | There is a problem (damage) with the disc.<br>(Replace the disc.)  |
| <b>DISC FULL</b>             | There is not enough space left on the disc.<br>There are over 254 tracks.  |
| <b>DISC PROTECTED</b>        | The disc is in accidental erasure protection mode.<br>(Slide the accidental erasure protection tab so that the hole is covered.) |
| <b>EMERGENCY STOP</b>        | A malfunction occurred during recording.<br>(Stop the disc by pressing the ■ button and redo the operation.)                     |
| <b>NO DISC</b>               | There is no disc in the unit.  |
| <b>NON AUDIO CANNOT COPY</b> | You have tried to digitally dub a CD-ROM.<br>(Stop recording.)   |
| <b>PLAYBACK DISC</b>         | You have tried to record or edit on a playback-only disc.  |
| <b>TRACK PROTECTED</b>       | The track is protected. (This unit cannot undo track protection. Undo the protection using the appliance that created it.)       |
| <b>SCMS CANNOT COPY</b>      | You have tried to make a copy of a copy by digital dubbing.<br>(Dub using analog input (LINE IN).)                               |
| <b>DIGITAL IN UNLOCK</b>     | The digital cable is disconnected.   |
| <b>BATT ERROR</b>            | The life of battery has ended.   |
| <b>HIGH TEMP LOW TEMP</b>    | The temperature of rechargeable battery is out of acceptable range.  |

## Minidisc Limitations

The minidisc records information in an original format that differs from that of conventional cassette tapes or DATs. Since there are some limitations with this recording format, the following types of conditions may arise. These conditions are not malfunctions.

| Condition  | Cause  |
|--|--|
| “DISC FULL” is displayed, even though the possible recording time is not used up.  | With the minidisc, there is a maximum number of tracks which can be recorded, regardless of time. More than 254 tracks cannot be recorded on a disc.   |
| “DISC FULL” is displayed, even though the number of tracks and recording time are not at the limit.                                    | When parts of the disc are erased and re-recorded, blank spots are created on the disc. When recording to such a disc, one track of data is divided and recorded in the blank areas. During recording, when these divided parts become numerous, the “DISC FULL” message may be displayed. When a part of 8 seconds or less is created by division, that track cannot be joined by the JOIN function, and even if it is erased, the remaining usable time on the disc does not increase. Tracks divided into small pieces may skip when fast forward or fast rewind is done. |
| The JOIN function sometimes does not work.   |  |
| The remaining usable time on the disc does not increase even when tracks are erased.   |  |
| The sound skip during fast forward or fast rewind.   |  |
| The amount of recorded time on the disc added to the amount of remaining time falls short of the disc’s total possible recording time. | Minidiscs must have at least 2 seconds of continuous space in order to record. For this reason, the actual recording time of discs with a lot of short blank areas becomes shorter.  |

## Rules of Digital Dubbing

The following rules regarding copyright exist for dubbing to MDs from CDs or DATs through digital terminals.

### SCMS (Serial Copy Management System)

Minidiscs can record clear sound with low loss of quality from CDs or DATs through each component’s digital input/output terminal. However, minidiscs are set up so that a disc recorded in this way cannot be recorded onto another minidisc through digital input/output terminals. In other words, you can not make a copy of a copy. This rule is called SCMS (Serial Copy Management System).

The recorder is designed in compliance with this rule. If you try to make a copy of a copy the error message “SCMS CANNOT COPY” is displayed, and dubbing can not be done.



It should be noted that it may be unlawful to re-record pre-recorded tapes, records, or discs without the consent of the owner of copyright in the sound or video recording, broadcast or cable programme and in any literary, dramatic, musical, or artistic work embodied therein.

## Maintenance

### Unit:

Wipe the unit and remote control with a soft cloth. Remove stubborn dirt using a cloth which has been dipped in water or soapy water and wrung out, and then wipe dry.

- If you intend to use a chemically treated cleaning cloth, read its directions first.
- Do not use alcohol or paint thinners.

### MDs:

If the MD cartridge is dirty, wipe it with a damp cloth and then wipe dry.

When storing MDs, avoid locations which are

- Exposed to direct sunlight.
- Susceptible to high levels of humidity or dust.
- Directly exposed to heat from a heating appliance.
- On top of a car dashboard or near the rear window.

Handling the MDs

- Do not open the shutter. The shutter is usually locked to prevent opening. Do not force to open it or the disc may be destroyed.



## Troubleshooting Guide

Before requesting service for this unit, check the chart below for a possible cause of the problem you are experiencing. Some simple checks or a minor adjustment on your part may eliminate the problem and restore proper operation. If you are in doubt about some of the check points, or if the remedies indicated in the chart do not solve the problem, refer to the directory of Authorized Service Centers (enclosed with this unit) to locate a convenient service center, or consult your dealer for instructions.

| Problem                            | Check this  |
|------------------------------------|---|
| Cannot operate.                    | Is the MD loaded? If not loaded, "NO DISC" will appear.   |
| Cannot play the MD.                | <ul style="list-style-type: none"> <li>• Is the HOLD switch released?</li> <li>• Is the battery low?</li> <li>• Is the MD faulty? (Play other MD.)</li> <li>• Is there moisture condensation on the lens?<br/>(Wait for about an hour and then try again.)</li> </ul> |
| Tracks on MD do not play in order. | Is the Repeat Play or Random Play selected?   |
| Recording cannot be made on MD.    | Is the accidental erasure prevention knob of the MD set to the open position? (Set it to the close position.)   |
| Cannot hear music—too noisy.       | <ul style="list-style-type: none"> <li>• Is the headphones plug inserted all the way?</li> <li>• Is the plug dirty? (Wipe away dirt on the plug.)</li> <li>• Is music recorded on the MD? If not, "BLANK DISC" will appear.</li> </ul>                                |
| TV picture is distorted.           | Is the unit too near a TV or tuner? (If the TV or tuner is connected to a simple indoor antenna, connect it to an outdoor antenna.)   |
| Power is not turned on.            | Was the power source removed from the unit with the HOLD switches activated? (Release both HOLD switches and try to operate again.)   |

## Specifications

### Portable minidisc recorder

Type : Minidisc digital audio system  
 Sampling frequency : 44.1 kHz  
 Compression / expansion method : ATRAC method  
 Number of channels: : 2 channels (stereo) / 1 channel (mono)  
 Frequency response : 20 Hz to 20,000 Hz  
 Wow & flutter : Unmeasurable  
 Input : LINE IN: 100 mV / 47 kohms,  
 OPTICAL: -23 to -14 dBm,  
 (\*Same jack is used for LINE IN and OPTICAL)  
 MIC: 1.3 mV / 200 ohms to 2 kohms  
 Output : Headphones (3.5 mm dia. stereo × 1)  
 5 mW / ch at 10% THD / 16 ohms to 47 kohms

Power requirements : DC 3.6 V (rechargeable battery), DC 4.5 V (R6 size battery × 3), DC IN 6 V  
 Dimensions : 81.7 × 19.5 × 88.9 mm  
 (W × H × D) (excluding buttons and controls)  
 Mass : Approx. 155 g (without battery)  
**AC adaptor (AA-R554)**  
 Input power source : AC 230 V, 50 Hz  
 Output voltage : DC 6 V, 0.6 A

*Design and specifications are subject to change without notice.  
 US and foreign patents licensed from Dolby Laboratories Licensing Corporation.*

Duration of battery :

|   | When Playing back | When recording |
|---|-------------------|----------------|
| Rechargeable battery (BN-R3610)           | 10 hours          | 5 hours        |
| Alkaline batteries (LR6-Panasonic)        | 25 hours          | 12 hours       |
| Rechargeable battery + Alkaline batteries | 38 hours          | 18 hours       |

\* Above duration may differ depending on the ambient temperature and conditions.

\* A rechargeable battery (BN-R3610) is charged for 2 hours.



# JVC

VICTOR COMPANY OF JAPAN, LIMITED