

Model WC213H



ONE (1) YEAR LIMITED WARRANTY

EURO-PRO Operating LLC warrants this product to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase, when utilized for normal household use, subject to the following conditions, exclusions and exceptions. If your appliance fails to operate properly while in use under normal household conditions within the warranty period, return the complete appliance and accessories, freight prepaid to:

U.S.: **EURO-PRO Operating LLC**, 94 Main Mill Street, Door 16, Plattsburgh, NY 12901
Canada: **EURO-PRO Operating LLC**, 4400 Bois Franc, St. Laurent, QC H4S 1A7

If the appliance is found to be defective in material or workmanship, **EURO-PRO Operating LLC** will repair or replace it free of charge. Proof of purchase date and \$ 14.95 to cover the cost of return shipping and handling must be included. *

Non-durable parts and electrical parts which normally require replacement are specifically excluded from warranty.

The liability of **EURO-PRO Operating LLC** is limited solely to the cost of the repair or replacement of the unit at our option. This warranty does not cover normal wear of parts and does not apply to any unit that has been tampered with or used for commercial purposes. This limited warranty does not cover damage caused by misuse, abuse, negligent handling or damage due to faulty packaging or mishandling in transit. This warranty does not cover damage or defects caused by or resulting from damages from shipping or repairs, service or alterations to the product or any of its parts, which have been performed by a repair person not authorized by **EURO-PRO Operating LLC**.

This warranty is extended to the original purchaser of the unit and excludes all other legal and/or conventional warranties. The responsibility of **EURO-PRO Operating LLC** if any, is limited to the specific obligations expressly assumed by it under the terms of the limited warranty. **In no event is EURO-PRO Operating LLC** liable for incidental or consequential damages of any nature whatsoever. Some states do not permit the exclusion or limitation of incidental or consequential damages, so the above may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state or from province to province.

***Important: Carefully pack item to avoid damage in shipping. Be sure to include proof of purchase date and to attach tag to item before packing with your name, complete address and phone number with a note giving purchase information, model number and what you believe is the problem with item. We recommend you insure the package (as damage in shipping is not covered by your warranty). Mark the outside of your package "ATTENTION CUSTOMER SERVICE". We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.**



REGISTRATION CARD

Please fill out and mail the product registration card within ten (10) days of purchase. The registration will enable us to contact you in the unlikely event of a product safety notification. By returning this card you acknowledge to have read and understood the instructions for use, and warnings set forth in the accompanying instructions.

Return to: EURO-PRO Operating LLC, 94 Main Mill Street, Door 16, Plattsburgh, N.Y., 12901

Model WC213H

Appliance model

Date purchased

Name of store

Owner's name

Address

City

State

Zip Code

Bravetti™

PLATINUM PRO

Wine Bottle Chiller

OWNER'S MANUAL

Model WC213H
120V., 60Hz., 1.2 Amps



EURO-PRO Operating LLC
94 Main Mill Street, Door 16
Plattsburgh, NY 12901
Tel.: 1 (800)-798-7398



IMPORTANT SAFETY INSTRUCTIONS

When using your **Wine Bottle Chiller** basic safety precautions should always be observed, including the following:


1. Read all instructions before using your **Wine Bottle Chiller**.
2. To protect against fire, electric shock and injury to persons, do not immerse cord, plugs, or Wine Chiller in water or other liquid.
3. Close supervision is necessary when any appliance is used by or near children. This appliance is **not** for use by children.
4. **Do not** let cord hang over edge of table or counter, or touch hot surfaces.
5. To avoid electric shock, **do not** open the housing. There are no serviceable parts
6. **Do not** operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been dropped or damaged in any manner. Return appliance to **EURO-PRO Operating LLC** for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
8. **Do not** place in a refrigerator.
9. **Do not** place on or near a hot gas or electric burner or in a heated oven.
10. Insert the power cord into the electrical wall outlet first and then insert the jack into the unit.
11. To disconnect, first remove the jack from the unit and then remove the plug from the electrical wall outlet. Always hold the plug, and never pull the cord. **Do not** abuse the adapter cord. Never carry the adapter by the cord or yank to disconnect from an electrical outlet.
12. **Do not** use adapter with an extension cord. Plug adapter plug directly into an electrical outlet. Use adapter only in a standard (120V., 60Hz) electrical outlet.
13. Unplug from outlet when not in use.
14. Keep adapter away from heated surfaces.
15. **Do not** handle plug or appliance with wet hands.
16. Never add water to the wine chiller.
17. **Do not** use this appliance outdoors.
18. **Do not** use this appliance for other than intended use.
19. Always use the appliance on a dry, level surface.
20. When operating the wine chiller, keep at least 2 inches of free space on all sides of the wine chiller to allow for adequate air circulation.
21. **Do not** put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair and anything that may reduce air flow.
22. **Do not** operate the unit dry.
23. **Do not** place your hands in the wine chiller while the appliance is operating.
24. **Do not** attempt to use the adapter with any other. **Use only adapter supplied with this appliance.**

SAVE THESE INSTRUCTIONS

For Household Use Only

Getting To Know Your Wine Bottle Chiller

1. Main Unit
2. Bottle Compartment
3. Power "On" Light
4. Air Intake
5. Air Vent
6. AC Power Inlet Socket
7. AC Jack
8. Adapter
9. Plug

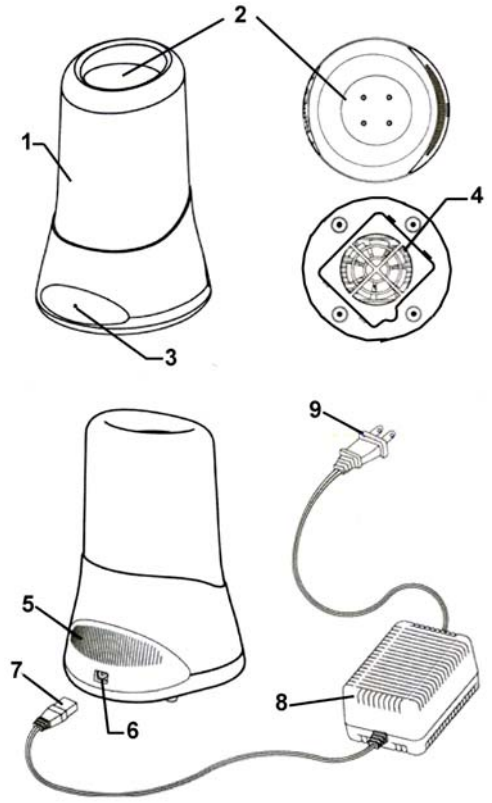

Technical Specifications

Voltage: 120V., 60Hz.

Power: 1.2 Amps

NOTE: *Illustrations may vary from actual product

OPERATING INSTRUCTIONS

Using your wine bottle chiller

1. Remove all packaging materials from unit.
2. Wipe clean with a damp cloth.
3. Insert the plug into an electrical wall outlet.
4. Insert the AC jack into the power inlet at the back of the unit. Make sure that the jack is inserted with the channel side down.
5. The power "On" light (blue) will light up.
6. Place the unit on a flat surface. Do not place the unit on any cloth, paper or plastic bag that might block the air intake on the bottom of the unit.
7. Insert the bottle of wine into the bottle compartment.
8. When wine has cooled, remove from the unit.
9. Remove the jack from the unit first and then the plug from the electrical outlet.

Cleaning and Maintenance

Before cleaning the wine bottle chiller, ensure that the adapter is unplugged from both the appliance and the electrical outlet.

To clean, simply wipe the inside and the outside with a clean, damp cloth. Once clean, dry thoroughly.

NOTE: Do not use outdoors. Household use only.