

Rotating Wine Chiller

deni[®]

Model #4910

IMPORTANT!

Please keep these instructions and
your original box packaging.

www.deni.com



***INSTRUCTIONS
FOR PROPER USE AND CARE***

IMPORTANT SAFEGUARDS

When using this electrical appliance, safety precautions should always be observed, including the following:


■ READ ALL OF THE INSTRUCTIONS.

- Do not use outdoors or on a wet surface.
- Close supervision is necessary when used near children.
- Place the Wine Chiller securely in the center of the counter or work space.
- Use only as described in this manual with provided attachments. The use of accessory attachments not recommended by manufacturer may cause injury.
- Do not use with damaged cord or plug. If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to Keystone Manufacturing Company, Inc. for proper service and replacement or repair.
- Do not do the following: pull or carry by the cord, use cord as a handle, close a door on cord, pull cord around sharp edges or corners, let cord hang over edge of counter, operate appliance over cord. Keep cord away from heated surface.
- Do not place near hot gas, electric burner or in a heated oven.
- To protect against risk of electrical shock, do not place cord, plug or cooling bucket in water or any other liquid.
- Always unplug when not in use and before cleaning.
- Turn the unit OFF before unplugging. Unit must be OFF before plugging into wall outlet.
- Do not use an extension cord with this unit.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- This appliance must have chilled water or ice in it during use. Never use without water or ice.
- Always unplug the unit before attempting to move it.
- This unit is recommended for household, indoor use only.

SAVE THESE INSTRUCTIONS

Rotating Wine Chiller

FEATURES

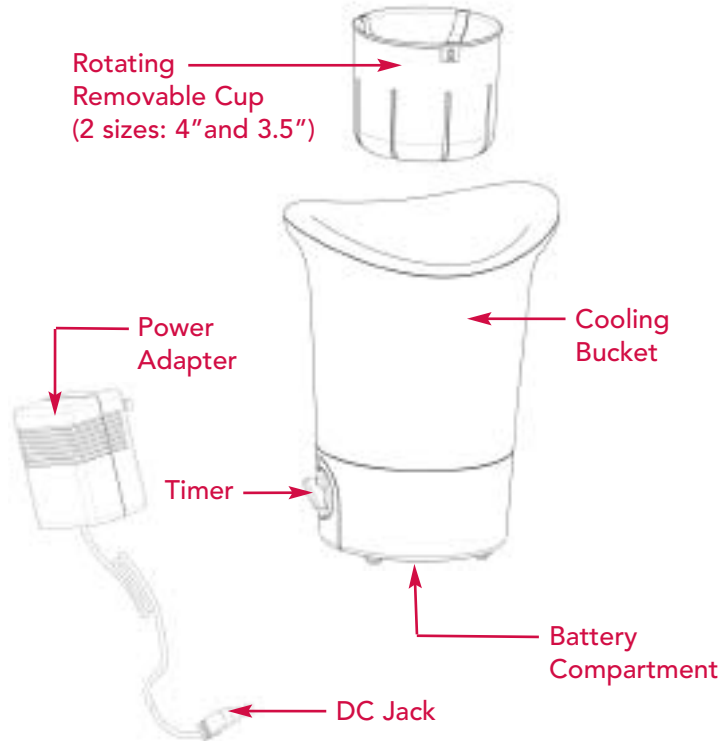

BEFORE FIRST USE

1. Remove all packing materials and literature.
2. Wash the removable cups in warm soapy water. Rinse well and dry thoroughly.
3. Wipe interior and exterior surfaces of the cooling bucket with a soft, clean, damp cloth. **DO NOT IMMERSE THE COOLING BUCKET, CORD OR PLUG IN WATER OR ANY OTHER LIQUID.**

HOW TO OPERATE

1. Select the correct size cup for the bottle you are chilling. Place the cup into the cooling bucket, lining it up with the 3 notches on the bottom of the bucket. Turn the cup clockwise to lock into place. The small cup is for bottles with a 3 - 3.5 inch diameter. The large cup is for bottles with a 3.5 - 4 inch diameter.
2. Insert 4 AA batteries (not included) or plug the unit in. If using batteries, be sure they are positioned correctly.
3. Put the bottle to be cooled inside the cup.
4. Fill the cooling bucket with chilled water or crushed ice; up to the water level mark on the inside of the bucket.

5. Turn the timer clockwise to the desired position.
NOTE: 15 minutes is normally enough time to chill a large bottle of wine.
6. Once the timer has been set, the cup will begin to rotate in one direction and then the other. Multi-colored lights will illuminate the water, creating an entertaining atmosphere.
7. Once the time has run out, the cup will stop rotating and the lights will go out.

TO CLEAN:

1. Always be sure the power adapter is disconnected from the wall and the DC jack is removed from the unit before cleaning. NEVER let the power cord get wet!
2. Empty the water or ice from the cooling bucket. Remove the cup and wipe the inside of the cooling bucket with a damp cloth.
Note: A light non-abrasive cleaner can be used to clean the cooling bucket, but the surface must be wiped clean with a damp cloth before drying.
3. Dry the removable cup thoroughly.
4. Always remove the batteries if the unit will not be used for a long period of time. This will prevent them from leaking and corroding the contacts.

CUSTOMER SERVICE

If you have any questions or problems regarding the operation of your Deni Rotating Wine Chiller, call our customer service department toll free:

Monday through Friday
8:30 a.m. to 5:00 p.m.
(Eastern Standard Time)
1-800-DENI-822
or email us at
custserv@deni.com

Visit our website at
www.deni.com

Deni by Keystone Manufacturing Company, Inc.®

ONE-YEAR LIMITED WARRANTY

Your Deni Rotating Wine Chiller is warranted for one year from date of purchase or receipt against all defects in material and workmanship. Should your appliance prove defective within one year from date of purchase or receipt, return the unit, freight prepaid, along with an explanation of the claim. If purchased in the U.S.A. or other country, please send to: Keystone Manufacturing Company, Inc., 33 Norris Street, Buffalo, NY 14207. If purchased in Canada, please send to: Keystone Manufacturing Company, Inc., 151 Cushman Road, St. Catharines, Ontario L2M 6T4. (Please package your appliance carefully in its original box and packing material to avoid damage in transit. Keystone is not responsible for any damage caused to the appliance in return shipment.) Under this warranty, Keystone Manufacturing Company, Inc. undertakes to repair or replace any parts found to be defective.

This warranty is only valid if the appliance is used solely for household purposes in accordance with the instructions. This warranty is invalid if the unit is connected to an unsuitable electrical supply, or dismantled or interfered with in any way or damaged through misuse.

We ask that you kindly fill in the details on your warranty card and return it within one week from date of purchase or receipt.

This warranty gives you specific legal rights. You may also have other rights which vary from state to state or province to province.