



user manual

Fridge Freezer

ENA34835W

Electrolux. Thinking of you.

Share more of our thinking at www.electrolux.com

CONTENTS

Safety information	2	Helpful hints and tips	15
Control panel	4	Care and cleaning	16
First use	7	What to do if...	17
Daily use	7	Technical data	19
How to use the water dispenser with BRITA		Installation	19
MAXTRA filter cartridge	9	Environmental concerns	22

Subject to change without notice



SAFETY INFORMATION

In the interest of your safety and to ensure the correct use, before installing and first using the appliance, read this user manual carefully, including its hints and warnings. To avoid unnecessary mistakes and accidents, it is important to ensure that all people using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and make sure that they remain with the appliance if it is moved or sold, so that everyone using it through its life will be properly informed on appliance use and safety.

For the safety of life and property keep the precautions of these user's instructions as the manufacturer is not responsible for damages caused by omission.

Children and vulnerable people safety

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
Children should be supervised to ensure that they do not play with the appliance.
- Keep all packaging well away from children. There is risk of suffocation.
- If you are discarding the appliance pull the plug out of the socket, cut the connection cable (as close to the appliance as you can) and remove the door to prevent playing children to suffer electric shock or to close themselves into it.
- If this appliance featuring magnetic door seals is to replace an older appliance


having a spring lock (latch) on the door or lid, be sure to make that spring lock unusable before you discard the old appliance. This will prevent it from becoming a death trap for a child.

General safety**Warning!**

Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

- The appliance is intended for keeping foodstuff and/or beverages in a normal household as explained in this instruction booklet.
- Do not use a mechanical device or any artificial means to speed up the thawing process.
- Do not use other electrical appliances (such as ice cream makers) inside of refrigerating appliances, unless they are approved for this purpose by the manufacturer.
- Do not damage the refrigerant circuit.
- The refrigerant isobutane (R600a) is contained within the refrigerant circuit of the appliance, a natural gas with a high level of environmental compatibility, which is nevertheless flammable.
During transportation and installation of the appliance, be certain that none of the components of the refrigerant circuit become damaged.
If the refrigerant circuit should become damaged:
 - avoid open flames and sources of ignition

- thoroughly ventilate the room in which the appliance is situated
- It is dangerous to alter the specifications or modify this product in any way. Any damage to the cord may cause a short-circuit, fire and/or electric shock.

 **Warning!** Any electrical component (power cord, plug, compressor) must be replaced by a certified service agent or qualified service personnel to avoid hazard.

1. Power cord must not be lengthened.
 2. Make sure that the power plug is not squashed or damaged by the back of the appliance. A squashed or damaged power plug may overheat and cause a fire.
 3. Make sure that you can come to the mains plug of the appliance.
 4. Do not pull the mains cable.
 5. If the power plug socket is loose, do not insert the power plug. There is a risk of electric shock or fire.
 6. You must not operate the appliance without the lamp cover¹⁾ of interior lighting.
- This appliance is heavy. Care should be taken when moving it.
 - Do not remove nor touch items from the freezer compartment if your hands are damp/wet, as this could cause skin abrasions or frost/freezer burns.
 - Avoid prolonged exposure of the appliance to direct sunlight.
 - Bulb lamps²⁾ used in this appliance are special purpose lamps selected for household appliances use only. They are not suitable for household room illumination.

Daily Use

- Do not put hot pot on the plastic parts in the appliance.
- Do not store flammable gas and liquid in the appliance, because they may explode.
- Do not place food products directly against the air outlet on the rear wall.³⁾

- Frozen food must not be re-frozen once it has been thawed out.
- Store pre-packed frozen food in accordance with the frozen food manufacturer's instructions.
- Appliance's manufacturers storage recommendations should be strictly adhered to. Refer to relevant instructions.
- Do not place carbonated or fizzy drinks in the freezer compartment as it creates pressure on the container, which may cause it to explode, resulting in damage to the appliance.
- Ice lollies can cause frost burns if consumed straight from the appliance.

Care and cleaning

- Before maintenance, switch off the appliance and disconnect the mains plug from the mains socket.
- Do not clean the appliance with metal objects.
- Do not use sharp objects to remove frost from the appliance. Use a plastic scraper.
- Regularly examine the drain in the refrigerator for defrosted water. If necessary, clean the drain. If the drain is blocked, water will collect in the bottom of the appliance.

Installation

Important! For electrical connection carefully follow the instructions given in specific paragraphs.

- Unpack the appliance and check if there are damages on it. Do not connect the appliance if it is damaged. Report possible damages immediately to the place you bought it. In that case retain packing.
- It is advisable to wait at least four hours before connecting the appliance to allow the oil to flow back in the compressor.
- Adequate air circulation should be around the appliance, lacking this leads to overheating. To achieve sufficient ventilation follow the instructions relevant to installation.
- Wherever possible the back of the product should be against a wall to avoid touching or catching warm parts (com-

1) If the lamp cover is foreseen.

2) If the lamp is foreseen.

3) If the appliance is Frost Free.

pressor, condenser) to prevent possible burn.

- The appliance must not be located close to radiators or cookers.
- Make sure that the mains plug is accessible after the installation of the appliance.
- Connect to potable water supply only. 4)

Service


- Any electrical work required to do the servicing of the appliance should be carried out by a qualified electrician or competent person.
- Do not remove the LED light cover. Contact the nearest After Sales Service Force to replace the LED light board, if it is necessary.
- This product must be serviced by an authorized Service Centre, and only genuine spare parts must be used.

Environment Protection



This appliance does not contain gasses which could damage the ozone layer, in either its refrigerant circuit or insulation materials. The appliance shall not be discarded together with the urban refuse and rubbish. The insulation foam contains flammable gases: the appliance shall be disposed according to the applicable regulations to obtain from your local authorities. Avoid damaging the cooling unit, especially at the rear near the heat exchanger. The materials used on this appliance marked by the symbol ♻ are recyclable.

CONTROL PANEL

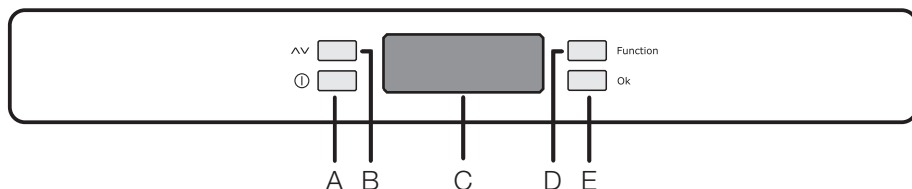

A - Appliance button ON/OFF


B - Temperature regulation button

C - Temperature and function indicator

D - Function button

E - Confirmation button

Display

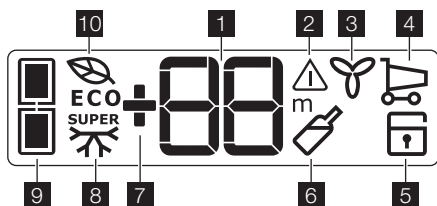

1 Temperature indicator.

2 Excessive temperature alarm.

3 FreeStore function indicator.

4 Shopping function indicator.

6 Timer function indicator.

7 Positive or negative temperature indicator.

8 Action Freeze function indicator.

9 Compartment indicator.



4) If a water connection is foreseen.

5 Child Lock function indicator.

First switch on

After plugging the plug into the power outlet, if the display is not illuminated, press key (A), appliance on.

As soon as the appliance is turned on, it is in alarm condition, the temperature flashes and you will hear a buzzer.

Press key (E) and the buzzer will go off (also see the section on "excessive temperature alarm") the icon  still flashes and on the indicator  will appear the warmest temperature reached.

For a correct storage of the food select the Eco mode function that guarantee the following temperatures are set:

+5°C in the fridge

-18°C in the freezer

- Wait until the inside compartment temperature reach -18°C, before introducing the goods in the freezer compartment.
- To select a different temperature see "Temperature regulation".

Switching off

The appliance is shut off by pressing key (A) for more than 1 second.


During this, a countdown of the temperature from -3 -2 -1 will be shown.

Functions Menu


By activating the key (D) the functions menu is operating. Each function could be confirmed by pressing button (E). If there is no confirmation after some seconds the display will go out from the menu and return in normal condition.


The following functions are indicated:


 Select the fridge compartment


 Select the freezer compartment

 Eco Mode function

 FreeStore function

 Shopping function

 Child Lock function

 Drinks Chill function

 Action Freeze function

Temperature regulation

Press the key (D) to select the compartment and than the key (B) to set the necessary temperature.

10 Eco Mode function indicator.

Press the key (E) to confirm the selection. The temperature indicator shows the set temperature. The set temperature will be reached within 24 hours.

Holiday Function "H"

The holiday function sets the temperature at + 15°C.


This function allows you to keep the refrigerator shut and empty during a long holiday period (e. g. the summer holidays) without the formation of a bad smell.

To turn on the holiday function operate as per modify the selected temperature. The temperature indicator can modify the displayed temperature up to + 8 °C, 1 °at a tim. + 2 °C will be followed by the letter "H". Press key E to confirm.


Now the refrigerator is in the "holiday "function in the energy- saving mode.

Important! The fridge compartment must be empty with holiday function on.

Child Lock Function

The Child Lock function is activated by pressing key (D) (several times if necessary) until the corresponding icon appears . You must confirm the choice by pressing key (E) within few seconds. You will hear the buzzer and the icon remains lighted. In this condition any possible operation through the keys does not cause any change as long as this function is activated. It is possible to de-activate the function at any time by pressing key (D) until the corresponding icon will flash and then key (E).

Shopping Function

If you need to insert a large amount of warm food, for example after doing the grocery shopping, we suggest activating the Shopping function to chill the products more rapidly and to avoid warming the other food which is already in the refrigerator. The Shopping function is activated by pressing key (D) (several times if necessary) until the corresponding icon appears . You must confirm the choice by pressing key (E) within few seconds. You will hear the buzzer and the icon remains lighted.

The Shopping function shuts off automatically after approximately 6 hours. It is possible to de-activate the function at any time by pressing key (D) until the corresponding icon will flash and then key (E).

Eco Mode Function

Press the key (D) (several times if necessary) until the corresponding icon appears .

Press the key (E) to confirm the selection. You will hear the buzzer and the icon remains lighted.

In this condition the temperatures are automatically set (+ 5°C and - 18°C), in the best conditions for storing food.

Set a different temperature in one of the compartment to switch off the function.

FreeStore Function

Press the key (D) (several times if necessary) until the corresponding icon appears .

Press the key (E) to confirm the selection. You will hear the buzzer and the icon remains lighted.

Important! If the function is activated automatically the FreeStore icon is not shown (refer to "Daily use").


The activation of the FreeStore function increase the energy consumption.

Action Freeze Function

The freezer compartment is suitable for long term storage of commercially frozen and deep-frozen food, and for freezing fresh food.


The maximum quantity of foods to freeze in 24 hours is shown on the rating plate.

To freeze the amount of food indicated on the rating plate, place the food directly in touch with the cooling surface (remove the drawer or basket). In case the food is frozen inside the drawers or baskets, the maximum quantity is slightly reduced.


To freeze fresh foods, you will need to activate the Action Freeze function. Press key (D) (several times if necessary) until  indicator appears.

You must confirm the choice by pressing key (E) within few seconds. You will hear the buzzer and on the display will appear some animation with lines.


After a pre-cooling period of 24 hours, place the foods in the freezer.

Place the food to be frozen in the  compartment, as this is the coldest point. The freezing process takes 24 hours. During this period do not put other foods in the freezer.

This function stops automatically after 52 hours.

 



It is possible to deactivate the function at any time by pressing key (D) until  indicator will flash and then press key (E).

Drinks Chill Function

The Drinks Chill function is to be used as a safety warning when placing bottles in the freezer compartment. It is activated by pressing key (D) (several times if necessary) until the corresponding icon appears .

You must confirm the choice by pressing key (E) within few seconds. You will hear the buzzer and the icon remains lighted. In this condition it operates a timer with a default value of 30 min. and it could change from 1 to 90 min., by pressing key (B) you select the minutes needed.

At the end of the selected time there are the following indications:



- on the indicator  the symbol  flashing
- the icon  flashing
- the icon  flashing
- sounding of an acoustic alarm until key (E) is pressed

At this point bear in mind to remove the drinks contained in the freezer compartment.

It is possible to deactivate the function at any time by pressing key (D) until the corresponding icon will flash and then key (E).

Excessive temperature alarm

An increase in the temperature in a compartment (for example due to an power failure) is indicated by:

- flashing temperature
- freezer compartment  flashing
- flashing of the icon 
- sounding of buzzer

When normal conditions are restored:

- the acoustic signal shuts off
 - the temperature value continues to flash
- When you press key (E) to de-activate the alarm, the highest temperature reached in

the compartment appears on indicator **8 8** for some seconds.

Then it returns on the normal operation showing the temperature of the selected compartment.

During the alarm phase, the buzzer can be switched off by pressing key (E).

FIRST USE

Cleaning the interior

Before using the appliance for the first time, wash the interior and all internal accessories with lukewarm water and some neutral soap so as to remove the typical smell of a brand-new product, then dry thoroughly.

Important! Do not use detergents or abrasive powders, as these will damage the finish.

DAILY USE

Storage of frozen food

When first starting-up or after a period out of use, before putting the products in the compartment let the appliance run at least 2 hours on the higher settings.

Important! In the event of accidental defrosting, for example due to a power failure, if the power has been off for longer than the value shown in the technical characteristics chart under "rising time", the defrosted food must be consumed quickly or cooked immediately and then re-frozen (after cooling).


Thawing

Deep-frozen or frozen food, prior to being used, can be thawed in the refrigerator compartment or at room temperature, depending on the time available for this operation.

Small pieces may even be cooked still frozen, directly from the freezer: in this case, cooking will take longer.

FreeStore

The refrigerator compartment is equipped with a device that allows for rapid cooling of foods and more uniform temperature in the compartment.

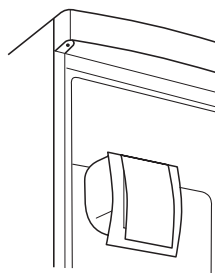


This device activates by itself when needed, for example for a quick temperature recovering after door opening or when the ambient temperature is high.

Allows you to switch on the device manually when needed (refer to "FreeStore Function").

Important! The FreeStore device stops when the door is open and restarts immediately after the door closing.

Movable shelves


The walls of the refrigerator are equipped with a series of runners so that the shelves can be positioned as desired.

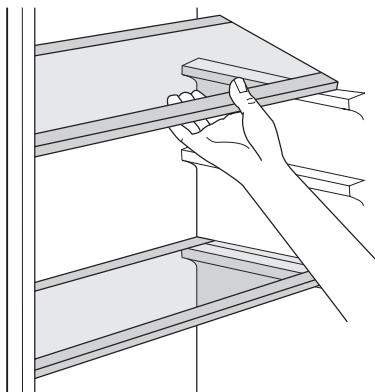


Bottle rack

Place the bottles (with the opening facing front) in the pre-positioned shelf.

Important! If the shelf is positioned horizontally, place only closed bottles.

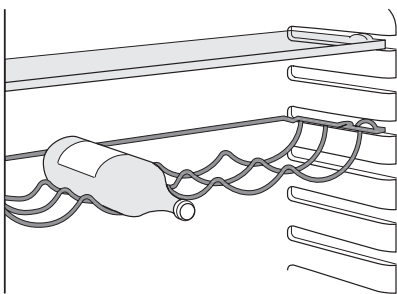

This bottle holder shelf can be tilted in order to store previously opened bottles. To obtain this result, pull the shelf up so it can rotate upwards and be placed on the next higher level.

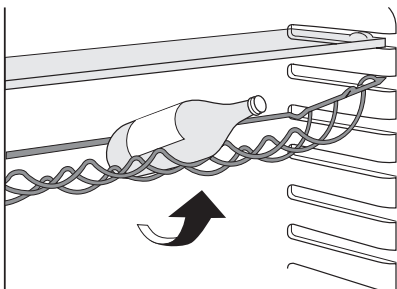


Positioning the door shelves

To permit storage of food packages of various sizes, the door shelves can be placed at different heights.

To make these adjustments proceed as follows:

gradually pull the shelf in the direction of the arrows until it comes free, then reposition as required.

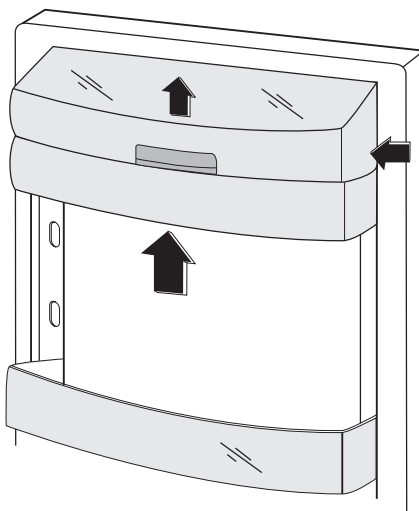


SpacePlus drawer

The drawer is suitable for storing fruit and vegetables.

There is a separator inside the drawer that can be placed in different positions to allow for the subdivision best suited to personal needs.



There is a grille (if foreseen) on the bottom of the drawer to separate the fruit and vegetables from any humidity that may form on the bottom surface.

All parts inside the drawer can be removed for cleaning purposes.

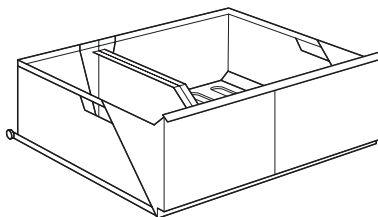

FreshZone drawer


The FreshZone drawer is suitable for storing fresh food like fish, meat, seafood, because the temperature is lower here than in the rest of the fridge.

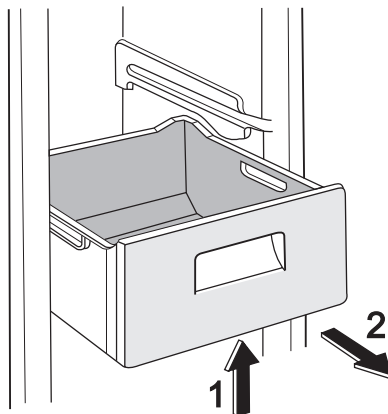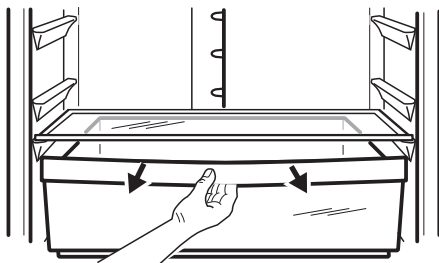

Removal of freezing baskets from the freezer

The freezing baskets have a limit stop to prevent their accidental removal or falling out. At the time of its removal from the freezer, pull the basket towards yourself and, upon reaching the end point, remove the basket by tilting its front upwards.


At the time of putting it back, slightly lift the front of the basket to insert it into the freezer. Once you are over the end points, push the baskets back in their position.

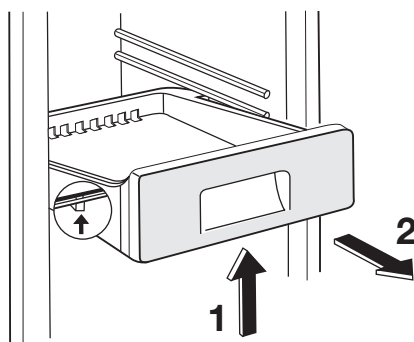

HOW TO USE THE WATER DISPENSER WITH BRITA MAXTRA FILTER CARTRIDGE


BRITA water filter unit

Internal components:

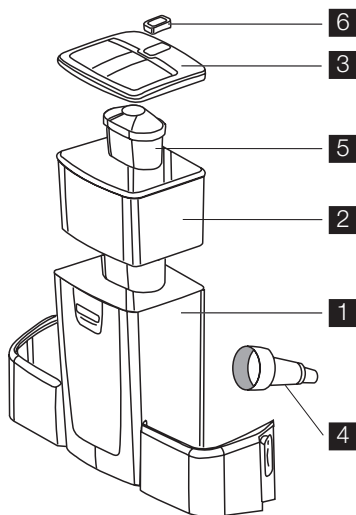

- 1 Water tank
- 2 Funnel
- 3 Tank lid
- 4 Valve + gasket
- 5 Including BRITA MAXTRA filter
- 6 BRITA Memo - the electronic cartridge exchange indicator

External components:

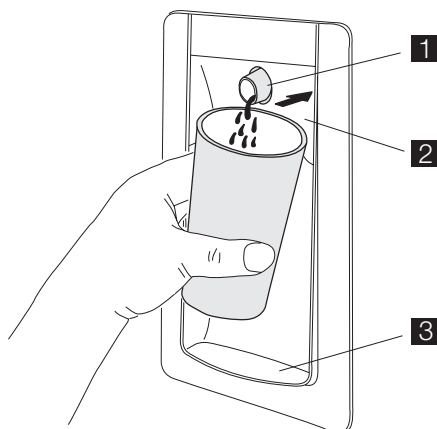

- 1 Dispenser

- 2 Water level
- 3 Water drop tray


Initial operations to use your water dispenser

1. Remove every tape and other protection system from the tank assembly
2. clean the components, as described in- to "Water dispenser cleaning procedure", in order to remove eventual residue.

Water dispenser cleaning procedure

1. Unblock the two stopping elements on the sides of the tank as shown in the pictures:
 - take out the BRITA MAXTRA cartridge from the water filter unit
 - press the stopping elements in the middle and move it up
 - move the stopper into direction of the central tank.
2. Push up the tank along the direction of the valve.

3. Remove the lid and the funnel.

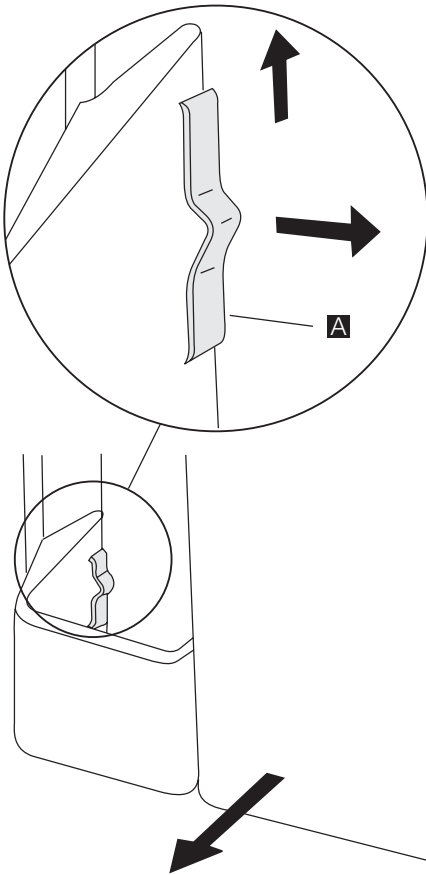

4. Unscrew the valve in counter clockwise (pay particular attention not to lose the Valve Gasket because is necessary to a correct functioning of the features).
5. Clean the tank lid, the valve and the gasket with a solution of warm water and neutral soap. Rinse it and put it inside the door hole during the cleaning of the other components (in order to avoid cold air leakage from the fridge).
6. Clean the tank and the funnel into the dishwasher or with a solution of warm water and neutral soap and rinse them.


7. After the tank components cleaning take back the valve from the fridge door and assembly the tank in the inverse order (4;3;2;1) of disassembly (pay attention at the valve gasket positioning).
8. Put the assembled tank on the door along the valve direction.
9. Block the stopping elements in the inverse order of unblock.
10. Insert again the BRITA MAXTRA cartridge in the funnel .

How to use the BRITA MAXTRA filter cartridge

Step 1: Preparing the cartridge

To prepare your BRITA filter cartridge, please remove the protective wrapper (note: cartridge and inside wrapper may appear moist, this is simply condensation). Immerse the cartridge in cold water and shake it gently to remove any air bubbles. The filter now is ready to use.

As required for some other water filter cartridges, there is no need to pre-soak the new Maxtra Cartridge.

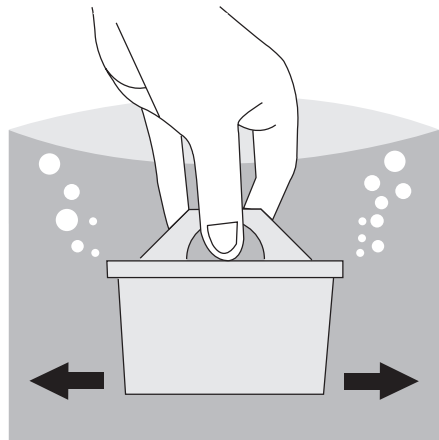


Step 2: Insert in the water tank


Remove the tank lid. Before inserting the cartridge, remove the funnel and clean it thoroughly by rinsing it and wiping it dry. Then, thoroughly clean the inside of the water tank with a damp cloth and wipe it dry as well.

Place the cartridge into the filter tank and push downwards until it 'clicks' firmly into place.

The cartridge should stay in place if the funnel is turned upside down.

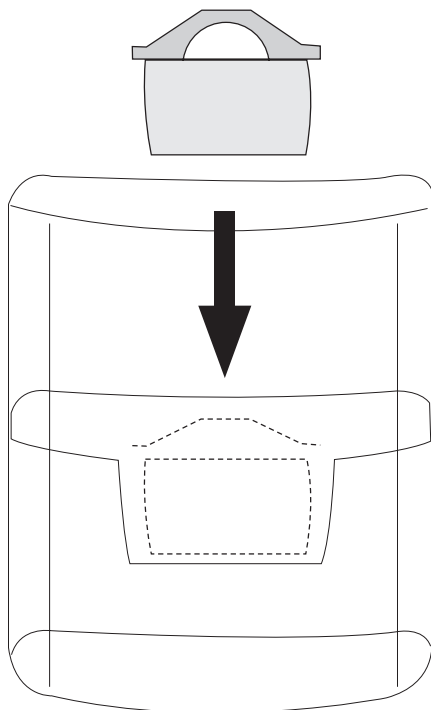

Step 3: Rinse the cartridge

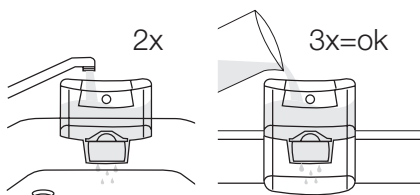

Take the funnel out of the BRITA water filter unit, fill it under the tap with cold tap water and allow it to filter through.

Discard the first two fillings into the sink.

These first two fillings are used to flush the filter cartridge.

Then, place the funnel back into BRITA water filter unit.


Place the cover back onto the jug and press it carefully downwards to ensure it fits correctly into place.

Step 4: Refill the water tank

To fill the tank with cold water, simply open the flip top lid, take a jug of tap water and pour it inside the tank through the cover as shown into the picture (use the lid every time that you want to fill your water).


Important! In order to avoid risk of spillage of water during closing and opening of the refrigerator door, we recommend to not fill completely the water tank but leave a head space of air.

If you have not used all filtered water in the water tank within 1-2 days, please discard any water left inside the BRITA water filter unit before refilling it.

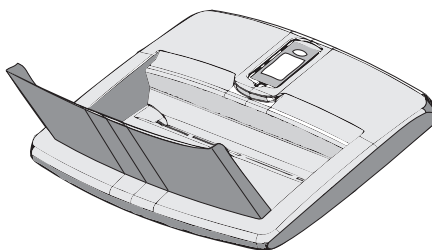

Allow the water to filter through and repeat "Step 4" as many times as you want until the BRITA water filter unit is filled up.


Remove cartridge with ring pull handle


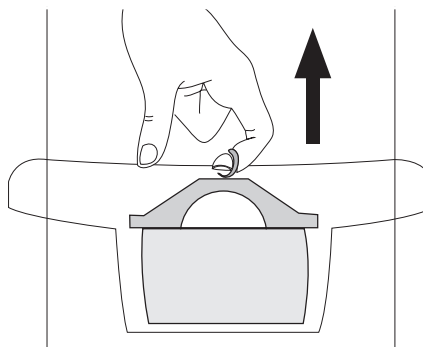


To exchange the cartridge after four weeks, simply use the ring pull handle on the top of the cartridge to remove it from the funnel, and repeat steps 1 - 3 above.

The BRITA Memo

For maximum filter performance and optimum taste, it is important to change your BRITA cartridge regularly. BRITA recommends that you replace the cartridge in the BRITA unit of your fridge every four weeks.

 BRITA Memo automatically reminds you when to change the cartridge.

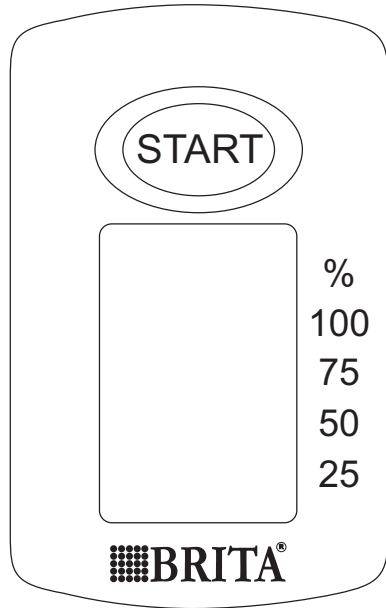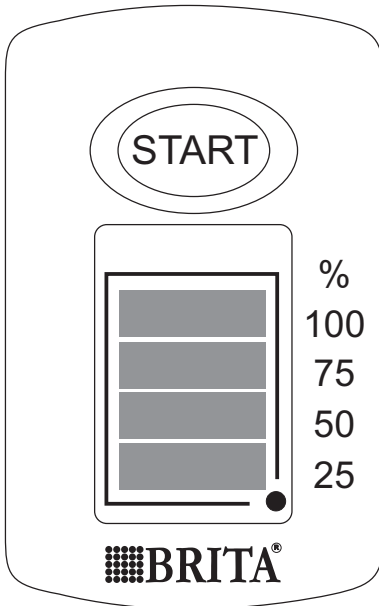

Functional control


The flashing dot in the bottom right corner of the Memo indicates that the Memo is working.

The unique BRITA Memo measures the recommended time of use of your cartridge.


Memo is easy to use and automatically reminds your when to change your cartridge. The BRITA Memo is located on the lid of the water tank. Operation is really simple.

Start the Memo display

To start Memo please press and hold down the start button on the lid until all four bars appear in the display and flash twice. The Memo is now set.

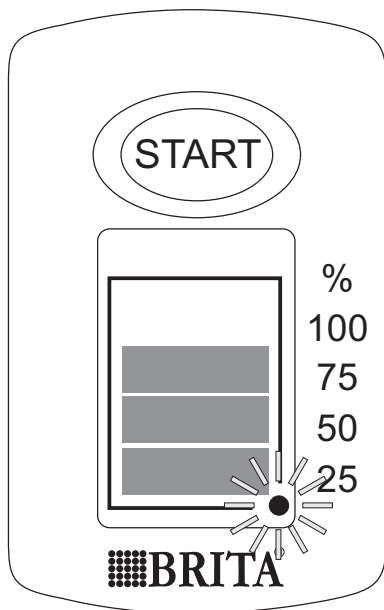


Change display

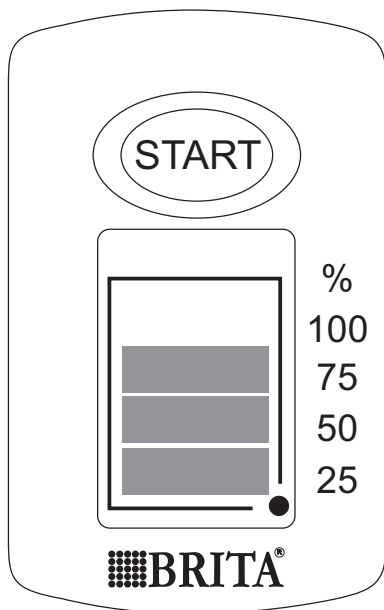

Every week one bar will disappear to show the remaining cartridge life. After four weeks all four bars will disappear. This, and a flashing arrow, indicate that the cartridge should now be changed.

Insert a new cartridge according to the instructions and reactivate the Memo as described above.

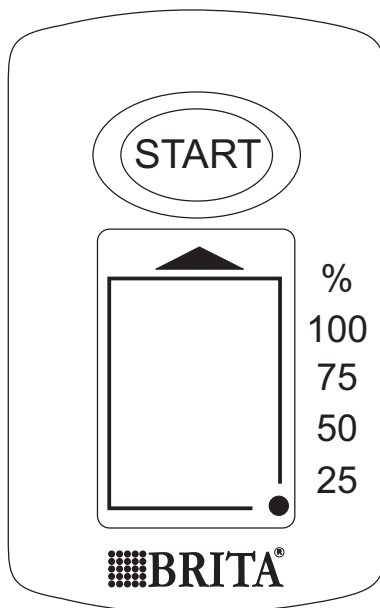


When only one bar is showing, you should just check whether you have a new BRITA MAXTRA filter cartridge to hand.

Important! The Memo is only designed to be used with BRITA filter cartridges. BRITA Memo: the electronic cartridge exchange indicator has a life of approximately 5 years. At the end of the Memo's life, please remember that it is an electronic device and to dispose on the Memo according to all applicable provisions and regulations.

To remove the exhausted Memo place a screwdriver in the notch next to the Memo and push it out.

Please note that Memo should not be removed for any other reason than to dispose of it.

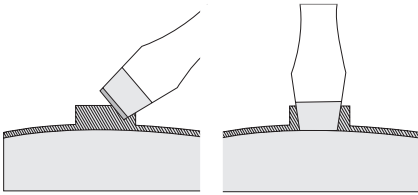

Important information

- The fridge door valve hole must be closed with the Water Valve during the regular functioning of the appliance.
- Use only drinking water. The use of any other drink type can leave residues, taste or odor in the reservoir and in the tap.
- It is possible to hear some noises caused by air entering when the water left the reservoir.
- In case the water does not flow well, press the driving lever once again. Keep the glass below the tap for some instants, in order to assure that all the water is collected by the glass.
- Do not use gasified drinks, such as soft drinks. The drink can leak due to the gas pressure.
- Remember that water is a foodstuff. Please consume filtered water within one to two days.

- Should your BRITA water filter unit not be in use for a prolonged period (e.g. vacation), we recommend that you discard any water left inside the system and leave the cartridge inside the filter tank. Before using the system again take out the cartridge and repeat steps 1 to 4 of "How to use the BRITA MAXTRA filter cartridge".

- The BRITA water filter unit is designed for use only with municipally treated tap water (note: this water is constantly controlled and according to legal regulations safe to drink) or with water from private supplies which has been tested safe to drink.

If an instruction is received from the authorities that mains water must be boiled, the BRITA filtered water has also to be boiled. When the instruction to boil water is no longer in force, the entire filter system must be cleaned and a new cartridge inserted.

More information on the use of BRITA filter cartridges and the Memo can be found in the BRITA information guide.

- i** You can purchase new BRITA filter cartridges and Memo through consumer service network of Electrolux or BRITA.

HELPFUL HINTS AND TIPS

Normal Operating Sounds

- You may hear a faint gurgling and a bubbling sound when the refrigerant is pumped through the coils or tubing. This is correct.
- When the compressor is on, the refrigerant is being pumped around and you will hear a whirring sound and a pulsating noise from the compressor. This is correct.
- The thermic dilatation might cause a sudden cracking noise. It is natural, not dangerous physical phenomenon. This is correct.

Hints for energy saving

- Do not open the door frequently or leave it open longer than absolutely necessary.
- If the ambient temperature is high and the Temperature Regulator is set to low

temperature and the appliance is fully loaded, the compressor may run continuously, causing frost or ice on the evaporator. If this happens, set the Temperature Regulator toward warmer settings to allow automatic defrosting and so a saving in electricity consumption.

Hints for fresh food refrigeration

To obtain the best performance:

- do not store warm food or evaporating liquids in the refrigerator
- do cover or wrap the food, particularly if it has a strong flavour
- position food so that air can circulate freely around it

Hints for refrigeration

Useful hints:

Meat (all types) : wrap in polythene bags and place on the glass shelf above the vegetable drawer.

For safety, store in this way only one or two days at the most.

Cooked foods, cold dishes, etc...: these should be covered and may be placed on any shelf.

Fruit and vegetables: these should be thoroughly cleaned and placed in the special drawer(s) provided.

Butter and cheese: these should be placed in special airtight containers or wrapped in aluminium foil or polythene bags to exclude as much air as possible.

Milk bottles: these should have a cap and should be stored in the bottle rack on the door.

Bananas, potatoes, onions and garlic, if not packed, must not be kept in the refrigerator.

Hints for freezing

To help you make the most of the freezing process, here are some important hints:

- the maximum quantity of food which can be frozen in 24 hrs. is shown on the rating plate;
- the freezing process takes 24 hours. No further food to be frozen should be added during this period;
- only freeze top quality, fresh and thoroughly cleaned, foodstuffs;
- prepare food in small portions to enable it to be rapidly and completely frozen and

to make it possible subsequently to thaw only the quantity required;


- wrap up the food in aluminium foil or polythene and make sure that the packages are airtight;
- do not allow fresh, unfrozen food to touch food which is already frozen, thus avoiding a rise in temperature of the latter;
- lean foods store better and longer than fatty ones; salt reduces the storage life of food;
- water ices, if consumed immediately after removal from the freezer compartment, can possibly cause the skin to be freeze burnt;
- it is advisable to show the freezing in date on each individual pack to enable you to keep tab of the storage time.


Hints for storage of frozen food

To obtain the best performance from this appliance, you should:

- make sure that the commercially frozen foodstuffs were adequately stored by the retailer;
- be sure that frozen foodstuffs are transferred from the foodstore to the freezer in the shortest possible time;
- not open the door frequently or leave it open longer than absolutely necessary.
- Once defrosted, food deteriorates rapidly and cannot be refrozen.
- Do not exceed the storage period indicated by the food manufacturer.

CARE AND CLEANING


 **Caution!** Unplug the appliance before carrying out any maintenance operation.

 This appliance contains hydrocarbons in its cooling unit; maintenance and recharging must therefore only be carried out by authorized technicians.

Defrosting of the refrigerator

Frost is automatically eliminated from the evaporator of the refrigerator compartment every time the motor compressor stops, during normal use. The defrost water drains out through a trough into a special container at the back of the appliance, over the motor compressor, where it evaporates.

It is important to periodically clean the defrost water drain hole in the middle of the refrigerator compartment channel to prevent the water overflowing and dripping onto the food inside. Use the special cleaner provided, which you will find already inserted into the drain hole.

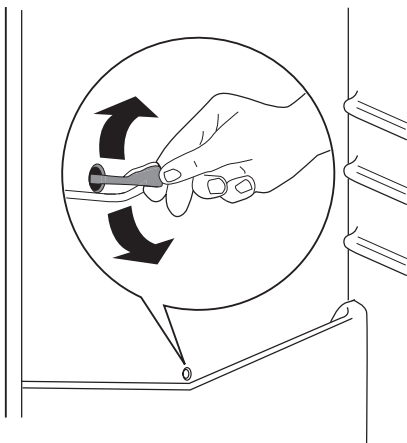

Defrosting of the freezer

The freezer compartment of this model, on the other hand, is a "no frost" type. This means that there is no buildup of frost when it is in operation, neither on the internal walls nor on the foods.

The absence of frost is due to the continuous circulation of cold air inside the compartment, driven by an automatically controlled fan.

WHAT TO DO IF...



Caution! Before troubleshooting, disconnect the power supply. Only a qualified electrician or competent person must do the troubleshooting that is not in this manual.

Important! There are some sounds during normal use (compressor, refrigerant circulation).


Problem	Possible cause	Solution
The appliance is noisy.	The appliance is not supported properly.	Check if the appliance stands stable (all the four feet should be on the floor).
The compressor operates continually.	The Temperature regulator may be set incorrectly.	Set a warmer temperature.
	The door is not closed correctly.	Refer to "Closing the door".
	The door has been opened too frequently.	Do not keep the door open longer than necessary.
	The product temperature is too high.	Let the product temperature decrease to room temperature before storage.
	The room temperature is too high.	Decrease the room temperature.
	The Action Freeze function is switched on.	Refer to "Action Freeze function".
Water flows on the rear plate of the refrigerator.	During the automatic defrosting process, frost defrosts on the rear plate.	This is correct.
Water flows into the refrigerator.	The water outlet is clogged.	Clean the water outlet.
	Products prevent that water flows into the water collector.	Make sure that products do not touch the rear plate.

Problem	Possible cause	Solution
Water flows on the ground.	The melting water outlet does not flow in the evaporative tray above the compressor.	Attach the melting water outlet to the evaporative tray.
There is too much frost and ice.	Products are not wrapped properly.	Wrap the products better.
	The door is not closed correctly.	Refer to "Closing the door".
	The Temperature regulator may be set incorrectly.	Set a higher temperature.
The temperature in the appliance is too high.	The door is not closed correctly.	Refer to "Closing the door".
	The product temperature is too high.	Let the product temperature decrease to room temperature before storage.
	Many products are stored at the same time.	Store less products at the same time.
The temperature in the refrigeration is too high.	There is no cold air circulation in the appliance.	Make sure that there is cold air circulation in the appliance.
The temperature in the freezer is too high.	Products are too near to each other.	Store products so that there is cold air circulation.
The appliance does not operate.	The appliance is switched off.	Switch on the appliance.
	The mains plug is not connected to the mains socket correctly.	Connect the mains plug to the mains socket correctly.
	The appliance has no power. There is no voltage in the mains socket.	Connect a different electrical appliance to the mains socket. Contact a qualified electrician.
The lamp does not work.	The lamp is in stand-by.	Close and open the door.
	The lamp is defective.	Refer to "Replacing the lamp".

As much as the advice does not lead to result, call the nearest brand-mark service.

Replacing the lamp

1. Disconnect the appliance.
2. Push the movable part to unhook the lamp cover (1).
3. Remove the lamp cover (2).
4. Replace the lamp with one of the same power and specifically designed for domestic appliances only.
5. Install the lamp cover.
6. Connect the appliance.
7. Open the door. Make sure that the lamp comes on.

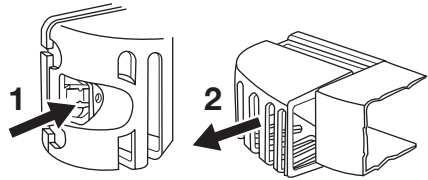

Closing the door


1. Clean the door gaskets.
2. If necessary, adjust the door. Refer to "Installation".
3. If necessary, replace the defective door gaskets. Contact the Service Center.

TECHNICAL DATA

Dimension		
	Height	1850 mm
	Width	595 mm
	Depth	658 mm
Rising Time		18 h
Voltage		230 V
Frequency		50 Hz

The technical information are situated in the rating plate on the internal left side of the appliance and in the energy label.

INSTALLATION

 Read the "Safety Information" carefully for your safety and correct operation of the appliance before installing the appliance.

mains power supply; the plug must therefore be easily accessible after installation.


Positioning


Install this appliance at a location where the ambient temperature corresponds to the climate class indicated on the rating plate of the appliance:

Climate class	Ambient temperature
SN	+10°C to + 32°C
N	+16°C to + 32°C
ST	+16°C to + 38°C
T	+16°C to + 43°C

Location

The appliance should be installed well away from sources of heat such as radiators, boilers, direct sunlight etc. Ensure that air can circulate freely around the back of the cabinet. To ensure best performance, if the appliance is positioned below an overhanging wall unit, the minimum distance between the top of the cabinet and the wall unit must be at least 100 mm . Ideally, however, the appliance should not be positioned below overhanging wall units. Accurate levelling is ensured by one or more adjustable feet at the base of the cabinet.

 **Warning!** It must be possible to disconnect the appliance from the

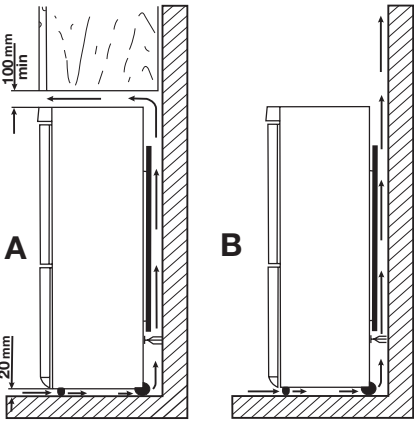

Electrical connection

Before plugging in, ensure that the voltage and frequency shown on the rating plate correspond to your domestic power supply. The appliance must be earthed. The power supply cable plug is provided with a contact for this purpose. If the domestic power supply socket is not earthed, connect the appliance to a separate earth in compliance with current regulations, consulting a qualified electrician.

The manufacturer declines all responsibility if the above safety precautions are not observed.


This appliance complies with the E.E.C. Directives.

Rear spacers

You can find the two spacers in the bag with documentation.


Do these steps to install the spacers:

1. Release the screw.
2. Engage the spacer below the screw.
3. Turn the spacer to the right position.
4. Tighten again the screws.

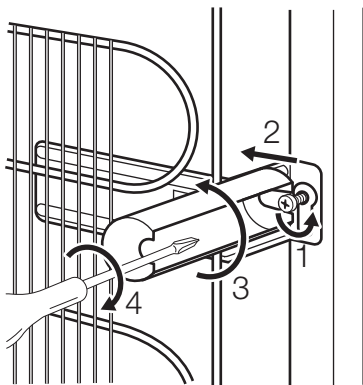

Levelling

When placing the appliance ensure that it stands level. This can be achieved by two adjustable feet at the bottom in front.

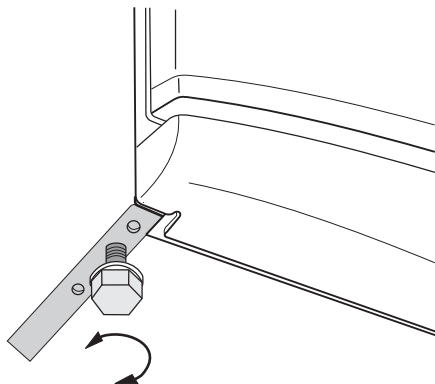


Removing the shelf holders

Your appliance is equipped with shelf retainers that make it possible to secure the shelves during transportation.

To remove them proceed as follows:

1. Move the shelf holders in the direction of the arrow (A).
2. Raise the shelf from the rear and push it forward until it is freed (B).
3. Remove the retainers (C).

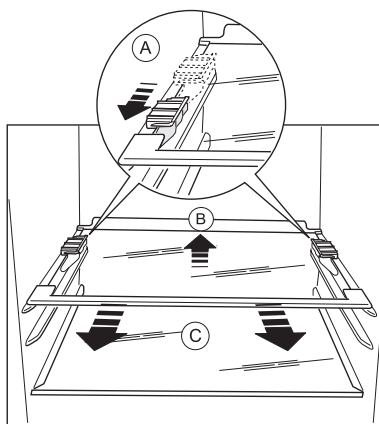


Door reversibility

Warning! Before carrying out any operations, remove the plug from the power socket.


Important! To carry out the following operations, we suggest that this be made with another person that will keep a firm hold on the doors of the appliance during the operations.

To change the opening direction of the door, do these steps:

1. Open the door with the appliance in the upright position. Unscrew the screws (t1) and remove the upper door plastic trim (t2). Close the door.

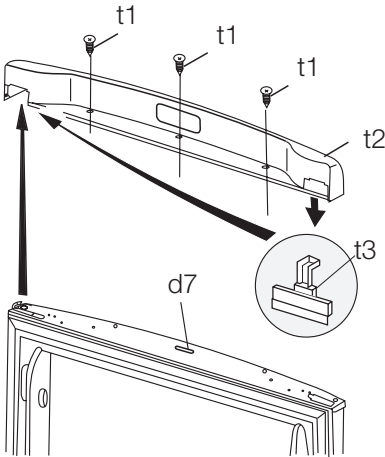


2. Remove the little plastic cover from the door plastic trim and refit on the opposite side (t3).
3. Remove the panel (t4). If it is necessary use a screwdriver very carefully. Unscrew the screw on the other side. Remove the upper door mount (t5). Place them in an empty plastic bag.

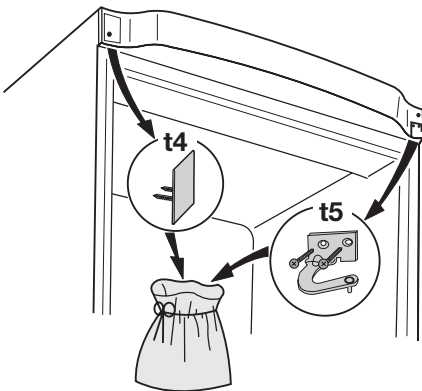


4. Remove the upper door.

5. Unscrew the screw and remove the door stopper (d1). Attach it reversed on the other side.

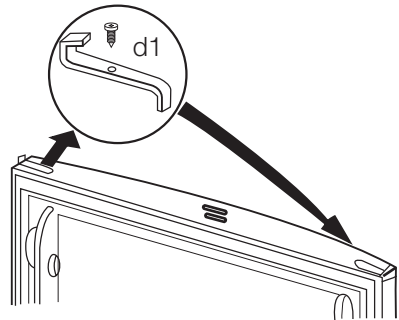


6. Unscrew the middle hinge (m2). Remove the plastic spacer (m1).
7. Remove the lower door.

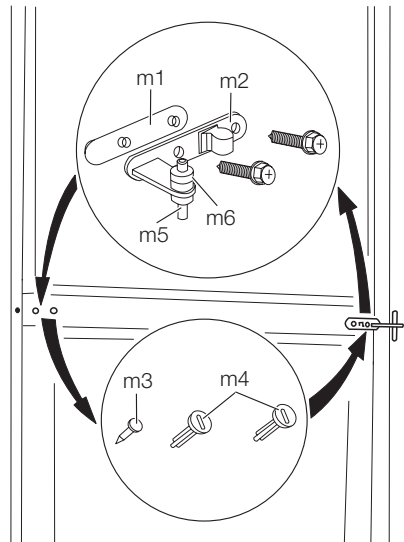


8. Remove the spacer (m6) and move to the other side of the hinge pivot (m5).
9. Remove using a tool the cover (b1). Unscrew the lower hinge pivot (b2) and the spacer (b3) and place them on the opposite side.

10. Re-insert the cover (b1) on the opposite side.

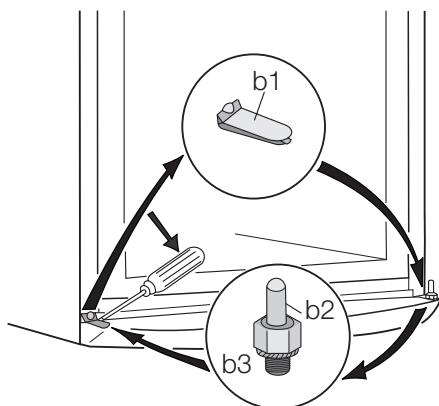

11. Remove the stoppers (d1) and move to the other side of the doors.
12. Remove the left-hand cover pin of the middle hinge (m3,m4) and move to the other side.
13. Fit the pin of the middle hinge (m5) into the left-hand hole of the lower door.
14. Re-insert the lower door on the pivot pin (b2).
15. Re-screw the middle hinge (m1) on the opposite side . Do not forget the plastic spacer (m2) inserted under the middle hinge.
16. Re-insert the upper door on the middle hinge (m5).
Make sure that the edges of the doors run parallel to the side edge of the appliance.

17. Position and fix the upper hinge (you can find them in the instruction for use bag) on the opposite side (t6).

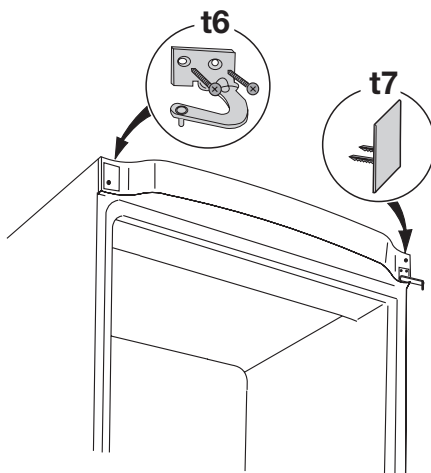

18. Insert the panel (t7) (that can be found in the instruction for use bag).
19. Open the upper door, attach the top cover (t2) using screws (t1). Insert the magnet (d7). Close the door.
20. Reposition, level the appliance, wait for at least four hours and then connect it to the power socket.


Do a final check to make sure that:

- All screws are tightened.
- The magnetic seal adheres to the cabinet.
- The door opens and closes correctly.

If the ambient temperature is cold (i.e. in Winter), the gasket may not fit perfectly to the cabinet. In that case, wait for the natural fitting of the gasket.

In case you do not want to carry out the above mentioned operations, contact the nearest After Sales Service Force. The After Sales Service specialist will carry out the reversibility of the doors at your cost.

ENVIRONMENTAL CONCERNS

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will

help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household

waste disposal service or the shop where you purchased the product.



www.electrolux.com/shop

