 


I N F O

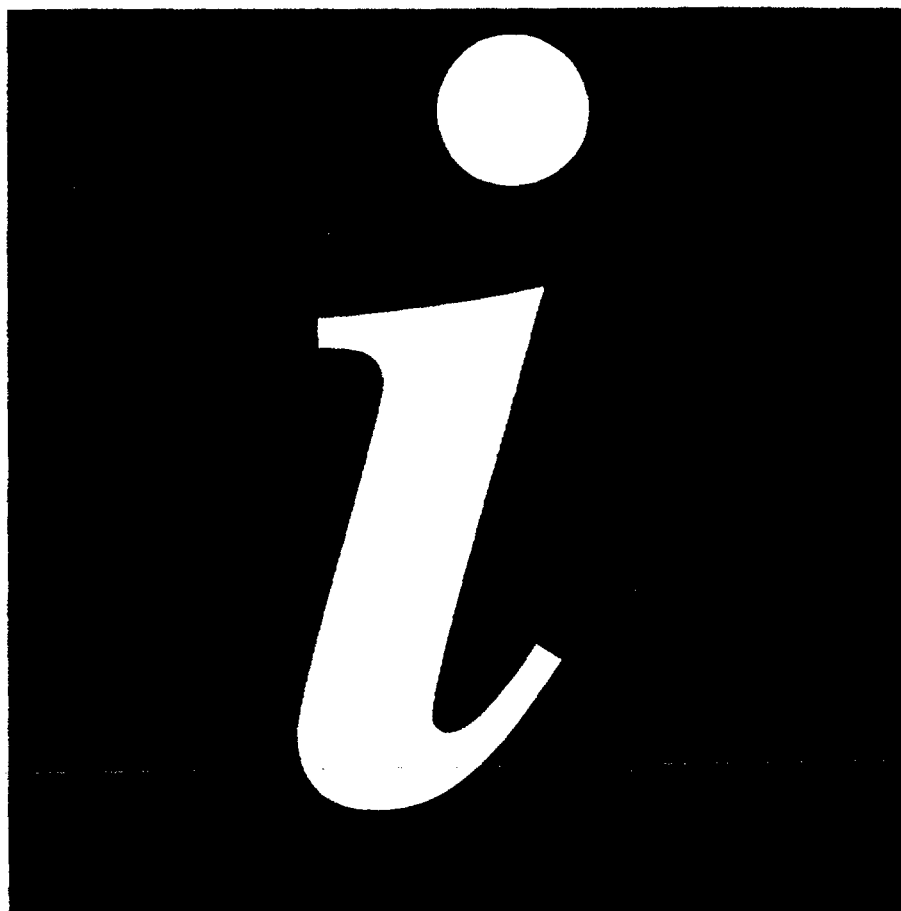

INSTALLATION AND INSTRUCTION MANUAL

REFRIGERATOR ER 1148T

 **Electrolux**

Thank you for buying an ELECTROLUX DOMESTIC APPLIANCE

To enable you to use your appliance effectively and safely, please read this instruction book carefully before using the appliance and retain for future reference. If you require guidance in the use of the appliance or require further information, please contact our Customer Care Department.

CUSTOMER CARE
ELECTROLUX
PO BOX 47
NEWBURY
BERKSHIRE
RG14 5XL

TEL: 01635 522799

Guide to use the instruction book

The following Symbols will be found in the text to guide you through the instructions



Safety Instructions



Hints and Tips



Step by step instructions
for an operation



Environmental Information



IMPORTANT SAFETY INSTRUCTIONS

These warnings are provided in the interests of your safety. Ensure that you understand them all before installing or using this appliance. Your safety is of paramount importance. If you are unsure about any of the meanings or these warnings contact the Customer Care Department.

Installation

- This appliance is heavy. Care should be taken when moving it.
- It is dangerous to alter the specifications or attempt to modify this product in any way.
- Ensure that the appliance does not stand on the electrical supply cable. If the supply cord is damaged, it must be replaced by a special cord available from your local Service Force Centre.
- Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.
- Parts which heat up should not be exposed. Whenever possible, the back of the appliance should be close to a wall but leaving the required distance for ventilation as stated in the installation instructions.
- The appliance should be left for 2 hours after installation before it is turned on, in order to allow the refrigerant to settle.

Child Safety

- Do not allow children to tamper with the controls or play with the product.

During Use

- This appliance is designed for domestic use only, specifically for the storage of edible foodstuffs only.
- Frozen food should not be refrozen once it has thawed out.
- Do not place carbonated or fizzy drinks in the 2 star compartment.
- Ice lollies can cause 'frost/freezer burns' if consumed straight from the 2 star compartment.

- Do not remove items from the 2 star compartment if your hands are damp/wet, as this could cause skin abrasions or frost/freezer burns.
- Manufacturers' recommended storage times should be adhered to. Refer to relevant instructions.

Maintenance and Cleaning

- Switch off, and unplug the appliance before carrying out any cleaning or maintenance work.
- Do not use sharp instruments to scrape off frost or ice. (See defrosting instructions).

Servicing

- This product should be serviced by an authorised engineer, and only genuine spare parts should be used.
- Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Service Force Centre.

At the End of the Appliance Life

- When disposing of your appliance, use an authorised disposal site.
- Remove the plug and ensure that any locks or catches are removed, to prevent young children being trapped inside.



**Please read this
instruction book carefully
before use and retain
for future reference.**

TABLE OF CONTENTS

For the User

Important Safety Instructions 3

Description of the Appliance 5

Control Panel 5

Using Your Appliance 6

Before Use 6

To Start The Appliance 6

Thermostat Control 6

Larder Compartment 7

Storage Guide 7

Shelf Adjustment 7

The Frozen Food Compartment 8

Frozen Food Storage 8

Hints and Tips 9

Normal Operating Sounds 9

Food Storage 9

Energy Saving Advice 9

In the Event of a Power Failure 9

Maintenance and Cleaning 10

Internal Cleaning 10

External Cleaning 10

To Change the Lightbulb 10

Defrosting Your Appliance 11

When the Appliance is Not in Use 11

What Happens if Something Goes Wrong 12

Service and Spare Parts 13

Service Force Centres 14

For the Installer

Installation Instructions 16

Technical Information 16

Electrical Connections 17

Electrical Requirements 17

Installation Requirements 18

Ventilation Requirements 18


Levelling 18

Door Reversal 19

Door Adjustment 20

Guarantee Conditions 21

 Description of the Appliance

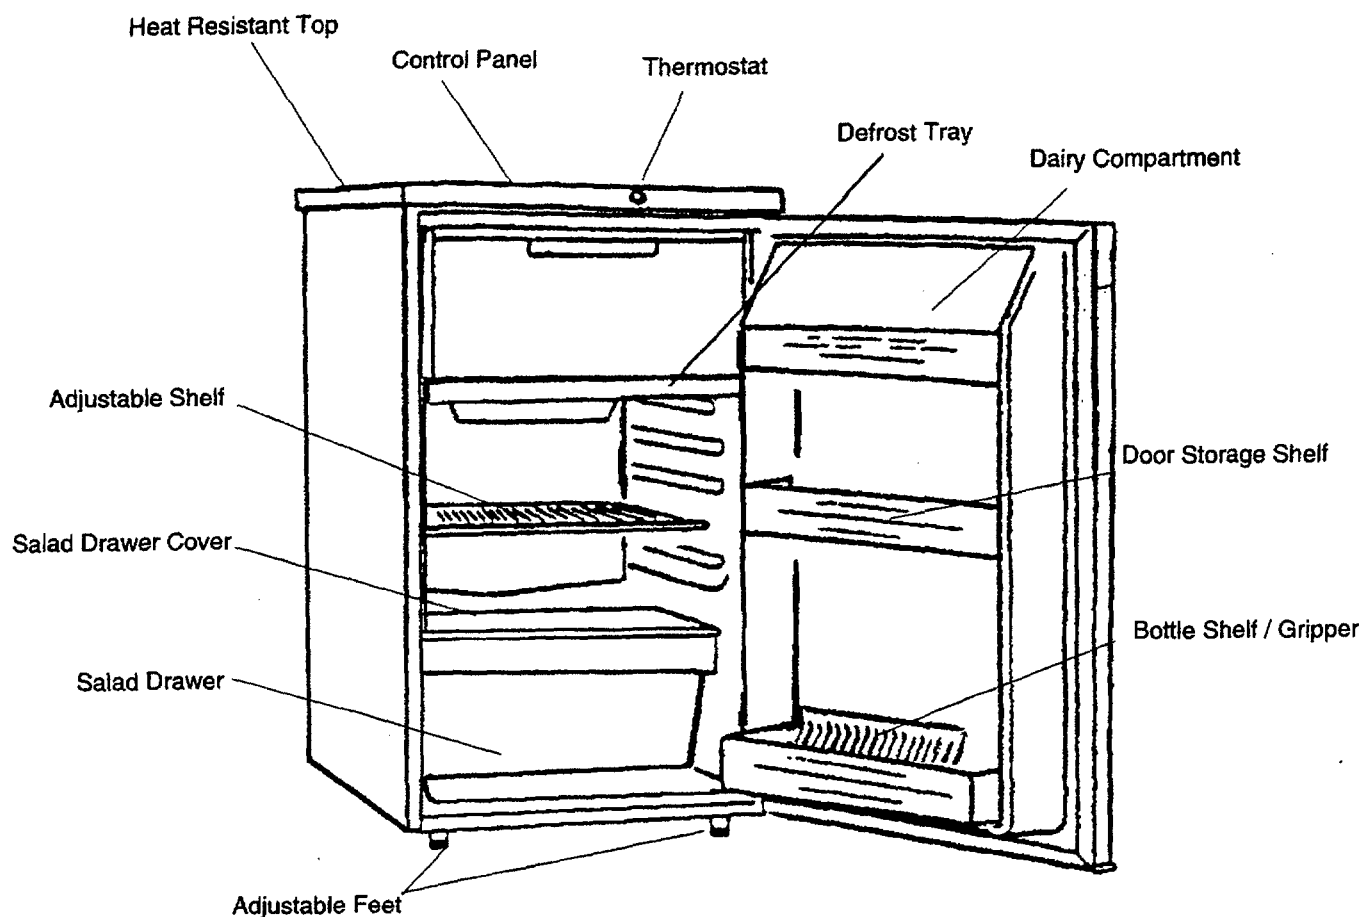


**THE FURNISHINGS FROM THE SHRINK WRAP PACK SHOULD BE POSITIONED
IN LINE WITH THE ABOVE DIAGRAM**

Pack Contents:

- Wire Shelf / Trim Assembly (1)
- Salad Drawer Cover (1)
- Salad Drawer (1)
- Ice Cube Tray (1)

 CONTROL PANEL

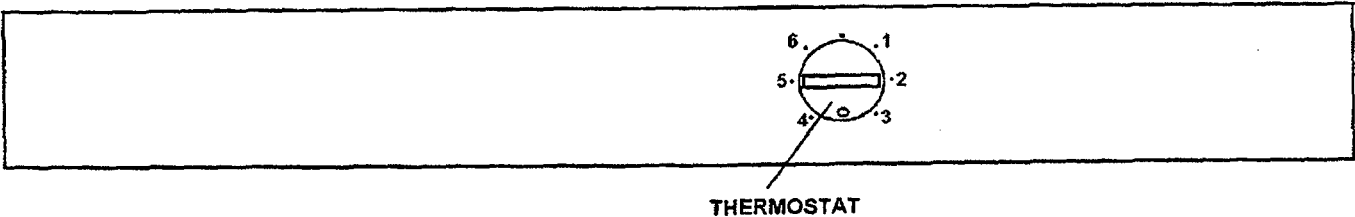

USING THE APPLIANCE



This appliance is designed for domestic use only, specifically for the storage of edible foodstuffs.

This appliance is designed to operate in ambient temperatures (surrounding air temperature) between 16°C (60°F) and 32°C (90°F).

If these temperatures are exceeded i.e., colder or warmer, the appliance will not operate correctly.

Before Use

Remove all securing tapes.

Wash the inside of the appliance with lukewarm water with a little bicarbonate of soda added (5ml to 0.5 litre of water). Do not use soap or detergent as the smell may linger. Dry the appliance thoroughly.




Do not use detergents, abrasive powders, highly perfumed cleaning products, wax polishes or products containing alcohol.



To Start the Appliance

1. Allow the appliance to stand for 2 hrs after installation.
2. Plug in the appliance and switch on at the mains supply.
3. Turn the thermostat control to the required setting. A setting of 3 - 4 is usually suitable for normal operation (see thermostat control).
4. Leave the appliance for approximately 4 hours for the correct temperature to be reached before placing food inside.

Thermostat Control

The thermostat control situated in the control panel regulates the temperature both within the fridge compartment and the  star compartment. Thermostat control is marked from 1-6, the higher the number, the colder the setting.


Position 1 - Cold

Position 6 - Coldest

The temperature will be affected by:

- Ambient temperature
- How often the door is opened
- How much food is stored
- Position of the appliance

 In determining the correct temperature control setting, all these factors have to be considered and some experimentation may be necessary.

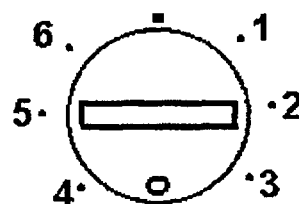


Do not allow children to tamper with the controls or play with the product.

Larder Compartment

The correct temperature for safe storage of fresh food inside is 0°C to 5°C (32°F to 41°F). The warmest part of the fridge compartment is at the top of the cabinet and the coolest at the bottom.

 
Storage Guide

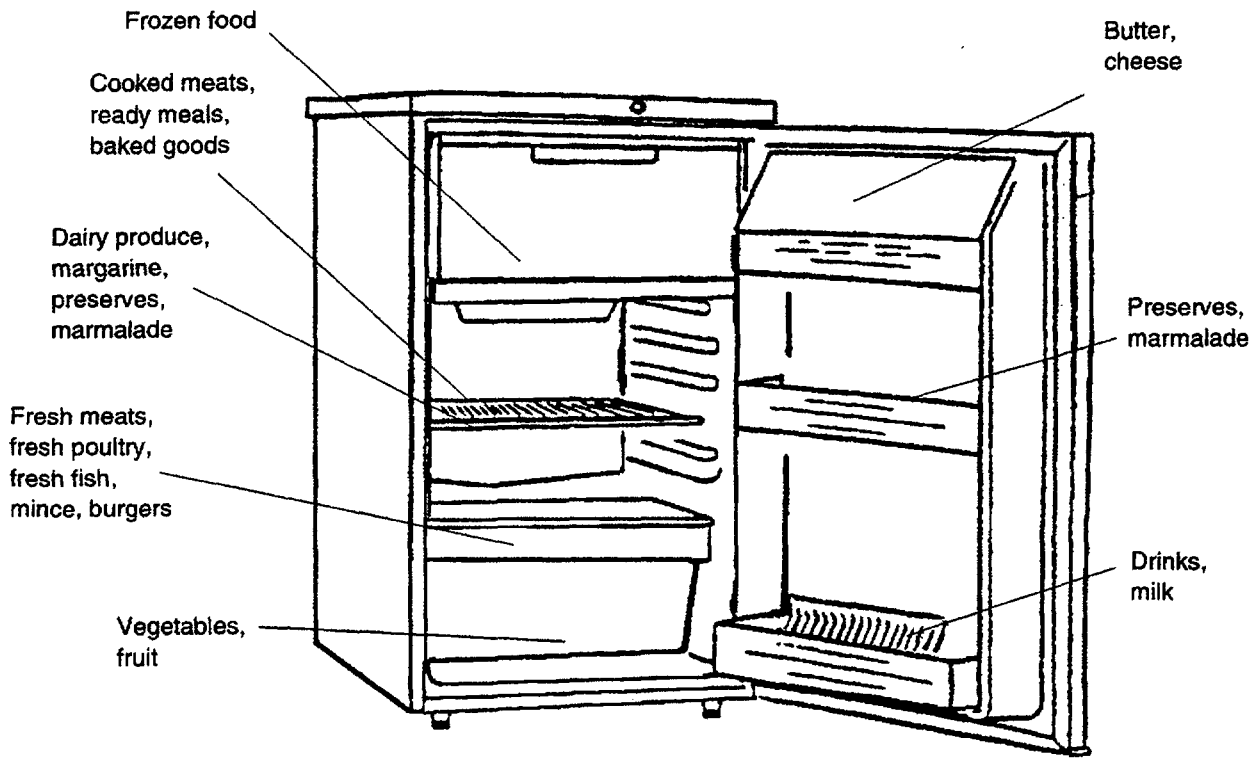

Adjustable shelves


Adjustment of the door shelves can be made to accommodate varying heights of bottles and other containers. Gently ease the shelf in the directions shown.

 Store light items such as small cartons and jars on the shelves provided in the door. The bottle shelf can be used for the storage of heavier bottles.

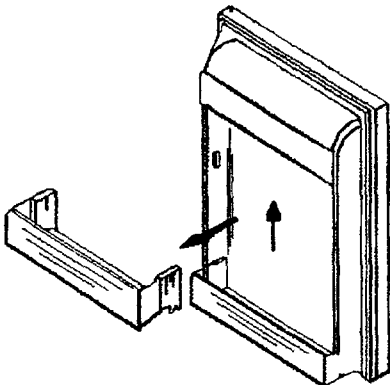

The larder compartment is fitted with shelves which are adjusted for the storage of different sized articles.

 If the door cannot be opened further than 90° remove the shelves by tilting the shelf downwards and pulling outwards.

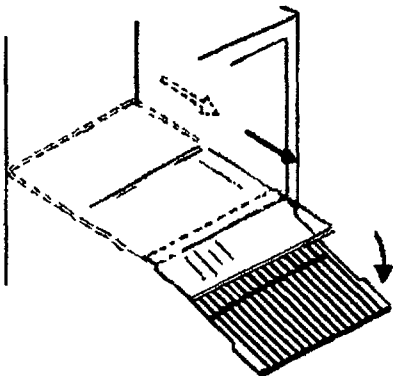


FROZEN FOOD COMPARTMENT

1. This compartment is not designed to freeze fresh food or cooked food.
2. The 2 star frozen food compartment of the refrigerator is designed to maintain temperature below -12° (10.4°). This temperature will allow medium term storage of frozen food up to 1 month providing the correct setting has been selected.
3. The temperature inside the refrigerator and 2 star compartment can be regulated by adjusting the defrost tray located under the 2 star compartment.

To obtain a lower temperature in the 2 star compartment (when frozen food is stored inside and when the ambient temperature is lower than 25°C) push the defrost tray all the way in.

When frozen food is not stored in the 2 star compartment or when the ambient temperature is higher than 25°C adjust the defrost tray to a forward position. This reduces the temperature in the refrigerator compartment.

 4. Ice trays are located in the defrost tray. Ice cubes can be made in this compartment at the normal setting and if required quickly a colder setting may be selected remembering to return to normal setting as soon as convenient.

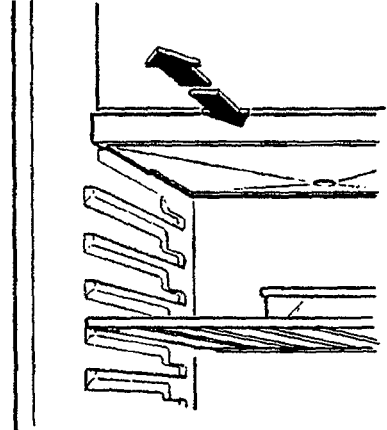

FROZEN FOOD STORAGE

The appliance has the following net storage volume:

9 litres (0.32cuft)

2.88kg (6.4lb)

- † This is a standard measurement and the actual capacity depends upon the density and sizes of the food. The above figures are based on an average density of 0.32 kg per litre (20 lb per cuft).

To ensure that frozen food is stored as to preserve the high quality achieved by the manufacturers, the following advice should be noted.

1. Place food in the compartment as soon as possible after purchase.
2. Always follow the instructions recommended by the manufacturer on the packet of frozen food.
3. Consume food before the "Best Before" date.
4. Any opened packets of frozen foods should be rewrapped in air tight materials to prevent surface evaporation which causes drying or "freezer burn".



Frozen food should not be refrozen once it has thawed out.

Manufacturers storage times should be adhered to.



HINTS AND TIPS

Normal Operating Sounds

- You may hear faint gurgling or bubbling sounds when the refrigerant is pumped through the coils or tubing at the rear, to the cooling plate/evaporator or to the fixed freezer shelves.
- When the compressor is on, the refrigerant is being pumped round, and you will hear a whirring sound or pulsating noise from the compressor.
- A thermostat controls the compressor, and you will hear a faint 'click' when the thermostat cuts in and out.

Food Storage

- To obtain the best results from your appliance, neither hot foods nor liquids which may evaporate, should be placed in the larger compartment.
- Avoid buying frozen food if you cannot store it straight away. The use of an insulated container is advisable. When you arrive home place the frozen food in the ****** compartment immediately.
- Keep the time between buying chilled food and placing it in your fridge as short as possible.
- Do not push food together too much, try to allow air to circulate around each item.
- Do not store food uncovered.
- Remove suspect food from your refrigerator and clean, refer to cleaning and maintenance.

Energy Saving Advice

- Do not install the appliance close to sources of heat, such as a cooker, dishwasher or radiator.
- Locate the appliance in a cool well ventilated room and make sure that the air openings of the cabinet are not obstructed
- Always leave warm food to cool down to room temperature before placing in the fridge or ****** compartment.
- Thaw frozen food in the fridge. This will ensure safer defrosting of foods and reduce the work of the refrigeration unit.

- Try to avoid keeping the door open for long periods, or opening the door too frequently as warm air will enter the cabinet, and cause the compressor to switch on unnecessarily often.
- Ensure there are no obstructions preventing the door from closing properly.
- It is advisable to periodically clean the refrigeration system at the back of the appliance with a duster or vacuum cleaner.

In the Event of a Power Failure

If there is a power failure during the storage of frozen foods, keep the door closed. If the temperature within your ****** compartment should rise do not refreeze the food without checking it's condition. The following guidelines should assist you:

Ice Cream: Once thawed should be discarded.

Fruit and Vegetables: If soft should be cooked and used up.

Bread and Cakes: Can be refrozen without danger.

Shellfish: Should be refrigerated and used up quickly.

Cooked Dishes: i.e. casseroles, should be refrigerated and used up.

Large Pieces of Meat: Can be re-frozen providing there are ice crystals remaining within them.

Small Joints: Should be cooked and then re-frozen as cooked dishes.

Chicken: Should be cooked and re-frozen as a fresh dish.

MAINTENANCE AND CLEANING



Before any maintenance or cleaning work is carried out DISCONNECT the appliance from the ELECTRICITY supply

Internal Cleaning

Clean the inside and accessories with warm water and bicarbonate of soda (5ml to 0.5 litre of water). Rinse and dry thoroughly.



Do not use detergents, abrasive powers, highly perfumed cleaning products, wax polishes or cleaning products containing bleach or alcohol.

Regularly check the door seals and wipe clean to ensure they are clean and free from debris.

External Cleaning

 
Wash the outer cabinet with warm soapy water.



Do NOT use abrasive products.


There are sharp edges on the underside of the product so care should be taken when cleaning.

Once or twice a year dust the condenser (black grille) and the compressor at the back of the appliance, with a brush or vacuum cleaner, as an accumulation of dust will affect the performance of the appliance and cause excessive electricity consumption.

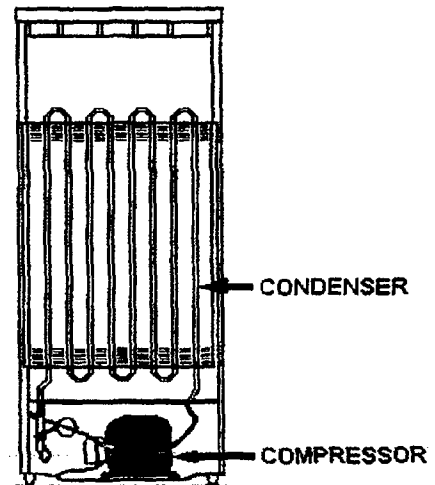

To Change the Light Bulb

 1. Switch off the appliance and disconnect from the electricity supply.
2. Remove the defrost tray.
3. Remove the light cover by removing the screw at the rear with a screwdriver.
4. Pull the cover outwards towards the middle of the cabinet.
5. Unscrew the bulb and replace it with a new 15 watt E14 SES bulb (available from your local Service Force Centre).
6. Replace the cover by sliding it into its original position.
7. Replace the screw.
8. Replace the defrost tray.

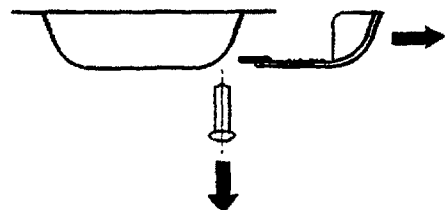

DEFROSTING YOUR APPLIANCE

 
Regular defrosting is necessary to ensure efficient operation of the refrigerator.

WE RECOMMEND YOU DEFROST FORTNIGHTLY TO ENSURE EFFICIENT OPERATION.

Frost will build in the frozen food compartment. This is due to moisture in the air which enters the refrigerator when the door is open and moisture from the stored food.

To Defrost the ****compartment**

1. Wrap any food in layers of newspaper or blankets.
2. Switch the appliance off at the wall socket and remove the plug
3. Push the defrost tray completely in.
4. Place a suitable container onto the top shelf in the appliance under the defrost tray to collect the defrost water.
5. Leave the refrigerator door open. The frost will quickly melt away and the defrost water will collect in the container under the defrost tray.
6. When the compartment is completely free of frost, remove and empty the container holding the defrost water, also remove the defrost tray.
7. The interior of the frozen food compartment and cabinet may be wiped out using a solution of bicarbonate of soda and water, and then dried as described under 'internal cleaning'.
8. Ensure the control dial is in its normal position. SWITCH ON at the electricity supply.
9. Replace all fitments and food. Close door.

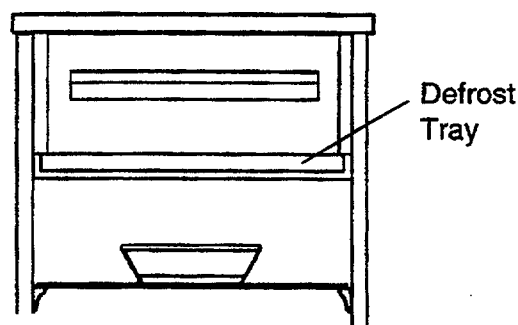

- Defrosting can be speeded up by putting bowls of hot (not boiling) water in the ****** compartment and loosening the frost with a suitable plastic scraper.
- If the temperature of frozen food is allowed to rise during defrosting, its storage life may be shortened.

When the Appliance is Not in Use

When the appliance is not in use for long periods, disconnect from the electricity supply, empty all of the food and clean the appliance, leaving the door ajar to prevent unpleasant smells.

WHAT HAPPENS IF SOMETHING GOES WRONG

BEFORE contacting your local Service Force Centre, check the following points:

Symptom	Solution
No power to the appliance	Check there is power at the socket.
	Check there is not a power cut by checking the household lights.
	Check the fuse has not blown.
The light does not come on	Ensure that the bulb is correctly fitted.
	Replace the bulb if it has blown.
	Check the door light switch is not jammed.
The temperature in the fridge or ** compartment section is too high	Check the thermostat is turned to the correct setting relative to ambient conditions.
	Check the ambient temperature is within the appliances operating limits of 16°C to 32°C.
	Relocate the appliance if necessary.
The compressor runs continuously	Adjust the thermostat to give correct temperature control. See page 6.
	Check that the door is closed.
	Large quantities of food have recently been placed in the cabinet / and or door is frequently opened.
	Check that air ventilation is not obstructed.
Excessive frost and ice has built up	Ensure the door is not left open.
	Check that nothing is preventing the door from closing
	Is the door gasket intact and clean.
	Has advised periodic defrosting been carried out.
Noise	Refer to normal operating sounds.

If after the above checks there is still a fault call your local Service Force Centre.

In-guarantee customers should ensure that the above checks have been made as the engineer will make a charge if the fault is not a mechanical or electrical breakdown.

Please note that proof of purchase is required for in-guarantee service calls.

Service and Spare Parts

If you require service or spare parts please contact your local Service Force Centre by telephoning:

0990 929929

The address of your local centre can be found on the following pages; and also in your local telephone directory.

Before contacting your local Service Force Centre make a note of the model and serial number, together with date of purchase. The service department will require this information.

The model and serial number can be found on the rating plate situated inside the cabinet.

To contact your local Electrolux Service Centre telephone **0990 929929**

CHANNEL ISLANDS

GUERNSEY
Guernsey Electricity
PO Box 4
Vale, Guernsey
Channel Islands

JERSEY
Jersey Electricity
Company
PO Box 45
Queens Road
St Helier
Jersey
Channel Islands
JE4 8NY

SCOTLAND

ABERDEEN
(M05)
8 Cornhill Arcade
Cornhill Drive
Aberdeen
AB2 5UT

AUCHTERMUCHY
(M03)
33A Burnside
Auchtermuchy
Fife
KY14 7AJ

BLANTYRE
(M07)
Unit 5
Block 2
Auchenraith Ind Estate
Rosendale Way
Blantyre
G72 0NJ

DUMFRIES
(M01)
93 Irish Street
Dumfries
Scotland
DG1 2PQ

DUNOON
(M67)
Briar Hill
7 Hill Street,
Dunoon
Argyll
PA23 7AL

GLASGOW
(M04)
20 Cunningham Road
Clyde Estate
Rulherglen,
Glasgow,
G73 1PP

INVERNESS
(M06)
Unit 3B
Smithton Indust. Est.
Smithton
Inverness
IV1 AJ

ISLE OF ARRAN
(OWN SALES)
Arran Domestic
Unit 4 The Douglas
Centre
Brodick
Isle of Arran
KA27 8AJ

ISLE OF BARRA
(OWN SALES)
J Zerfah
244 Bruernish
Isle of Barra
Western Islands
HS9 5QY

ISLE OF BUTE
(M66)
Walker Engineering
Glenmhor
Upper Serpentine Road
Rothsay
Isle of Bute
PA20 9EH

ISLE OF LEWIS
(M69)
ND Macleod
16 James Street
Stornoway
Isle of Lewis PA87 2QW

KELSO
(M08)
2-8 Wood Market
Kelso
Borders TD5 7AX

ORKNEY
(M65)

Corsie Domestic
7 King Street
Kirkwall
Orkney KW15

SHETLAND
(OWN SALES)
Tait Electronic Systems
Ltd.
Holmsgarth Road
Lerwick
Shetland ZE1 0PW

SHETLAND
(OWN SALES)
Bolts Shetland Ltd
26 North Road
Lerwick
Shetland ZE1 0PE

WHALSAY
(OWN SALES)
Leask Electrical
Harisdale
Symbister, Whalsay
Shetland ZE2 9AA

NORTHERN IRELAND

BELFAST
(M27)
Owenmore House
Kilwee Industrial Estate
Upper Dunmurry Lane
Belfast
BT17 0HD

WALES

CARDIFF
(M28)
Guardian Industrial
Estate
Clydesmuir Road
Tremorfa, Cardiff
CF2 2QS

CLYWD
(M14)
Unit 6-7 Coed - Parc
Abergele Road
Rhuddian
Clwyd
Wales
LL18 5UG

OSWESTRY
(M17)
Plas Ffynnon
Warehouse
Middleton Road
Oswestry
SY11 2PP

HAVERFORDWEST
(M75)
Cromlech Lodge
Amerslton
Haverfordwest
SA62 5DS

NORTH EAST

GATESHEAD
(M39)
Unit 356a
Dukesway Court
Dukesway
Team Valley
Gateshead
NE11 0BH

GRIMSBY
(M42)
Unit 2
Cromwell Road
Grimsby
South Humberside
DN31 2BN

HULL
(M41)
Unit 1
Boulevard Industrial
Estate
Hull
HU3 4AY

LEEDS
(M37)
64-66 Cross Gates Road
Leeds
LS15 7NN

NEWTON AYCLIFFE
(M45)
Unit 16
Gurney Way
Aycliffe Ind Estate
Newton Aycliffe
DL5 6UJ

SHEFFIELD
(M38)
Pennine House
Roman Ridge Ind.
Roman Ridge Road
Sheffield
S9 1GB

NORTH WEST

BIRKENHEAD
(M11)
1 Kelvin Park
Dock Road
Birkenhead
L41 1LT

CARLISLE
(M10)
Unit 8
South John Street
Carlisle
CA2 5AJ

ISLE OF MAN
(M64)
South Quay Ind Estate
Douglas
Isle of Man

LIVERPOOL
(M15)
Unit 1
Honeys Green Precinct
Honeys Green Lane
Liverpool
L12 9JH

MANCHESTER
(M09)
Unit 30, Oakhill Trading
Estate
Devonshire Road
Worsley
Manchester
M28 3PT

PRESTON
(M13)
Unit 250
Dawson Place
Walton Summit
Bamber Bridge
Preston
Lancashire
PR5 8AL

STOCKPORT
(M16)
Unit 20 Haigh Park
Haigh Avenue
Stockport
SK4 1QR

To contact your local Electrolux Service Centre telephone **0990 929929**

MIDLANDS

BIRMINGHAM (M18)	66 Birch Road East, Wyrley Road Industrial Estate Witton Birmingham B6 7DB
BOURNE (M44)	Manning Road Ind Estate Pinfold Road Bourne PE10 9HT
BRIDGNORTH (M72)	1 Underhill Street Bridgnorth Salop WV16 4BB
GLOUCESTER (M23)	101 Rycroft Street Gloucester GL1 4NB
HEREFORD (M31)	Unit 3 Bank Buildings Cattle Market Hereford HE4 9HX
HIGHAM FERRERS (M51)	The Old Barn Westfield Terrace Higham Ferrers NN10 8BB
ILKESTON (M43)	Unit 2 Furnace Road Ilkeston DE7 5EP
LEICESTER (M22)	Unit 23-24 Alliance Business Pk Townsend Drive Nuneaton Warwickshire CV11 6RX
LINCOLN (M40)	Unit 8 Stonefield Park Clifton Street Lincoln LN5 8AA
NEWCASTLE UNDER LYME (M12)	18-21 Croft Road Brampton Industrial Estate Newcastle under Lyme Staffordshire ST5 0TW
NUNEATON (M21)	19 Plarmigan Place Townsend Drive Nuneaton CV11 6RX
REDDITCH (M20)	Heming Road Washford Redditch Worcestershire B98 0DH
TAMWORTH (M19)	Unit 3 Sterling Park Claymore Tamworth B77 5DO
WORCESTER (M73)	Unit 1 Northbrook Close Gregorys Mill Ind Estate Worcester WR3 8BP

LONDON & EAST ANGLIA

CHELMSFORD (M47)	Hanbury Road Widford Ind Estate Chelmsford Essex CM12 3AE
COLINDALE (M53)	Unit 14 Capitol Park Capitol Way Colindale London NW9 0EQ
ENFIELD (M49)	284 Alma Road Enfield London EN3 7BB
GRAVESEND (M57)	Unit B4, Imperial Business Estate Gravesend Kent DA11 0DL
HARPENDEN (M46)	Unit 4 Riverside Estate Coldharbour Lane Harpenden AL5 4UN
LETCHWORTH (M50)	16-17 Woodside Ind Est. Works Road Letchworth Herts SG6 1LA
LONDON (M76)	66 Paddenswick Road Hammersmith London W6 0UB
MAIDENHEAD (M60)	Reform Road Maidenhead Berkshire SL6 8BY
MOLESEY (M61)	10 Island Farm Avenue West Molesey Surrey KT8 2UZ
NEWBURY (M24)	PO Box 5627 Newbury Berkshire RG14 5GF
IPSWICH (M48)	Unit 2B Elton Park Business Centre Hadleigh Road Ipswich IP2 0DD
NORWICH (M52)	2b Trafalgar Street Norwich NR1 3HN
SUNBURY (M63)	Unit 1a The Summit Hanworth Road Hanworth Ind Estate Sunbury on Thames TW16 5D
SYDENHAM (M62)	Unit 6 Metro Centre Kangley Bridge Road Sydenham SE26

SOUTH EAST

ASHFORD (M58)	Unit 2 Bridge Road Business Estate Bridge Road Ashford Kent TN2 1BB
FLEET (M59)	Unit 1 Redfields Industrial Estate Church Crookham Fleet Hampshire GU13 0RD
HAYWARDS HEATH (M55)	21-25 Bridge Road Haywards Heath Sussex RH16 1UA
TONBRIDGE (M56)	Unit 30 Deacon Trading Estate Morley Road Tonbridge Kent TN9 1RA

SOUTH WEST

BARNSTAPLE (M30)	P.O. Box 12 Barnstaple North Devon EX31 2YB
BOURNEMOUTH (M26)	63-65 Curzon Road Bournemouth Dorset BH1 4PW
BRIDGEWATER (M35)	6 Hamp Industrial Estate Bridgewater Somerset TA6 3NT
BRISTOL (M25)	11 Eldon Way Eldonwall Trading Bristol Avon BS4 3QQ
EMSWORTH (M33)	266 Main Road Southbourne Emsworth PO10 8JL
ISLE OF WIGHT (M34)	Unit 8 Enterprise Court Ryde Business Park Ryde Isle of Wight PO33 1DB
NEWTON ABBOT (M29)	Unit 2 Zealley Industrial Estate Kingsteignton Newton Abbot S. Devon TQ12 3TD
PLYMOUTH (M32))	16 Faraday Mill Cattledown Plymouth PL4 0ST
REDRUTH (M36)	Unit 7D Pool Industrial Estate Wilson Way, Redruth, Cornwall TR15 3QW

INSTALLATION INSTRUCTIONS

Technical Information

DIMENSIONS

HEIGHT: 85.0cm (33.4")

WIDTH: 45.0cm (17.7")

DEPTH: 60.0cm (23.6")

CAPACITY

GROSS: Fridge: 112 litres
** Compartment 9 litres

NET: Fridge: 103 litres
** Compartment 9 litres

POWER ABSORBED: 90W

VOLTAGE: 230 - 240V

FREQUENCY: 50Hz

AVERAGE DAILY UNITS OF ELECTRICITY: 0.69Kwh *

* THIS FIGURE IS BASED ON STANDARD TEST RESULTS IN THE EUROPEAN STANDARD EN153. ACTUAL CONSUMPTION WILL DEPEND ON HOW THE APPLIANCE IS USED AND WHERE IT IS LOCATED.



This appliance complies with the following E.E.C Directives:
73/23 EEC of 19.2.73 (Low Voltage Directive) and subsequent modifications;
89/336 EEC of 3.5.89 (Electromagnetic Compatibility Directive) and subsequent modifications.



It is dangerous to alter the specifications or attempt to modify this product in any way.

Electrical Connections



Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.

This appliance must be earthed.

The manufacturer declines any liability should these safety measures not be observed.


Electrical Requirements

Before switching on, make sure the electricity supply voltage is the same as that indicated on the appliance rating plate.

The appliance is supplied with a 13 amp plug fitted. In the event of having to change the fuse in the plug supplied, a 13 amp ASTA approved (BS1362) fuse must be used.

Should the plug need to be replaced for any reason. The wires in the mains lead are coloured in accordance with the following code:


Green and Yellow	: Earth
Blue	: Neutral
Brown	: Live

The wire coloured green and yellow must be connected to the terminal marked with the letter "E" or by the earth symbol  or coloured green and yellow.

The wire coloured blue must be connected to the terminal marked "N" or coloured black.

The wire coloured brown must be connected to the terminal marked "L" or coloured red.

 Upon completion there must be no cut, or stray strands of wire present and the cord clamp must be secure over the outer sheath.

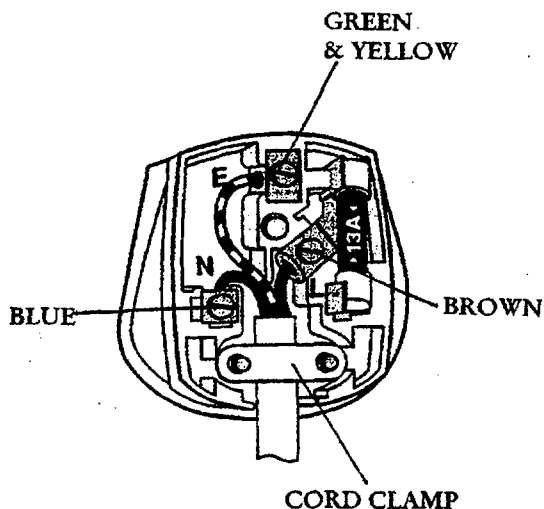


Installation Requirements

To ensure correct operation this appliance must not be located where the temperatures will fall below 16°C (60°F) or rise above 32°C (90°F).

Avoid the following locations: unheated kitchen, outhouse, conservatory, garage.

For correct operation this appliance must be installed.

 - In a dry atmosphere.
- Out of direct sunlight.
- Away from extreme temperature (not next to a cooker or other sources of heat).
- Your appliance will be heavy when loaded with food and must therefore be stood on a strong firm floor.

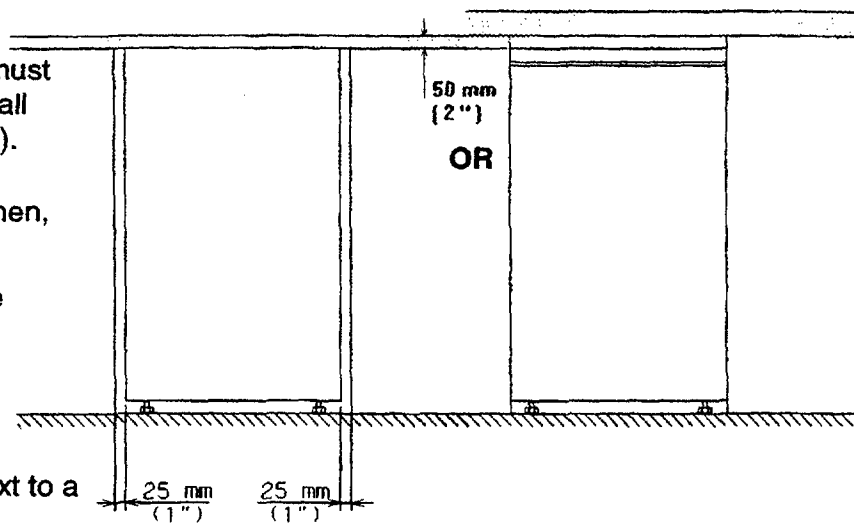


Ventilation Requirements

- Gently push into place until the top panel rear ventilation grille touches against the wall.
- When in position a 50 mm (2") clear space above the appliance should be maintained.
- If space above the appliance is not available, clearance of 25mm (1") should be maintained on both sides.



Ensure that the appliance does not stand on the electrical supply cable.

 
Parts which heat up should not be exposed. Whenever possible, the back of the appliance should be close to a wall but leaving the required distance for ventilation.

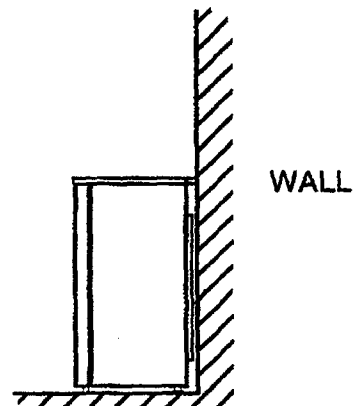

Levelling

The appliance should be level, to eliminate rocking:

 - Ensure the appliance is upright and both adjusters are in firm contact with the floor so that the cabinet is level.
- Adjust the level by screwing out the appropriate level adjuster at the front, (use your fingers or a suitable spanner).

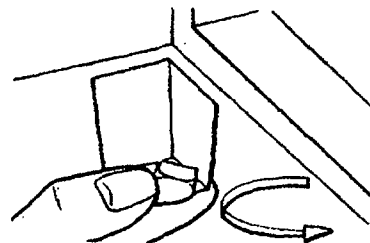


This appliance is heavy. Care should be taken when moving it.

Door Reversal



1. Disconnect the appliance from the electricity supply.
2. Remove all loose items, including food. Store food in a cool place.
3. Make sure a towel or cloth is at the base of the product to prevent it from slipping.
4. Carefully lean the appliance backwards, resting the top on a stool, or something similar, at least 30cm (12") from the floor.



 Do not support the appliance on the rear ventilation grille or condenser.

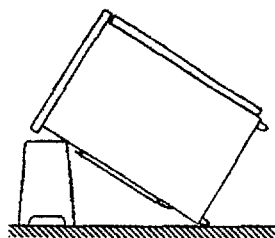

5. Remove level adjuster (A) from the small foot assembly. The small foot (B) can now be removed by removing screw (C). In order to remove the large foot/hinge assembly (D) screws (E, F & G) should be removed making sure that spacer (H) is retained with the assembly.
6. Carefully disengage the door from the upper hinge pin. (J).
7. Unscrew the upper hinge pin (J) and transfer it to the opposite side.
8. Refit the door, engaging the top with the upper hinge pin in its new position.
9. Pull out the lower hinge pin (I) which may have come away with the hinge blade or remained in the door. Push the pin (rounded end) into the bush at the bottom of the door on the side opposite to its original position.
10. Taking care not to press down on the door, the large foot/hinge assembly should be transferred over to the opposite side of the cabinet and screws, G, E, and F moved over to their new positions in the hinge foot.
11. It is important that the spacer (H) is retained with screw (E) in the channel between the base of the appliance and the foot/hinge when screwing the assembly into its new position.
12. Refit the small foot, positioning the screw in the hole furthest from the cabinet front on the flat portion of the base.
13. Replace the level adjuster (A) in the small foot.
14. Stand the appliance upright.

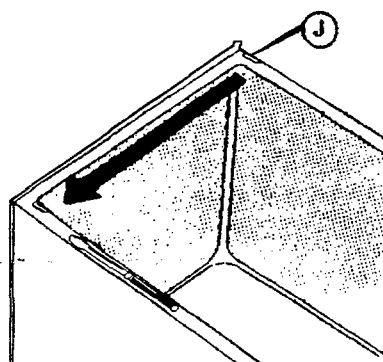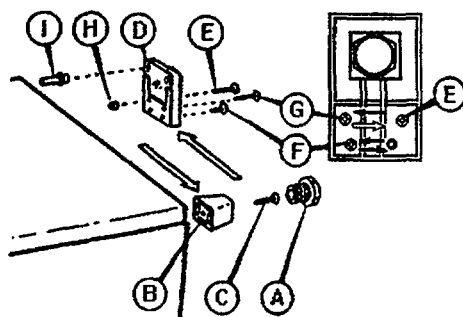  



Door Adjustment

 


Occasionally door adjustment may be necessary i.e. if a slight clearance is noticeable between the door gasket and cabinet. This condition is mainly due to uneven floors or the loading of the door. It is possible to adjust the door at the hinge point (fig.7) as follows:



*Before this operation is carried out
DISCONNECT the appliance from the
ELECTRICITY supply*

1. With the appliance standing on a level surface, check that the door opens and closes properly and seals all around.
2. If adjustment of the door is necessary this can be done by loosening the screw (A) securing the hinge blade to the foot and, adjusting the hinge blade and door in and out, a little at a time, to tighten or loosen the fit. Re-tighten the screw each time an adjustment has been made before again checking for satisfactory door closure.

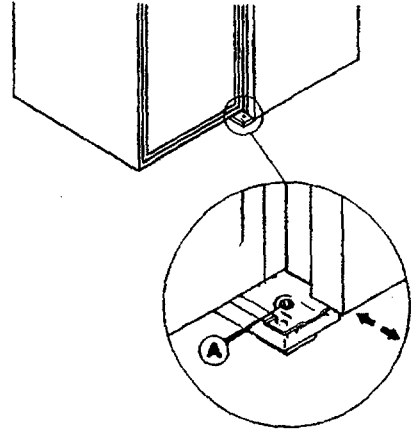

Standard guarantee conditions

We, Electrolux, undertake that if within 12 months of the date of the purchase this Electrolux appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our option repair or replace the same **FREE OF CHARGE** for labour, materials or carriage on condition that:

- The appliance has been correctly installed and used only on the electricity supply stated on the rating plate.
 - The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's instructions.
 - The appliance has not been serviced, maintained, repaired, taken apart or tampered with by any person not authorised by us.
 - All service work under this guarantee must be undertaken by an Electrolux service centre.
 - Any appliance or defective part replaced shall become the Company's property.
 - This guarantee is in addition to your statutory and other legal rights.
- Home visits are made between **8.30am** and **5.30pm** Monday to Friday. Visits may be available outside these hours in which case a **premium** will be charged.

Exclusions

This guarantee does not cover:

- Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic.
- Costs incurred for calls to put right an appliance which is improperly installed or calls to appliances outside the United Kingdom.
- Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements.
- Products of Electrolux manufacture which are not marketed by Electrolux.

European Guarantee

If you should move to another country within Europe then your guarantee moves with you to your new home subject to the following qualifications:

- The guarantee starts from the date you first purchased your product.
- The guarantee is for the same period and to the same extent for labour and parts as exists in the new country of use for this brand or range of products.
- This guarantee relates to you and cannot be transferred to another user.
- Your new home is within the European Community (EC) or European Free Trade Area.
- The product is installed and used in accordance with our instructions and is only used domestically, i.e. a normal household.
- The product is installed taking into account regulations in your new country.

Before you move please contact your nearest Customer Care centre, listed below, to give them details of your new home. They will then ensure that the local Service Organisation is aware of your move and able to look after you and your appliances.

France	Senlis	+33 (0)3 44 62 28 28
Germany	Nürnberg	+49 (0)911 323 260
Italy	Pordenone	+39 (0)1678 47053
Sweden	Stockholm	+46 (0)20 78 77 50
UK	Newbury	+44 (0)1635 525 542

