



Benutzerinformation
Notice d'utilisation
Istruzioni per l'uso
User manual

Weinkühler
Armoire à vins
Refrigeratore per vino
Wine Cooler

SC361W10

We were thinking of you

when we made this product

Welcome to the world of Electrolux

Thank you for choosing a first class product from Electrolux, which hopefully will provide you with lots of pleasure in the future. The Electrolux ambition is to offer a wide variety of quality products that make your life more comfortable. You find some examples on the cover in this manual. Please take a few minutes to study this manual so that you can take advantage of the benefits of your new machine. We promise that it will provide a superior User Experience delivering Ease-of-Mind. Good luck!

The following symbols are used in this manual:



Important information concerning your personal safety and information on how to avoid damaging the appliance




General information and tips



Environmental information

Scrapping old appliances

 The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Safety instructions

Your new Wine cooler may have other functions compared to your previous one. Carefully read these instructions to learn how the appliance works and how to care for it. Keep the instruction booklet. It will come in handy if you later sell the cabinet or give it to somebody else.

These warnings are provided in the interests of your safety. Ensure that you understand them all before installing or using the appliance. Your safety is of paramount importance. If you are unsure about any of the meanings or warnings contact the Customer Care Department.

For the User

- The cabinet is intended for keeping beverages in a normal household as explained in this instruction booklet.
- Do not keep explosive gases or liquids in the refrigerator. They may explode and cause injury and material damage.
- Do not let sharp objects come into contact with the refrigerating system on the back of and inside the cabinet. If the refrigerating system is punctured, the cabinet will be damaged and foodstuff inside may spoil.
- The cabinet is heavy. The edges and projecting parts of the cabinet may be sharp. Be careful when moving the cabinet and always use gloves.

Child Safety

- Pay attention so that small children do not gain access to the operating controls or the inside of the cabinet.

Contents

 
Scrapping old cabinets	62	Removing the ventilation grille	69
Safety instructions	63	Cleaning	69
Contents	64	To change the lamp	70
USE	65	Defrosting the wine cooler	70
Control Panel	65	When the appliance is not in use ..	70
To start the wine cooler and set the correct temperature	66	SOMETHING NOT WORKING	70
Temperature inside the wine cooler	66	Technical specification	72
Wine Placement		INSTALLATION	72
Storage tips	66	Electrical cord	72
Measuring the temperature	67	Unpacking	73
Switching off	67	Remove the transport supports ...	73
Alarms and other features	67	Cleaning	73
Lighting	67	Electrical connection	73
Cabinet interior	68	Installing the cabinet	73
HINT and TIPS	68	Door Reversal	75
Saving energy	68	Guarantee/Customer Service	76
Food Storage	68	EUROPEAN GUARANTEE	77
Protect the environment	68	www.electrolux.com	78
MAINTENANCE and CLEANING ..	69		

USE


Position and clean the cabinet as explained in the section "Installation". Check that the drain hose at the rear of the cabinet discharges into the drip tray.



Before inserting the power plug into the outlet and switching on the cabinet for the first time, leave it standing upright for about 4 hours. Otherwise the compressor may sustain damage. This time will allow the oil sufficient time to return to the compressor.

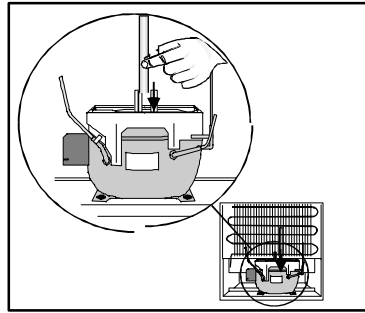

Control Panel

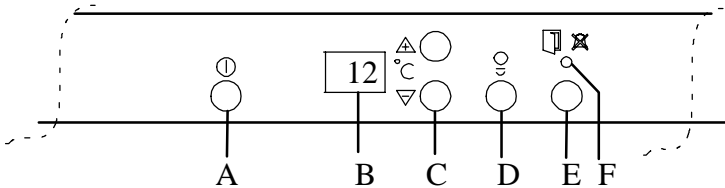 


- A. Wine cooler power switch**
Switches the wine cooler on and off.
- B. Temperature display**
Shows the average temperature in the middle of the wine cooler.
- C. Temperature adjustment buttons/thermostat**
Used to set the temperature.
- D. Lighting**
- E. Alarm shut-off button**
Used to turn the audible alarm off.
- F. Red warning lamp**
Flashes when the alarm in the cabinet has been triggered.

To start the wine cooler and set the correct temperature

Switching on:

 Switch on the wine cooler by pressing the power switch.




Setting the temperature

Press the buttons until the desired temperature flashes in the temperature display (The temperature can be set between +6°C and +17°C.)

"+" raises the temperature.

 "-" lowers the temperature.



Once set, the temperature display shows the current temperature inside the cabinet.

 
NOTE: The controllable area is limited by a room temperature of 17°C or below.

Allow the cabinet to run for a period of 24 hours whenever the temperature setting is changed. This will allow the temperature to stabilise inside the cabinet.

It is not necessary to reset the temperature when the cabinet is switched on after it has been out of use. The thermostat recalls the previously set temperature.

Temperature inside the wine cooler

NOTE: The picture shows the coldest and warmest places inside the fridge. (+ warm, - cold)

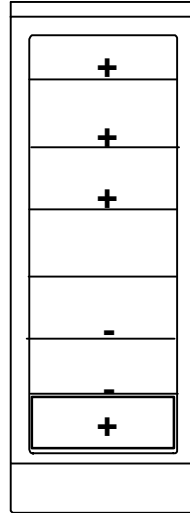

Wine Placement Storage tips

The amount of time to store wine depends on its maturity, type of grape, alcohol content, and dissolved fructose and tannins. When purchasing your wine, find out whether it is mature or if it will improve over time.

In the lower part of the cooler. Cold air prolongs the time to maturity. Accordingly, store old and mature wine as well as wine you would like to store for a long time in the lower portion of the cooler. The lower part should also be used to store wine that is to be served cold.

In the upper part of the cooler. In the upper part, store wine that you wish to let further mature, wines that are served at a warmer temperature, and those wines you intend to consume relatively soon.

Store the bottles lying down so that the corks do not dry out.

Store the wine in the dark. The cooler doors are made with double-paned glass with a dark coating. This will protect the wine against light damage if the cooler is placed in a well-lit area.

Avoid turning on the light in the cooler too often or for too long. The wine should be stored in the dark.

Handle the bottles with care, so that the wine is not agitated.

Heed any advice and recommendations given at the time of purchase or in the professional literature concerning the wine's quality, durability and optimal storage temperature.

 
Recommended storage temperatures:

- for white wines +10 to +12°C
- for rosé wines and light red wines +12 to +16°C
- for champagne and sparkling wines +6 to +8°C

If you stack several bottles on top of one another, make sure they do not touch the cabinet's cooling plate.

Measuring the temperature

If the temperature is measured using a standard, single thermometer, this should be put in a glass of water centrally placed inside the cabinet. This will reflect the temperature inside the food products. Do not place the thermometer hanging or lying directly on the shelf.

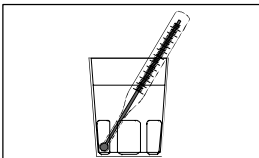

Switching off

Switch off the cabinet by pressing the power switch. Keep the button pressed for approx. 1 second.



Power to the cabinet is completely interrupted only when the power plug is disconnected.

 
Alarms and other features

Door open alarm

If the fridge door remains open for more than 5 minutes, the red warning lamp starts flashing and an audible alarm sounds.


To switch off the alarm:

Press the "alarm shut-off button". The red warning lamp goes out when the door is closed.



Lighting

 The cooler lighting may be turned on with the door closed. This makes it easy to survey the contents of the cooler without opening the door. The cooler lighting should normally be off, so that the wine is not unduly exposed to light. The lighting turns off automatically after about 5 minutes.



Cabinet interior

The shelves may be placed flat or at an angle.

Angle the shelf by placing the front pegs in a lower set of tracks. You can store already opened bottles on the shelf in this position.

HINT and TIPS

 
Saving energy

- Pay careful attention to where the cabinet is placed. See the section "Installation". When installed correctly, the cabinet will consume less energy.
- Try to avoid keeping the door open for long periods, or opening the door too frequently as warm air will enter the cabinet, and cause the compressor to switch on unnecessarily often.
- Ensure there are no obstructions preventing the door from closing properly.
- It is advisable to periodically clean the refrigeration system at the back of the appliance with a duster or vacuum cleaner.
- Make sure the door gasket is complete and always clean.

Food Storage

- To obtain the best results from your appliance, neither hot foods nor liquids which may evaporate, should be placed in the larder compartment.
- Avoid buying frozen food if you can not store it straight away. The use of an insulated container is advisable. When you arrive home place the frozen food in the freezer immediately.
- Ensure that food placed in the

The drawer has two moveable partitions.

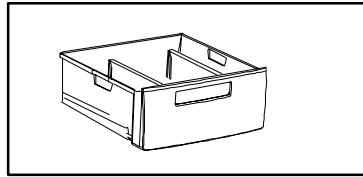

freezer is dated and labelled and used in date order to ensure that food is consumed at its best. Remove suspect food from your refrigerator and clean, refer to cleaning and maintenance.

Protect the environment

 
- Hand over the cabinet packaging and discarded fridges and freezers to a recycling station. Contact your local city office or your closest dealer for more information.
- When cleaning the cabinet, use a mild washing-up detergent.
- Follow the advice in the section "Saving energy"
- The door gasket and coolant used in this cabinet will not harm the ozone layer.
- All parts in the packaging can be recycled.
- The cabinet has been designed for easy dismantling and subsequent recycling.

MAINTENANCE and CLEANING

Removing the ventilation grille

The ventilation grille can be removed, e.g. to wash the grille.

Make sure the door is open when removing the ventilation grille. Unsnap the upper edge of the grille by pulling outward/downward. Then pull the grille straight out to completely remove it.

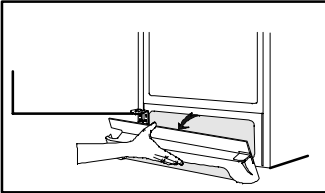


Cleaning

Clean the cabinet at regular intervals.

Disconnect the appliance from electricity supply.

 Clean out the drip channel inside the wine cooler at regular intervals and ensure that the drip channel is clear at all times. If blocked carefully clear using a piece of flexible curtain wire inserted into the drain outlet to remove the blockage.

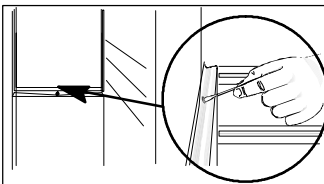

Clean the inside and accessories with warm water and bicarbonate of soda (5ml to 0,5 litre water) Rinse and dry thoroughly.

Regularly check the door seals and wipe clean to ensure they are clean and free from debris.

 
Drawer.

Pull out drawer.


Lift it over the locks in back on the sliding guides. Tip drawer downwards and pull it out.

Clean.


Assemble in reverse order.

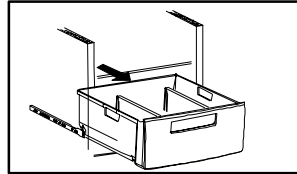

 Clean off the interior wooden details with a moist rag and mild kitchen soap. Do not soak the wood.

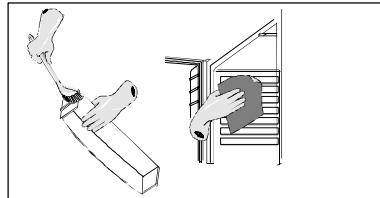

Wash the outer cabinet with warm soapy water. Remove the ventilation grille (see the section "Removing the ventilation grille") and vacuum-clean under the cabinet. Once or twice a year dust the condenser (black grille) and the compressor at the back of the appliance, with a brush or vacuum cleaner, as an accumulation of dust will affect the performance of the appliance and cause excessive electricity consumption.

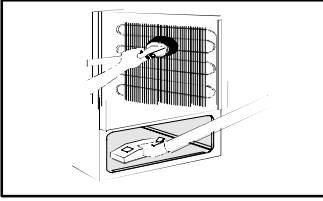 


When moving the cabinet, lift it by the door to avoid scratching the floor.

To change the lamp

Before replacing the light bulb, disconnect the power plug from the outlet.

Fold the grille backward by unsnapping the front edge.

 Use a bulb of the same type, E14 socket, maximum rating of 25 W.

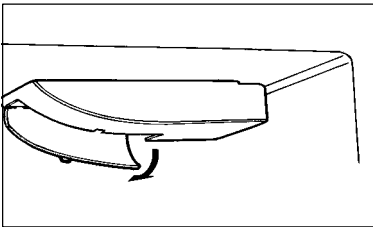

Defrosting the wine cooler

The wine cooler is defrosted automatically every time the compressor stops. Frost formation can be prevented by:

- not putting warm foodstuff inside the cabinet.
- avoiding frequently opening the door or keeping it open too long.

When the appliance is not in use

Disconnect the appliance from electricity supply.

If the cabinet will be kept on, ask somebody to check it once in a while to prevent the food inside from spoiling in case of a power failure.

Empty all foods and clean the appliance, leaving the doors ajar to prevent unpleasant smells.

SOMETHING NOT WORKING

Before contacting your local Service Force Centre check the following point:

Problem	Possible cause / Remedy
<p>”E” is displayed in the temperature display.</p>	<p>An error has occurred in measuring the temperature. Call your service representative. (The cooling system will continue to keep food products cold, but temperature adjustment will not be possible.)</p>
<p>It is too warm inside the wine cooler.</p>	<p>Set a lower temperature. Make sure that the door is completely closed and that the insulating strip is complete and clean.</p>

<p>It is too warm inside the wine cooler.</p>	<p>Set a lower temperature. Make sure that the door is completely closed and that the insulating strip is complete and clean.</p>
<p>It is too cold inside the wine cooler.</p>	<p>Set a warmer temperature.</p>
<p>There is water on the cooling plate inside the wine cooler.</p>	<p>This is normal. During automatic defrosting, frost thaws on the cooling plate.</p>
<p>Water is running inside the wine cooler.</p>	<p>Clean the water drain and drain hole inside the wine cooler using e.g. cotton swabs or a bottle cleaner brush. Some food products could have been placed near the rear of the appliance preventing the water from running into the drain.</p>
<p>Water comes out on the floor.</p>	<p>Place the drain hose at the back of the cabinet above the drain bowl. See the chapter "Before using the cabinet the first time".</p>
<p>The cabinet does not operate at all. Cooling or interior light does not operate. No indicator lamps light.</p>	<p>The cabinet is not switched on. Power does not reach the cabinet. (Try connecting another electrical device to the power outlet.) The fuse has blown. The power plug is not properly connected.</p>
<p>The compressor operates continuously.</p>	<p>Set a warmer temperature. Make sure that the door is completely closed and that the insulating strip is complete and clean.</p>

<p>Sound level in cabinet is too high.</p>	<p>The refrigerating system will always produce some sounds. A pulsing sound is heard when coolant is pumped inside the cooling pipes. A ticking sound from the thermostat can be heard when the compressor switches on and off. The sound level varies depending on the operation of the cabinet.</p> <p>If you feel the sound level is incorrect: Make sure the pipes at the back of the cabinet not touch each other. Carefully bend them if they do.</p> <p>If the cushion spacers (between the cabinet wall and pipes) come loose, put them back in place again.</p> <p>Carefully follow the instructions in the chapter "Installing the cabinet".</p>
--	---

TECHNICAL SPECIFICATION

Model	SC361W10
Net capacity Refrigerator l	361
Dimension mm	
Height	1800
Width	595
Depth	623

INSTALLATION

Electrical cord

Do not remove the power cord by pulling on its lead, particularly when the product is being pulled out of its niche.

- Damage to the cord may cause a short-circuit, fire and/or electric shock.
- In the event of damage to the appliance's main cable, only an authorised service company recommended by the manufacturer or a similarly qualified person may adjust it in order to avoid shock hazard for the user.

Unpacking

Unpack the cabinet and check that it is in good condition and free of any transport damage. Notify the dealer immediately of any damage. Hand the packaging over for recycling. For more information, contact your local city office or the dealer.



 
Do not allow children to play with the packaging. The plastic film can cause suffocation.

Remove the transport supports

Remove the tape and the transport supports from


- the door sides
- inside the door hinges
- the shelves

Remove the transport hinge.

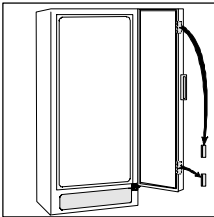

Mounting the handle

 The handle is included in the packaging material of the cabinet. Secure the handle.

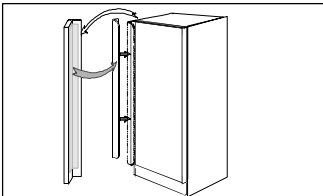

Cleaning

Wash the inside of the cabinet using lukewarm water, a mild washing-up detergent and a soft cloth. Clean off the interior wooden details with a moist rag and mild kitchen soap. Do not soak the wood.

Electrical connection

Connect the cabinet to a grounded electrical outlet.

Voltage: 230 V.

Fuse: 10 A.

Refer to the rating plate on the left inside the cabinet.

Installing the cabinet

Make sure that the power plug is not squashed or damaged by the back of the product.

- A damaged power plug may overheat and cause a fire.

Do not place heavy articles or the product itself on the power cord.

 
- there is a risk of a short circuit and fire.

If the power plug socket is loose, do not insert the power plug.


- there is a risk of electric shock or fire.

To obtain the best performance from the cabinet, ensure:

- the cabinet is placed in a dry, cool place and is not exposed to direct sunlight.
- the cabinet is not placed close to a source of heat, e.g. a cooker or dishwasher.
- the cabinet is level. The cabinet should not lean against any wall. If necessary adjust the feet using the adjustment spanner supplied.

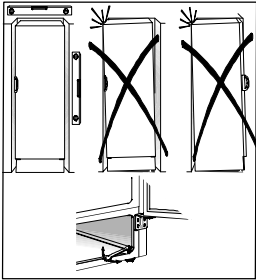

 - there is good air circulation around the cabinet and that the air channels below and behind the cabinet are not blocked. The ventilation space above the cabinet must be at least 4 cm. The ventilation space can either be
 - a) directly above the cabinet, or
 - b) behind and above the top cupboard.
 In this case, the space behind the cupboard must be at least 50 mm deep.

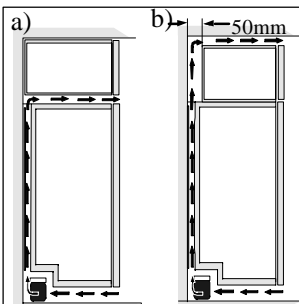

Cabinet is placed at a location whose ambient temperature corresponds to the climate classification*, for which the appliance is designed.

* See on the rating plate on the inside of the appliance.

The following table shows which ambient temperature is correct for each climate classification.

Climate classification	for an ambient temperature of
SN	+10°C to +32°C
N	+16°C to +32°C
ST	+18°C to +38°C
T	+18°C to +43°C

 
Check that the drain hose at the rear of the cabinet discharges into the drip tray.

If the cabinet is placed in a corner and the side with the hinges facing the wall, the distance between the wall and the cabinet must be at least 230 mm to allow the door to open enough so that the shelves can be removed.


The power plug must be accessible after installation of the cabinet.

Door Reversal


1. Close the cabinet and remove the plug from the electrical socket.
2. Remove the ventilation grille. There is a part on the grille that can be removed. Remove and reposition it on the other side.
3. Put the cabinet on a wooden board when it is laid down. Later, when raising the cabinet, it will be easier to grip under the cabinet thanks to the board.

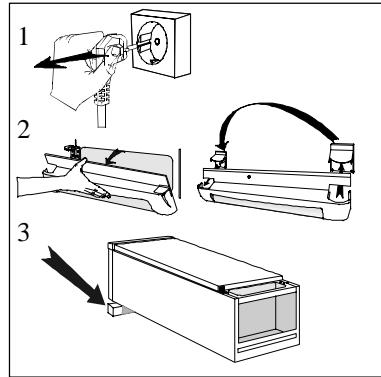

 4. On the upper part of the cabinet. Put the hinge pin on the other side. On the lower part of the cabinet. Unscrew the hinge. Move the hinge pin and plastic cover. Secure the hinge on the other side. Remove any play in the door by adjusting the height of the lower hinge with the supplied spanner. Secure with the lock-nut.

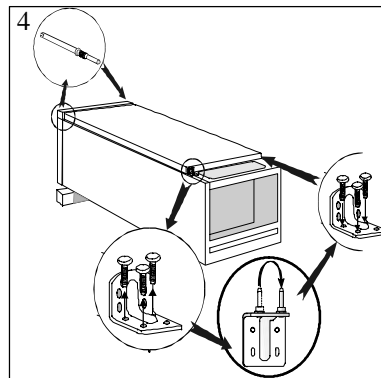

 5. Raise the cabinet and replace the ventilation grille.
6. Move the handle. Unscrew the handle and secure it to the other side. Press the supplied plastic plugs into the holes to which the handle was previously fitted.

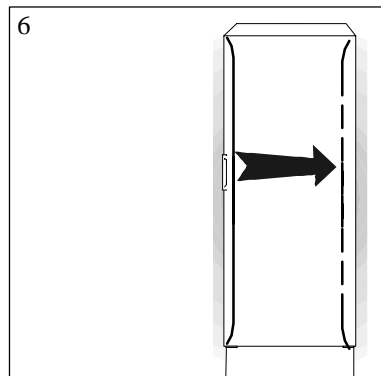

7. Put the cabinet in position. Check that the appliance is level. See the section "Positioning the cabinet".

KUNDENDIENST



Servicestellen

5506 Mägenwil/Zürich
Industriestr. 10

9000 St. Gallen
Zürcherstrasse 204 e

4127 Birsfelden
Hauptstrasse 52

6032 Emmen
Buholzstrasse 1

7000 Chur
Comercialstrasse 19

3018 Bern
Morgenstrasse 131

Points de service

1028 Prévèrenge
Le Trési 6

Servizio dopo vendita

6916 Grancia
Zona Industriale E



Ersatzteilverkauf

5506 Mägenwil
Industriestrasse 10
Tel. 0848 848 023

Point de vente de rechange

5506 Mägenwil
Industriestrasse 10
Tel. 0848 848 023

Vendita pezzi di ricambio

5506 Mägenwil
Industriestrasse 10
Tel. 0848 848 023

Fachberatung / Verkauf

8048 Zürich
Badenerstrasse 587
Tel. 044 405 81 11

Demonstration / Vente

8048 Zürich
Badenerstrasse 587
Tel. 044 405 81 11

Consulente (cucina) / Vendita

8048 Zürich
Badenerstrasse 587
Tel. 044 405 81 11

Garantie

Für jedes Produkt gewähren wir ab Verkauf bzw. Lieferdatum an den Endverbraucher eine Garantie von 2 Jahren. (Ausweis durch Garantieschein, Faktura oder Verkaufsbeleg).

Die Garantieleistung umfasst die Kosten für Material, Arbeits- und Reisezeit.

Die Garantieleistung entfällt bei Nichtbeachtung der Gebrauchsanweisung und Betriebsvorschriften, unsachgerechter Installation, sowie bei Beschädigung durch äussere Einflüsse, höhere Gewalt, Eingriffe Dritter und Verwendung von Nicht-Original Teilen.

Garantie

Nous octroyons sur chaque produit 2 ans de garantie à partir de la date de livraison ou de la mise en service au consommateur (documenté au moyen d'une facture, d'un bon de garantie ou d'un justificatif d'achat).

Notre garantie couvre les frais de mains d'œuvres et de déplacement, ainsi que les pièces de rechange.

Les conditions de garantie ne sont pas valables en cas d'intervention d'un tiers non autorisé, de l'emploi de pièces de rechange non originales, d'erreurs de maniement ou d'installation dues à l'inobservation du mode d'emploi, et pour des dommages causés par des influences extérieures ou de force majeure.

Garanzia

Per ogni prodotto concediamo una garanzia di 2 anni a partire dalla data di consegna o dalla sua messa in funzione. (fa stato la data della fattura, del certificato di garanzia o dello scontrino d'acquisto)

Nella garanzia sono comprese le spese di manodopera, di viaggio e del materiale.

Dalla copertura sono esclusi il logoramento ed i danni causati da agenti esterni, intervento di terzi, utilizzo di ricambi non originali o dalla inosservanza delle prescrizioni d'installazione ed istruzioni per l'uso.

EUROPEAN GUARANTEE

This appliance is guaranteed by Electrolux in each of the countries listed at the back of this user manual, for the period specified in the appliance guarantee or otherwise by law. If you move from one of these countries to another of the countries listed, the appliance guarantee will move with you subject to the following qualifications:-

- The appliance guarantee starts from the date you first purchased the appliance which will be evidenced by production of a valid purchase document issued by the seller of the appliance.
- The appliance guarantee is for the same period and to the same extent for labour and parts as exists in your new country of residence for this particular model or range of appliances.
- The appliance guarantee is personal to the original purchaser of the appliance and cannot be transferred to another user.
- The appliance is installed and used in accordance with instructions issued by Electrolux and is only used within the home, i.e. is not used for commercial purposes.
- The appliance is installed in accordance with all relevant regulations in force within your new country of residence.

The provisions of this European Guarantee do not affect any of the rights granted to you by law.

www.electrolux.com

		
Albania	+35 5 4 261 450	Rr. Pjeter Bogdani Nr. 7 Tirane
Belgique/België/ Belgien	+32 2 363 04 44	Bergensesteenweg 719, 1502 Lembeek
Česká republika	+420 2 61 12 61 12	Budějovická 3, Praha 4, 140 21
Danmark	+45 70 11 74 00	Sjællandsgade 2, 7000 Fredericia
Deutschland	+49 180 32 26 622	Muggenhofer Str. 135, 90429 Nürnberg
Eesti	+37 2 66 50 030	Mustamäe tee 24, 10621 Tallinn
España	+34 902 11 63 88	Carretera M-300, Km. 29,900 Alcalá de Henares Madrid
France	www.electrolux.fr	

		
Great Britain	+44 8705 929 929	Addington Way, Luton, Bedfordshire LU4 9QQ
Hellas	+30 23 10 56 19 70	4 Limnou Str., 54627 Thessaloniki
Hrvatska	+385 1 63 23 338	Slavonska avenija 3, 10000 Zagreb
Ireland	+353 1 40 90 753	Long Mile Road Dublin 12
Italia	+39 (0) 434 558500	C.so Lino Zanussi, 26 - 33080 Porcia (PN)
Latvija	+37 17 84 59 34	Kr. Barona iela 130/2, LV-1012, Riga
Lietuva	+370 5 2780609	Verkių 29, LT-09108 Vilnius
Luxembourg	+35 2 42 43 13 01	Rue de Bitbourg, 7, L-1273 Hamm
Magyarország	+36 1 252 1773	H-1142 Budapest XIV, Erzsébet királyné útja 87
Nederland	+31 17 24 68 300	Vennootsweg 1, 2404 CG - Alphen aan den Rijn
Norge	+47 81 5 30 222	Risløkkvn. 2 , 0508 Oslo
Österreich	+43 18 66 400	Herziggasse 9, 1230 Wien
Polska	+48 22 43 47 300	ul. Kolejowa 5/7, Warsaw
Portugal	+35 12 14 40 39 39	Quinta da Fonte - Edifício Gonçalves Zarco - Q 35 2774 - 518 Paço de Arcos
Romania	+40 21 451 20 30	Str. Garii Progresului 2, S4, 040671 RO
Schweiz/Suisse/ Svizzera	+41 62 88 99 111	Industriestrasse 10, CH-5506 Mägenwil
Slovenija	+38 61 24 25 731	Electrolux Ljubljana, d.o.o. Tržaška 132, 1000 Ljubljana
Slovensko	+421 2 43 33 43 22	Electrolux Slovakia s.r.o., Electrolux Domáce spotrebiče SK, Seberínho 1, 821 03 Bratislava
Suomi	+35 8 26 22 33 00	Konepajaranta 4, 28100 Pori
Sverige	+46 (0)771 76 76 76	Electrolux Service, S:t Göransgatan 143, S-105 45 Stockholm
Türkiye	+90 21 22 93 10 25	Tarlabaşı caddesi no : 35 Taksim Istanbul
Россия	+7 495 9377837	129090 Москва, Олимпийский проспект, 16, БЦ „Олимпик“

www.electrolux.com

www.electrolux.ch