



INSTRUCTION MANUAL

2 Doors Direct Cool Refrigerator

WRM2000_A-R

WRM2800_A-R


WRM3500_A-R

Thank you for choosing  **Electrolux** refrigerator.


Please read this manual before operating your refrigerator.

It contains valuable information to help you maximize the use of the refrigerator and to obtain total satisfaction for years.


FEATURES

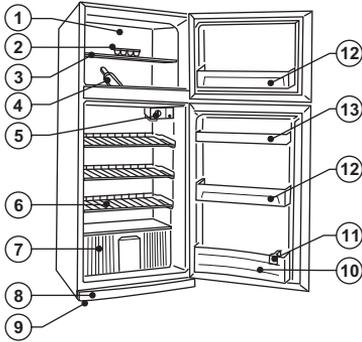

WRM2000_A-R

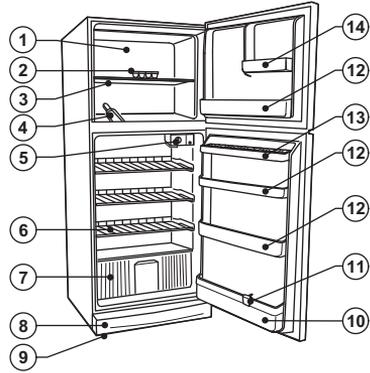

WRM2800_A-R





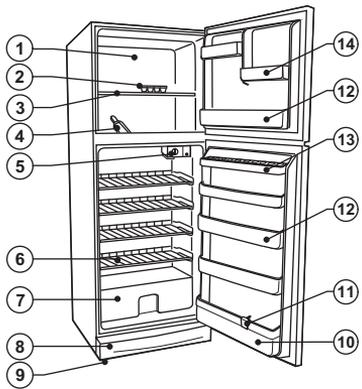


WRM3500_A-R

1. Freezer Compartment
2. Ice Cube Tray
3. Freezer Shelf
4. Scraper
5. Temperature Control
6. Shelf
7. Crisper
8. Evaporation Tray
9. Adjustable Legs
10. Bottle Guard
11. Bottle Locker
12. Canned Food Rack
13. Egg Rack
14. Utility Rack

INSTALLATION

1. Install the unit on a strong and level surface.
Leveling can be obtained by using the adjusting screws on the bottom of the unit. For proper performance the front of the refrigerator “Cabinet” should be slightly higher than the back.
2. Allow at least 30 cm. space above the unit, 15 and 10 cm. at the back and sides to allow air ventilation.
3. Place the unit away form direct sunlight or heat from stoves.
4. Place the unit away from sinks and water faucets.
5. Provide the unit with its own electrical outlet (230V, 60 Hz, single phase AC). Never plug your refrigerator simultaneously with other appliances. Never use multipurpose adapter.
6. Attach the ground wire (Green/yellow color wire located at the lower left portion at the back of the refrigerator) to any metal pipe or to a cover screw of the wall receptacle or to a rod buried at least 2.4 meters. in the ground.

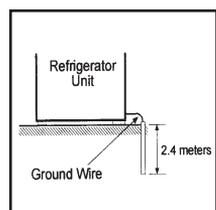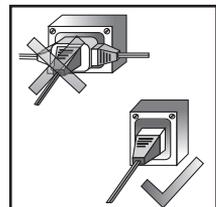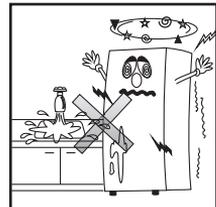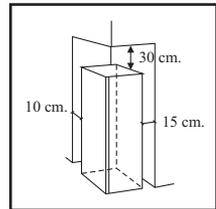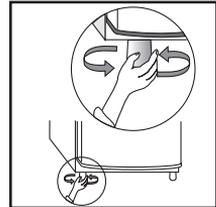

OPERATION

■ Making a test run

1. Clean the Refrigerator thoroughly. Wipe the external surface with a soft dry cloth, the interior with a damp cloth.
2. Keep the door open and plug the power cord into its own electrical outlet. The interior lamp should lit.
3. Turn the thermostat dial to “7”. Close the door and allow the unit to operate for 15-20 minutes. The evaporator should then show some traces of frost. The compressor will run smoothly with just a soft humming sound.
4. If the test run is not satisfactory, check your power supply (blown fuse). Contact your appliance dealer or appliance authorized Service Center if the source of trouble cannot be traced.

■ Temperature Control


You can control the inside temperature by turning the thermostat dial.

- Turn the button to the left for warmer temperature.
- Turn the button to the right for colder temperature.

■ Making Ice Cubes

Fill the ice cube tray 3/4-full with cold water and place it on the bottom of the freezer compartment.

When the ice-cubes are ready they can easily be removed by simply twisting the both ends of the ice cube tray.

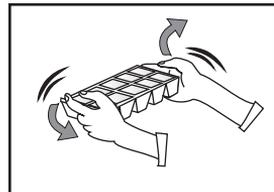

OPERATION

■ Food Storage

1. Refrigerated air goes down at the rear of the fresh food compartment and rises up at the front. Then, store the foodstuffs such as fish and meats which require quick refrigeration to the rear of the compartment.
2. Leave spaces among foodstuffs to help air circulation.
10 cm. at the back and sides to allow air ventilation.
3. Foodstuffs which are easily dried should be well wrapped with waxed paper, aluminum foil or plastic film.
4. Wrap fish and smoked meats in moisture-vapour-proof material to prevent transfer for odours.
5. pre-cool hot foods, wrap them with plastic film or put them in the airtight receptacle.
6. Wipe the water on the surface of the bottles before storing them.
7. Be sure not to store bottles such as beer, cokes, etc. in the freezer compartment.
8. Do not put vegetables which are liable to freezer at the rear part of the shelves.
9. If planning to keep fresh fish and meats for a long period, wrap them receptacle.



HOW TO DEFROST

■ Refrigerator compartment

The cooling (evaporator) unit in the refrigerator compartment is automatically defrosted whenever the compressor motor stops running. No manual control is required. Frost may grow thick temporarily if the room temperature is high or the door is opened frequently. Under normal condition, however, it will disappear after a period of operation.


■ Freezer compartment

The freezer compartment should be kept free of the frost for good freezing effects and economical operation at low power consumption. Frost should not be allowed to grow thicker than 5 mm. (0.2 inches).

- Scrape frost off the freezer compartment walls with the scraper supplied with your refrigerator. This can be done without stopping operation.
- After a long period operation, frost in the freezer compartment may become too hard to be removed with a scraper. If it does, set the temperature control dial to “0” or “OFF” leave the freezer compartment door open for several minutes, and wipe the freezer compartment wall clean of frost with a hot towel. After that, wipe the walls dry and reset the control dial.

Defrosting (Only Model WRM3500_A-R)

1. While defrosting, pull the DRAIN CAP out from the DRAIN BULB as illustrated. The DRAIN CAP is inside the freezer compartment.
2. When defrosting is completed, fit the DRAIN CAP back to the place.

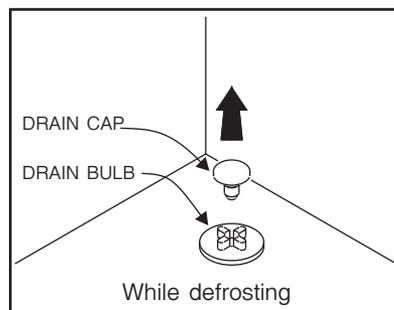

CLEANING


1. Before cleaning the refrigerator, you should always unplug it from the outlet and remove all food.
2. Clean the external surfaces of the unit using only a damp cloth to wipe away dust and dirt. Never use acids, thinner, gasoline, acetone nor benzene in cleaning and removing stains.
3. Wash internal accessories using a mild detergent solution and dry it with a soft towel.
4. To remove odors from your unit, combine skin of a lemon and warm. Wipe thoroughly on affected surface and dry with a soft cloth. Do not use cologne, air freshener or any other perfume.
5. Clean inside of the refrigerator once a month. It is best to clean the freezer compartment every time when it is defrosted.
6. Wipe the control box with a soft cloth. Never wash it with water because this will cause an accident.
7. Replace door gasket when it shows signs of fatigue or wear. (Please contact service centers for servicing.)
8. Prevent the external finish from being scratched and dented.
9. When transferring or relocating the unit, avoid lifting it front side downward. Never lift the unit upside down. Lifting the unit upside down will displace the compressor oil and cause malfunction. Also, protect the exterior of the refrigerator with a blanket to prevent scratches.

Cleaning the evaporation tray

Since dust accumulated on the evaporation tray will decrease the evaporation efficiency, remove the tray to clean.



WRM2000_A-R

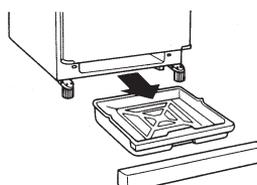

**WRM2800_A-R
WRM3500_A-R**

CLEANING AND MAINTENANCE

Your refrigerator does not require any special maintenance. To clean the inside, use a soft cloth with water, mild soap suds, or some mild detergent.

Wash ice cube tray, evaporation tray and shelves in a mild detergent solution and dry with a soft towel. Stains on the outside can also be removed with a soft cloth and some mild detergent.

- Removable parts may be rinsed with water.
- Don't forget to clean the door gasket especially the bottom gasket is liable to dirty.
- Wipe the door with a dry cloth when water splasher or it rusts.
- Occasionally remove dust and other particles which may collect at the back of the refrigerator and the condenser under the cabinet to keep heat radiating efficiency high. For safety, unplug the refrigerator before cleaning.

LAMP REPLACEMENT

If the illuminating does not work properly. In case of the replacement bulb is needed, it had better be replaced by its service agent or similarly qualified person in order to avoid hazard.

PROCEDURE :

- Disconnect the plug of the refrigerator from the outlet.
- Take the lamp off by turning it counter-clockwise.
- Change the bulb with 240V, 15W characteristic.
- Replace lamp and turn it clockwise.

Caution: To prevent any breakage do not over tighten the lamp to socket. It is highly recommended to have the service agent or qualified person to do the lamp replacement.

CAUTION

1. Do not use inflammable sprays such as lacquer and paint near the refrigerator, because there is a danger of igniting.
2. Do not operate the refrigerator in the presence of explosive gas to avoid a fire or an explosion by ignition of the electric contact of the refrigerator.
3. Be careful no to splash water on the back of the refrigerator the insulation of electric parts will be impaired by water.
4. Do not touch the sides and back of the refrigerator cabinet and the mechanical parts at the back of the refrigerator, because their temperature is high.
5. If the unit is turned off or unplugged, you must allow at least seven minutes before restarting or replugging the unit.
6. Do not use acids, chemical thinner, gasoline or benzene for cleaning any part of the refrigerator. Boiling water and benzene are especially harmful for plastic parts.
7. If the illuminating lamp does not work properly. The replacement of lamp is able to do by disconnect the power supply, detach the shield light cover then remove the lamp from the lamp socket, replace the lamp and reassembly the lamp.
8. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
9. Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
10. Do not use mechanical devices or other means to accelerate the defrosting process.
11. Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
12. Do not damage the refrigerant circuit.
13. This fridge is Cyclopentane insulation, should be kept away from heat or flame when it isn't properly used.
Be ensure this refrigerator is disposed off correctly, you will help prevent potential negative consequences of environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detail, please contact your local city office or your household waste disposal service.

TROUBLE SHOOTING

Before you call for service please check the table below. Your problems could be easily rectified. If you still need service, please contact the store where you purchased or the nearest service center.

When	Check if ...
not operating ...	<ul style="list-style-type: none"> ● Power supply cord is unplugged. ● Temperature control in “0” position. ● If home fuse blown or circuit breaker off ?
warmer than usual ...	<ul style="list-style-type: none"> ● Too frequent or too long door openings. ● Check the temperature control dial setting. ● Large amounts of food placed in refrigerator. ● You put warm food in the refrigerator.
unusual sounds ...	<ul style="list-style-type: none"> ● The floor is weak or uneven. ● Make sure the back of the refrigerator does not touch the wall.
motor operates for long periods ...	<ul style="list-style-type: none"> ● Normal when refrigerator is first delivered to your home - usually requires 24 hours to completely cool down. ● Large amounts of food placed in refrigerator to be cooled or frozen. ● Hot weather - frequent door openings. ● Door left open. ● Temperature control is set too cold.
moisture collects inside ...	<ul style="list-style-type: none"> ● Too frequent or too long door openings. ● In humid weather, air carries moisture into refrigerator when door is opened. ● You put warm food in the refrigerator.

SPECIFICATION

DESCRIPTION	MODEL		
	WRM2000_A-R	WRM2800_A-R	WRM3500_A-R
Net Volume (Litre)	177	272	322
Freezer Volume (Litre)	49	76	98
Refrigerator Volume (Litre)	128	196	224
Exterior Dimensions : W x D x H (mm.)	525x564x1355	605x638x1515	606x670x1700
Weight (kg.)	45.0	59.0	69.0
Power Source	230 V, 60 Hz; Single Phase		
Defrosting System	Cycle Defrost		
Insulation	Rigid Polyurethane Foam		
Blowing Agent	Cyclopentane		
Refrigerant	HFC-134a		
Compressor Power (Watt)	150	150	175
Energy Saver (Hotline)	Yes		
Evaporator	Pipe on Liner		
Condenser	Pipe Condenser		
Top Table	No	No	No
Magnetic Door Gasket	Yes	Yes	Yes
Lock	No	No	No
Egg Storage	8 Pcs.	10 Pcs.	10 Pcs.
Ice Cube Tray	2 Pcs.	2 Pcs.	2 Pcs.
Refrigerator Shelf	3 Pcs.	3 Pcs.	4 Pcs.
Crisper Glass	1 Pc.	1 Pc.	1 Pc.
Vegetable Crisper	1 Pc.	1 Pc.	1 Pc.

Note : With continuous improvement and quality upgrading of this product, design and specifications are subject to change without prior notice.