 




# COMPACT DISC PLAYER

**AM/FM STEREO CASSETTE RECORDER  
WITH DETACHABLE SPEAKERS  
MODEL CD-1493  
OPERATING INSTRUCTIONS**

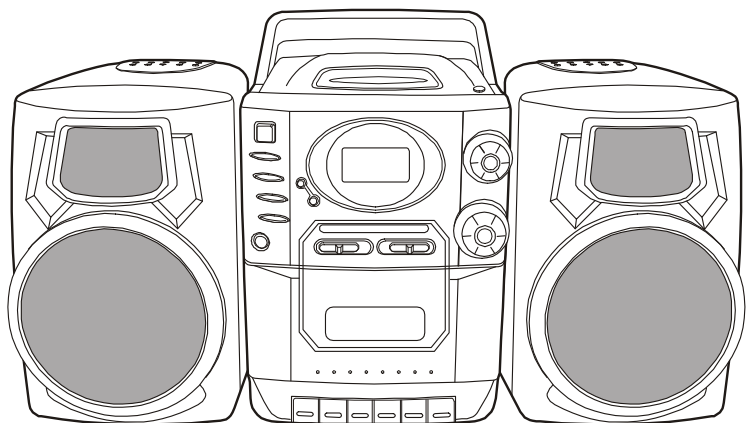

- **PLAYS MUSIC COMPACT DISCS**
- **FULLY PROGRAMMABLE CD PLAYER WITH REPEAT**
- **RECEIVES AM/FM STEREO BROADCASTS**
- **RECORDS FROM CD, RADIO, OR BUILT-IN MICROPHONE**
- **DETACHABLE SPEAKER SYSTEM**
- **2 WAY POWER - AC/DC**
- **REQUIRES 8 SIZE "C" BATTERIES**



---

PLEASE READ CAREFULLY BEFORE USE

IB-CD1493(AD-63E)-WM-E-030404

## WARNING

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THE PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

 <p>The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>	<b>CAUTION</b> <b>RISK OF ELECTRIC SHOCK</b> <b>DO NOT OPEN</b> <p><b>WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</b></p>	 <p>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.</p>
--	---	---

See bottom of the set.

## IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings, install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Unplug this apparatus during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally or has been dropped.
14. This appliance shall not be exposed to dripping or splashing water and that no object filled with liquid such as vases shall be placed on the apparatus.

## **ADDITIONAL SAFETY INSTRUCTIONS**

1. **Power Sources** - The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
2. **Wall or Ceiling Mounting** - The appliance should not be mounted to a wall or ceiling.
3. **Object and Liquid Entry** - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
4. **Servicing** - The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.

It is the intent of Lenoxx that this product be used in full compliance with the copyright laws of the United States and that prior permission be obtained from copyright owners whenever recording songs from the RADIO or CD's.

Do not apply oil or petroleum products or solvents to any part of this set.

### **CAUTION**

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.  
This compact disc player is classified as CLASS 1 LASER PRODUCT as stated on the bottom of the set.

 
 
# BATTERY SAFETY INSTRUCTIONS

CAUTION: TO REDUCE THE RISK OF FIRE OR PERSONAL INJURY OR DAMAGE TO YOUR SET, READ AND FOLLOW THESE INSTRUCTIONS.

1. Use only the type and size of batteries mentioned in the operating instructions booklet (batteries are not included with this set, please buy the proper batteries).
2. Do not dispose the batteries into a fire. The cells may explode. Check with local codes for possible special disposal instructions.
3. Do not open or mutilate the batteries. Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.
4. Be careful when handling batteries in order not to short the battery with conducting materials such as rings, bracelets and keys. The battery or conductor may over heat and cause burns.
5. Do not attempt to recharge non-rechargeable batteries. The batteries may leak corrosive electrolyte or explode.
6. Do not attempt to rejuvenate the batteries identified for use with this product by heating them. Sudden release of the battery electrolyte may cause burns or irritation to eyes or skin.
7. All batteries should be replaced at the same time. Mixing fresh and discharged batteries could increase internal cell pressure and rupture the batteries.
8. When inserting batteries into this product, the proper polarity (  $\oplus$  and  $\ominus$  ) or direction must be observed. Reverse insertion of some or all of the batteries may result in battery electrolyte leakage or explosion.
9. Remove the batteries from this product if the product will not be used for a long period of time (several months or more) since during the period the batteries could leak, damaging the product.
10. Discard weak or dead batteries as soon as possible since they are more likely to leak in the product. Batteries should be replaced (depending on the product) when the display gets dim or if the Low Battery Indicator shows or if the sound gets distorted.
11. Do not store this product in high temperature areas. Batteries that are stored in a freezer or refrigerator for the purpose of extending shelf life should be protected from condensation during storage and defrosting. Batteries should be stabilized at room temperature prior to use after cold storage.
12. If this product does not operate normally, see TROUBLE SHOOTING in this instruction manual. If you can't resolve the problem, or if the product is damaged, refer to the LENOX WARRANTY INFORMATION. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.
13. If liquid leaks from the batteries, carefully wipe this liquid. Do not allow it to touch your skin, and discard the leaking batteries.
14. Do not mix batteries (OLD and NEW or CARBON and ALKALINE, etc.).
15. The use of rechargeable batteries is not recommended for this set because their voltage and life is lower than standard batteries.
16. Installation of batteries should be done by an adult only.

## SAVE THESE INSTRUCTIONS


## LOCATION OF CONTROLS

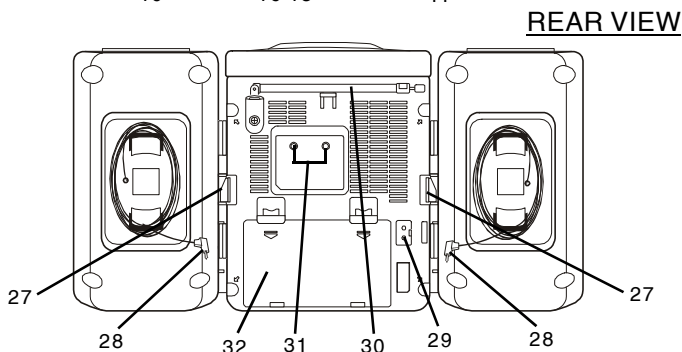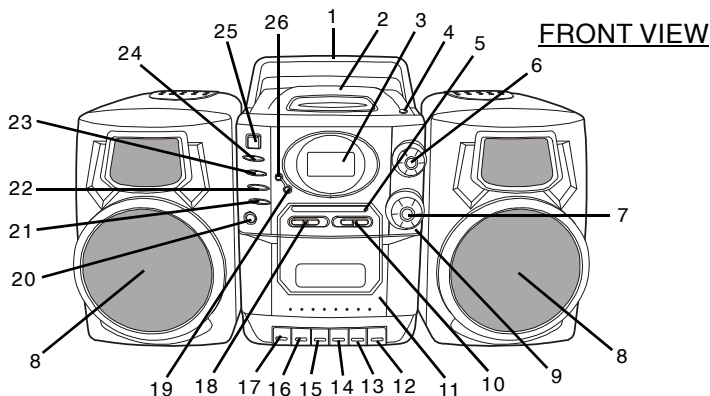

- |                                  |                                    |
|----------------------------------|------------------------------------|
| 1. FOLDING HANDLE                | 18. FUNCTION SWITCH                |
| 2. CD DOOR                       | 19. CD RANDOM BUTTON               |
| 3. COMPACT DISC DISPLAY          | 20. PHONES JACK                    |
| 4. CD DOOR PUSH/OPEN AREA        | 21. CD FORWARD SKIP/SEARCH BUTTON  |
| 5. AM/FM DIAL SCALE              | 22. CD BACKWARD SKIP/SEARCH BUTTON |
| 6. TUNING CONTROL                | 23. CD STOP BUTTON                 |
| 7. VOLUME CONTROL                | 24. CD PLAY/PAUSE BUTTON           |
| 8. DETACHABLE SPEAKERS           | 25. POWER BUTTON                   |
| 9. BUILT-IN CONDENSER MICROPHONE | 26. CD PROG./REPEAT BUTTON         |
| 10. BAND SWITCH                  | 27. DETACHABLE SPEAKER LOCKS       |
| 11. CASSETTE DOOR                | 28. SPEAKER PLUGS                  |
| 12. CASSETTE PAUSE BUTTON        | 29. AC SOCKET                      |
| 13. CASSETTE STOP/EJ. BUTTON     | 30. FM TELESCOPING ANTENNA         |
| 14. CASSETTE FAST FORWARD BUTTON | 31. SPEAKER JACKS                  |
| 15. CASSETTE REWIND BUTTON       | 32. BATTERY COMPARTMENT DOOR       |
| 16. CASSETTE PLAY BUTTON         |                                    |
| 17. CASSETTE RECORD BUTTON       |                                    |

## CHOOSING THE POWER SOURCES

 You can use the AC power or batteries as a power source.

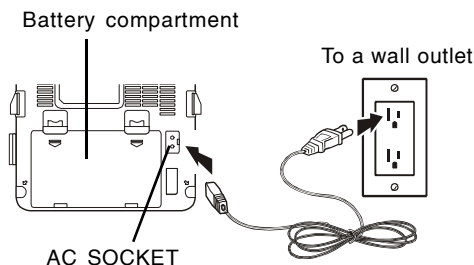

NOTE: One blade of plug and outlet is wider.

### TIP

- If the plug of the AC power cord does not match your outlet, do not force it. Reverse it and try again. The plug is polarized and only fits one way into the wall outlet and back of the set.
- Replace the batteries when the POWER lamp dims or when the player stops operating. Replace all the batteries with new ones. Before you replace the batteries, be sure to take out the CD from the player and remember to check the Battery Safety Instructions on Page 3.
- If the CD does not play on batteries, this means the batteries are almost used up. But the radio may continue to play on these weak batteries because it uses less power than the CD player.

 
 
## 1. Connecting the AC power cord

Insert one end of the supplied AC power cord (located in the battery compartment) into the socket located at the rear of the player, and the other end to the wall outlet.

## 2. Using the player on batteries

Insert 8 size “C” batteries (not supplied) into the battery compartment.

To use the player on batteries, disconnect the AC power cord both from the outlet and the back of the player.

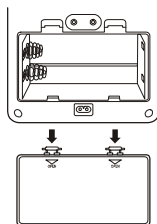

## ATTACHING THE SPEAKERS

**NOTE:** The right and left speakers are **NOT** interchangeable. The right speaker fits **only** on the right side (as shown in FIG. 1). The left speaker fits **only** on the left side.

1. Bring the right speaker to the right side of the set.

2. Raise the right speaker box about 4 inches above the set. Align the tracks (rails).

3. Fit speaker over the side rails.

4. When speaker fits over the rails, lower the speaker as shown in FIG. 2, and make sure the tabs snap into the speaker box (locks in the back).

5. Repeat above steps 1 to 4 for the left speaker box.

6. Carefully unwind the speaker wire from behind each speaker box and plug the right plug into SPEAKER JACK R, also plug the left plug into SPEAKER JACK L (as shown in FIG. 3). Wrap the remaining wire behind each speaker box.

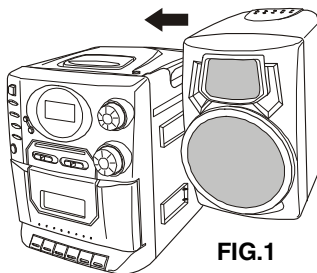 


FIG.1


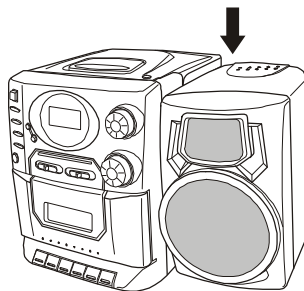 



FIG.2

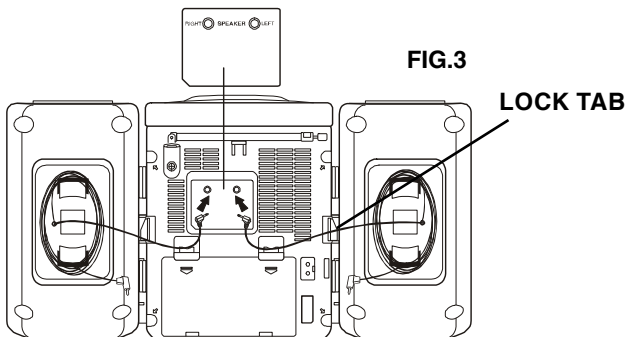 

**NOTE:** This set can be used with speaker boxes attached to the main set or separated, just make sure both speaker plugs are plugged into the jacks.


**To remove the speakers, press the lock tab and raise the speakers.**
 
## PLAYING A CD

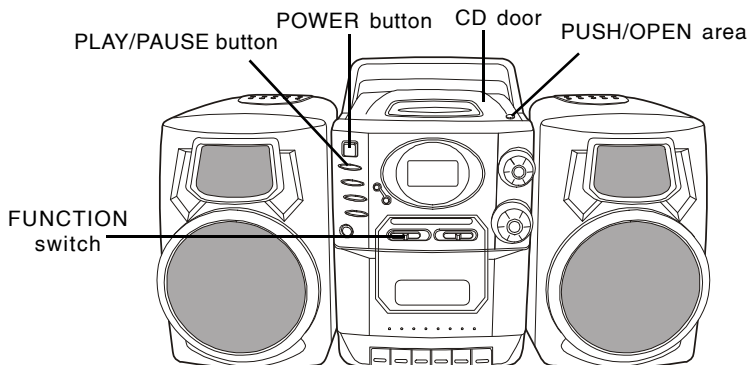


Connect the supplied AC power cord or batteries (see page 5).

 1



 Press the POWER button, the POWER/BATT. lamp will be steadily on.



2



Slide the FUNCTION switch to CD position, "00" will show on the display.



3



 
Open the CD DOOR by pressing PUSH/OPEN area and push a CD disc down onto the center spindle. The label side of the CD should face upward.



4



Close the CD door by pushing it down. The display will show the total tracks of the CD.



5




Press the CD PLAY/PAUSE button. The PLAY/PROG. lamp will be steadily on, the player plays all the tracks once.



**TIP:** "00" WILL SHOW IN THE DISPLAY IF THERE IS NO DISC IN THE CD COMPARTMENT OR IF THE DISC IS UPSIDE DOWN.




## USE THESE BUTTONS FOR ADDITIONAL OPERATIONS

 

### TIP

 
- When CD play is paused, the current playing track number will flash and no music will play.
- To resume play, press the PLAY/PAUSE button again, the track number will stop flashing and music will play.
- If you bump the set or the table it is sitting on, during CD play, the music will stop or skip for a few seconds. This is normal for this type of player.

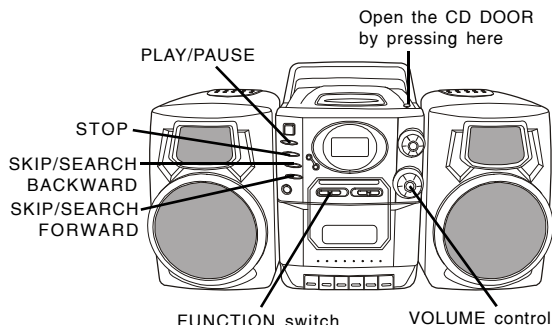

To	Press or Adjust
Adjust the volume	VOLUME control
Stop playback	■ STOP
Pause playback	<b>⏸ PLAY/PAUSE</b> The current playing track number will flash during pause. Press again to resume play after pause.
Go to the next track	<b>⏭ FORWARDS</b>
Go back to the previous track	<b>⏮ BACKWARDS</b>
Locate a point in a song	<b>⏮ or ⏭</b> Press and hold down while playing until you find the point.
Remove the CD	Press PUSH/OPEN area (press STOP first).
Turn off the power	Press the POWER button, the display will go off.

## PLAYING CD TRACKS REPEATEDLY (REPEAT PLAY)

 You can play CD tracks over and over in normal or programmed play mode (see page 10).

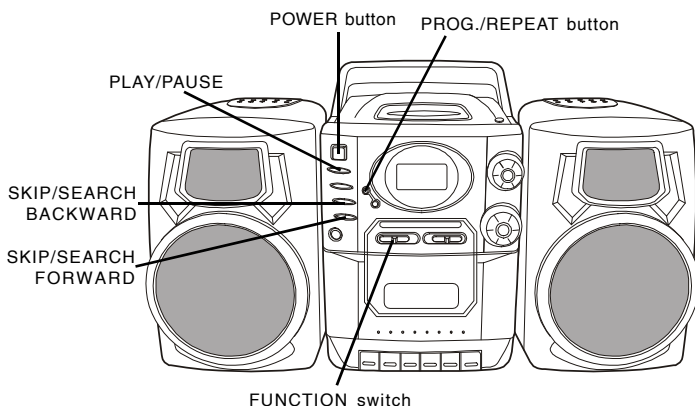


1. Press the POWER button, the POWER/BATT. lamp will be steadily on.
2. Slide the FUNCTION switch to CD position.
3. Select the track by pressing ◀◀ or ▶▶, and then press ▶◥.
4. Press the PROG./REPEAT button.

To repeat	Press	Display shows
a single track (song)	Press the PROG./REPEAT button once, the REPEAT lamp will be steadily on.	
all the tracks (all songs)	Press the PROG./REPEAT button twice, the REPEAT lamp will flash.	
programmed tracks	During programmed play, press the PROG./REPEAT button twice, both the REPEAT and PLAY/PROG. lamps will flash.	

### To cancel Repeat Play

 Press the PROG./REPEAT button until the REPEAT lamp goes off.

# PLAYING CD TRACKS IN PROGRAMMED OR RANDOM ORDER

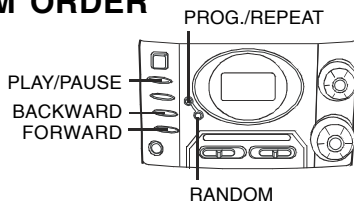

## 1. Programmed Play

You can make a program of up to 16 tracks in the order you want them to be played.

1. Slide the FUNCTION switch to CD position. Make sure the CD is stopped.
2. Press the PROG./REPEAT button. The letters “*P0*” will show and the PLAY/PROG. lamp will flash.
3. Press ►► or ◄◄ to select the tracks you want to program in the order you want.
4. Press the PROG./REPEAT button to confirm. The letters “*P1*” will show and the PLAY/PROG. lamp will flash.
5. Repeat above steps 3 and 4. You can program up to 16 tracks (the display will show “*P0*”, “*P1*” ... “*P15*” for program number 11 to 16).
6. Press ►► to start programmed play. The PLAY/PROG. lamp will flash.



### NOTE:

1. Programming can only be done in **STOP** mode.
2. The programmed memory will be lost if the power is shut off or the CD door is opened.

## To cancel the current program

Just create a new program following the programming procedure.

## To cancel Programmed Play

Press the STOP button, then slide the FUNCTION switch to TAPE position.

## 2. Random Play

 
### To play the songs in random order

Press the RANDOM button in **STOP** mode or during playing, the set will play all of the songs in random order. The floating symbol “*~~~~~*” and the current track number will show in turn in the display.

### To resume normal play


Press the RANDOM button again, the player will start playing normally.

# LISTENING TO THE RADIO

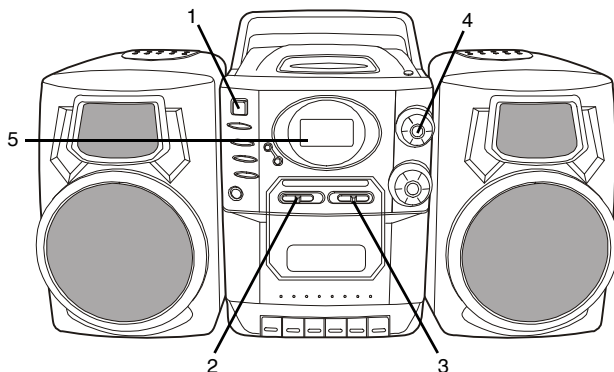


Connect the supplied AC power cord or batteries (see page 5).

 1




Press the POWER button, the POWER lamp will be steadily on.

 2



Slide the FUNCTION switch to RADIO position.

 3




Slide the BAND switch to the proper band position (AM, FM or FM STEREO) that you want.

4




Tune into the station you prefer using the TUNING control. Adjust for the clearest sound.

 5



The FM STEREO indicator will light up when receiving an FM Stereo broadcast.

## USE THESE BUTTONS FOR ADDITIONAL OPERATIONS

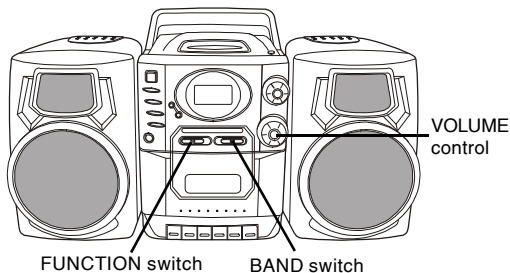 

### TIP

- If the FM broadcast is noisy, slide the **BAND** switch from **FM** **STEREO** to **FM**.
- Next time you want to listen to the radio, just slide the **FUNCTION** switch to **RADIO** position. The player will automatically start playing the previously tuned station.

To	Press or Set
Adjust the volume	VOLUME control
Turn off the Radio	Slide the <b>FUNCTION</b> switch to <b>TAPE</b> position or press the <b>POWER</b> button.
To improve AM broadcast reception	The AM antenna is magnetic bar within the system. Change position of the set for the best AM reception.
To improve FM broadcast reception	Change position of the antenna for FM or FM <b>STEREO</b> reception.

 


Change position of the set for best AM reception.




Change position of the antenna for FM or FM Stereo reception.

# PLAYING A TAPE

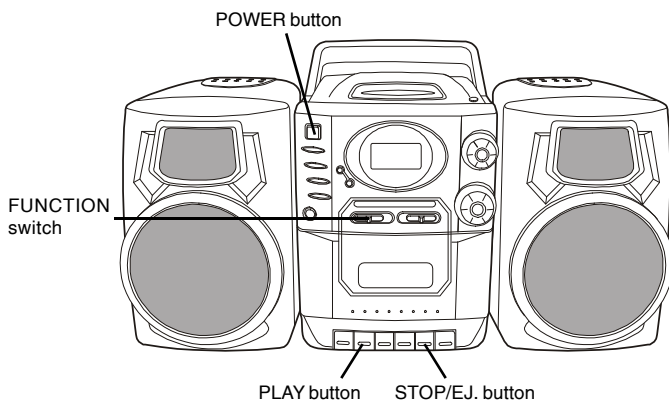


Connect the supplied AC power cord or batteries (see page 5).

 1




Press the POWER button, the POWER/BATT. lamp will be steadily on.

 2



 Slide the FUNCTION switch to TAPE position.

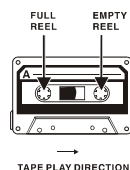

3



**STOP/EJ.**

Press the STOP/EJECT button to open the tape compartment and insert a recorded tape. Close the door.

**INSERT TAPE THIS WAY**



4



 
**PLAY**

Press the PLAY button. The player turns on and starts playing.


5

**AUTO STOP**

When the set finishes playing one side of the tape, the set will automatically stop. To hear the other side of the tape, flip the tape over, then insert and press PLAY.



# RECORDING ON A TAPE

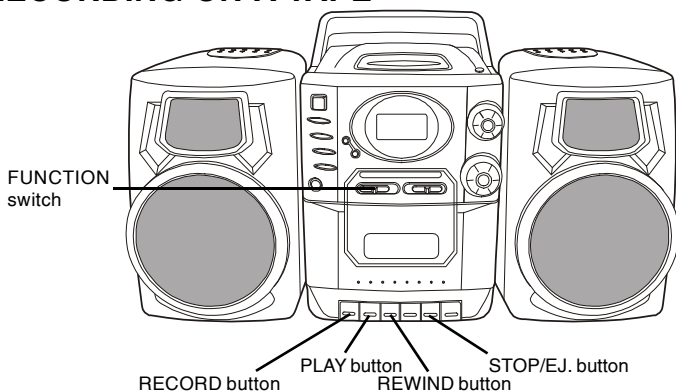 


Connect the supplied AC power cord or batteries (refer to page 5).

1



**STOP/EJ.**

 Press the STOP/EJ. button to open the tape compartment and insert a blank tape. Select the program source (AM, FM, CD, or built-in microphone) you want to record.

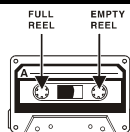

TAPE PLAY DIRECTION

2



To record from the CD player. Slide the FUNCTION switch to CD position, and insert a CD, then follow the CD playing steps to play.



To record from a radio. Slide the FUNCTION switch to RADIO position, and tune into the station that you want.



To record from the built-in microphone, slide the FUNCTION switch to TAPE position, and speak in front of the set.

 
**INSERT TAPE THIS WAY  
FULL REEL ON LEFT**



3



Press the RECORD button to start recording. (The PLAY button is depressed automatically.)




4



To hear what you recorded, slide the FUNCTION switch to TAPE position, then press REWIND and PLAY.

## USE THESE BUTTONS FOR ADDITIONAL OPERATIONS

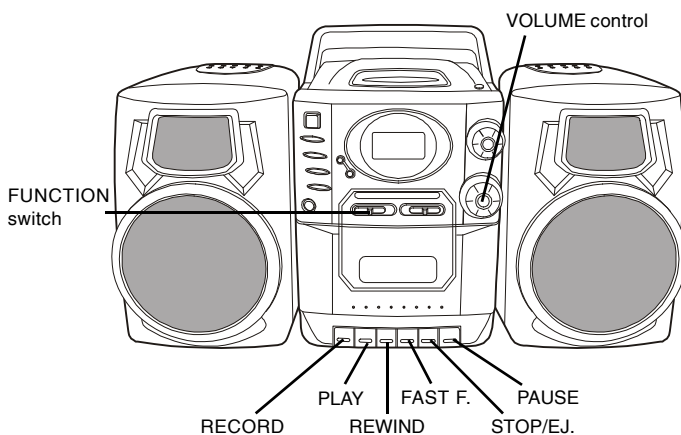 

Connect the supplied AC power cord or batteries (refer to page 5).

To	Press or Adjust
Adjust the volume	VOLUME control
Stop playback or recording	STOP/EJ. button
Fast forward or rewind the tape	FAST F. or REWIND button
Pause playback or recording	PAUSE button Press again to resume play or recording after pause.
Eject the cassette	STOP/EJ. button
To shut power off	Make sure cassette buttons are all up (stop) and POWER lamp is turned off.



## PRECAUTIONS

### On Safety

- As the laser beam used in the CD player section may be harmful to the eyes, do not attempt to disassemble the cabinet. Refer servicing to qualified personnel only.
- Should any solid object or liquid fall into the player, unplug the player, and have it checked by qualified personnel before operating it any further.

### On Placement

- Do not leave the player in a location near a heat source, or in a place subject to direct sunlight, excessive dust or mechanical shock.
- Do not place the player on an inclined or unstable place.
- Do not place anything within 1 inch of the back of the cabinet. The ventilation holes must not be covered for the player to operate properly and prolong the life of its components.
- If the player is left in a car parked in the sun, be sure to choose a location in the car where the player will not be subjected to the direct rays of the sun.
- Since a strong magnet is used for the speakers, keep personal credit cards using magnetic coding or springwound watches away from the speakers to prevent possible damage from the magnets.

### On Power Sources

- For battery operation, use 8 size "C" batteries. We recommend alkaline batteries for longer life.
- When the batteries will not be used for a few weeks or more, remove them to avoid damage that can be caused by battery leakage or corrosion.

### On Operation

- If the player is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lens inside the CD player section. Should this occur, the player will not operate properly. In this case, remove the CD and wait about an hour for the moisture to evaporate. If the player has not been used for a long time, set it in the playback mode to warm it up for a few minutes before inserting a cassette.
- This player is designed to be played on a stable no vibration position. If you bump the set during CD play, the music will stop or skip for a few seconds. This is normal for this type of player.

## PRECAUTIONS (continued)

### Notes on CDs

 
- Before playing, clean the CD with a cleaning cloth. Wipe the CD from the center out.




- Do not use solvents such as benzene, thinner, commercially available cleaners or anti-static spray intended for vinyl LPs.
- Do not expose the CD to direct sunlight or heat sources such as hot air ducts, nor leave it in a car parked in direct sunlight as there can be a considerable rise in temperature inside the car and result in a damaged CD.
- Do not stick paper or stickers on the CD, nor scratch the CD.
- After playing, store the CD in its case. If there is a scratch, dirt or fingerprints on the CD, it may cause a tracking error or skipping.

### Notes on Cassettes

- Break off the cassette recording tabs from side A or B to prevent accidental recording.

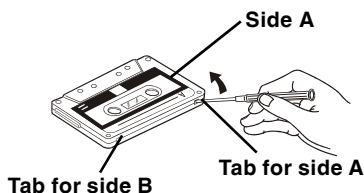


- To record on a tape with its tab broken off, cover the respective tab hole for side A or B with adhesive tape.
- **Use of a cassette with more than 90 minutes, such as C-120 (120 minutes), is not recommended. The extreme thinness of this tape may damage this set.**
- To reduce the chances of tape jamming or tangling, you should check that there are no loose layers of tape visible through the cassette center window. If any, tighten these loose layers of tape using a pencil before inserting the cassette into the set.

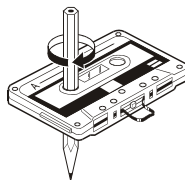 

## MAINTENANCE


### Cleaning the Lens

 If the lens becomes dirty, it may cause a skipping of sound during CD operation. Clean with a commercially available lens cleaner and blower.

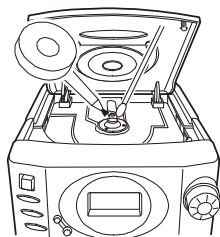

### Cleaning the Tape Heads

 
Wipe the heads, the pinch roller and the capstan with a cleaning swab slightly moistened with cleaning fluid or alcohol after every 10 hours of operation for optimum playback and recording quality. After cleaning, insert a tape when the areas cleaned are completely dry.

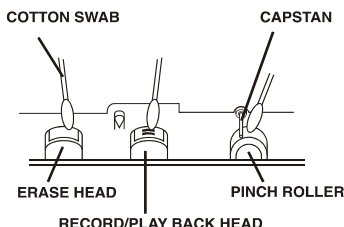

**NOTE:** In order to see and clean the head, you may have to press PLAY first.

### Notes for Storing Cassette Tapes

 1. Do not put a tape near a magnetic field, such as a TV, or speaker. Magnetic fields may reduce the tape sensitivity or even erase the recording.
2. Do not store tape for any length of time in a hot, moist or dusty place.

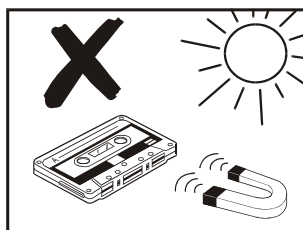

### Cleaning the Cabinet

Clean the cabinet, panel and controls with a soft cloth slightly moistened with water or a mild detergent solution. Do not use any type of abrasive pad, scouring powder, or solvent, such as alcohol or benzene.

# TROUBLE SHOOTING

	Problem	Remedy
General	The power is not on.	<ul style="list-style-type: none"> <li>● Insert the AC plug into a wall outlet securely.</li> <li>● Make sure the batteries are installed correctly and they are fresh.</li> </ul>
	There is no sound.	<ul style="list-style-type: none"> <li>● Make sure the FUNCTION switch is at the right position as you want.</li> <li>● Adjust the volume.</li> </ul>
	"no" appears in the display even when a CD is in place.	<ul style="list-style-type: none"> <li>● Insert the CD with the label side up.</li> </ul>
CD player	CD does not play.	<ul style="list-style-type: none"> <li>● Make sure that the CD compartment is closed.</li> <li>● Clean the CD.</li> <li>● Take out the CD and leave the CD DOOR open for about an hour to dry moisture condensation.</li> <li>● Make sure the FUNCTION switch is at CD position.</li> </ul>
	The sound drops out.	<ul style="list-style-type: none"> <li>● Clean the CD, or replace it if the CD is badly damaged.</li> <li>● Place the player in a location free from vibration.</li> <li>● Check if your batteries are fresh.</li> </ul>
	CD does not play while radio may continue to play.	<ul style="list-style-type: none"> <li>● It is normal since the radio uses less power than the CD player.</li> </ul>
Radio	The sound is weak or has poor quality.	<ul style="list-style-type: none"> <li>● Replace all the batteries with new ones if they are weak, or bring the set near a window, or rotate the set.</li> </ul>
	The RECORD button does not function/The tape does not play.	<ul style="list-style-type: none"> <li>● Make sure the safety tab on the cassette is in place.</li> <li>● Make sure the FUNCTION switch is at TAPE position.</li> </ul>
Tape player	The tape does not erase completely.	<ul style="list-style-type: none"> <li>● Clean the erasing head.</li> <li>● Replace all the batteries with new ones if they are weak.</li> </ul>
	The tape does not record.	<ul style="list-style-type: none"> <li>● Make sure the tape is inserted properly.</li> <li>● Make sure the safety tab of the cassette is in place.</li> </ul>
	Tape jamming or tangling.	<ul style="list-style-type: none"> <li>● Use only better quality tapes.</li> <li>● Do not use a cassette with more than 90 minutes.</li> <li>● Make sure there are no loose layers of tape visible before inserting the cassette.</li> </ul>
	The sound is weak/The sound quality is poor.	<ul style="list-style-type: none"> <li>● Clean the heads, pinch roller and capstan.</li> </ul>
	Cassette PLAY button pops up.	<ul style="list-style-type: none"> <li>● The tape has reached its end. Remove it, flip to the other side and re-insert.</li> </ul>

## SPECIFICATION

### General Description

Power source: AC 120V, 60Hz, 20 Watts  
DC 12V (8 size "C" batteries, not included)  
(Alkaline batteries are recommended)

Speakers: 4" 4 ohm

Output power: 3.0W/channel

Dimensions:	MAIN SET	SPEAKER
Width :	6 1/2"	5 1/2"
Depth :	8 1/2"	8 "
Height :	8 1/2"	8 1/2"
Weight :	4.4 lbs (without batteries)	1.98 lbs

### CD Section

Plays disc type: Any normal CD used in portable players

Laser wavelength: 760 - 800 NM

Tracking method: 3 - spot error detection 3.86 mm lens

Frequency response: 50Hz - 15kHz +1/-2 dB

**NOTE:** This CD player will play **NORMAL** music CDs (or CD-R CDs).

### Tape Recorder Section

Frequency response: Standard normal bias cassette tape,  
70Hz - 10kHz

### Radio Section

Frequency range: FM: 88 - 108 MHz

AM: 530 - 1700 kHz

LENOXX reserves the right to make design and specification changes for product improvement.

### PROTECT YOUR FINE FURNITURE!

WE RECOMMEND A CLOTH OR OTHER PROTECTIVE MATERIAL BE PLACED UNDER THE SET WHEN PLACING IT ON SURFACE WITH A NATURAL OR LACQUER FINISH.

## LIMITED WARRANTY

We warrant this product to be free from defects in material and workmanship under normal use for a period of 90 days after purchase and we will repair it free of charge or replace it at no charge, should it become defective under this warranty, providing you submit proof of purchase (sales slip) with the set.

During the initial 90 day period after original purchase, we will service or exchange, at no charge, the set that is returned to LENOXX ELECTRONICS CORP. After the initial 90 day period expires, and for a period of 12 months from original purchase, we will repair the unit covering any part(s) that need to be replaced at no charge, but will charge for the cost of labor, return postage paid by Lenoxx.

This warranty does not apply to any products which have been subject to misuse, neglect or accident. This warranty does not cover broken cord or cabinet. UNDER NO CIRCUMSTANCES WILL LENOXX ELECTRONICS CORP. BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. The following charges apply to repairs beyond the warranty period: \$15.00. Be sure to pack carefully and return postage paid insured together with your money order (personal checks will not be accepted) and sales receipt to:

LENOXX ELECTRONICS CORP., 2 GERMAK DRIVE, CARTERET N.J. 07008

## For customer service

**Dial 1-800-315-5885** (MONDAY - THURSDAY 9:00 AM - 5:00 PM, FRIDAY 9:00 AM - 1:00 PM EST)

**or Visit Our Website:** <http://www.lenoxx.com>

© 2004 LENOXX ELECTRONICS CORP.  
2 GERMAK DRIVE  
CARTERET, N.J. 07008  
MADE & PRINTED IN CHINA