





AW80S 8 Bottle Wine Cooler

For the most up-to-date version of this User's Guide, go to www.gpx.com

General Safety Precautions

General

- After removing the wine cooler from the package, make sure it is in good condition. If the wine cooler does not appear to be in good condition, do not use it and contact an authorized service center.
- Plastic bags, nails, etc. Should be kept out of the reach of children.
- Read the user's guide carefully and check that the rating data on the rating nameplate corresponds to your power supply.
- This wine cooler can only be used in the way in which it was designed. The manufacturer is not responsible for any damage due to improper use or repairs made by unqualified personnel.
- Before cleaning the refrigerator, make sure it is unplugged. Never clean the unit with an acid preparation, medical, dilution, gasoline, oil or any other kind of chemical substance that could damage the refrigerator.
- Repair should only be made by authorized service centers.

Caution

- To reduce the risk of fire, replace only with same type fuse.
- Free standing installation only.
- Do not use extension cords.
- **DANGER**: Risk of child entrapment. Before discarding your old wine cooler, you must do the following:
 - 1. Remove the door.
 - 2. Leave the shelves in place, so that children may not easily climb inside.

Attention

- Pour réduire les risques d`incendie,utilisez un fusible de rechange de mème type
- Installation non encastrée seulement
- N`utilisez pas de prolongateur
- Avant de jeter votre réfrigérateur hors d'usage, nous vous conseillons de démonter la porte et de laisser les clayettes en place. Ces précautions éviteront qu'un jeune enfant puisse sauter à l'intérieur et qu'ensuite il ne puisse pas s'en extraire.

Technical Data

Volume	25 liters, 8 bottles	
Dimensions (W•H•D)	10.25"•19.5"•19.75"	
Weight (lbs)	17.5	
Power Consumption	0.5 KW•H/24H	
Ideal Ambient Temperature	<77°F / <25°C	
Temperature Range	46°F - 65°F / 8°C - 18°C	
Rated Voltage	AC 110V	
Rated Frequency	60Hz	
Input Power	70W	

8 Bottle Wine Cooler

Features

- 8 bottle/25 liter capacity
- State-of-the-art thermoelectric technology
- Glass door
- Soft interior lighting
- Temperature controller
- Adjustable feet for leveling
- Adjustable shelving
- No vibration keeps bottle sediment undisturbed
- Ultra quiet
- Internal fan for air circulation
- Environmentally friendly
- Flush back design

TABLE OF CONTENTS

General Safety Precaut General Caution Attention 	ions	.	•	•	•	. 2
Technical Data	•	•	•	•	•	. 3
8 Bottle Wine CoolerFeaturesIncluded	•	•	•	•	•	. 4
Introduction	•	•	•	•	•	. 6
Setup	• oler	•	•	•	•	. 8
Maintenance • Cleaning the Wine Coo	oler	•	•	•	•	. 10
Troubleshooting .	•	•	•	•	•	. 11
Company Information International Support Contact Information 	•	•	•	•	•	. 12

5

Introduction





7

Setup

Powering the Wine Cooler

Plug the attached AC cord into a standard AC power outlet to power the wine cooler.

When the AC power is connected, the wine cooler will automatically power on and begin cooling.



Placement

For optimal performance, place the wine cooler in a dry (low humidity) environment.

In order to function at maximum potential, the wine cooler needs to be placed on a flat surface with at least 1" clearance on all sides and 4" clearance at the back.

Avoid placing the wine cooler in direct sunlight or high temperature environments.

Do not place heavy objects on top of the wine cooler.

Operations

Adjusting the Temperature

 Press the TEMPERATURE CONTROL buttons to increase or decrease the temperature of the wine cooler.

> While adjusting the temperature, the display will show the adjusted temperature. After a few seconds of remaining idle, the display will show the current temperature of the wine cooler.

2. Press the **CELSIUS/FAHRENHEIT** button to switch between Celsius and Fahrenheit on the display.

The wine cooler temperature can be adjusted from 46°F to 65°F.

The wine cooler will run until the set temperature is reached, after which it will run periodically to maintain the set temperature.

9

Maintenance

Cleaning the Wine Cooler

- 1. Unplug the wine cooler from the AC power outlet.
- 2. Ensure that the power has been completely disconnected and that the wine cooler is shut down.
- 3. Remove the contents of wine cooler, then remove the shelving.
- 4. The shelving can be hand-washed using warm water.

The shelving must be dried thoroughly before being placed back into the wine cooler.

- 5. Wipe down the interior of the wine cooler using a damp cloth.
- 6. Dry thoroughly and replace the shelving.

Troubleshooting

Issue	Possible Cause	Solutions	
My wine cooler is not cooling.	The wine cooler is not plugged in	 Follow the instructions for <u>Powering the Wine</u> <u>Cooler</u>. 	
The wine cooler's temperature isn't cold enough.	 The wine cooler has been placed near a source of heat. 	 Move the wine cooler away from the heat source. 	
	The fans aren't working properly.	 Follow the instructions for <u>Powering the Wine</u> <u>Cooler</u>. Replace the fan. 	
	 The door isn't sealing all the way. 	 Check the seal around the door for an obstructions and remove them. 	

Company Information

International Support

To download this User's Guide in English, Spanish, or French, visit the support section at www.gpx.com.

Para transferir esta guía de usuario en inglés, español, o francés, visite la sección de la ayuda en www.gpx.com.

Pour télécharger ce guide de l'utilisateur en anglais, espagnol, ou français, visitez la section de soutien chez www.gpx.com.

Contact Information

Phone: 1-888-999-4215 Email: prodinfo@gpx.com Parts Email: partsinfo@dpi-global.com Website: www.gpx.com