


For Models: KURS24RSBS01, KURS24RSS01
(Black Cabinet) (SS Cabinet)

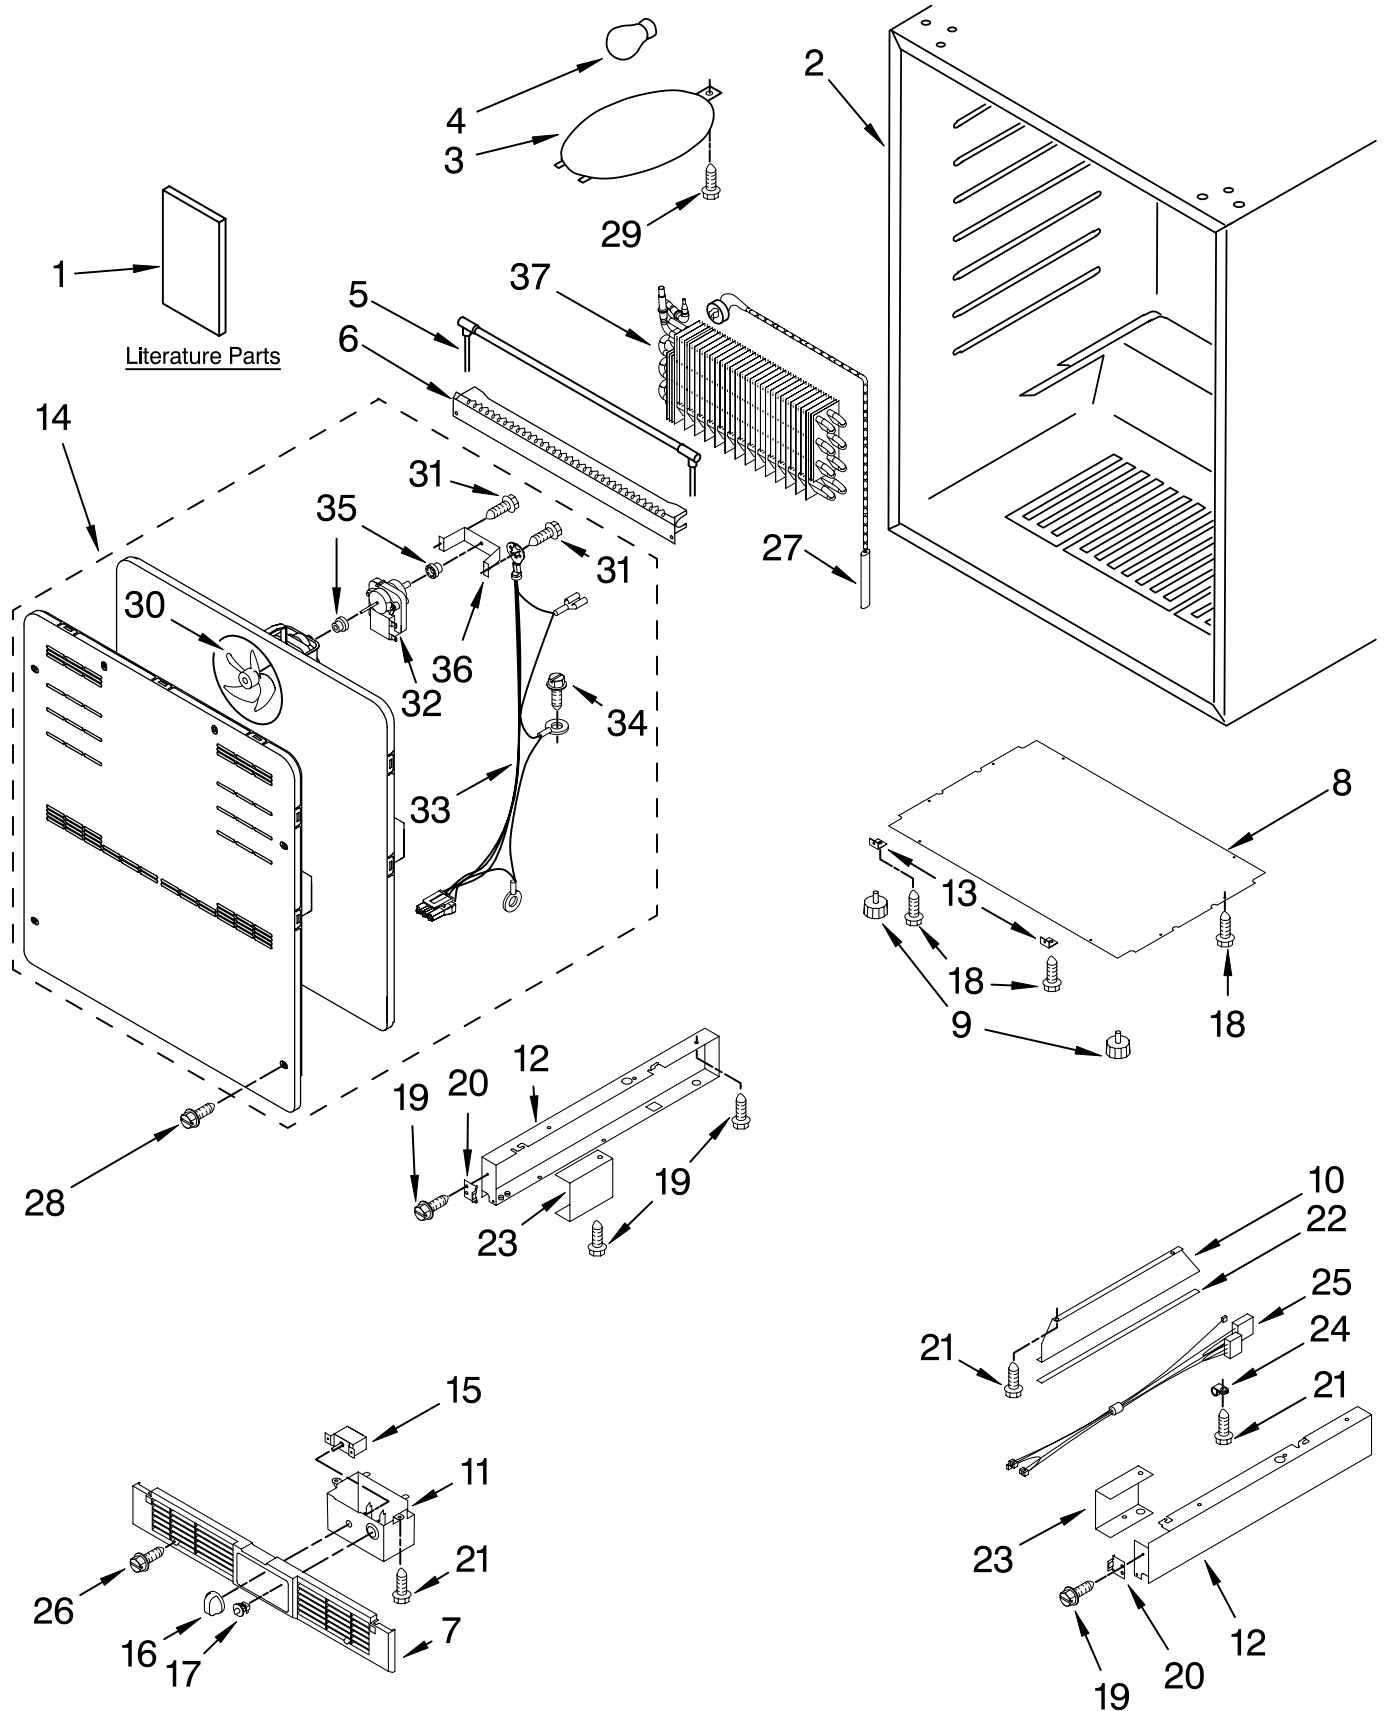

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CABINET PARTS


For Models: KURS24RSBS01, KURS24RSSH01
(Black Cabinet) (SS Cabinet)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1		Literature Parts	12		Frame, Side	25	4344822	Harness, Wire
	4344903	Energy Guide		4344769	Left Side	26	4344827	Screw
	2300274	Use & Care Guide		4344770	Right Side	27	4344792	Thermal Fuse
	4344902	Wiring Diagram	13	4344771	Bracket, Grille	28	4344793	Screw
2		Cabinet (Not A Service Part)	14	4344876	Evaporator Fan Assembly	29	4344791	Screw
3	4344739	Lens, Light	15	4344766	Thermostat	30	4344783	Fan Blade
4	4344740	Bulb, Light	16	4344768	Knob, Thermostat	31	4344878	Screw
5	4344746	Heater, Defrost	17	4344767	Switch, Plunger	32	4344865	Evaporator Fan Motor
6	4344747	Heat Shield	18	4344826	Screw	33	4344877	Harness, Wire
7	4344761	Grille	19	4344797	Screw	34	4344832	Screw, Ground
8	4344762	Plate, Bottom	20	4344819	Clip, Grille	35	4344778	Grommet, Fan Motor
9	4344763	Foot, Leveling	21	4344825	Screw	36	4344899	Bracket, Motor
10	4344764	Brace, Support	22	4344823	Seal	37		Evaporator (Not Serviced)
11	4344765	Control Box	23		Frame, Support			
				4344821	Right			
				4344820	Left			
			24	4344824	Clip, Harness			

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

SHELF PARTS

For Models: KURS24RSBS01, KURS24RSSH01
(Black Cabinet) (SS Cabinet)

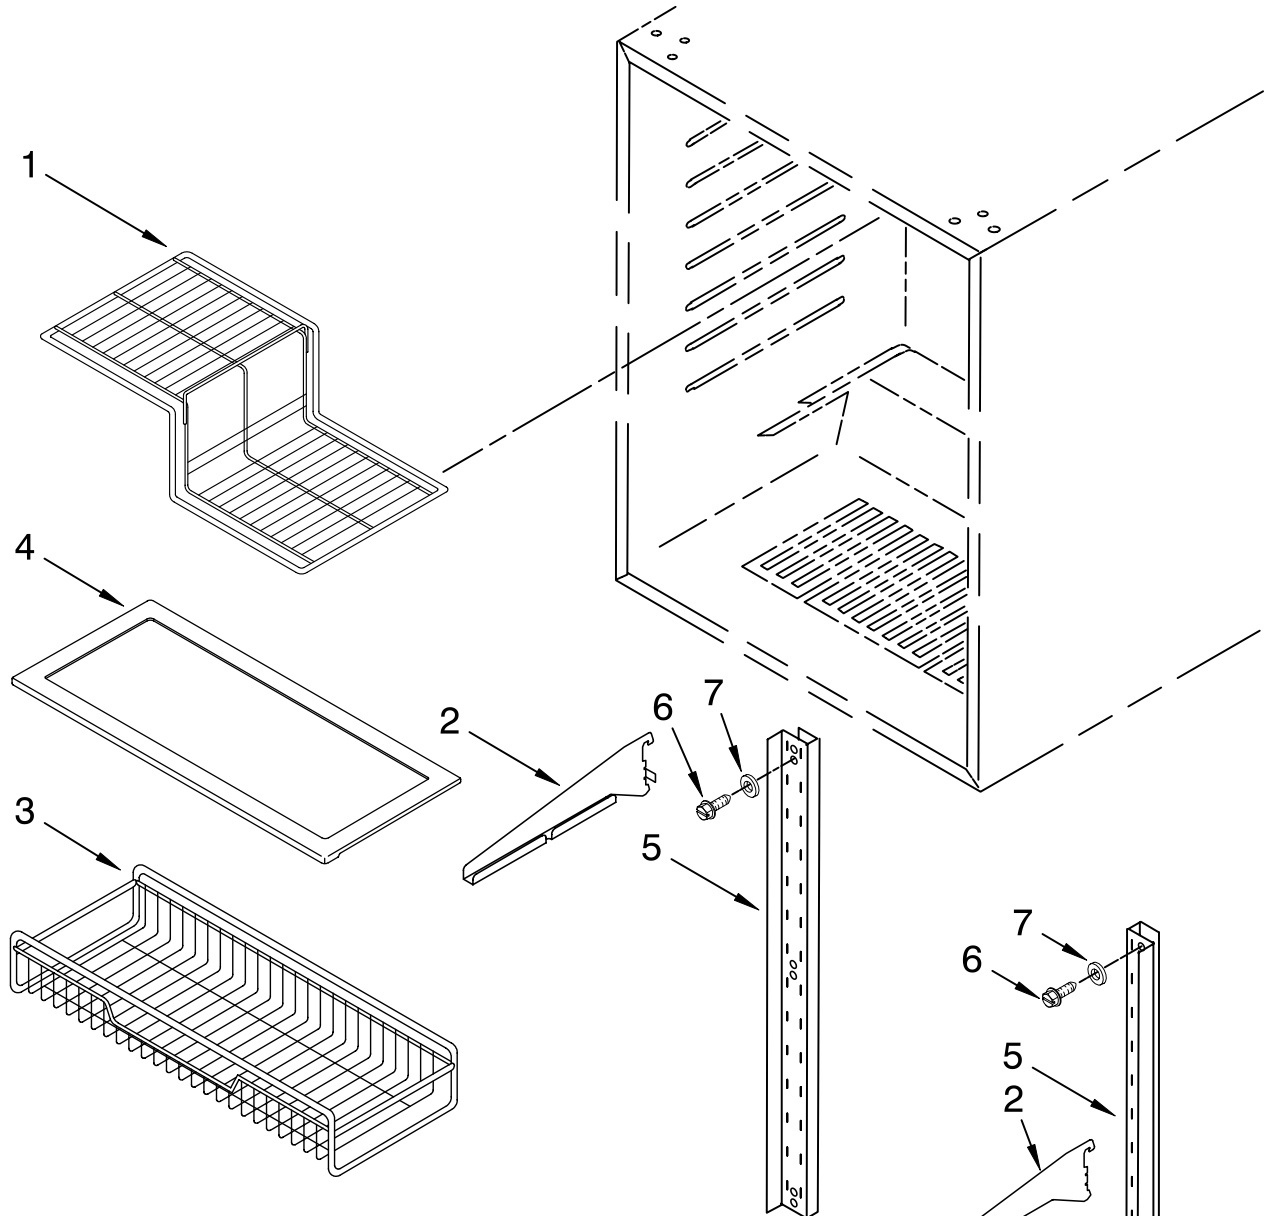


Illus. No.	Part No.	DESCRIPTION
1	4344741	Wire Shelf
2	4344742	Bracket, Shelf Right Side
	4344743	Left Side
3	4344744	Basket, Crisper
4	4344745	Shelf, Crisper
5	4344748	Ladder, Shelf Left Side
	4344749	Right Side
6	4344794	Screw
7	4344795	Washer
8	W10162986	Screw-W/Washer

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR PARTS

For Models: KURS24RSBS01, KURS24RSSH01
(Black Cabinet) (SS Cabinet)

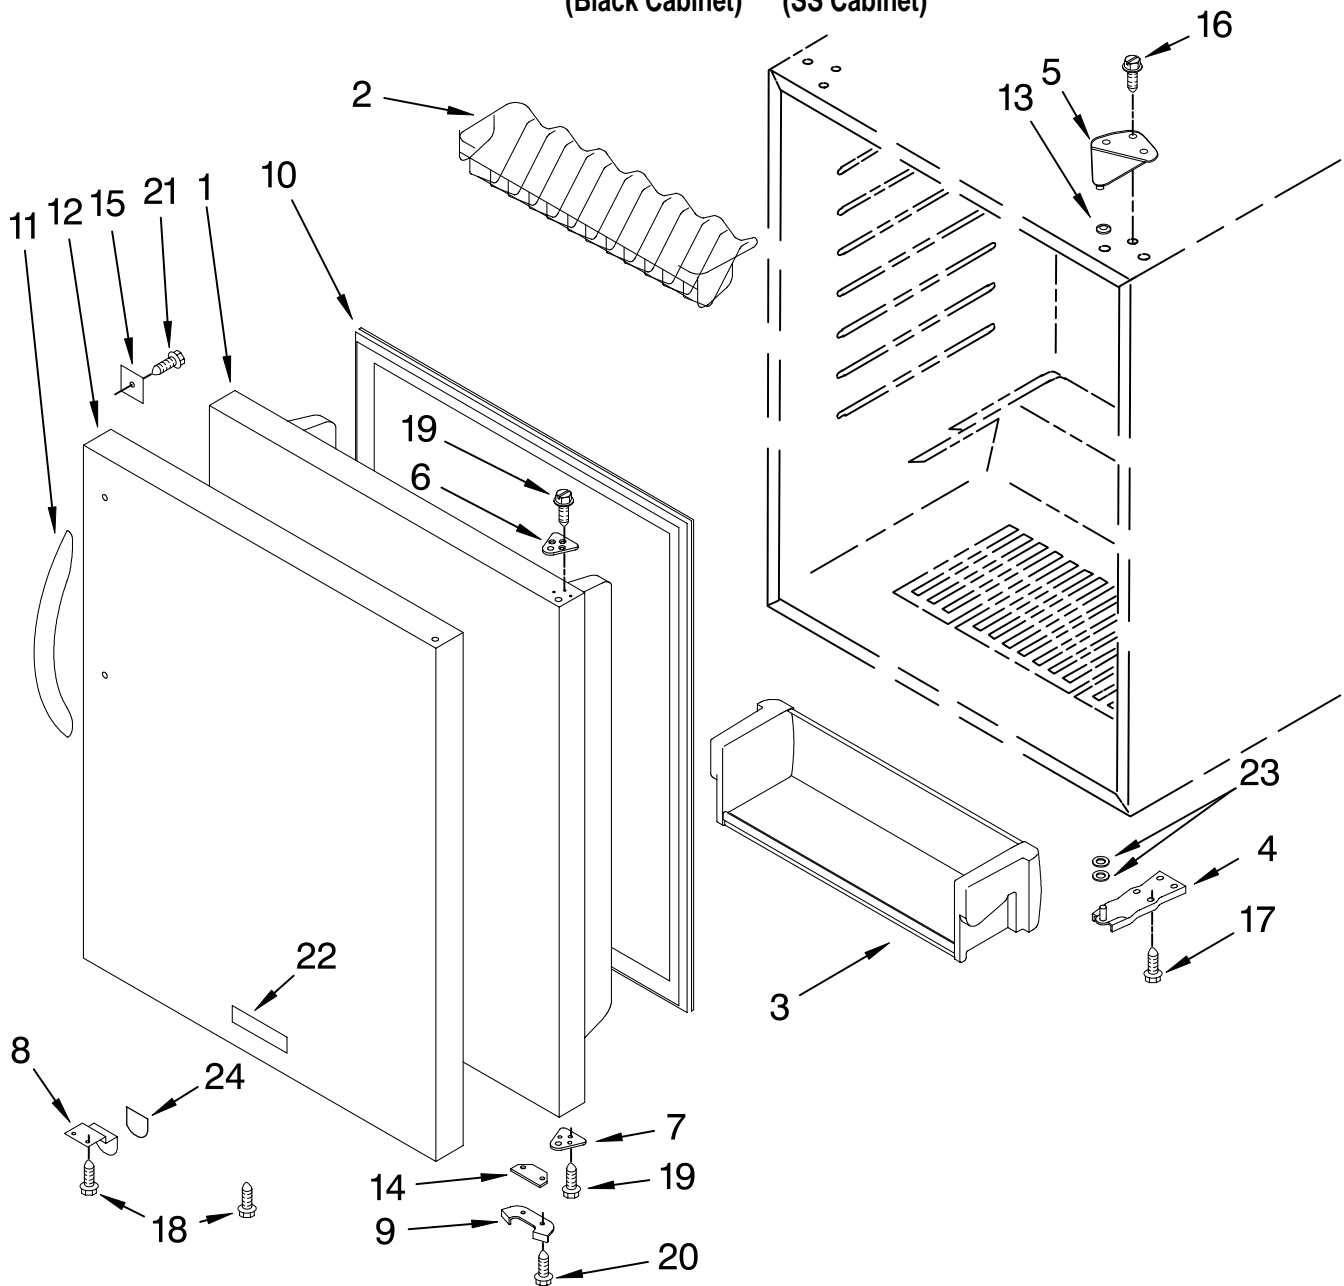

Illus. No.	Part No.	DESCRIPTION
1	4344750	Door Assembly (Includes Gasket)
2	4344751	Beverage Holder
3	4344752	Door Bin
4	4344753	Hinge, Bottom
5	4344754	Hinge, Top
6	4344755	Spacer, Top Hinge
7	4344756	Spacer, Bottom Hinge
8	4344757	Actuator, Switch
9	4344758	Door Stop
10	4344759	Door Gasket
11	4344810	Handle, Door


Illus. No.	Part No.	DESCRIPTION
12	4344811	Door Skin, Stainless Steel
13	4344760	Washer
14	4344788	Spacer, Door
15	4344809	Plate
16	4344796	Screw
17	4344906	Screw, Lower Hinge
	4344906	Quantity 1
	4344797	Quantity 3
18	4344827	Screw
19	W10163072	Screw
20	4344801	Screw

Illus. No.	Part No.	DESCRIPTION
21	4344808	Screw
22	4344813	Nameplate
23	W10162992	Washer/Bottom
24	W10163191	Gasket-Push Plate
OPTIONAL PARTS NOT ILLUSTRATED		
	8171420	Cleaner, Stainless Steel (12 oz)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

UNIT PARTS

For Models: KURS24RSBS01, KURS24RSSH01
(Black Cabinet) (SS Cabinet)

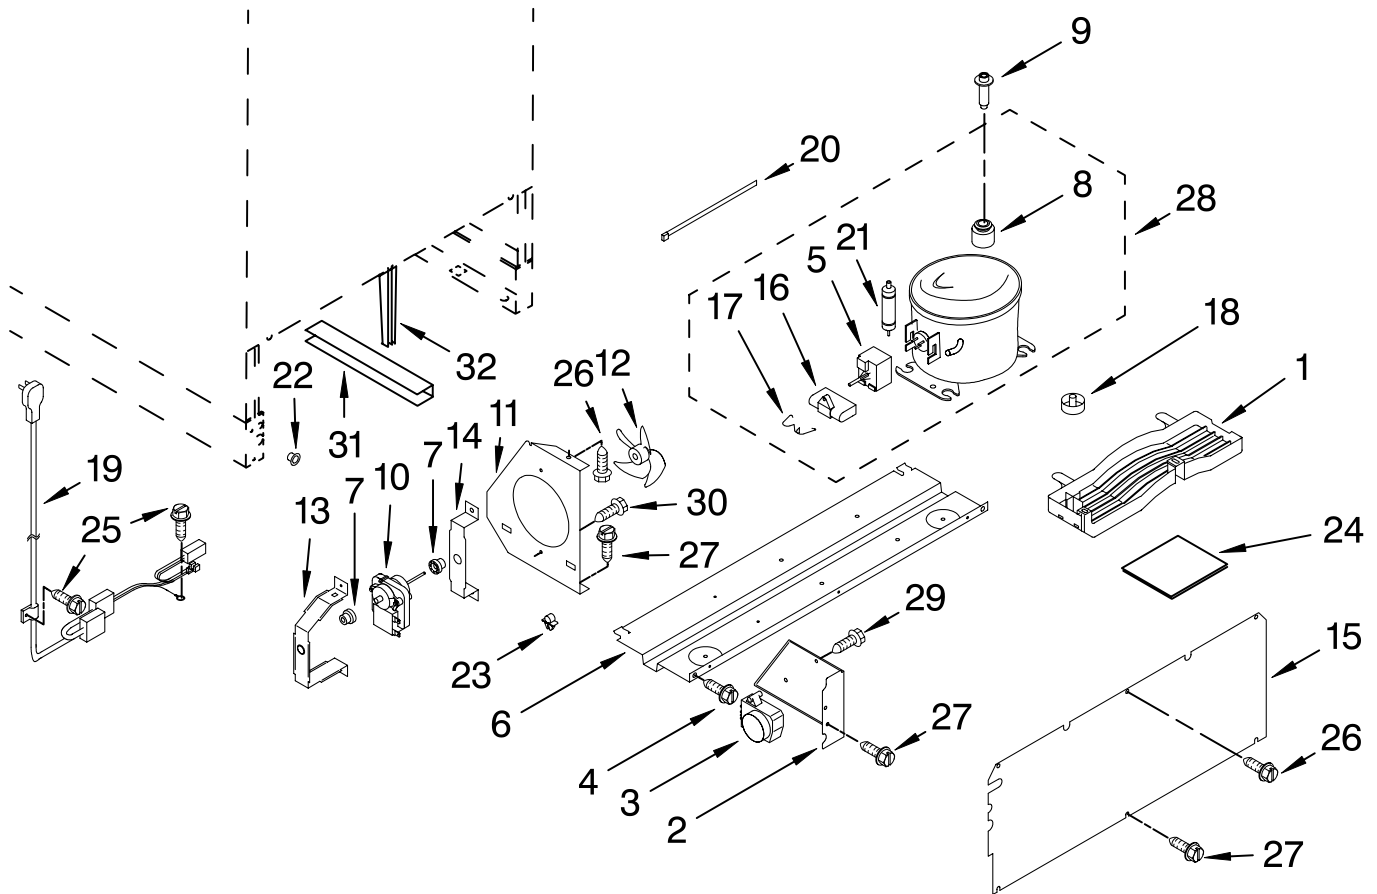

Illus. No.	Part No.	DESCRIPTION
1	W10163193	Drain Pan
2	4344773	Bracket, Defrost Timer
3	4344774	Defrost Timer
4	4344797	Screw
5	4344776	Start Device
6	W10175971	Mounting Plate, Compressor
7	4344778	Grommet, Fan Motor
8	4344779	Grommet, Compressor
9	4344780	Bolt, Compressor
10	4344781	Fan Motor, Condenser
11	4344782	Baffle, Air

Illus. No.	Part No.	DESCRIPTION
12	4344783	Fan Blade
13	4344784	Bracket, Motor
14	4344785	Bracket, Motor
15	4344786	Cover, Rear
16	4344837	Capacitor
17	4344836	Clip
18	W10163276	Trap, Drain
19	4344830	Power Cord
20	4344829	Cable Tie
21	W10163273	Drier
22	4344838	Bushing
23	4344831	Clip, Bushing
24	W10163274	Pad-Rubber
25	4344826	Screw
26	4344825	Screw

Illus. No.	Part No.	DESCRIPTION
27	4344832	Screw
28	4344775	Compressor (Includes Items 5, 8, 16, 17 & 21)
29	4344834	Screw
30	4344833	Screw
31	4344907	Trim, Edge
32	4344908	Support, Drain

REFRIGERANT CHARGE

3.5 Ounces (R-134A)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST