



## testo 330 · Flue gas analyzer

Instruction manual



---

# 1 Contents

<b>1</b>	<b>Contents .....</b>	<b>3</b>
<b>2</b>	<b>Safety and the environment.....</b>	<b>6</b>
2.1.	About this document .....	6
2.2.	Ensure safety.....	7
2.3.	Protecting the environment.....	8
<b>3</b>	<b>Specifications .....</b>	<b>9</b>
3.1.	Use .....	9
3.2.	Technical data .....	9
3.2.1.	Examinations and licenses.....	9
3.2.2.	Bluetooth® module (option) .....	10
3.2.3.	Declaration of Conformity .....	11
3.2.4.	Measuring ranges and resolution .....	12
3.2.5.	Accuracy and response time.....	13
3.2.6.	Other instrument data .....	14
<b>4</b>	<b>Product description.....</b>	<b>16</b>
4.1.	Measuring instrument .....	16
4.1.1.	Overview.....	16
4.1.2.	Keypad .....	17
4.1.3.	Display.....	18
4.1.4.	Device connections.....	19
4.1.5.	Interfaces.....	19
4.1.6.	Components .....	20
4.1.7.	Carrying strap (0440 0581) .....	21
4.2.	Modular flue gas probe .....	22
<b>5</b>	<b>First steps .....</b>	<b>23</b>
5.1.	Commissioning.....	23
5.2.	Getting to know the product.....	23
5.2.1.	Mains unit / rechargeable battery .....	23
5.2.1.1.	Changing the battery .....	23
5.2.1.2.	Charging batteries .....	24
5.2.1.3.	Mains operation .....	24
5.2.2.	Connecting probes / sensors .....	25
5.2.3.	Switching on .....	26
5.2.4.	Calling up a function .....	26

5.2.5.	Entering values .....	26
5.2.6.	Printing / saving data .....	27
5.2.7.	Remembering data (clipboard) .....	28
5.2.8.	Confirming an error message .....	28
5.2.9.	Switching off .....	29
5.3.	Folders / Locations.....	29
5.4.	Measurement records .....	30
5.5.	Instrument diagnosis .....	31
<b>6</b>	<b>Using the product .....</b>	<b>33</b>
6.1.	Performing settings .....	33
6.1.1.	Assigning the right function key .....	33
6.1.2.	Instrument settings .....	33
6.1.2.1.	Readings display .....	33
6.1.2.2.	Alarm limits.....	35
6.1.2.3.	Units.....	35
6.1.2.4.	Date / time.....	36
6.1.2.5.	Energy management.....	36
6.1.2.6.	Display brightness .....	36
6.1.2.7.	Printer .....	36
6.1.2.8.	Bluetooth® .....	37
6.1.2.9.	Language .....	37
6.1.2.10.	Country version .....	38
6.1.2.11.	Password protection .....	38
6.1.3.	Sensor settings.....	39
6.1.3.1.	NO <sub>2</sub> addition.....	39
6.1.3.2.	O <sub>2</sub> reference .....	39
6.1.3.3.	Sensor protection .....	40
6.1.3.4.	Recalibration / adjustment.....	40
6.1.4.	Fuels.....	41
6.1.5.	Programs .....	42
6.2.	Measuring .....	43
6.2.1.	Preparing for measurement .....	43
6.2.1.1.	Zeroing phases.....	43
6.2.1.2.	Using the modular flue gas probe.....	44
6.2.1.3.	Configuring the reading display .....	45
6.2.1.4.	Setting location and fuel .....	45
6.2.2.	Flue gas.....	45
6.2.3.	Draught-Measurement.....	47
6.2.4.	Micro pressure probe.....	48
6.2.5.	CO undiluted.....	48
6.2.6.	Smoke No. / HCT.....	49
6.2.7.	Differential pressure.....	50
6.2.8.	Differential temperature .....	51
6.2.9.	O <sub>2</sub> air.....	51
6.2.10.	Gas flow .....	52
6.2.11.	Oil flow.....	52

---

6.2.12. CO ambient.....	53
6.2.13. CO2 ambient.....	54
6.2.14. Automatic furnaces.....	55
6.2.15. Gas pipe tests.....	56
6.2.15.1. Tightness test 1.....	56
6.2.15.2. Tightness test 2.....	57
6.2.15.3. Let By Test.....	58
6.2.15.4. Leak detection.....	58
6.3. Transferring data.....	59
6.3.1. Report printer.....	59
6.3.2. PC / Pocket PC.....	59
<b>7 Maintaining the product.....</b>	<b>60</b>
7.1. Cleaning the measuring instrument.....	60
7.2. Replacing sensors.....	60
7.3. Recalibrating / adjusting sensors.....	61
7.4. Replacing additional filter.....	61
7.5. Cleaning the modular flue gas probe.....	61
7.6. Replacing the probe module.....	62
7.7. Changing the thermocouple.....	62
7.8. Condensate container.....	63
7.9. Checking / replacing the particle filter.....	64
<b>8 Tips and assistance.....</b>	<b>65</b>
8.1. Questions and answers.....	65
8.2. Accessories and spare parts.....	66
8.3. Updating the instrument software.....	70

## 2 Safety and the environment



### 2.1. About this document

This document describes the products testo 330-1 LL and testo 330-2 LL with the instrument setting **Country version | Great Britain**.

#### Use

- > Please read this documentation through carefully and familiarize yourself with the product before putting it to use. Pay particular attention to the safety instructions and warning advice in order to prevent injuries and damage to the products.
- > Keep this document to hand so that you can refer to it when necessary.
- > Hand this documentation on to any subsequent users of the product.

#### Symbols and writing standards

Representation	Explanation
	Warning advice, risk level according to the signal word: <b>Warning!</b> Serious physical injury may occur. <b>Caution!</b> Minor physical injury or damage to the equipment may occur. > Apply the specified precautionary measures.
	Note: Basic or further information.
testo 330-1 LL	The description only applies for the specified instrument model testo 330-1 LL or testo 330-2 LL.
1. ...	Action: several steps, the sequence must be followed.
2. ...	Action: several steps, the sequence must be followed.
> ...	Action: one step or optional step.
- ...	Result of an action.
<b>Menu</b>	Elements of equipment , equipment display or program interface.

Representation	Explanation
[OK]	Control keys on equipment or control buttons in program interface.
...   ...	Functions / paths within a menu.
“...”	Example entries

## 2.2. Ensure safety

- > Only operate the product properly, for its intended purpose and within the parameters specified in the technical data. Do not use any force.
- > Do not operate the instrument if there are signs of damage at the housing, mains unit or feed lines.
- > Do not perform contact measurements on non-insulated, live parts.
- > Do not store the product together with solvents. Do not use any desiccants.
- > Carry out only the maintenance and repair work on this instrument that is described in the documentation. Follow the prescribed steps exactly. Use only original spare parts from Testo.
- > Any further or additional work must only be carried out by authorised personnel. Testo will otherwise refuse to accept responsibility for the proper functioning of the measuring instrument after repair and for the validity of certifications.
- > Only use the device in closed, dry rooms and protect it from rain and moisture.
- > Temperatures given on probes/sensors relate only to the measuring range of the sensors. Do not expose handles and feed lines to any temperatures in excess of 70 °C unless they are expressly permitted for higher temperatures.
- > The objects to be measured or the measurement environment may also pose risks: Note the safety regulations valid in your area when performing the measurements.

### For products with Bluetooth® (optional)

Changes or modifications that have been made without the explicit consent of the responsible approval authority, may cause the retraction of the type approval.

Data transfer may be disturbed by equipment that uses the same ISM-band, e.g. WLAN, microwave ovens, ZigBee.

The use of radio communication links is not permitted, among others, in aeroplanes and hospitals. For this reason the following points must be ensured before entering:

- > Switch off the device:
- > Isolate the device from any external power sources (mains cable, external rechargeable batteries, ...).

## **2.3. Protecting the environment**

- > Dispose of faulty rechargeable batteries/spent batteries in accordance with the valid legal specifications.
- > At the end of its useful life, send the product to the separate collection for electric and electronic devices (observe local regulations) or return the product to Testo for disposal.



## 3 Specifications

### 3.1. Use

The testo 330 is a handheld measuring device for the professional flue gas analysis of furnace systems:

- Small furnaces (burning oil, gas, wood, coal)
- Low-temperature and condensing boilers
- Gas water heaters

These systems can be adjusted using the testo 330 and checked for compliance with the applicable limit values.

The following tasks can also be carried out with the testo 330:

- Regulating the O<sub>2</sub>-, CO- and CO<sub>2</sub>-, NO-, NO<sub>x</sub>- values in furnace systems for the purpose of ensuring optimal operation.
- Draught measurement.
- Measuring and regulating the gas flow pressure in gas water heaters.
- Measuring and optimising the flow and return temperatures of heating systems.
- CO and CO<sub>2</sub> environment measurement.
- Detection of CH<sub>4</sub> (methane) and C<sub>3</sub>H<sub>8</sub> (propane).

testo 330 must not be used:

- as a safety (alarm) instrument

The Bluetooth® option may only be operated in countries in which it is type approved.

### 3.2. Technical data

#### 3.2.1. Examinations and licenses

As declared in the certificate of conformity, this product complies with Directive 2004/108/EC.

### 3.2.2. Bluetooth® module (option)

- Bluetooth® type: BlueGiga WT12
- Bluetooth® product note: WT12
- Bluetooth® identification: B011198
- Bluetooth® company: 10274



#### **Certification**

Belgium (BE), Bulgaria (BG), Denmark (DK), Germany (DE), Estonia (EE), Finland (FI), France (FR), Greece (GR), Ireland (IE), Italy (IT), Latvia (LV), Lithuania (LT), Luxembourg (LU), Malta (MT), Netherlands (NL), Austria (AT), Poland (PL), Portugal (PT), Rumania (RO), Sweden (SE), Slovakia (SK), Slovenia (SI), Spain (ES), Czech Republic (CZ), Hungary (HU), United Kingdom (GB), Republic of Cyprus (CY).

Iceland, Liechtenstein, Norway and Switzerland.

Turkey, El Salvador, Ecuador

#### **Information of the FCC (Federal Communications Commission)**

This device fulfils part 15 of the FCC-guidelines. Commissioning is subject to the two following conditions: (1) This device must not generate any dangerous interferences and (2) this device must be able to receive interferences, even if these could have undesired effect on the operation.

#### **Changes**

The FCC demands that the user is to be informed that with any changes and modifications to the device, which have not been explicitly approved by testo AG, the right of the user to use this device will become null and void.

### 3.2.3. Declaration of Conformity



#### EG-Konformitätserklärung

#### EC declaration of conformity

Für die nachfolgend bezeichneten Produkte:

We confirm that the following products:

**Testo 330-1 LL / -2 LL V2010**  
(bluetooth)

Best. Nr.: / Order No.: 0632 3306; 0632 3307

wird bestätigt, daß sie den wesentlichen Schutzanforderungen entsprechen, die in der Richtlinie des Rates zur Angleichung der Rechtsvorschriften der Mitgliedstaaten über die **elektromagnetische Verträglichkeit** (2004/108/EG) festgelegt sind.

corresponds with the main protection requirements which are fixed in the EEC "Council Directive 2004/108/EC on the approximation of the laws of the member states relating to electromagnetic compatibility"  
The declaration applies to all samples of the above mentioned product.

Zur Beurteilung der Erzeugnisse hinsichtlich elektromagnetischer Verträglichkeit im Kleingewerbebereich wurden folgende Normen herangezogen:

For assessment of the product following standards have been called upon:

**Störaussendung / Pertubing radiation:**  
**Störfestigkeit: / Pertubing resistance:**

DIN EN 50270:2000-01 Typ 1  
DIN EN 50270:2000-01 Typ 1

**R&TTE Richtlinie:**

EN 300 328 V1.6.1 (2004)  
EN 301 489-1 V1.8.1 (2008)  
EN 301 489-17 V2.1.1 (2009)

Diese Erklärung wird für:

This declaration is given in responsibility for:

**Testo AG**  
Postfach / P.O. Box 1140  
79849 Lenzkirch / Germany  
www.testo.com

abgegeben durch / by:

Herr Walleser Mr. Walleser  
(Name) (name)

Vorstand Managing Director  
(Stellung im Betrieb des Herstellers) (Position in the company of the manufacturer)

Lenzkirch, 27.07.2010  
(Ort, Datum / place, date)

  
(Rechtsgültige Unterschrift / Legally valid signature)



Der Hersteller betreibt ein zertifiziertes Qualitätssicherungssystem nach DIN ISO 9001

The manufacturer operates a certified quality assurance system according to DIN ISO 9001

### 3.2.4. Measuring ranges and resolution

Parameter	Measuring range	Resolution
O <sub>2</sub>	0...21 Vol.%	0.1 vol. %
CO	0...4000 ppm	1 ppm
CO, H <sub>2</sub> -comp. <sup>1</sup>	0...8000 ppm	1 ppm
COlow	0...500 ppm	0.1 ppm
AmbCO through flue gas probe	0...2000 ppm	1 ppm
AmbCO with probe 0632 3331	0...500 ppm	1 ppm
NO	0...3000 ppm	1 ppm
Draught	-9.99...40 hPa	0.01 hPa
ΔP	0...300 hPa	0.1 hPa
Temperature	-40...1200 °C	0.1°C (-40.0...999.9 °C) 1°C (rest of range)
Efficiency net	0...120 %	0.1 %
Flue gas loss	0...99.9 %	0.1 %
AmbCO <sub>2</sub> with probe 0632 1240	0...1 vol. 0...10000 ppm	-
Gas leak testing with probe 0632 3330	0...10000 ppm CH <sub>4</sub> / C <sub>3</sub> H <sub>8</sub>	-

<sup>1</sup> above the sensor protection threshold: Resolution 500 ppm (up to max. 30000 ppm)

### 3.2.5. Accuracy and response time

Parameter	Accuracy	Response time
O <sub>2</sub>	±0.2 vol.%	< 20s (t90)
CO	±20 ppm (0...400 ppm) ±5% of mv (401...1000 ppm) ±10% of mv (1001...4000 ppm)	< 60s (t90)
CO, H <sub>2</sub> -comp.	±10 ppm or ±10 % of mv <sup>2</sup> (0...200 ppm) ±20 ppm or ±5 % of mv <sup>2</sup> (201...2000 ppm) ±10% of mv (2001...8000 ppm)	< 60s (t90)
CO <sub>low</sub>	±2 ppm (0...39.9 ppm) ±5 % of mv (rest of range)	< 40s (t90)
AmbCO through flue gas probe	±10 ppm (0...100 ppm) ±10 % of mv (101....2000 ppm)	< 35s (t90)
AmbCO with 0632 3331	±5 ppm (0...100 ppm) <sup>3</sup> ±5 % of mv ( >101 ppm)	approx. 35s (t90)
NO	±5 ppm (0...100 ppm) ±5 % of mv (101....2000 ppm) ±10 % of mv (2001...3000 ppm)	< 30s (t90)
Draught <sup>4</sup>	±0.02 ppm or ±5% of mv <sup>2</sup> (-0.50...0.60 hPa) ± 0.03 hPa (0.61...3.00 hPa) ±1.5 % of mv (3.01...40.00 hPa)	-
ΔP	± 0.5 hPa (0.0...50.0 hPa) ±1 % of mv (50.1...100.0 hPa) ±1.5 % of mv (rest of range)	-

<sup>2</sup> higher value is valid

<sup>3</sup> at 10...30 °C, outside this range additionally ±0.2 % of mv / °C

<sup>4</sup> with fine draught measurement option: Measuring range 0...100, 0Pa, resolution 0.1Pa

Parameter	Accuracy	Response time
Temperature	$\pm 0.5 \text{ }^\circ\text{C}$ (0.0...100.0 $^\circ\text{C}$ ) $\pm 0.5 \%$ of mv (rest of range)	probe dependent
Efficiency	-	-
Flue gas loss	-	-
AmbCO <sub>2</sub> , through 0632 1240	$\pm 50 \text{ ppm} + 2 \%$ of mv (0...5000 ppm) $\pm 100 \text{ ppm} + 3 \%$ of mv (5001...10000 ppm)	approx. 35s (t <sub>90</sub> )
Gas leak testing with 0632 3330	-	< 2s (t <sub>90</sub> )

### 3.2.6. Other instrument data

#### Flue gas analyser

Characteristic	Values
Storage / and transport temperature	-20...50 $^\circ\text{C}$
Operating temperature	-5...45 $^\circ\text{C}$
Power supply	Battery: 3.7 V / 2.6 Ah Mains unit: 6 V/1.2 A
Protection class	IP40
Weight	600 g (excluding battery)
Dimensions	270 x 90 x 65 mm
Memory	500,000 readings
Display	Graphic colour display, 240 x 320 pixels
Gas leak testing probe	visual indication (LED) audible indication by buzzer
Storage temperature battery	$\pm 0...35 \text{ }^\circ\text{C}$
Battery charge time	approx. 5-6 h
Battery operation time	6h (pump on, 20 $^\circ\text{C}$ ambient temperature)

---

<b>Characteristic</b>	<b>Values</b>
Bluetooth® (option)	Range < 10 m
Warranty	Measuring instrument: 48 months LL-sensors O2, CO: 48 months, Other sensors: 24 months Flue gas probe: 48 months Thermocouple: 12 months Battery: 12 months
Terms of warranty	Terms of warranty: see website <a href="http://www.testo.com/warranty">www.testo.com/warranty</a>

## 4 Product description

### 4.1. Measuring instrument

#### 4.1.1. Overview



- 1 Switch on/off
- 2 Interfaces: USB, PS2, infrared

#### **⚠ CAUTION**

**Risk of injury from infrared beam!**

- > Do not direct infrared beam at human eyes!



- 3 Condensate trap (on rear)
- 4 Fixing eyelets for carrying strap (left and right)
- 5 Display
- 6 Magnetic holders (on rear)









### CAUTION

#### **Damage to other equipment caused by strong magnets!**


- > Keep a safe distance from products which could be damaged by magnets (e.g. monitors, computers, pacemakers, credit cards).

- 7 Keypad
- 8 Service cover (on rear)
- 9 Gas outlet
- 10 Unit connections: flue gas probe, sensor, pressure probe, mains unit



## 4.1.2. Keypad

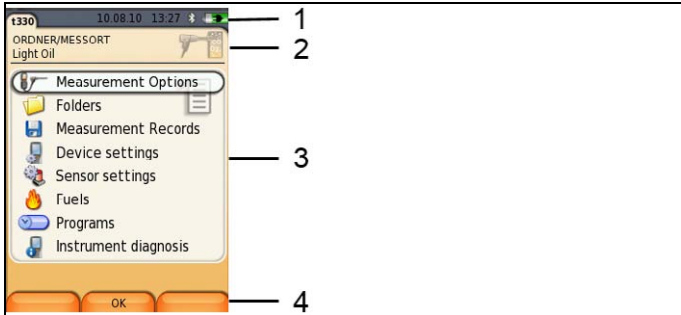


Key	Functions
	Switch measuring instrument on / off
 Example	Function key (orange, 3x), relevant function is shown on the display
	Scroll up, increase value
	Scroll down, reduce value
	Back, cancel function
	Open main menu
	Open instrument diagnosis menu
	Transmit data to the Testo protocol printer.

### 4.1.3. Display




1 Status bar (dark grey background):

- Warning symbol  (only if there is a device error, display of error in instrument diagnosis menu), otherwise: Instrument designation.
- Symbol  (only if data are stored in the temporary memory).
- Display of date and time.
- Indication of Bluetooth® status, power supply and remaining capacity of the battery:

Icon	Feature
	blue symbol = Bluetooth® on, grey symbol = Bluetooth® off
	Battery operation Indication of remaining capacity of the rech. batt. by colour and filling degree of the battery symbol (green = 5-100 %, red = < 5 %)
	Mains operation Indication of remaining capacity of battery: see above


- 2 Info field of register tabs: Indication of selected folders / measurement place, chosen fuel, chosen measurement type
- 3 Selection field for functions (chosen function appears against a white background, unavailable functions are identified by grey characters) or display of measuring values.
- 4 Function display for function keys.

#### 4.1.4. Device connections

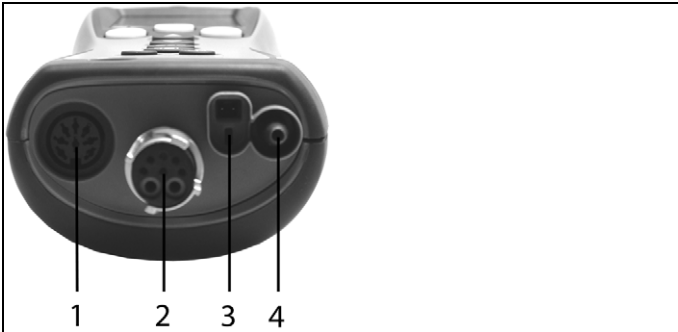


- 1 Probe socket
- 2 Flue gas socket
- 3 Mains unit socket
- 4 Pressure socket

#### 4.1.5. Interfaces

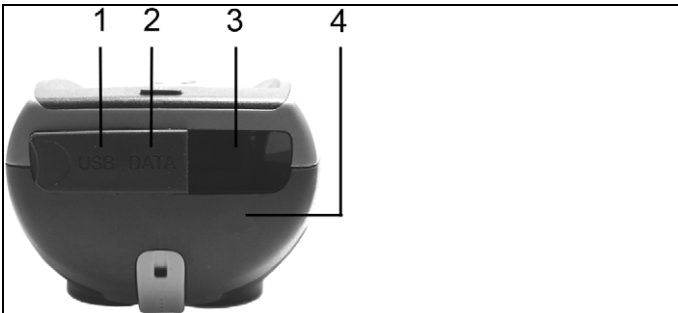

- 1 USB interface
- 2 PS2-interface
- 3 Infrared interface (IrDA)
- 4 Bluetooth interface (optional)

### 4.1.6. Components

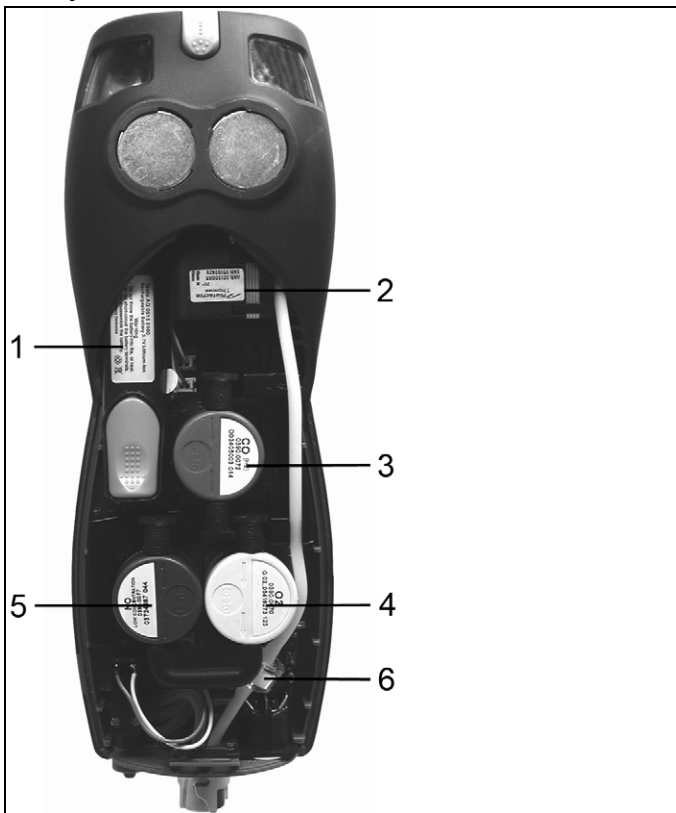

- 1 Rechargeable battery
- 2 Measuring gas pump
- 3 Slot for CO-sensor or COlow-sensor
- 4 Slot O2-sensor
- 5 Slot NO-sensor
- 6 Additional filter


### 4.1.7. Carrying strap (0440 0581)

To secure the carrying strap:

- > Remove the sealing caps from the sides of the housing.

#### **Fix the sealing caps on the inside of the service cover:**

1. Place the measuring instrument on its front.
2. Pick the service cover up at the markings (arrows) using your index finger and thumb and press gently to release the lock.
3. Fold up the service cover and remove it.

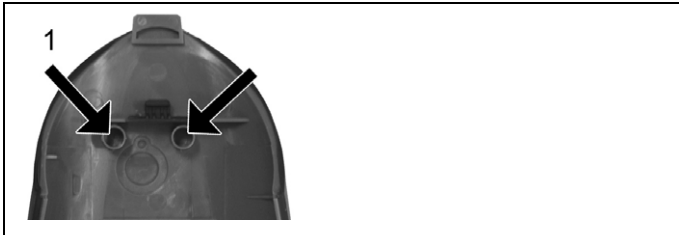


4. Secure the sealing caps in the two holders on the inside of the service cover (1).
5. Attach the service cover and engage it in place.



- > Engage the carrying strap clip in the fixing eyelets on the sides of the device. Note the guide groove, the strap must point "down" (2).

## 4.2. Modular flue gas probe

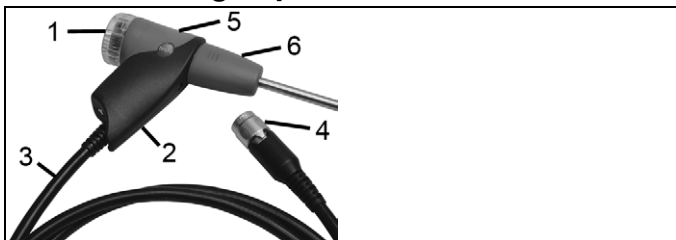

- 1 Removable filter chamber with window and particle filter
- 2 Probe handle
- 3 Connecting cable
- 4 Connector plug for measuring instrument
- 5 Probe module lock release
- 6 Probe module

## 5 First steps

### 5.1. Commissioning

The measuring instrument is supplied with a rechargeable battery already fitted.

- > Charge the battery fully before using the measuring instrument, see Charging batteries page 24.

### 5.2. Getting to know the product


#### 5.2.1. Mains unit / rechargeable battery

If the mains unit is connected, the measuring instrument is automatically powered from the unit.

##### 5.2.1.1. Changing the battery

- ✓ The measuring instrument must not be connected to a mains socket via the mains unit. The instrument must be switched off.

Change the rechargeable battery within 5 minutes so that device settings (e.g. date / time) are not lost.

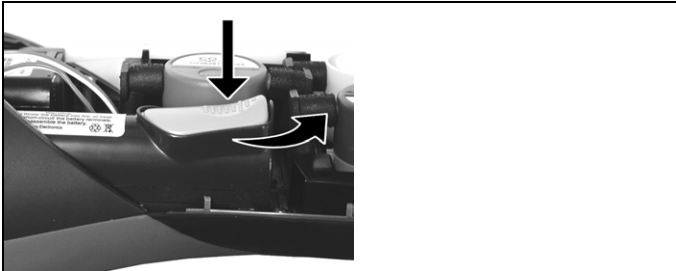

1. Place the measuring instrument on its front.
2. Remove the service cover: Take hold of it at the markings (arrows) using the index finger and thumb, press slightly, fold up and remove.
3. Open the battery lock: Press the grey key and push in direction of arrow.
4. Remove the battery and insert a new rechargeable battery. Only use the Testo rechargeable battery 0515 0107!
5. Close the battery lock: Press the grey key and push against direction of arrow until the battery engages.

6. Attach the service cover and engage it in place.

### **5.2.1.2. Charging batteries**

The rechargeable battery can only be charged at an ambient temperature of  $\pm 0...+35$  °C. If the battery has been discharged completely, the charging time at room temperature is approx. 5-6 hrs.

#### **Charging in the measuring instrument**

1. Connect the plug of the mains unit to the mains unit socket on the measuring instrument.
2. Connect the mains plug of the mains unit to a mains socket.
  - The charging process will start. The charge condition will be shown in the display. The charging process will stop automatically when the battery is fully charged.

#### **Charging in the charging station (0554 1087)**

- > Refer to the documentation enclosed with the charging station.

#### **Battery care**

- > Do not fully exhaust rechargeable batteries.
- > Store rechargeable batteries only in charged condition and at low temperatures, but not below 0 °C (best storage conditions with a charge level of 50-80 %, at an ambient temperature of 10-20 °C, recharge completely before use).
- > For longer breaks you should discharge and recharge the batteries every 3- months. Trickle charging should not exceed 2 days.

### **5.2.1.3. Mains operation**

1. Connect the plug of the mains unit to the mains unit socket on the measuring instrument.
2. Connect the mains plug of the mains unit to a mains socket.
  - The measuring instrument is powered by the mains unit.
  - If the measuring instrument is switched off and a rechargeable battery is inserted, the charging process will start automatically. Switching the measuring instrument on has the effect of stopping battery charging and the measuring instrument is then powered via the mains unit.



## 5.2.2. Connecting probes / sensors

Sensor detection at the sensor socket takes place during the activation process.

- ✓ Sensors that are required must always be connected before the measuring instrument is switched on, or the instrument must be switched off and then on again after the sensor has been changed, so that the correct data can be read into the measuring instrument.

Probe/sensor detection at the flue gas socket is carried out continuously. It is possible to change the probe/sensor even while the measuring instrument is switched on.

### Connecting flue gas probes / gas pressure adapters / temperature adapters



- > Insert the connector plug into the flue gas socket and lock by slightly turning it clockwise (bayonet lock).




There must be no more than one extension lead (0554 1201) between measuring instrument and flue gas probe.

### Connecting other sensors






- > Insert the connector plug of the probe into the probe socket.

### 5.2.3. Switching on

- > press .
- The start screen is displayed (duration: about 5 s).
- If the voltage supply was interrupted for a longer period: The menu Date / Time is opened.
- The pressure sensors are set to zero.
- There is a device error: The **Error Diagnosis** is displayed.
- The menu **Measurements** is displayed.


### 5.2.4. Calling up a function









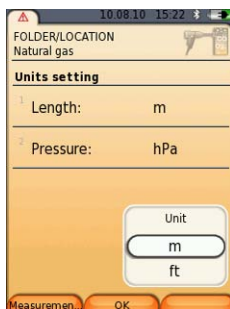

1. Select function: , .
- The chosen function appears in a frame.
2. Confirm selection: .
- The chosen function is opened.
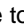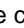
### 5.2.5. Entering values

Some functions require values (numbers, units, characters) to be entered. Depending on the function that is chosen, the values are entered via either a list field or an input editor.


#### List field



1. Select the value to be changed (numerical value, unit): , , ,  (depending on the selected function).
2. Press .
3. Set value: , , ,  (depending on the selected function).
4. Confirm the entry: .

5. Repeat steps 1 and 4 as required.
6. Save the entry: **[Finished]**.

### Input editor

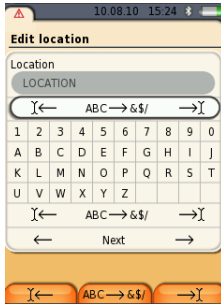

1. Select the value to be changed (character): **[▲], [▼], [◀], [▶]**.
2. Accept value: **[OK]**.

#### Options:

- > Toggle between upper / lower case characters:

Select **← ABC →&\$/ →|** : **[▲], [▼]** → **[ABC →&\$/]**.

- > Position the cursor in the text:


Select **← ABC →&\$/ →|** : **[▲], [▼]** → **[|←]** or **[→|]**.

- > Delete character before or after the cursor:

Select **← next →** : **[▲], [▼]** → **[←]** or **[→]**.

3. Repeat steps 1 and 2 as required.
4. Save the entry: Select **← next →** : **[▲], [▼]** → **[Next]**.

## 5.2.6. Printing / saving data

Data are printed out via the function key  or the menu **Options**. Data are saved via the menu **Options**. The menu **Options** is accessed via the left function key and is available in many different menus.

Assignment of the right function key with the function **Save** or **Print**, see Assigning the right function key page 33 .

Only measuring values, which have a display field in the measurement view assigned, will be saved / printed out.



The measurement data can be printed out parallel to the saving process, while a measurement program is running.

To be able to transmit data via infrared or Bluetooth interface to a report printer, the printer to be used must have been activated, see [Activating the printer:](#), page 37.

### 5.2.7. Remembering data (clipboard)

With the help of the clipboard measuring results from various measurement types can be combined to a common record, which can then be printed out and saved (see above). Data are saved to the clipboard via the menu **Options** and the command **Clipboard**.

If there are data in the clipboard, the status bar shows the symbol




If there are data in the clipboard and the command **Print** or **Save** is triggered, all data in the clipboard will be printed out or saved.

Only one set of measuring data can be recorded per measurement type (e.g. **Flue Gas** or **Draught**). Repetitive saving of test data of one measurement type overwrites the previously saved data. When changing the measurement place or the fuel, the clipboard is deleted.

### 5.2.8. Confirming an error message

If an error occurs, an error message is shown in the display.

> Confirming an error message: **[OK]**.

Errors which have occurred and have not yet been rectified are indicated by a warning symbol () in the header.

Not yet rectified error messages can be displayed in the menu **Error Diagnosis**, see **Instrument diagnosis**, page 31.

## 5.2.9. Switching off



Unsaved measuring values will be lost when the flue gas analyser is switched off.

- > Press .
- Possibly: The pump starts and the sensors are rinsed until the switch-off thresholds (O<sub>2</sub> > 20 %, other measurement parameters < 50 ppm) are reached. The maximum rinsing period is 3 minutes.
- The measuring instrument switches off.

## 5.3. Folders / Locations

All readings can be saved under the currently active location. Readings not yet saved are lost when the measuring instrument is switched off.

Folders and locations can be created, edited, copied and activated. Folders and locations (incl. protocols) can be deleted.

Calling up a function:

- > → **Folder/Locations** → **[OK]** .

### Adapting the display:

- > Toggle between overview (display of number of locations per folder) and detailed view (display of all locations per folder): **[Overview]** or **[Details]**.

### Activating a location:

- > Select the location → **[OK]**.
- The location is activated and the menu **Measurements** is opened.

### Creating a new location:

A location is always created in a folder.

1. Select the folder in which the location is to be created.
2. **[Options]** → **New/Location** → **[OK]**.
3. Enter values or make settings.
4. Finalise the entry: **[Finished]**.

**Other location options:**

- > **[Options]** → **Edit Location**: Make changes to an existing location.
- > **[Options]** → **Copy Location**: Make a copy of an existing location in the same folder.
- > **[Options]** → **Delete Location**: Delete an existing location.

**Create a new folder:**

1. **[Options]** → **New Folder** → **[OK]**.
2. Enter values or make settings.
3. Finalise the entry: **[Finished]**.

**Other folder options:**

- **Edit Folder**: Make changes to an existing folder.
- **Copy Folder**: Make a copy of an existing folder.
- **Delete Folder**: Delete an existing folder, including the locations created therein.
- **Delete all Folders**: Delete all existing folders, including the locations created therein.

## 5.4. Measurement records

Calling up the function:

- >  → **Measurement Records** → **[OK]**.

**Adapting the display:**

- > Toggle between overview (display of number of locations per folder) and detailed view (display of all locations per folder): **[Overview]** or **[Details]**.

**Display record:**

1. Choose the desired record from the detailed view.
2. **[Data]**.

**Options:**

- > **[Options]** → **Show Graphic**: Display saved record data as graphic.
- > **[Options]** → **Print Data**: Transmit data of the chosen record to a record printer.
- > **[Options]** → **Delete Record**: Delete the chosen record.
- > **[Options]** → **Number of Lines**: Change the number of measuring values per display page.
- > **[Options]** → **Delete all Records**: Delete all saved records for a location.

## 5.5. Instrument diagnosis

Important operating values and instrument data are displayed. A gas path check (testo 330-2 LL) can be carried out. The status of the sensors and any device errors not yet rectified can be displayed.

Calling up the function:

- >  → **Instrument Diagnosis** → **[OK]**.
- or
- > **[i]**.

### Carrying out a gas path check (testo 330-2 LL)

1. **Gas Path Check** → **[OK]**
2. Place the black sealing cap on the tip of the flue gas probe.
  - The pump flow is displayed. If the volumetric flow rate is less than 0.02 l/min, the gas paths are not leaking.
3. End of check: **[OK]**.

### Viewing device errors:

- > **Error Diagnosis** → **[OK]**.
- Unrectified errors are displayed.
  - > View next / previous error: **[▲]**, **[▼]**.

**View sensor diagnosis:**

1. > **Sensor Diagnosis** → [OK].
2. Select sensor. [▲], [▼].
  - The status of the sensor is indicated by a lamp.



A sensor is able to recover. It is therefore possible that the sensor status indication changes from yellow to green or from red to yellow.

---

**View instrument information:**

- > **Device Information** → [OK].
- Information is displayed.



## 6 Using the product

### 6.1. Performing settings

#### 6.1.1. Assigning the right function key

The right function key can have a function from the **Options** menu assigned to it. The menu **Options** is accessed via the left function key and is available in many different menus. This assignment is only valid for the currently opened menu / the opened function.

✓ A menu / function is opened in which the **Options** menu is displayed on the left function key.

1. Press **[Options]** .
2. Select option: **[▲]**, **[▼]**.

Depending on the menu / function from which the **Options** menu was opened, the following functions are available.

3. Assign the selected function to the right function key. **Press**

#### 6.1.2. Instrument settings



It is assumed that the contents of the chapter **First steps** (see **First steps**, page 23) are known.

Calling up a function:

> → **Instrument Settings**.

#### 6.1.2.1. Readings display

The parameters / units and the display representation (number of readings displayed per display page) can be set.

The settings are only valid for the currently chosen measurement type, which is indicated by the symbol in the info field.

Total overview of selectable parameters and units (available selection depends on the chosen measurement type):

Display	Parameter
<b>FT</b>	Flue gas temperature
<b>AT</b>	Combustion air temperature
<b>Itemp</b>	Instrument temperature

<b>Display</b>	<b>Parameter</b>
<b>Pump</b>	Pumping capacity
<b>O2</b>	Oxygen
<b>CO2</b>	Carbon dioxide
<b>CO</b>	Carbon monoxide
<b>uCO</b>	Carbon monoxide undiluted
<b>NO</b>	Nitrogen monoxide
<b>NOx</b>	Nitrogen oxide
<b><math>\lambda</math></b>	Air ratio
<b>amCO</b>	Ambient carbon monoxide
<b>amCO2</b>	Ambient carbon dioxide
<b>O2ref</b>	Oxygen reference
<b>Edrft</b>	external draught (micro pressure probe)
<b>E-<math>\Delta</math>P</b>	external differential pressure (micro pressure probe)
<b>ExAir</b>	Air ratio
<b>Ratio</b>	Poison index
<b><math>\eta</math>+</b>	Efficiency under due consideration of the heat value range
<b><math>\eta</math></b>	Efficiency without consideration of the heat value range
<b>Dew/a</b>	Flue gas dew point temperature

#### Calling up the function:

>  → **Instrument Settings** → **[OK]** → **Readings Display** → **[OK]**

#### Changing parameter / unit in a line:

1. Select the line: **[▲]**, **[▼]** → **[Edit]**
2. Select the parameter: **[▲]**, **[▼]** → **[OK]**
3. Select the unit: **[▲]**, **[▼]** → **[OK]**
4. Save changes: **[OK]**

**Options:**

- > **[Options]** → **Number of Lines**: Change the number of measuring values per display page.
- > **[Options]** → **Insert Empty Lines**: Insert the empty line before the selected line.
- > **[Options]** → **Delete Line**: Delete the selected line.
- > **[Options]** → **Factory Setting**: Reset the readings display to factory setting

**6.1.2.2. Alarm limits**

Alarm limits can be set for several display parameters. An audible alarm signal is triggered when the alarm limit is reached.

Calling up the function:

- >  → **Instrument Settings** → **[OK]** → **Alarm Limits** → **[OK]**

**Switching alarm signals on / off, changing alarm limits:**

1. Select function or parameter: **[▲]**, **[▼]** → **[Edit]**.
2. Set parameter: **[▲]**, **[▼]** and partly **[◀]**, **[▶]** → **[OK]**.
3. Save changes: **[Finished]**.

**6.1.2.3. Units**

The units used for parameters in configuration menus can be set.

Calling up the function:

- >  → **Instrument Settings** → **[OK]** → **Units** → **[OK]**

**Adjustable units**

Parameter	Unit
<b>Length</b>	<b>m, ft</b>
<b>Pressure</b>	<b>mbar, hPa</b>

1. Select the line: **[▲]**, **[▼]** → **[Edit]**.
2. Select the unit to be changed: **[▲]**, **[▼]** → **[OK]**.
3. Confirm the entry: **[Finished]**.








#### 6.1.2.4. Date / time

Date, time mode and time can be set.

Calling up the function:

>  → **Instrument Settings** → [OK] → **Date/Time** → [OK]

##### Setting date/time:

1. Select parameter: [, , ] → [Edit].
2. Set parameter: [, ] and partly [, ] → [OK].
3. Save changes: [Save].







#### 6.1.2.5. Energy management

Automatic instrument shutdown (Auto-Off) and switching off of the display light in battery operation can be set.

Calling up the function:

>  → **Instrument Settings** → [OK] → **Energy Management** → [OK]

##### Making settings:

1. Select function or parameter: [, ] → [Edit].
2. Set parameter: [, ] and partly [, ] → [OK].
3. Save changes: [Finished].

#### 6.1.2.6. Display brightness

The intensity of the display illumination can be set.

Calling up the function:

>  → **Instrument Settings** → [OK] → **Display Brightness** → [OK]

Performing settings

> Set parameter: [, ] → [OK].

#### 6.1.2.7. Printer

The headers (lines 1-3) and the footers for the printout can be set. The printer that is used can be activated.

Calling up the function:

>  → **Instrument Settings** → [OK] → **Printer** → [OK]

**Activating the printer:**

The printer 0554 0543 can only be selected after the Bluetooth®-interface has been activated, see Bluetooth®, page 37.

1. **Select Printer** → [OK].
2. Select the printer: [▲], [▼] → [OK].
- The printer is activated and the menu **Printer** is opened.

**Setting the print text:**

1. **Print text** → [OK].
2. Select function: [▲], [▼] → [Edit].
3. Enter values → [Next].
4. Save the entry: [Finished].

**6.1.2.8. Bluetooth®**

This menu is only available if the instrument is equipped with Bluetooth. The Bluetooth module can be switched on / off. The relay can now be tested.

Calling up the function:

- > → **Instrument Settings** → [OK] → **Bluetooth** → [Edit].

**Making settings:**

- > Set parameter → [OK].

**6.1.2.9. Language**

The menu language can be set. The number of available languages depends on the activated country version, see Country version, page 38.

Calling up the function:

- > → **Instrument Settings** → [OK] → **Language** → [OK]

**Activating the language:**

- > Select the language → [OK].

### 6.1.2.10. Country version

The country version (available measurement parameters, fuels / parameters, calculation formulas) can be set. The selection of the country version influences the menu languages that can be activated.

Calling up the function:

>  → **Instrument Settings** → [OK] → **Country Version** → [OK]

---



This action can be password protected. A password is specified in the menu **Password Protection**, see Password protection, page 38.

---



Possibly:

> Enter the password: [Enter] → Enter password → [Next] → [OK].

#### Setting the country version:

1. Select the country version: [**▲**], [**▼**] → [OK].
  2. Confirm the confirmation request: **Yes** → [OK]
- The system is restarted.

### 6.1.2.11. Password protection

The password protection is only valid for functions identified by the following symbol:  or .

Password protection can be activated / deactivated, the password can be changed.

To deactivate the password protection change the password to **0000** (factory setting).

Calling up the function:

>  → **Instrument Settings** → [OK] → **Password Protection** → [OK]

Possibly:

> Enter the currently valid password:  
[Enter] → Enter password → [Next] → [OK].

**Changing the password:**

1. **[Edit]**.
2. Enter the new password → **[Next]**.
3. **[Edit]**.
4. Enter the new password again to confirm → **[Next]**.
5. Save changes: **[Finished]**.

### 6.1.3. Sensor settings

#### 6.1.3.1. NO<sub>2</sub> addition

The NO<sub>2</sub> addition parameter can be set.

The setting of the NO<sub>2</sub>-addition can be password protected, see Password protection, page 38.

Calling up the function:

>  → **Sensor Settings** → **NO<sub>2</sub> Addition** → **[Edit]**.

Possibly:

> Enter the password: **[Enter]** → Enter password → **[Next]** → **[OK]**.

**Setting the NO<sub>2</sub> addition:**

> Set parameter → **[OK]**.

#### 6.1.3.2. O<sub>2</sub> reference

The O<sub>2</sub> reference value can be set.

The setting of the O<sub>2</sub> reference value can be password protected, see Password protection, page 38.

Calling up the function:

>  → **Sensor Settings** → **O<sub>2</sub> Reference** → **[Edit]**.

Possibly:

> Enter the password: **[Enter]** → Enter password → **[Next]** → **[OK]**.

**Setting the O<sub>2</sub> reference:**

> Set parameter → **[OK]**.

### 6.1.3.3. Sensor protection


Protection limits can be set to protect the sensors against overload. Sensor protection switch-off is available for the following sensors: CO, NO.

The sensor protection is activated when the threshold is exceeded.

- testo 330-1 LL: Switch-off.
- testo 330-2 LL: Dilution, if exceeded again: Switch-off.

To deactivate sensor protection the thresholds must be set to 0 ppm.

Calling up the function:

>  → **Sensor Settings** → **Sensor Protection** → **[OK]**.

#### Setting sensor protection thresholds:

1. Select parameter: **[Edit]**.
2. Set parameter → **[OK]**.
3. Save changes: **[Finished]**.

### 6.1.3.4. Recalibration / adjustment

CO and NO sensors can be recalibrated and adjusted.

For recalibration / adjustment Testo recommends the use of the calibration adapter 0554 1205.



If obviously unrealistic readings are displayed, the sensors should be checked (calibrated) and, if required, adjusted.

Have the recalibration / adjustment carried out by a qualified service centre approved by Testo.

Adjustments made with low gas concentrations can lead to accuracy deviations in the upper measuring ranges.

---

Calling up the function:

>  → **Sensor Settings** → **Recalibration** → **[OK]**.

Possibly:

- > Enter the password: **[Enter]** → Enter password → **[Next]** → **[OK]**.
- Gas zeroing (30 s).



**Performing recalibration / adjustment:****⚠ WARNING**

Dangerous gases

**Danger of poisoning!**

- > Observe safety regulations / accident prevention regulations when handling test gas.
- > Use test gases in well ventilated rooms only.

1. Connect the calibration adapter to the flue gas socket.
2. Select the parameter: [**▲**], [**▼**] → [**OK**].
3. [**Edit**] → Enter the test gas concentration (nominal value).
4. Attach the connecting line of the test gas bottle to the calibration adapter.
5. Apply test gas to the sensor.
6. Start recalibration: [**Start**].
7. Accept the nominal value once the actual value is stable (adjustment): [**OK**].  
-or-  
Abort (no adjustment): [**esc**].
8. Save changes: [**Finished**].

**6.1.4. Fuels**

The fuel can be selected. The fuel-specific coefficients and limits can be set.

Apart from the pre-configured fuels, 10 more customer specific fuels can be configured. Fuel parameter, see [www.testo.com/download-center](http://www.testo.com/download-center) (registration required).



In order to maintain the measuring accuracy of the instrument one must choose or configure the correct fuel.



The limits serve the purpose of configuring the ideal zone of the flue gas matrix and do not have any influence on the accuracy of the measuring results.

---

Calling up the function:

- > [**📄**] → **Fuels** → [**OK**].

**Activating fuels:**

- > Select the fuel → **[OK]**.
- The fuel is activated and the main menu is opened.

**Setting coefficients:**

1. Select the fuel → **[Coeff.]**.
2. Select the coefficients: **[Edit]**.

Possibly:

- > Enter the password: **[Enter]** → Enter password → **[Next]** → **[OK]**.
- 3. Set values → **[OK]**.
- 4. Save changes: **[Finished]**.

**Setting limits:**

1. Select limit → **[Edit]**.
2. Set values → **[OK]**.
3. Save changes: **[Finished]**.

## 6.1.5. Programs

Five measuring programs for different measurement types can be configured and activated. The measuring programs serve the purpose of saving and representing measuring sequences. After the end of the measuring process the readings of a measuring program are automatically saved in a record.

Only one measuring program can be activated in the instrument.

Calling up the function:

- >  → **Programs** → **[OK]**.

**Activating / deactivating a program:**

- > Select the program: **[▲]**, **[▼]** → **[Enable]** or **[Disable]**.
- When activating a program: The program is activated and the measurement type matching the program is opened.

---

### Configuring the program:

---

**i** The measuring cycle takes 1s and cannot be changed.  
An activated program cannot be configured.

---

1. Select the program: [▲], [▼] → [Edit].
2. Select parameters program name, measurement type, gas phase: [▲], [▼] → [Edit].
3. Set parameters or enter values: [▲], [▼] and partly [◀], [▶] → [OK].
4. Save changes: [Finished].

## 6.2. Measuring

### 6.2.1. Preparing for measurement

---

**i** It is assumed that the contents of the chapter **First steps** (see First steps, page 23) are known.

---

#### 6.2.1.1. Zeroing phases

##### Measuring the ambient air temperature (AT)

If no combustion air temperature probe is connected, the temperature measured by the thermocouple of the flue gas probe during the zeroing phase is used as the combustion air temperature. All dependent parameters are calculated using this value. This method of measuring combustion air temperature is sufficient for systems dependent on ambient air. However, ensure that the flue gas probe is near the intake duct of the burner during the zeroing phase.

If a combustion air temperature probe is connected, the combustion air temperature is measured continuously via this probe.

##### Gas zeroing

When the instrument is switched on the measurement menu is opened and the gas sensors are zeroed.

---

**i** testo 330-1 LL: The flue gas probe must be in the open air during the zeroing phase!

testo 330-2 LL: The flue gas probe can be in the flue gas duct even during the zeroing phase, if a separate VT-sensor is plugged in.

---

### Draught / pressure zeroing

The pressure sensors are zeroed when a pressure measuring function is called up.

**i** testo 330-1 LL: The flue gas probe must be in the open air during the zeroing phase / the instrument must not be pressurised during zeroing!

testo 330-2 LL: The flue gas probe can be in the flue gas duct even during the zeroing phase, if a separate VT-sensor is plugged in. The pressure socket of the instrument must be free (i.e. unpressurized, not closed).

---

#### 6.2.1.2. Using the modular flue gas probe

 
##### Checking the thermocouple



The thermocouple of the flue gas probe must not lie against the probe cage.

> Check before use. Bend the thermocouple back if necessary.

##### Aligning the flue gas probe



The flue gas must be able to flow freely past the thermocouple.

> Align the probe by turning it as required.



The tip of the probe must be in the hot spot of the flue gas flow.

- > Align the flue gas probe in the flue gas duct so that the tip is in the hot spot (area of the highest flue gas temperature).

### 6.2.1.3. **Configuring the reading display**

Only those parameters and units, which are activated in the reading display, appear in the reading display, the saved measurement protocols and the record printouts.


- > Before performing measurements set up the reading display in such a way, that the required parameters and units are activated, see Readings display, page 33.

### 6.2.1.4. **Setting location and fuel**


Before carrying out measurements, the measurement location and the fuel must be correctly selected, see Folders / Locations , page 29 and Fuels, page 41.

## 6.2.2. **Flue gas**

Calling up the function:

1.  → **Measurements** → **[OK]** → **Flue Gas** → **[OK]**.
2. Select the fuel → **[OK]**.

### Performing the measurement:


1. Start measurement: [].





If a separate measurement of CO undiluted has not yet been carried out, this value is calculated using the readings of the flue gas probe and is updated continuously.

If CO undiluted has already been measured separately, the value obtained is adopted.

- The readings are displayed.

2. Quit measurement: [].

### Options

- > [**Options**] → **Clipboard**: Data are saved to the clipboard:
- > [**Options**] → **Save**: The readings are saved in a record.
- > [**Options**] → **Show Graphic**: The readings are displayed in form of a line graph.
- > [**Options**] → **Configure Graphic**: The measurement parameters to be represented (max. 4) can be displayed () or hidden ()
- > [**Options**] → **Flue Gas Matrix**: The readings are displayed as flue gas matrix, see below.
- > [**Options**] → **Number of Lines**: Change the number of measuring values per display page.
- > [**Options**] → **Recalibrate**: The gas sensors are set to zero.
- > [**Options**] → **Readings Display**: (This function is not available during a measurement): The readings display menu is opened.

### Show flue gas matrix

This function is only available if the measurement parameter **CO** has been activated in the readings display.

Calling up the function:

- ✓ The flue gas function is opened.
- > [**Options**] → **Flue Gas Matrix**:

## Options

- > **[Options]** → **Clipboard**: Data are saved to the clipboard:
- > **[Options]** → **Save**: The readings are saved in a record.
- > **[Options]** → **Show Graphic**: The readings are displayed in form of a line graph.
- > **[Options]** → **Show Numerical Values**: Data are displayed as numerical values.
- > **[Options]** → **System Type**: (This function is not available during a measurement). Set the system type to be able to configure the ideal zone (green) of the flue gas matrix, using the limits pre-configured for each system type.
- > **[Options]** → **Reset Graphic**: The displayed graphical values are deleted.
- > **[Options]** → **Limits**: (This function is not available during a measurement). Enter limits to be able to configure the ideal zone (green) of the flue gas matrix.
- > **[Options]** → **CO + O2** or **CO + CO2**: Choose which parameter should be assigned to the x-axis of the display matrix (O2 or CO2).
- > **[Options]** → **Readings Display**: (This function is not available during a measurement). Open the readings display menu.

## 6.2.3. Draught-Measurement

Calling up the function:

- ✓ A flue gas probe must be connected.


1.  → **Measurements** → **[OK]** → **Draught** → **[OK]**.


### Performing the measurement:





The pressure socket of the instrument must be free (i.e. unpressurized, not closed).

Do not measure for longer than 5 min, as the drift of the pressure sensor means that the readings could be outside the tolerance limits.

1. Start measurement: .
- Draught zeroing.

2. Position the flue gas probe in the hot spot (area of the highest flue gas temperature).  
The display showing the maximum measured flue gas temperature (**FT max**) helps when positioning the probe.
  - The reading is displayed.
3. Quit measurement [].

**Options:**

- > [**Options**] → **Clipboard**: Data are saved to the clipboard:
- > [**Options**] → **Save**: The readings are saved in a record.
- > [**Options**] → **Show Graphic**: The readings are displayed in form of a line graph.
- > [**Options**] → **Configure Graphic**: The measurement parameters to be represented (max. 4) can be displayed () or hidden ().
- > [**Options**] → **Readings Display**: (This function is not available during a measurement): The readings display menu is opened.

## 6.2.4. Micro pressure probe


The following measurements can be performed using the micro pressure probe (0638 0330):

- **Ext-Draught**
- **Ext-Delta-P Single meas.**
- **Ext-Delta Program**



See instruction manual for micro pressure probe.

## 6.2.5. CO undiluted

Calling up the function:

- ✓ A multi-hole probe (0554 5762) must be connected.
- > [] → **Measurements** → [**OK**] → **CO undiluted** → [**OK**].

**Performing the measurement:**

1. Start measurement: []
  - The reading is displayed.
2. Quit measurement: []



**Options:**

- > **[Options]** → **Clipboard**: Data are saved to the clipboard:
- > **[Options]** → **Save**: The readings are saved in a record.
- > **[Options]** → **Show Graphic**: The readings are displayed in form of a line graph.

**6.2.6. Smoke No. / HCT****Calling up the function:**

- >  → **Measurements** → **[OK]** → **Smoke No. / HCT** → **[OK]**.




The parameters **Smoke No.** and **Oil derivatives** are only available for oil fuels.

**Determining smoke tester no. / smoke nos. / oil derivative with the smoke pump and entering manually:**

1. Select parameter → **[Edit]**.
2. Enter data or values → **[Next]** or **[OK]**.

**Determining smoke tester no. / smoke nos. / oil derivative with the smoke tester testo 308 and transferring wireless:**

- The testo 308 must be in data transfer mode ( lights up).
- > **[Options]** → **t308**.
- The values recorded by the smoke tester are transferred to the testo 330.

**Entering the heat carrier temperature:**

- > **Heat carrier** → **[Edit]** → Enter value → **[OK]**.

**Options:**

- > **[Options]** → **Clipboard**: Data are saved to the clipboard:
- > **[Options]** → **Save**: The readings are saved in a record.
- > **[Options]** → **Reset values**: The entered values are deleted.


## 6.2.7. Differential pressure


- ✓ The gas pressure set (0554 1203) must be connected.


Calling up the function:


- >  → **Measurements** → **[OK]** → **Differential Pressure** → **[OK]**.

**Performing the measurement:**


 <b>WARNING</b>	
Dangerous mixture of gases	
<b>Danger of explosions.</b>	
>	Make sure there are no leaks between the sampling point and the measuring instrument.
>	Do not smoke or use naked flames during measurement.

-  Do not measure for longer than 5 min, as the drift of the pressure sensor could have the effect that the readings are outside the tolerance limits.

1. Start measurement: .
- Pressure zeroing.
2. Pressurise the system.

-  testo 330-2, Program active (see Programs page 42): The pressure socket of the instrument must be free (i.e. unpressurized, not closed) while a measurement program is running.

- The reading is displayed.

3. Quit measurement: .

**Options:**

- > **[Options]** → **Clipboard**: Data are saved to the clipboard:
- > **[Options]** → **Save**: The readings are saved in a record.
- > **[Options]** → **Show Graphic**: The readings are displayed in form of a line graph.
- > **[Options]** → **Readings Display**: (This function is not available during a measurement): The readings display menu is opened.



## 6.2.8. Differential temperature

- ✓ The differential temperature set (0554 1204) must be connected.

Calling up the function:

- >  → **Measurements** → **[OK]** → **Differential Temperature** → **[OK]**.

### Performing the measurement:

1. Start measurement: .
  - The readings and the calculated differential temperature (T1 T2) are displayed.
2. Quit measurement: .

### Options:

- > **[Options]** → **Clipboard**: Data are saved to the clipboard:
- > **[Options]** → **Save**: The readings are saved in a record.
- > **[Options]** → **Show Graphic**: The readings are displayed in form of a line graph.
- > **[Options]** → **Readings Display**: (This function is not available during a measurement): The readings display menu is opened.



## 6.2.9. O2 air

- ✓ An O2 dual wall clearance probe (0632 1260) must be connected.

Calling up the function:

- >  → **Measurements** → **[OK]** → **O2 Air** → **[OK]**.

### Performing the measurement:

1. Start measurement: .
  - The reading is displayed.
2. Quit measurement: .

**Options:**

- > **[Options]** → **Clipboard**: Data are saved to the clipboard:
- > **[Options]** → **Save**: The readings are saved in a record.
- > **[Options]** → **Show Graphic**: The readings are displayed in form of a line graph.



## 6.2.10. Gas flow

The function is only available if the chosen fuel is a gas.

Calling up the function:

- >  → **Measurements** → **[OK]** → **Gas Flow** → **[OK]**.

**Performing the measurement:**

1. Start measurement: .
- The measuring duration is displayed.
2. When the adjusted gas flow is reached: .
- The calculated gas flow and the gas burner capacity (in kW) are displayed.


**Options:**

- > **[Options]** → **Clipboard**: Data are saved to the clipboard:
- > **[Options]** → **Save**: The readings are saved in a protocol.
- > **[Options]** → **Edit Gas Flow**: Set the gas flow value.
- > **[Options]** → **Edit Unit**: The unit for the gas flow can be changed (**m<sup>3</sup> > l** or **l > m<sup>3</sup>**).







## 6.2.11. Oil flow

The function is only available if the chosen fuel is an oil.

Calling up the function:

- >  → **Measurements** → **[OK]** → **Oil Flow** → **[OK]**.

**Performing the measurement:**

1. Select the parameters **Oil Flow** (of the oil nozzle) and **Oil Pressure** (no effect on calculation): ,  → **[Edit]**.
2. Enter values. ,  and partly ,  → **[OK]**.
- The calculated oil burner capacity (in kW) is displayed.

**Options:**

- > **[Options]** → **Clipboard**: Data are saved to the clipboard:
- > **[Options]** → **Save**: The readings are saved in a protocol.
- > **[Options]** → **Edit Unit**: The unit for the oil flow can be changed (**kg/h > gal/h** or **gal/h > kg/h**).

**6.2.12. CO ambient**

- ✓ An ambient CO probe (recommended) or a flue gas probe must be connected.



Cigarette smoke influences the measurement by more than 50 ppm. The breath of a smoker influences the measurement by about 5 ppm.

When using an ambient CO probe, note that:

The direction of flow of the gas has an effect on the accuracy of the measurement. Frontal flow onto the probe leads to higher readings. The best measurement results are achieved when the probe is moved gently backwards and forwards.

When using the ambient CO probe and the flue gas probe, note that:



The probe must be in the open air (CO-free) during the zeroing phase!

---

Calling up the function:

- > **[** → **Measurements** → **[OK]** → **CO Ambient** → **[OK]**.

**Performing the measurement:**

1. Start measurement: **[**].
  - The measurement starts and the measuring value is displayed graphically (trend display).
  - An audible alarm signal is triggered when the alarm limit is reached.
2. Quit measurement: **[**].
3. Confirm the message: **[OK]**.

**Options:**

- > **[Options]** → **Clipboard**: Data are saved to the clipboard:
- > **[Options]** → **Save**: The readings are saved in a record.
- > **[Options]** → **A-Threshold**: The alarm limits menu is opened.

### 6.2.13. CO2 ambient

✓ An ambient CO2 probe (0632 1240) must be connected.



In order to obtain correct readings, it is imperative to enter the prevailing absolute pressure. This can be entered directly (**Pressure Absolute**), or it is automatically calculated when entering **Altitude** and barometric pressure (**Pressure Barom.**).

---

Calling up the function:

>  → **Measurements** → **[OK]** → **CO2 Ambient** → **[OK]**.

#### Performing the measurement:

1. Select parameter → **[Edit]**.
  2. Enter values. **[▲]**, **[▼]** and partly **[◀]**, **[▶]** → **[OK]**.
  3. Start measurement: **[▶]**.
  4. Quit measurement: **[■]**.
- The ambient CO2 value is displayed.


#### Options:

- > **[Options]** → **Clipboard**: Data are saved to the clipboard:
- > **[Options]** → **Save**: The readings are saved in a record.
- > **[Options]** → **Show Graphic**: The readings are displayed in form of a line graph.
- > **[Options]** → **Alarm Limit**: The alarm limits menu is opened.
- > **[Options]** → **Edit**. Values for adjustable parameters can be edited.
- > **[Options]** → **Readings Display**: (This function is not available during a measurement): The readings display menu is opened..

## 6.2.14. Automatic furnaces

With the help of the readout adapter for automatic furnaces (0554 1206) status data and error messages can be read out of compatible automatic furnaces, see also documentation on readout adapter. The range of data which can be read out depends on the type of the automatic furnace.

Calling up the function:















1. Connect the readout adapter to the instrument (PS2 interface) and to the automatic furnace (use adapter ring if necessary).
  2.  → **Measurements** → **[OK]** → **Automatic Furnace** → **[OK]**.
- The data are read from the automatic furnace. Depending on the automatic furnace, the data are updated at the latest every 30 s.



The values are saved in a measuring report or transferred to a pocket PC / PC, together with the measuring values of a flue gas measurement.

### Reading out current status data:

The current data are displayed after a connection has been set up to the automatic furnace. The following data are displayed with the help of symbols:

Component	Status ON	Status OFF
Air controller		
Motor		
Valve 1		
Valve 2		
Flame		
Ignition		
Oil prewarmer		

### Options

- > **[Options]** → **Clipboard**: Data are saved to the clipboard:
- > **[Options]** → **Save**: The readings are saved in a record.
- > **[Options]** → **Adapter Information**: Type and version of readout adapter are displayed.

- > **[Options]** → **Identification**: Information about manufacturer and type of automatic furnace
  - > **[Options]** → **Statistics**: Display of error statistics.
- 

**i** Automatic furnaces are equipped with a circular buffer memory: Error messages are overwritten when the error log is full. The fault that has occurred last is at position 1 in the error list.

---

- > **[Options]** → **Fault**: Display of faults.

## 6.2.15. Gas pipe tests

Calling up the function:

- > **[Menu]** → **Measurements** → **[OK]** → **Gas Pipe Tests** → **[OK]**.

### 6.2.15.1. Tightness test 1

---

**i** Leak test on gas pipes acc. to DVGW-TRGI 2008 worksheet G600

The leak test (using air or inert gas, e.g. CO<sub>2</sub> or N<sub>2</sub>) is used for acceptance testing of newly routed or remedied pipes. The test is performed at the pipe, including the fittings, without gas installations and corresponding control and safety equipment. For this test the line must be pressurised with 150 mbar, whereby this pressure must remain constant for 10 minutes.

---

- > Insert the connector plug of the pressure test kit (0554 1213) onto the flue gas socket and lock by slightly turning it clockwise (bayonet lock).

#### Performing the measurement:

- ✓ The pressure socket of the instrument must be free (i.e. unpressurized, not closed).
- 1. **Tightness Test 1** → **[OK]**.
  - Pressure zeroing.
- 2. Select parameter: **[▲]**, **[▼]** → **[Edit]**.
- 3. Set parameters or enter values: **[▲]**, **[▼]** and partly **[◀]**, **[▶]** → **[OK]**.



4. Pressurise the system.
5. Start measurement: [▶].
  - The stability time will run. After this the measuring phase starts automatically.
  - > End stability time and measurement early: [Next].
    - The readings are displayed when measurement has been completed.

### 6.2.15.2. Tightness test 2



- Follow DVGW-TRGI 2008, worksheet G624.
- **Pressure Absolute** (parameter of location) must strictly be entered to obtain correct readings. If this is unknown it is recommended to use the value 966hPa (corresponds with 1013 hPa barometric, altitude 400 m) To enter the values:
  - > [📄] → **Measurements** → [OK] → **Gas Pipe Tests** → [OK] → [Tightness Test 2] → [Fold./Meas.] → [Options] → **Edit Location**.

- > Insert the connector plug of the pressure test kit (0554 1213) onto the flue gas socket and lock by slightly turning it clockwise (bayonet lock).

#### Performing the measurement:

- ✓ The pressure socket of the instrument must be free (i.e. unpressurized, not closed).
- 1. **Tightness Test 2** → [OK].
- 2. Select parameter: [▲], [▼] → [Edit].
- 3. Set parameters or enter values: [▲], [▼] and partly [◀], [▶] → [OK].



Three circular diameters and three pipe lengths can be entered, which are then used to calculate three partial volumes. The pipe volume is calculated by adding these three partial volumes.

4. [measurement].
  - Pressure zeroing.
5. Pressurise the system.
6. Start measurement: [▶].

- The stability time will run. After this the measuring phase starts automatically.
  - > End stability time and measurement early: **[Next]**.
  - The readings and **Result Tightness Test 2** are displayed when measurement has been completed.
7. **[Edit]** → Select test result: **[▲]**, **[▼]** → **[OK]**.

### 6.2.15.3. Let By Test

- > Insert the connector plug of the pressure test kit (0554 1213) onto the flue gas socket and lock by slightly turning it clockwise (bayonet lock).

#### Performing the measurement:

- ✓ The pressure socket of the instrument must be free (i.e. unpressurized, not closed).
1. **Let By Test** → **[OK]**.
    - Pressure zeroing.
  2. Select parameter: **[▲]**, **[▼]** → **[Edit]**.
  3. Set parameters or enter values: **[▲]**, **[▼]** and partly **[◀]**, **[▶]** → **[OK]**.
  4. Pressurise the system.
  5. Start measurement: **[▶]**.
    - The stability time will run. After this the measuring phase starts automatically.
    - > End stability time and measurement early: **[Next]**.
    - The readings and **Result Let By Test** are displayed when measurement has been completed.
  6. **[Edit]** → Select test result: **[▲]**, **[▼]** → **[OK]**.

### 6.2.15.4. Leak detection

In gas leak detection no measurement is made, but a gas detection is performed.

- ✓ A gas leak probe (0632 3330) must be connected.




You must also refer to the documentation that comes with the gas leak probe.

---


Calling up the function:

- > **Leak Detection** → **[OK]**.

**Performing the detection:**

- > Set the gas type to be detected and perform gas leak testing by following the instructions described in the documentation of the gas leak probe.
1. Start detection: [].
    - The gas concentration is displayed, if it exceeds the limit an alarm signal will sound.

**Options:**

- > **[Options]** → **Show Graphic**: The readings are displayed in form of a line graph.
  - > **[Options]** → **Alarm Limit**: (This function is not available during a measurement): Adjusting alarm limits.
  - > **[Options]** → **Alarm Signal**: (This function is not available during a measurement): Alarm signal disable/enable.
  - > **[Options]** → **Zeroing Probe**: Perform zeroing.
2. End detection: [].

## 6.3. Transferring data

### 6.3.1. Report printer

To be able to transmit data via infrared or Bluetooth interface to a Testo report printer, the printer to be used must have been activated, see Printer, page 36.

Printing out data takes place via **[Print]** or []. The function is only available if a printout is possible.

### 6.3.2. PC / Pocket PC

Data transfer to a PC can take place via USB, IrDA or Bluetooth®.

Data transfer to a Pocket PC can take place via IrDA or Bluetooth®.

You must also refer to the documentation that comes with the software.

## 7 Maintaining the product

### 7.1. Cleaning the measuring instrument

- > If the housing of the measuring instrument is dirty, clean it with a damp cloth. Do not use any aggressive cleaning agents or solvents! Mild household cleaning agents and soap suds may be used.

### 7.2. Replacing sensors

---

**i** A slot bridge (0192 1552) must be inserted in slots which are not equipped with a sensor. Used sensors must be disposed of as hazardous waste!

---

- ✓ The instrument must be switched off.
- 1. Place the measuring instrument on its front.
- 2. Remove the service cover: Take hold of it at the markings (arrows) using the index finger and thumb, press slightly, fold up and remove.
- 3. Pull hose connections from the faulty sensor / bridge.
- 4. Remove the faulty sensor / bridge from the slot.
- > For NO-sensor: Remove the auxiliary circuit board.



**i** Do not remove the auxiliary circuit board for the NO-sensor until immediately before installation. Do not leave the sensor without auxiliary circuit board for longer than 15 min.

---

- 5. Install new sensor / new bridge in the slot.
  - 6. Plug the hose connections on sensor / bridge.
  - 7. Attach the service cover and engage it in place.
- 

**i** After replacing an O<sub>2</sub> sensor, wait for an equalisation period of 60 min to elapse before using the instrument again.

---

---

When retrofitting a sensor the associated measurement parameter and unit must be enabled, see Readings display, page 33.

---


### 7.3. Recalibrating / adjusting sensors

See Sensor settings, page 39.

### 7.4. Replacing additional filter

The additional filter provides added protection should problems occur with the particle filter in the flue gas probe. The additional filter is very rarely contaminated if the measuring instrument is used normally.

- > Check the additional filter (visually) periodically for contamination and replace it if necessary.

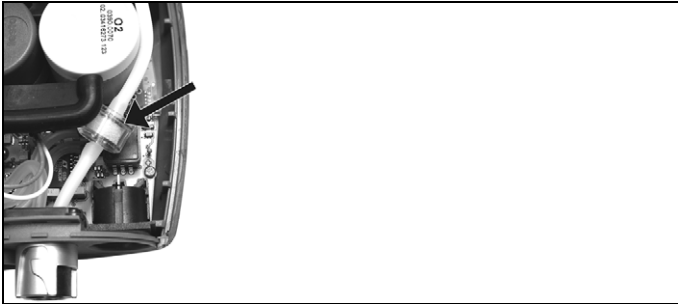

1. Place the measuring instrument on its front.
2. Remove the service cover: Take hold of it at the markings (arrows) using the index finger and thumb, press slightly, fold up and remove.
3. Loosen the additional filter from the hose connection.
- 4 Plug the new filter (0133 0010) into the hose connection.
5. Attach the service cover and engage it in place.

### 7.5. Cleaning the modular flue gas probe


- ✓ Disconnect the flue gas probe from the measuring instrument prior to cleaning.
1. Release the probe catch by pressing the key on the probe handle and remove the probe module.



2. Blow compressed air through the flue gas ducts in probe module and probe handle (see illustration). Do not use a brush!
3. Fit a new probe module on the probe handle and engage it in place.

## 7.6. Replacing the probe module


- ✓ Disconnect the flue gas probe from the measuring instrument prior to cleaning.

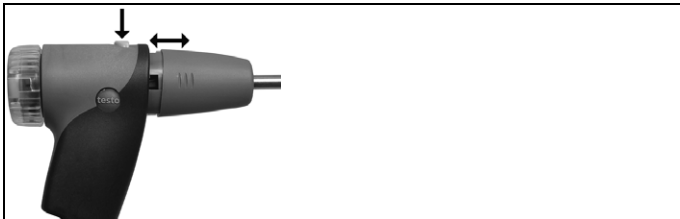

1. Press the key on the top of the probe handle and remove the probe module.
2. Plug in the new probe module and engage it in place.

## 7.7. Changing the thermocouple


1. Release the probe catch by pressing the key on the probe handle and remove the probe module.

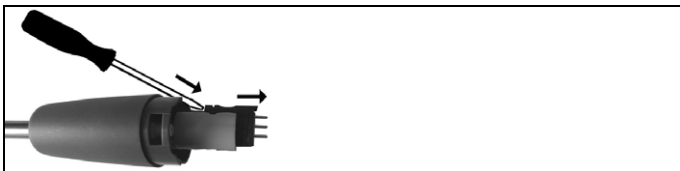


2. Remove the thermocouple plug-in head from the socket using a screwdriver and pull the thermocouple out of the probe shaft.


3. Keep inserting the new thermocouple into the probe shaft until the connection head clicks into place.
4. Fit a new probe module on the handle and engage in place.

## 7.8. Condensate container

 The fill level of the condensate trap can be read from the markings on the condensate trap. A warning message (, red flashing light) is displayed if the fill level in the condensate trap reaches 90 %. The fill level of the condensate trap can be read from the markings.


### Draining the condensate trap

-  The condensate consists of a weak mix of acids. Avoid skin contact. Make sure that the condensate does not run over the housing.

 **CAUTION**

Condensate entering the gas path.  
**Damage to sensors and flue gas pump!**

> Do not empty the condensate trap while the flue gas pump is in operation.

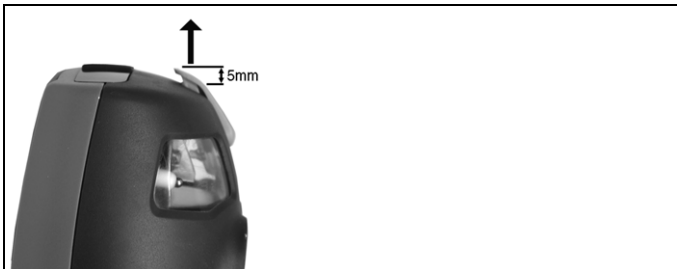

1. Unlock the condensate trap and pull it vertically off the measuring box.
2. Open the condensate outlet on the condensate trap: Pull out approx. 5 mm against the stop.



3. Let the condensate run out into a sink.
4. Wipe off any drops still on the condensate outlet with a cloth and close the condensate outlet.

---

**i** The condensate outlet must be completely closed (marking), otherwise measuring errors could be caused by infiltrated air.

---

## 7.9. Checking / replacing the particle filter

### Checking the particle filter:

Check the particle filter of the modular flue gas probe periodically for contamination: check visually by looking through the window of the filter chamber.


Replace the filter if there are signs of contamination.

### Replacing the particle filter:

---

**i** The filter chamber may contain condensate.

---

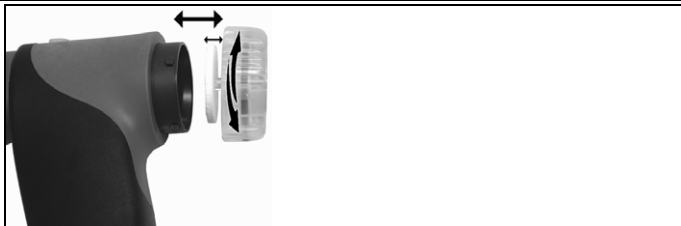

1. Open the filter chamber: Turn gently anti-clockwise.
2. Remove the filter plate and replace it with a new one (0554 3385).
3. Attach the filter chamber and lock it. Turn gently clockwise.



## 8 Tips and assistance

### 8.1. Questions and answers

Question	Possible causes / solution
Rechargeable battery low	> Switch to mains operation.
Measuring instrument switches automatically off or cannot be switch on	Batteries / rechargeable batteries empty. > Charge rechargeable batteries or switch to mains operation.
Displayed battery capacity seems to be faulty	Rechargeable battery was repeatedly not fully discharged/charged. > Discharge rechargeable battery (until measuring instrument switches off automatically) and then charge fully.
Error message: <b>Pump flow too high</b>	Gas outlet blocked > Make sure that the gas outlet is clear.
Error message: <b>Sensor protection active</b>	The shutdown limit of the CO sensor was exceeded. > Remove the probe from the stack.
Error message: <b>Printing not possible</b>	<ul style="list-style-type: none"> <li>• With printer 0554 0543: Bluetooth interface not activated.</li> <li>• Wrong printer activated.</li> <li>• Printer switched off.</li> <li>• Printer outside wireless transmission range.</li> </ul> > Activate Bluetooth interface, see Bluetooth <sup>®</sup> , page 37. > Activate printer used, see Printer, page 36. <ul style="list-style-type: none"> <li>• Switch on printer.</li> </ul> > Move printer within wireless transmission range.

If we could not answer your question, please contact your dealer or Testo Customer Service. Contact data see back of this document or website [www.testo.com/service-contact](http://www.testo.com/service-contact).

## 8.2. Accessories and spare parts

### Printer

Description	Article no.
Infrared high-speed printer	0554 0549
Bluetooth® printer, incl. rechargeable battery and charging adapter	0554 0553
Spare thermal paper for printer (6 rolls)	0554 0568

### Modular flue gas probes

Description	Article no.
Modular flue gas probe 180 mm, 500 °C, thermocouple 0.5 mm, probe shaft diameter: 8mm	0600 9760
Modular flue gas probe 300 mm, 500 °C, thermocouple 0.5 mm, probe shaft diameter: 8mm	0600 9761
Modular flue gas probe 180 mm, 500 °C, thermocouple 0.5 mm, probe shaft diameter: 6mm	0600 9762
Modular flue gas probe 300 mm, 500 °C, thermocouple 0.5 mm, probe shaft diameter: 6mm	0600 9763
Flexible flue gas probe, length 330 mm, Tmax. 180 °C, short-term 200 °C, bending radius max. 90° for measurements at difficult to access locations	0600 9764

### Probe modules / accessories for modular flue gas probes

Description	Article no.
Probe shaft module 180 mm, 500 °C, thermocouple 0.5 mm, probe shaft diameter: 8 mm	0554 9760
Probe shaft module 300 mm, 500 °C, thermocouple 0.5 mm, probe shaft diameter: 8 mm	0554 9761
Probe shaft module 180 mm, 500 °C, thermocouple 0.5 mm, probe shaft diameter: 6 mm	0554 9762

<b>Description</b>	<b>Article no.</b>
Probe shaft module 300 mm, 500 °C, thermocouple 0.5 mm, probe shaft diameter: 6 mm	0554 9763
Probe shaft module 300 mm, 1,000 °C, thermocouple 1.0 mm, probe shaft diameter: 6 mm	0554 8764
Probe shaft module 700 mm, 1,000 °C, thermocouple 1.0 mm, probe shaft diameter: 6 mm	0554 8765
Spare thermocouple for module 0554 9760, 0554 9762	0430 9760
Spare thermocouple for module 0554 9761, 0554 9763	0430 9761
Spare thermocouple for module 0554 8764	0430 8764
Spare thermocouple for module 0554 8765	0430 8765
Cone, 8 mm, steel	0554 3330
Cone, 6 mm, steel	0554 3329
Multi-hole probe shaft, length 300 mm, Ø 8 mm, for CO averaging	0554 5762
Multi-hole probe shaft, length 180 mm, Ø 8 mm, for CO averaging	0554 5763
Flexible probe shaft module	0554 9764
Hose extension 2.8 m, extension line probe - instrument	0554 1202
Particle filter, 10 pcs.	0554 3385

### **Temperature sensor**

<b>Description</b>	<b>Article no.</b>
Ambient air temperature (AT) probe, 300 mm	0600 9791
Ambient air temperature (AT) probe, 190 mm	0600 9787
Ambient air temperature (AT) probe, 60 mm	0600 9797
Pipe wrap probes	0600 4593
Surface probe (angled)	0604 0994
Fast reaction surface sensor	0604 0194
Miniature ambient air sensor	0600 3692

**Other probes / sensors**

<b>Description</b>	<b>Article no.</b>
O2 annular gap probe	0632 1260
Gas leak probe	0632 3330
Ambient CO probe	0632 3331
CO2 ambient probe (without connecting cable)	0632 1240
Connecting cable for CO2 ambient probe, 1.5 m	0430 0143
Gas pressure set: Draught path adapter, silicone hose 4 mm / 6 mm, reducing cones	0554 1203
Differential temperature set, 2 pipe wrap probes, adapter	0554 1204
Smoke tester inc. oil, soot plates, for measuring soot in flue gas	0554 0307

**Retrofit sensors**

<b>Description</b>	<b>Article no.</b>
NO retrofit	0554 2151
COlow retrofit	0554 2103

**Spare sensors**

<b>Description</b>	<b>Article no.</b>
O2 sensor	0393 0002
O2 sensor	0393 0051
O2 sensor H2 compensated	0393 0101
COlow sensor	0393 0103
NO sensor	0393 0151

**Cases**

Basic system case with double floor for instrument, probes and other accessories	0516 3331
Basic system case for instrument, probes and accessories	0516 3330
System case with tool pouch without contents, click-fastened to basic system case	0516 0329

Universal system case without compartments, click-fastened to basic system case	0516 0331
Instrument case (leather) with compartments for instruments and accessories	0516 0303

### Other accessories

<b>Description</b>	<b>Article no.</b>
Mains unit	0554 1096
Charger with spare rechargeable battery	0554 1103
Spare rechargeable battery	0515 0107
Readout adapter for automatic furnaces	0554 1206
Connecting cable instrument / PC	0449 0047
Aasyheat (PC configuration software)	0554 3332
Full version of Easyheat and Easyheat mobile (PC configuration software and software for Windows handheld PCs)	0554 1210
Upgrade Easyheat mobile (software for Windows handheld PCs)	0554 1211
Additional filter	0133 0010
Draught set	0554 3150
Fine pressure probe	0638 0330
Set of capillary hoses	0554 1215
Adhesive kits (x50) for printing out, paper barcode labels etc.	0554 0116
Instrument cleaner (100 ml)	0554 1207
Pressure test set for gas line testing	0554 1213
Straight Pitot tube	0635 2050
ISO Calibration Certificate Flue Gas	0520 0003

For a complete list of all accessories and spare parts, please refer to the product catalogues and brochures or look up our website [www.testo.com](http://www.testo.com)

## 8.3. Updating the instrument software

Under [www.testo.com/download-center](http://www.testo.com/download-center) you can download the current instrument software (Firmware) for testo 330 (registration required).

- > Unplug the mains unit and switch off the testo 330.
- 1. Hold [▲] depressed.
- 2. Plug in the mains unit, keep [▲] depressed.
  - The display shows **Firmware update** along the bottom edge.
- 3. Release [▲] .
- 4. Insert the connecting cable (0449 0047) into the USB-port on the instrument, then connect it to the PC.
  - Your PC recognises the testo 330 as a removable medium.
- 5. Copy the new file (ap330rel.bin) to the detected removable medium.
  - In the display the status bar progresses from left to right. This process may take a few minutes.
- 6. Disconnect the connecting cable from the testo 330.
  - After updating of the instrument software (Firmware) has been completed the system will automatically reboot and is ready for use.



