# ZTE



# ZTE Blade L3 WCDMA/GSM Mobile Phone User Manual

### LEGAL INFORMATION

# Copyright © 2015 ZTE CORPORATION.

### All rights reserved.

No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation. ZTE Corporation reserves the right to make modifications on print errors or update specifications in this guide without prior notice.

Version No.: R1.0

Edition Time: 2015.04.07

# **Contents**

For Your Safety	8
General Safety	8
Distraction	9
Driving	9
Operating Machinery	9
Product Handling	10
General Statement on Handling and	
Use	10
Small Children	. 11
Demagnetization	. 11
Electrostatic Discharge (ESD)	12
Antenna	12
Normal Use Position	12
Air Bags	12
Seizures/ Blackouts	12
Repetitive Motion Injuries	12
Emergency Calls	13
Loud Noise	13
Phone Heating	13
Electrical Safety	13
Accessories	13
Connection to a Car	13
Faulty and Damaged Products	14
Interference	14
General Statement on Interface	14
Pacemakers	14
Hearing Aids	14
Medical Devices	15
Hospitals	15

Aircraft	.15
Interference in Cars	.16
Explosive Environments	.16
Petrol Stations and Explosive	
Atmospheres	.16
Blasting Caps and Areas	.16
RF Exposure	.17
Specific Absorption Rate (SAR)	.17
Body Worn Operation	.18
Getting Started	.19
Overview	.19
Keys Explained	.20
Starting up	.20
Installing the SIM/SD Card	.20
Removing SIM/SD Card	.22
Charging the Battery	.23
Switching Your Phone On/Off	.24
Setting Up Your Phone for the First	
Time	.24
Switching to Sleep Mode	.24
Waking Up Your Phone	.25
Getting Around Your Phone	.25
Touch Control	.25
Home Screen	.26
Status and Notification Icons	.27
Using the Notification Panel	.28
Phone Calls	.28
Making Calls	.28
Calling from the Phone	.28
Calling from Your Contacts	.29

Calling from Your Call History	29
Calling from a Text Message	29
Receiving Calls	29
Answering a Call	29
Rejecting a Call	29
Muting a Call	30
Ending a Call	30
Call settings	30
People	31
Creating a Contact	31
Searching for a Contact	31
Messaging	32
The Message Box	32
Sending a Message	32
Message Settings	33
Touch Input Settings	33
Touch Input Settings  Adding a New Network Connection.	
	34
Adding a New Network Connection.	34 34
Adding a New Network Connection.  Turning On Wi-Fi	34 34
Adding a New Network Connection.  Turning On Wi-Fi  Connecting to a Wi-Fi Network	34 34 35
Adding a New Network Connection.  Turning On Wi-Fi  Connecting to a Wi-Fi Network  Checking the Wi-Fi Network Status	34 34 35
Adding a New Network Connection.  Turning On Wi-Fi  Connecting to a Wi-Fi Network  Checking the Wi-Fi Network Status  Tethering & portable hotspot	34 34 35 35
Adding a New Network Connection.  Turning On Wi-Fi  Connecting to a Wi-Fi Network  Checking the Wi-Fi Network Status  Tethering & portable hotspot  Enabling USB tethering	34 34 35 35 35
Adding a New Network Connection.  Turning On Wi-Fi	34 35 35 35
Adding a New Network Connection  Turning On Wi-Fi  Connecting to a Wi-Fi Network Status  Checking the Wi-Fi Network Status  Tethering & portable hotspot  Enabling USB tethering  Disabling USB tethering  Enabling the Wi-Fi Hotspot	34 35 35 35 35 35
Adding a New Network Connection.  Turning On Wi-Fi  Connecting to a Wi-Fi Network  Checking the Wi-Fi Network Status  Tethering & portable hotspot  Enabling USB tethering  Disabling USB tethering  Enabling the Wi-Fi Hotspot  Disabling the Wi-Fi Hotspot	34 35 35 35 35 35
Adding a New Network Connection.  Turning On Wi-Fi  Connecting to a Wi-Fi Network  Checking the Wi-Fi Network Status  Tethering & portable hotspot  Enabling USB tethering  Disabling USB tethering  Enabling the Wi-Fi Hotspot  Disabling the Wi-Fi Hotspot  Browsing the Internet	34 35 35 35 35 36 36
Adding a New Network Connection.  Turning On Wi-Fi  Connecting to a Wi-Fi Network  Checking the Wi-Fi Network Status  Tethering & portable hotspot  Enabling USB tethering  Disabling USB tethering  Enabling the Wi-Fi Hotspot  Disabling the Wi-Fi Hotspot  Browsing the Internet  Browsing Options	34 35 35 35 35 36 36

	37
Changing Browser Settings	38
Bluetooth	38
Making the Most of Multimedia	39
Taking Pictures with Your Camera	39
Shooting Video with Your Camcorder	39
Listening to Your FM Radio	40
Playing Your Music	40
Opening Your Gallery	40
Making Voice Memos	41
Using Your Google Applications	41
Gmail	42
Using Google Hangouts	42
Sorting out Your Phone Settings	42
Setting Date and Time	42
Display Settings	43
Sound Settings	43
Language Settings	
Language Settings	43
Switching Network Modes	
	43
Switching Network Modes	43 44
Switching Network Modes Switching Networks	43 44 44
Switching Network Modes Switching Networks Setting Access Point Names	43 44 44
Switching Network Modes Switching Networks Setting Access Point Names Security Settings	43 44 44
Switching Network Modes Switching Networks Setting Access Point Names Security Settings Protecting Your Phone with	43 44 44 44
Switching Network Modes Switching Networks Setting Access Point Names Security Settings Protecting Your Phone with a Pattern	43 44 44 44
Switching Network Modes Switching Networks Setting Access Point Names Security Settings Protecting Your Phone with a Pattern Protecting Your Phone with a PIN o	43 44 44 44 44
Switching Network Modes Switching Networks Setting Access Point Names Security Settings Protecting Your Phone with a Pattern Protecting Your Phone with a PIN o Password Disabling Screen Unlock Security Protecting Your SIM Card with a PII	43 44 44 44 45 N 45
Switching Network Modes Switching Networks Setting Access Point Names Security Settings Protecting Your Phone with a Pattern Protecting Your Phone with a PIN of Password Disabling Screen Unlock Security	43 44 44 44 45 N 45

Managing Your Device Memory	47
Privacy: Reset to Factory Settings	47
Applications	47
Installing an Application	47
Removing an Application	48
Moving an Application	48
Managing Other Settings	49
Accessibility	49
Text-to-speech Output	49
Other Applications	49
Alarms	49
Calculator	50
D 1 " (D 110 0 "	E0
Declaration of RoHS Compliance	50
Disposal of Your Old Appliance	
'	51

# For Your Safety

# **General Safety**

General Safety				
	Don't make or receive handheld calls while driving. And never text while driving.			
A	Don't use at petrol stations.			
	Keep your phone at least 15 mm away from your ear or body while making calls.			
	Your phone may produce a bright or flashing light.			
	Small parts may cause a choking.			
	Don't dispose of your phone in fire.			
	Your phone can produce a loud sound.			
	Avoid contacting with anything magnetic.			
	Keep away from pacemakers and other electronic medical devices.			
19	To prevent possible hearing damage, do not listen at high volume levels for long periods.			
	Avoid extreme temperatures.			

A	Switch off when asked to in hospitals and medical facilities.			
A	Avoid contacting with liquids. Keep your phone dry.			
4	Switch off when told to in aircrafts and airports.			
	Don't take your phone apart.			
	Switch off when near explosive materials or liquids.			
	Only use approved accessories.			
	Don't rely on your phone for emergency communications.			

### Distraction

# Driving

Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a phone while driving (even with a hands free kit) can cause distraction and lead to an accident. You must comply with local laws and regulations restricting the use of wireless devices while driving.

# **Operating Machinery**

Full attention must be given to operating the machinery in order to reduce the risk of an accident.

# Product Handling

# General Statement on Handling and Use

You alone are responsible for how you use your phone and any consequences of its use. You must always switch off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment

- Always treat your phone and its accessories with care and keep it in a clean and dust-free place.
- Do not expose your phone or its accessories to open flames or lit tobacco products.
- Do not expose your phone or its accessories to liquid, moisture or high humidity.
- Do not drop, throw or try to bend your phone or its accessories.
- Do not use harsh chemicals, cleaning solvents, or aerosols to clean the device or its accessories.
- Do not paint your phone or its accessories.
- Do not attempt to disassemble your phone or its accessories, only authorized personnel can do so.

- Do not expose your phone or its accessories to extreme temperatures, minimum - [20] and maximum + [60] degrees Celsius.
- The phone's normal operating temperature is 0°C ~ 45°C. In order to ensure the normal phone functions, do not use this phone outside the temperature range.
- Please check local regulations for disposal of electronic products.
- Do not carry your phone in your back pocket as it could break when you sit down.
- Use careful with the earphone maybe possible excessive sound pressure from earphones and headphones can cause hearing loss.

### Small Children

Do not leave your phone and its accessories within the reach of small children or allow them to play with it.

They could hurt themselves or others, or could accidentally damage the phone.

Your phone contains small parts with sharp edges that may cause an injury or may become detached and create a choking hazard.

# Demagnetization

To avoid the risk of demagnetization, do not allow electronic devices or magnetic media close to your phone for a long time.

### Electrostatic Discharge (ESD)

Do not touch the SIM card's metal connectors.

#### Antenna

Do not touch the antenna unnecessarily.

### Normal Use Position

When placing or receiving a phone call, hold your phone to your ear, with the bottom towards your mouth.

### Air Bags

Do not place a phone in the area over an air bag or in the air bag deployment area. Store the phone safely before driving your vehicle.

### Seizures/ Blackouts

The phone can produce a bright or flashing light.

# Repetitive Motion Injuries

To minimize the risk of RSI when texting or playing games with your phone:

- Do not grip the phone too tightly.
- · Press the buttons lightly.
- Use the special features which are designed to minimize the times of pressing buttons, such as Message Templates and Predictive Text.
- Take lots of breaks to stretch and relax.

# **Emergency Calls**

This phone, like any wireless phone, operates using radio signals, which cannot guarantee connection in all conditions. Therefore, you must never rely solely on any wireless phone for emergency communications.

### Loud Noise

This phone is capable of producing loud noises, which may damage your hearing. Turn down the volume before using headphones, Bluetooth stereo headsets or other audio devices.

### Phone Heating

Your phone may become warm during charging and during normal use.

# **Electrical Safety**

### Accessories

Use only approved accessories.

Do not connect with incompatible products or accessories.

Take care not to touch or allow metal objects, such as coins or key rings, to contact or short-circuit in the battery terminals.

### Connection to a Car

Seek professional advice when connecting a phone interface to the vehicle electrical system.

### **Faulty and Damaged Products**

Do not attempt to disassemble the phone or its accessory.

Only qualified personnel can service or repair the phone or its accessory.

If your phone or its accessory has been submerged in water, punctured, or subjected to a severe fall, do not use it until you have taken it to be checked at an authorized service centre.

### Interference

### General Statement on Interface

Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

### **Pacemakers**

Pacemaker manufacturers recommend that a minimum separation of 15 cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this, use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

# **Hearing Aids**

People with hearing aids or other cochlear implants may experience interfering noises when using wireless devices or when one is nearby.

The level of interference will depend on the type of hearing device and the distance from the interference source, increasing the separation between them may reduce the interference. You may also consult your hearing aid manufacturer to discuss alternatives.

### Medical Devices

Please consult your doctor and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device

### Hospitals

Switch off your wireless device when requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

### Aircraft

Switch off your wireless device whenever you are instructed to do so by airport or airline staff. Consult the airline staff about the use of wireless devices on board the aircraft. If your device offers a 'flight mode', this must be enabled prior to boarding an aircraft.

### Interference in Cars

Please note that because of possible interference to electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a hands-free kit with an external antenna is included in the installation

# **Explosive Environments**

# Petrol Stations and Explosive Atmospheres

In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices such as your phone or other radio equipment.

Areas with potentially explosive atmospheres include fuelling areas, below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

# **Blasting Caps and Areas**

Power off your mobile phone or wireless device when in a blasting area or in areas posted power off "two-way radios" or "electronic devices" to avoid interfering with blasting operations.

# RF Exposure

### Specific Absorption Rate (SAR)

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health. The guidelines use a unit of measurement known as Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device when tested at the head was 0.669 W/Kg\*, and when tested at the body was 1.29W/Kg\*. As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user quide\*\*.

As SAR is measured utilizing the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum power required to communicate with the network.

<sup>\*</sup> The tests are carried out in accordance with EN 50566, EN 62479, EN 62209-1, EN 62209-2, EN 50360.

<sup>\*\*</sup> Please see body worn operation.


# **Body Worn Operation**


Important safety information regarding radio frequency (RF) radiation exposure.

To ensure compliance with RF exposure guidelines the phone must be used with a minimum of 10 mm separation from the body. Failure to observe these instructions could result in your RF exposure exceeding the relevant guideline limits.

# **Getting Started**

### Overview

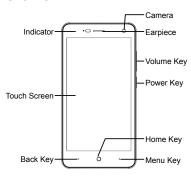

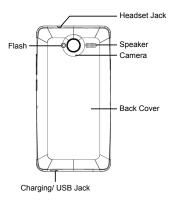

# **Keys Explained**

Key	Function		
	Hold to turn on or off Silent		
Power Key	or vibrate or Ring or Airplane		
	mode, or to power off.		
	Press to switch your phone to		
	Sleep mode.		
	Press to wake up your phone.		
	Press to return to the Home		
Home Key	Screen from any application		
l lonie Rey	or screen.		
	Hold to see Google search.		
	Press to get the options for		
Menu Key	the current screen.		
INICIIU KCy	Hold to see recently used		
	applications.		
Back Key	Press to go to the previous		
Dack Ney	screen.		
Volume	Press or hold to turn the volume		
Keys	up or down.		

# Starting up

# Installing the SIM/SD Card

1. Remove the back cover.



Hold the SIM card with the cut corner oriented as shown, and slip it into the card holder.



#### NOTES:

- Switch off your phone before installing or replacing the SIM card.
- If you are a small card, please use the SIM card dedicated card sets, and then the whole into the slot Normal use.

Reminder: please buy standardization SIM dedicated card sets from the formal channels, otherwise the slot shrapnel may be pulled off when taking cards.

Insert the memory card into the metal slot with the metal contacts facing down until it clicks to the right position.



NOTE: The phone supports SD card hotplug function. Some applications may require a microSD card to work normally or may store certain data on it. Therefore, it is recommended that you keep a microSD card installed and not remove or replace it randomly.

 Insert the battery by aligning the gold contacts on the battery with the gold contacts in the battery compartment. Gently push down on the battery until it clicks into place.



Press the cover gently back into place until you hear a click..

# Removing SIM/SD Card

- 1. Make sure that your mobile phone is off.
- 2. Remove the back cover.
- 3. Slide the SIM card out.
- Slide the SD card out.

# Charging the Battery

When you first get your new phone you'll need to charge the battery.

- Connect the adapter to the charger jack.
   Ensure that the adapter is inserted with the correct orientation. Do not force the connector into the charger jack.
- Connect the charger to a standard AC wall outlet.
- Disconnect the charger when the battery is fully charged.



### NOTES:

- If excessive discharge of the battery, the charging icon will display delay.
- If the battery is extremely low, you may be unable to power on the phone even when it is being charged. In this case, try again after charging the phone for at least 10 minutes. Contact customer service if you still cannot power on the phone after prolonged charging.

# Switching Your Phone On/Off

Make sure the SIM card is in your phone and the battery is charged.

- Press and hold the **Power Key** to turn on your phone.
- To switch it off, hold Power Key to get the phone options. Select Power off, and then tap OK.

# Setting Up Your Phone for the First Time

When you first power on your phone after you purchase it or reset it to factory settings (see chapter Sorting out Your Phone Settings – Privacy: Reset to Factory Settings), you need to do some settings before using it.

# Switching to Sleep Mode

To save battery power, Sleep Mode suspends your device to a low-power-consumption state while the display is off. Your device also goes into Sleep Mode by itself when the display is automatically turned off after a certain period of time. You can start sleep mode by the following method.

Press Power Key to switch to Sleep Mode.

# Waking Up Your Phone

- Press Power Key to activate your screen display.
- Swipe up to unlock.

NOTE: If you have set an unlock pattern, PIN or password for your phone (see chapter Sorting out Your Phone Settings – Security Settings) you'll need to draw the pattern or enter the PIN/password to unlock your screen.

# **Getting Around Your Phone**

### **Touch Control**

You can use finger gestures to control your phone. The controls on your touch-screen change dynamically depending on the tasks you're performing.

- Tap the buttons, icons, or applications to select items or to open applications.
- Flick the screen to scroll up, down, left or right.
- Hold and drag to move particular items across the screen.
- Double-tap the screen to zoom in/out an image. Pinch on with two fingers to zoom in/out a web page.

### Home Screen

In the Home screen, besides the shortcut icon is displayed, you can also set your own wallpaper, add the widgets or application shortcuts you need, or remove them as you like

### Extended Home Screen

The Home Screen extends beyond the screen width, giving you loads more space to add more stuff. Simply slide your finger to the left or right.

### Choosing Your Wallpaper

- Press Home Key to return to the Home Screen.
- Tap Menu Key and select WALLPAPERS.
- Choose the image or animation you want to use as the wallpaper. Some cropping may be needed for Gallery images.
- Tap SET WALLPAPER.

### Adding Items to Your Home Screen

- Press Home Key > tap to enter the Application Program Interface
- In the list of applications, touch and hold the icon, when the main screen appears, move the application icon to the idle position, release the finger.

### Removing Items from Your Home Screen

- Press Home Key to return to the Home Screen.
- Tap and hold the item you want to delete until the **Remove** appears on the screen.
- Drag the item to the remove icon and release your finger when the item turns red.

### Status and Notification Icons

Your phone will tell you exactly what's going on by showing you simple icons. Here's what they mean.

ψ	USB connected	×C	Missed call
<b>\P</b>	Airplane mode	*	Bluetooth icon
?	New Wi- Fi network detected	:),	New message
52	Battery charge	•	Wi-Fi network
Ö	Alarm set	Ċ	Earphone insert
$\Diamond$	Silent mode	••	Meeting mode
$\triangle$	Signal searching		Signal strength

# **Using the Notification Panel**

Flick the status bar downwards from across the top of the screen to open the Notification Panel, where you can see your calendar events, new Messaging, and current settings – such as call forwarding or call status. From here you can also open new Messaging, reminders, etc.

### **Open Recently-Used Applications**

- Hold Menu Key from any screen. The phone will display icons of applications you used recently.
- 2. Tap the application you want to open.

# **Phone Calls**

# **Making Calls**

There are many ways to make a call with your phone. And they're all easy to do.

# Calling from the Phone

- Press Home key > tap > Phone or tap
   on the Home Screen.
- Tap ; enter the phone number using the on-screen keypad.
  - Tap 

    to delete wrong digits.
- 3. Tap the dial icon.

**TIPS:** To make international calls, hold on to enter the "+"

# **Calling from Your Contacts**

- Press Home key > tap > Contacts.
- Slide your finger to scroll the contacts list and tap the contact you want to call.
   You can search for a contact by tapping on the top of the screen.
- Call the contact.

# Calling from Your Call History

- Press Home key > tap > Phone > RECENTS
- 2. Tap the call log to dial the number.

# Calling from a Text Message

If a text message contains a phone number that you want to call, you can make the call while viewing the text message.

- Press Home key > tap > Messaging.
- Tap the conversation and then find the message that contains the phone number you need.
- Tap the message, the phone will list the options.
- 4. Tap the dial icon

# **Receiving Calls**

### Answering a Call

Tap the \( \square \) ANSWER icon to answer the call.

# Rejecting a Call

Tap the  $\times$  DISMISS **icon** to reject the call.

# Muting a Call

During a call, you can mute your microphone so that the person you are speaking to cannot hear you, but you can still hear them.

Tap to turn your microphone off. To turn your microphone back on, tap again.

### Turning the Speakerphone On/Off

Tap • during a call to turn the speakerphone on. Tap • again to turn off the speakerphone.

# **Ending a Call**

Tap to finish a call.

# Call settings

- In the standby screen, Click on common functional areas
  - Open the dialer interface into dialing.
- 2. Click the Menu Key >Settings
  - Call settings (Voice phone settings)
    - → Voicemail: Voice mail service and number
    - Service: Select the voice mail service.
    - Setup: Set voicemail number.
    - → Call forwarding: Set up call forwarding options.
    - → Call barring: Set limit outgoing and incoming.
    - → Additional settings: Set the Caller ID and call waiting situation.

- Fixed dialing numbers: Enable / disable fixed dialing: Change PIN2 and manage fixed dialing list.
- → TTY mode: Use of hearing or speech difficulties.

# General Settings

→ Quick responses: Quick reply modify the content of information

# **People**

You can add contacts on your phone and synchronize them with the contacts in your Google account or other accounts that support contact syncing.

To see your contacts, Press **Home key >** tap **> Contacts**.

# **Creating a Contact**

- Tap from the Contacts Screen.
- Choose the storage location to save the contact.
- Enter the contact name, phone numbers, and other information, and then save it.

# Searching for a Contact

- 1. Tap Q on the top of the Contacts Screen.
- Input the contact name you want to search for The contacts matched will be listed.

# Messaging

Your SMS (text message) and MMS (multimedia messaging service) are combined into one menu in **Home Key >**Tap **\*\* Messaging**.

# The Message Box

Instead of an inbox and outbox, your phone organizes all Messaging you sent and received into one box, where Messaging exchanged with the same number are grouped into one message thread in the Messaging Screen. You can tap a thread to see the conversation you have had with someone.

# Sending a Message

- Press Home key > tap > Messaging.
- Tap to create new message.
- Enter the recipient's number or name. As you type, matching contacts will appear.
   Tap a suggested contact to add as a recipient. You can also tap a to select recipients from the contacts.
- Tap Type text message and type your message.
- Tap Menu Key to insert quick text, insert contact or Add subject or Discard.

- If you are sending an MMS, tap Menu
   Key to add subject, or tap to attach
   pictures, videos, audio, or slideshow.
- Tap > to send your message.

**NOTE:** Add an attachment to text message and it will be converted into an MMS automatically. Likewise if you remove all attachments and the subject from an MMS, it'll automatically become a text message.

# Message Settings

The phone's message settings are preconfigured for you to use immediately. To change them, tap **Menu Key > Settings** from the Messaging Screen.

NOTE: From SMS settings screen tap Menu Key> Restore default settings to change all the message settings back to the original.

# **Touch Input Settings**

In the **KEYBOARD & INPUT METHODS** section, you can choose the settings that you need

# Adding a New Network Connection

To get connected via your mobile network you need a data plan with your service provider.

Also if the networks settings are not preconfigured on your phone, please contact your provider to get the necessary information.

You can view settings by pressing Home key > tap -> Settings > More > Cellular networks > Access Point Names

# **Turning On Wi-Fi**

Wi-Fi provides wireless Internet access over distances of up to about 300 feet.

- Press Home key > tap > Settings>Wi-Fi.
- Click next to the Wi-Fi menu to turn it on, click you can turn off the Wi-Fi function.

# Connecting to a Wi-Fi Network

- Press Home key > tap > Settings > Wi-Fi.
  - When the WLAN is on, the Wi-Fi access points, or "hotspots", that your phone has detected are displayed with their names and security settings.
- 2. Tap an access point to connect to it.

**NOTE:** If security features are implemented, you'll need to enter a password.

# Checking the Wi-Fi Network Status

You can check the Wi-Fi network by looking at the looking icon in the status bar.

# Tethering & portable hotspot

Share your phone's data connection via USB or as a portable Wi-Fi hotspot.

# Enabling USB tethering

**TIPS:** The PC accesses the Internet via the phone's mobile network. Therefore, set up the networks connection correctly before you try to use the phone as a modem.

Press Home Key > tap \_\_\_\_\_\_ > Settings > More > Tethering & portable hotspot > USB tethering and Click \_\_\_\_\_\_ next to turn it on.

# Disabling USB tethering

Press Home Key > tap Settings > More > Tethering & portable hotspot > USB tethering and Click next to turn it off.

You can also just pull out the USB cable.

# Enabling the Wi-Fi Hotspot

You can use the phone as a portable WLAN router, to share your phone's internet connection with one or more PC or other devices.

#### NOTE:

 When the portable Wi-Fi hotspot function is enabled, you can't use your phone's applications to access the internet via its Wi-Fi connection.

You can configure the Wi-Fi hotspot as follows:

- Press Home Key > tap \_\_\_\_\_\_ > Settings >
   More> Tethering & portable hotspot and
   slide the Portable Wi-Fi hotspot switch
- Tap Configure Wi-Fi hotspot to set up & manage portable Wi-Fi hotspot.

#### Disabling the Wi-Fi Hotspot

Press Home Key > tap [7] > Settings > More
> Tethering & portable hotspot and turn off
the Portable Wi-Fi hotspot Switch

## **Browsing the Internet**

You can use your phone to get on the Internet via a network or Wi-Fi connection.

Press Home Key > tap - Srowser.

## There are different ways to open web pages:

- Tap the address bar to enter the website you want to browse. Then enter the website.
- Tap Menu Key > Bookmarks/History and select a bookmark or history to open.

## **Browsing Options**

When you browse the Web, you can also do the following:

- Press Menu Key > Close and select Quit to exit
- Press Menu Key > Bookmarks/History and select a bookmark or history to open.
- Press Menu Key > Settings to configure browser settings.

## **Using Bookmarks**

If you know the Web address, you can manually add bookmarks. To bookmark a web page, open it and tap **Menu Key >Save to bookmarks**. Give the bookmark a name and save it

#### **Editing a Bookmark**

- 1. Open a Browser window.
- Tap Menu Key > Bookmarks/History.
- Select an item you want to edit and hold on it until the shortcut menu pops up.
- Select Edit bookmark.
- Edit the name or location, and then tap **OK** to save it.

#### Deleting a Bookmark

- 1. Open a Browser window.
- 2. Tap Menu Key > Bookmarks/History.
- Select an item you want to delete and hold on it until the shortcut menu pops up.
- Select **Delete bookmark** and tap **OK** to confirm

## **Changing Browser Settings**

Tap **Menu Key > Settings** from a browser window to change browser settings.

#### **Bluetooth**

Bluetooth is a short-range wireless communication technology. Phones or other devices with Bluetooth capabilities can exchange information wirelessly within a distance of about 10 meters. The Bluetooth devices must be paired before the communication is performed.

- Press Home Key > tap > Settings > Bluetooth.
- Click next to the Bluetooth menu to turn it on,
  - When Bluetooth is on, the icon will appear in the status bar.
- Tap Bluetooth. Your phone will show all visible Bluetooth devices in range.
- Tap the device you want to pair with and operate according to the message prompt.

When the owner of the device to be paired accepts the connection, the pairing is completed.

**TIPS:** Tap your device name to make your phone discoverable if other devices try to pair with your phone.

# Making the Most of Multimedia

# Taking Pictures with Your Camera

Your phone has camera function. Open it by pressing **Home Key** > tap **Scare** > **Camera**.

Tap to take a shot. To view it, just tap the picture in the lower right corner of the screen.

NOTE: Before taking a picture, click the

NOTE: Before taking a picture, click the corresponding icon on camera screen to complete the camera-related settings.

## Shooting Video with Your Camcorder

Open the camcorder by pressing **Home Key >** tap **Solution > Camera >** tap **Camera >** .

Tap to start shooting, and tap to Pause, and

Tap O Continue shooting, tap The end of the video.

Select the picture in the lower right corner of the screen to view the video you've just shot.

#### Listening to Your FM Radio

With the FM Radio, you can search for radio channels, listen to them, and collect them to your phone. Note that the quality of the radio broadcast depends on the coverage of the radio station in your area. The wired headset works as an antenna, so always connect the headset when using the radio.

 To tune in, plug your headset into your phone. Press Home key > tap > FM

Radio

#### **Playing Your Music**

You can play digital audio files from your phone's memory card in **Music**. Before playing music, you need to copy music files to memory card location.

- Press Home Key >tap > Music to open the Music Screen.
- Click the Music category label > music files to start playing.
- 3. Adjust the volume with Volume Keys.

## **Opening Your Gallery**

Press Home Key > tap [ ] > Gallery. You can use Gallery to view pictures and play videos. You can also do some basic editing of your pictures – such as setting them as wallpaper or contact photo, and sharing with friends.

## **Making Voice Memos**

**Sound Recorder** enables you to record your voice memos.

- Press Home Key > tap > Sound Recorder.
- Tap oto start recording.
- Tap to stop recording.
- 4. Tap to play back the voice recording.
- Save the voice recording after stop, or tap Discard to delete the recording.

## Using Your Google Applications

Signing in to your Google Account lets you synchronize Gmail, Calendar, and Contacts between your phone and the web. And if you don't have an account, you can easily create one.

- Tap a Google application that needs a Google account, such as Play Store.
- If you've got a Google account, tap Enter your email, then tap NEXT, enter your password. Then tap Sign in. (Or tap OR CREATE A NEW ACCOUNT if you don't have a Google account.)

#### **Gmail**

Gmail is a web-based email service that's configured when you sign in to your Google account. Depending on your synchronization settings, the Gmail on your phone can be automatically synchronized with your Gmail account on the web. This is how to enter Gmail:

Open Gmail by Pressing Home Key > tap

## **Using Google Hangouts**

Google **Hangouts** is Google's instant messaging program, which enables you to communicate with other people who also use it. Press **Home Key** > tap **\*\* Hangouts** \*\* **Hangouts** 

## Sorting out Your Phone Settings

## Setting Date and Time

- Press Home key > tap > Settings > Date & time.
- Tap the Automatic date & time and select Off if you want to set the time and date by yourself.
- Set date, time and change the other options.

#### **Display Settings**

- Wallpaper: Choose window animation.
- Brightness level: Adjust brightness of the screen.
- Sleep: Set the delay for the screen to automatically turn off.

## Sound Settings

By pressing **Home Key >** tap **\*\* > Settings** > **Sound & notification**, you can select the profile, adjust the sound settings, such as ringtones, volume and vibrate.

## **Language Settings**

You can change the language of your phone system in two simple steps.

- Press Home key > tap > Settings > Language & input > Language.
- Select a language from the list given.

#### **Switching Network Modes**

- Press Home key > tap > Settings > More > Cellular networks > Network Mode.
- Select one of the following: 2G/3G (auto),
   3G only, or 2G only.

#### Switching Networks

- 2. Tap a network to register manually, or tap Choose automatically.

#### Setting Access Point Names

To connect to the Internet you can use the default Access Point Names (APN). And if you want to add a new APN, please contact the service provider to find out more.

Press Home key > tap > Settings > More > Cellular networks > Access Point Names.

## **Security Settings**

Here's how to protect your phone and SIM card from unauthorized use.

#### Protecting Your Phone with a Pattern

#### Creating Your Screen Unlock Pattern

- Press Home key > tap > Settings > Security > Screen lock > Pattern.
- Drag your finger to connect at least four dots, draw the pattern.
- 3. Touch Continue.
- 4. Redraw your pattern to confirm.
- Touch Confirm

#### Unlocking the Screen with Your Pattern

- 1. Press Power Key to wake up the screen.
- Draw the pattern you set to unlock the screen.

If you make a mistake, please try again.

#### Protecting Your Phone with a PIN or Password

#### Creating a PIN or Password

- Press Home key > tap > Settings > Security > Screen lock.
- Tap PIN or Password.

#### Unlocking the Screen with Your PIN or Password

- 1. Press Power Key to wake up the phone.
- 2. Enter the PIN or password you set.

# **Disabling Screen Unlock Security**If you have created an unlock pattern, PIN or password, you can disable it.

- Press Home key > tap > Settings > Security > Screen lock.
- Draw the screen unlock pattern or enter your PIN/ password you have created.
- Tap None.

#### Protecting Your SIM Card with a PIN

Every SIM card comes with a PIN. The initial PIN is provided by your mobile phone carrier. It's best to lock your SIM card as soon as you can.

- Press Home key > tap > Settings > Security > Set up SIM card lock.
- Tick the Lock SIM card check box.
- Enter the PIN you've been given and tap OK.

TIPS: If you enter the wrong SIM PIN more times than allowed, your SIM card will be locked and you cannot access the mobile phone network. Contact your operator for a PIN Unlock Key (PUK) to restore the SIM card.

#### Changing Your SIM PIN

You can change the PIN you've been given to one easier for you to remember and harder for others to guess.

- Press Home key > tap > Settings > Security > Set up SIM card lock.
- Make sure you already tick the Lock SIM card check box.
- 3. Tap Change SIM PIN.

#### Setting up Credential Storage

This lets you select applications to access secure certificates and other credentials.

#### **Deleting Secure Credentials**

- Press Home Key > tap > Settings > Security.
- Tap Clear credentials to clear credentials.

## **Managing Your Device Memory**

**DEFAULT WRITE DISK:** The default option is to phone storage, the phone files are automatically saved in the phone storage, or manually select the SD card so that the files are saved in SD card.

You can view the space information of the SD card as well as the phone storage.

- Unmount SD card: You can unmount the SD card to safely remove it.
- Erase SD card: Erase all data on the SD card

## Privacy: Reset to Factory Settings

Press Home key > tap Mar > Settings >

Backup & reset > Factory data reset > Reset phone > Erase everything.

**WARNING:** All your personal information and downloaded applications on your phone will be erased after the resetting.

## **Applications**

Press Home Key > tap -> Settings > Apps.

#### Installing an Application

You can also install a non-Marketing application if you have allowed the installation of it. Make sure that you select an application developed for your device and processor type before installing it.

- Copy the application file to the SD card and install the card on your phone.
- Press Home key > tap > File Manager, and open the folder where the application file is.
- 3. Tap the file to start installation.
- Read the installation instructions that come with the application and follow it to complete the setup.

**NOTE:** Please take your handset as the standard.

#### Removing an Application

- Press Home key > tap > Settings > Apps .
- 2. Select the application you want to delete.
- 3. Tap Uninstall and OK to confirm.

#### Moving an Application

You can move the applications downloaded or installed on your phone to the memory card when the phone memory is full. You can also move applications to your phone if the memory card is getting full.

**NOTE:** Not all applications can be move to your phone or memory card.

- Press Home key > tap > Settings > Apps .
- Click the application you want to move on the **Downloaded** tab.

#### Managing Other Settings

#### Accessibility

You can configure accessibility options for accessibility-related applications by pressing Home Key > tap \_\_\_\_\_ > Settings > Accessibility.

#### Text-to-speech Output

You can set the text-to-speech and voice recognition options by pressing Home Key > tap \_\_\_\_\_ > Settings > Language & input > Text-to-speech output.

**NOTE:** You need to download voice data in order to use the text-to-speech function.

## Other Applications

#### Alarms

- Press Home key > tap > Clock> 
   Alarm.
- Tap the default alarm to configure it. Or to create a new alarm, tap New.

#### Calculator

You can use the phone directly perform simple mathematical calculations.

- Press Home Key > Tap > Calculator.
- Click the button corresponding with the calculator display, perform basic arithmetic.

TIPS: Tap Menu Key > Advanced panel to use scientific calculation.

## Declaration of RoHS Compliance

To minimize the environmental impacts and take more responsibilities to the earth we live on, this document shall serve as a formal declaration that the ZTE Blade L3 manufactured by ZTE CORPORATION is in compliance with the Directive 2011/65/EU of the European Parliament - RoHS (Restriction of Hazardous Substances) with respect to the following substances:

- 1. Lead (Pb)
- Mercury (Hg)
- 3. Cadmium (Cd)
- 4. Hexavalent Chromium (Cr (VI))
- Polybrominated biphenyls (PBBs)
- 6. Polybrominated diphenyl ethers (PBDEs)

ZTE Blade L3 manufactured by ZTE CORPORATION, meets the requirements of EU 2011/65/EU

## **Disposal of Your Old Appliance**



- When this crossed-out wheeled bin symbol is attached to a product, it means the product is covered by the European Directive 2002/96/EC.
- All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
- The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.

For this product's recycling information based on WEEE directive, please send an e-mail to weee@zte.com.cn

## **EC Declaration of Conformity**

## **C € 0979**

It is hereby declared that following designated product:

Produc Product Type: smartphone

Model No: ZTE Blade L3/Blade L3

Product Description: WCDMA/GSM(GPRS)

Dual-Mode Digital Mobile Phone

Complies with the essential protection requirements of Directives on Radio and Telecommunication Terminal Equipment (Directive 1999/5/EC), Restriction of the Certain Hazardous Substances in electrical and electronic equipment (Directive 2011/65/EU), Eco-design Requirements for Energy-Related Products (Directive 2009/125/EC) and their amendments

This declaration applies to all specimens manufactured identical to the samples submitted for testing/evaluation.

Assessment of compliance of the product with the requirements relating to Directive 1999/5/EC was performed by Intertek (Notified Body No.0979) and assessment of compliance of the product with the requirements relating to Directive 2011/65/EU was performed by

Intertek Testing Services Ltd., Shanghai Lab, and assessment of compliance of the product with the requirements relating to Directive 2009/125/EC was performed by ZTE Corporation Reliability Testing Centre. The assessments were based on the following regulations and standards:

<u> </u>	
Requirement	Standard
	EN 60950-1:2006+A11:2009+
	A1:2010+A12:2011
	EN 50566:2013
	EN 62479:2010
	EN 62209-1:2006;
	EN 62209-2:2010;
Health and	EN 50360:2001/A1:2012
safety	EN 301 489-1 V1.9.2:2011
	EN 301 489-3 V1.6.1: 2012
	EN 301 489-7 V1.3.1: 2005
	EN 301489-17
	V2.2.1(2012-09)
	EN 301489-24 V1.5.1
	(2010-10)
EMC	EN 301 511 V9.0.2 : 2003
	EN 300 328 V1.8.1
	EN 301 908-1 V6.2.1
	EN 301 908-2V6.2.1
	EN 300 440-1 V1.6.1;
	EN 300440-2 V1.4.1

EN 60950-1:2006+A11:2009+
A1:2010+A12:2011
EN 50566:2013
EN 62479:2010
EN 62209-1:2006 ;
EN 62209-2:2010;
EN 50360:2001/A1:2012
IEC 62321:2013
(EC) No 278/2009

This declaration is the responsibility of the manufacturer:

#### ZTE Corporation

ZTE Plaza, Keji Road South, Hi-Tech, Industrial Park, Nanshan District, Shenzhen, Guangdong, 518057, P.R.China

Authorised person signing for the company:

Yao cuifeng Quality Director Of ZTE Corporation

Name in block letters & position in the company

Shenzhen, 5<sup>nd</sup> JAN 2015

Place & date

Legally valid signature

