




SU-PLC

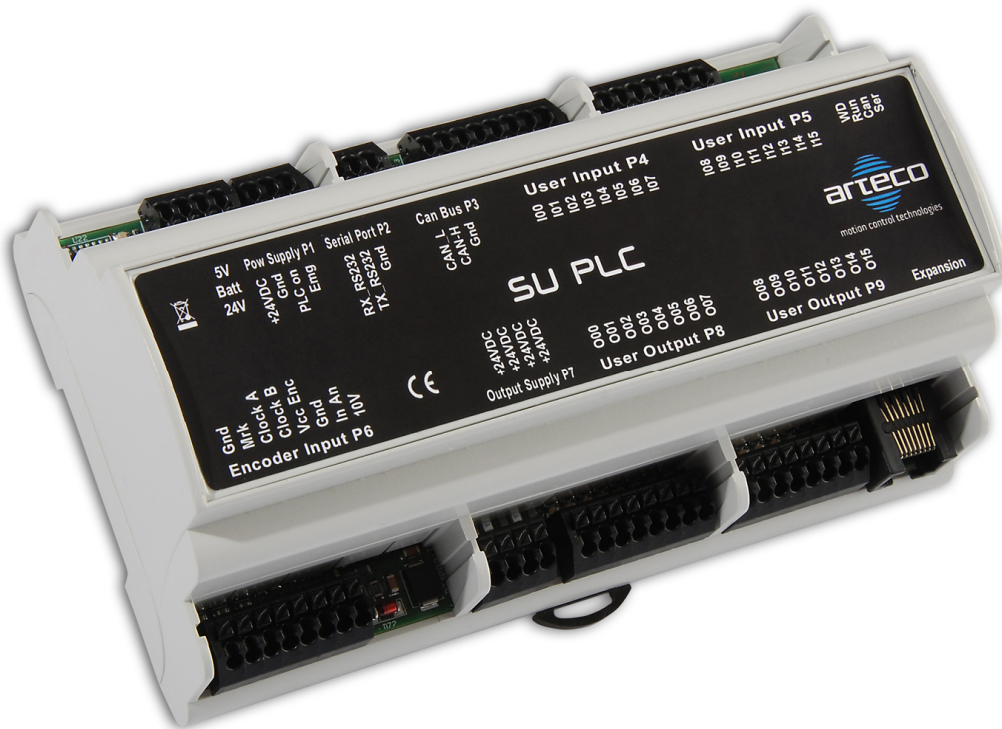

User Manual

(Rev. 09092013)



The information contained in this manual are property of Arteco SpA and may not be reproduced or published in whole or in part without written approval of Arteco. The information contained herein is subject to change and Arteco does not assume the obligation to notify. This manual is periodically revised and corrected. Although many efforts have been made to ensure the accuracy and the accuracy of the information contained herein, Arteco assumes no responsibility for errors and omissions in this document. A possible critical evaluation by the user will be most welcome and taken in consideration in the preparation of future documentation.

Reproduction or copy in whole or in part are not allowed.

Revisions :

17-10-2011 First revision of the User Manual .

10-4-2012 Second revision : Chapter 5 has been modified after Emergency Input behaviour change.

09-09-2013 Issue of english manual

Index

Chapter 1 – General information	1
1.1 - Purpose of the manual and basic concepts.....	1
1.2 - Transport Packaging and Storage.....	1
1.3 – CE Compliance	1
Chapter 2 - INSTALLATION AND POWER SUPPLY	2
2.1 - Installing SU-PLC.....	2
2.3 - Back-Up Battery.....	3
2.3.1 –Back-Up battery features	3
Chapter 3 - CONNECTIONS	4
3.1 – Allowed cables for connections and their insertion	5
3.2 – Power Supply.....	5
3.3 – Input Connections	6
3.4 – Output Connections	6
3.5 – Emergency input	6
3.6 - Analog Input.....	7
3.7 – Incremental Encoder Input	7
3.8 – CANBUS.....	7
3.9 – RS-232.....	7
3.10 – Connessione RS-422	7
3.11 – plc-on Output	8
Chapter 4 – Expansions.....	9
4.1 – Expansions through differential SPI interface.....	9
Chapter 5 – Examples of use	10
5.1 – Example of connectivity and usage	10
5.2 – Example of how to get simple low cost ON/OFF Axis Control.....	11

Chapter 1 – General information

1.1 - Purpose of the manual and basic concepts

This manual provides information to the user relating to the main hardware features of SU-PLC and of the procedure for the correct installation of the SU-PLC.

SU-PLC is a highly flexible system that allows control of digital inputs and outputs. It is also equipped by an analog input and an incremental encoder input with push-pull 24V voltage levels. The configuration interventions and repairs must be performed by qualified personnel. The information contained in this manual covers the installation and operation of the system, in any case technical regulations relating to the application must be respected.

1.2 - Transport Packaging and Storage

The devices are inserted into antistatic bags and subsequently wrapped in sheets of plastic "bubble wrap" in order not to be damaged by phenomena due to static electricity and humidity.

To ship out the devices a cardboard container is used. On the bottom of it Flo-pak or "Chips" expanded polystyrene are deposited in order to avoid contact between the equipment and the outer container protecting it from shock and mechanical stress during transport. The container is always affixed to a sheet on which is printed the name or business name and address of the recipient. Shown below are the data for the environmental values permitted by the regulations EN60204-5.

Parameter	Unit	Min.	Max.
<i>Surrounding operating temperature</i>	Gradi Celsius	+5C°	+40C°
Storage Temperature	Gradi Celsius	-10C°	+55C°
Humidity (no condensation)	%	30	90



Take all anti-static precautions if it is necessary to open the enclosure of SU-PLC

1.3 – CE Compliance

Il sistema SU-PLC ed i suoi moduli sono conformi alle normative per l'applicazione in ambiente industriale EN50082-2 per la suscettibilità e la EN50081-2 per le emissioni.

Chapter 2 - INSTALLATION AND POWER SUPPLY

2.1 - Installing SU-PLC

The user takes the responsibility that the installation of the unit meets the criteria and requirements described in this manual.

- The installation, commissioning and maintenance must be performed only by qualified, technically competent and who is familiar with the safety regulations, the procedures to be followed and the risks that the use of this device involves.
- .SU-PLC must be installed in a safe environment, free of dust, moisture, corrosive vapors, gases or liquids.
- SU-PLC is designed to be inserted into a machine or to be assembled with other parts to build a machine as the Machinery Directive 89/392/EEC.
- The installation must always comply with the safety regulations in force.
- Cabling of SU-PLC to the external field is made by spring-loaded terminals for power supply and I / O, while, for the serial ports, plug-in connectors 3-pin (RS232) and RJ45 (RS422) are used.
- The enclosure of SU-PLC is shaped in such a way as to allow mounting on DIN rail for installation in the control cabinet.
- Arteco disclaims any liability for any damage to persons or property caused by incorrect use of the unit SU-PLC.



Do not remove or insert the connectors and / or cable connections when the system is powered

2.3 - Back-Up Battery

- **Visual indication of power and state of the battery**
- **Internal supercapacitor to data retention in the absence of the battery**
- **Protection against explosions in case of short circuit or overload reverse battery**

In Ram resides, if not stored in Flash EPROM, the application program, retentive variables and virtual axis position. Inside the unit there is a supercapacitor that, under normal conditions, keeps for several hours the data in memory when the unit is turned off.

The duration of the battery is affected by ambient temperature, in fact, the higher the temperature the lower the retention capacity of the battery.

The replacement of the battery may occur at power on or power is turned off as long as the time for the replacement is less than 5 minutes.

2.3.1 –Back-Up battery features

Technical features of the battery			
Tipo	Nominal V	Manufacturer	Model
Not RechargeableLi-Mn	3.0 Volt	VARTA	CR2032



Explosion hazard

The battery must not be short-circuited, subjected to recharge process, exposed to heat, incineration or mechanical stresses such as opening the housing or compression of the container. Replace only with Li-Mn 3.0 V VARTA CR2032. Using other types of batteries may present a risk of fire or explosion.

If it needs to be replaced, refer to the rules laid down by local authorities for disposal of batteries.


Chapter 3 - CONNECTIONS

Led di stato

Led 1 red – discharged battery
 Led 2 green - 24 V Power Supply
 Led 3 green - 5V Logic Supply

Led 4 green watchdog
 Led 5 green run
 Led 6 green can

Led 7 green ser

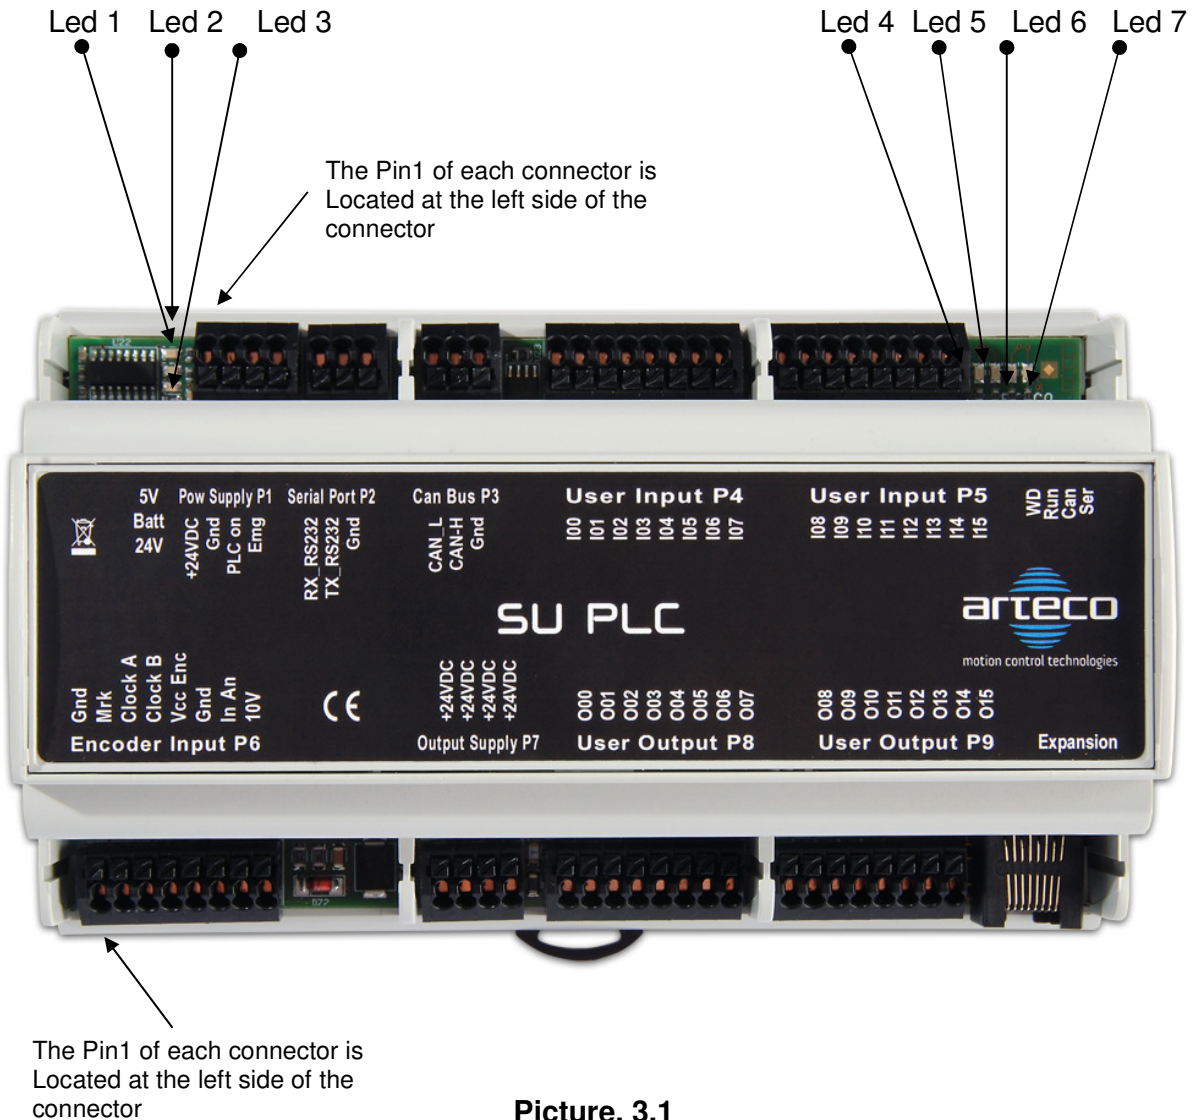

Picture. 3.1

Led 1 - discharged battery: it lights up briefly SU-PLC power on to verify operation. After about, 0.5 seconds it will turn off if the battery voltage is greater than 2.8V, otherwise it is turned on. In this case it is required the replacement of the battery.

This check is performed only at power on of SU-PLC, but it can also be invoked by a special software function block to be used in any PLC application.

Led 2 - 24 V Power Supply: it lights up if SU-PLC is powered with the correct polarity.

Led 3 - 5V Logic Supply: si accende se l'alimentatore fornisce la tensione dei 5V.

Led 4 - watchdog : flashes slowly (1 Hz) if there is no application program. It flashes in sync with Led 5 "run" at about 3 Hz if SU-PLC is executing an application. It flashes rapidly (15 Hz) if a drop in voltage on the 24V took place alerting that SU-PLC has been consequently blocked.

Led 5 run : In the absence of application it is turned off. It flashes at about 2 Hz alerting that a PLC program is being downloaded into the SU-PLC. It blinks In phase with Led 4 (watchdog) when SU-PLC is executing a PLC program

Led 6 can It flashes in sync with the Led 5 (run) and Led 4 (watchdog) if the CAN network is working correctly, otherwise it is off.

Led 7 serial it flashes at the Modbus transmission of a communication frame, only in RS422 mode.

3.1 – Allowed cables for connections and their insertion

The wire size must be included between 0.5 and 1.5 mm² (AWG 20-16).

The internal conductor of the wire must be uncovered from the plastic insulator in order to have a length of 8.5 to 9.5 mm to be correctly inserted into the connector. Termination can also be plated or letterhead with the appropriate cable lugs. Press the latch using a screwdriver until the clamp has been pushed about 3 mm down, insert the cable with a 45 ° angle and release the latch. Perform in reverse order to extract the conductor.

3.2 – Power Supply

The 24VDC Power Supply must be provided to SU-PLC through the Connector P1 (Power supply) .The absorption at 24V is about 110 mA. This absorption value refers to the internal logic circuitry of SU-PLC and does not include the absorption of the field I/Os. Please refer to Paragraph 3.4

The value of the power supply voltage must be included between 18V and 30V.

The value of optimum voltage is 24V with a tolerance of +/- 20%.

If the power supply voltage drops below 17.3 V, a safety procedure protects the data stored in the RAM, the PLC program and the retentive variables. SU-PLC interrupts the execution of the PLC program, it turns off the outputs and it turns off the PLC output.

From this security state SU-PLC can come out only by removing and restoring the power supply.

3.3 – Input Connections

Connectors "User Input P4" and "P5 User Input" are available, each of which allows the connection of eight digital input devices (eg. Sensors, switches, etc.) for a total of sixteen Inputs. The inputs voltage level of each input are referred to the common gnd of the device (pin 2 of P1). For each input a Led is available indicating the input logic status.

The absorption of each input when driven by 24VDC is 3.9 mA. The inputs logic level zero is read by the PLC if the input voltage is included between 0 to 14.6 V.

An hysteresis of 3.2V is active for each input.

3.4 – Output Connections

The Connectors "User Output P7" and "User Output P8 " are available, each of which allows the connection of eight digital output devices (eg. bulbs, relay, solenoid, etc..) for a total of sixteen Outputs. For each output there is a LED status indicator. Each output is electrically referred to the common ground of the device (pin 2 of P1). In order to use the outputs, the voltage of +24 V must be provided to connector P7. The pin 1,2,3,4 of P7 are internally connected to each other but they are not electrically referred to the pin1 of P1.

To provide the necessary current to the outputs it is necessary to connect the power supply voltage of 24VDC to all of the four pins of the connector P7. The state of the outputs depends on the level of the emergency Emg (pin 4 of P1) (see section 3.5).

3.5 – Emergency input

An emergency input is provided to the SU-PLC. This signal is located at pin 4 of the connector P1 A LED located in front of the pin od Emg shows its status.

Emg should normally be at logic level one (for voltage levels, see paragraph 3.3).

By this way, the digital outputs are enabled and under control of the application program.

If during operation, this input is brought to logic level zero (an emergency situation occurred) all of the outputs are automatically commanded to the OFF state.

To restore the correct operation must restore the logic level one on pin 4 of the connector P1.

Remark: If the PLC program commands to ON the outputs when the Emg is OFF, the output will be to OFF until the Emg comes ON, then the output state previously commanded will be put out correctly. The PLC boolean physical output variables value are not affected by the state of emergency, which appear to debug may be running.

3.6 - Analog Input

An analog input is available at pin 7 of the connector P6. The input voltages range of this analog input is from 0 to 10V. The absorption of the analog input at 10V is 4 mA. The analog input resolution is 10 bit. On pin 8 of connector P6 a voltage of 10V is available providing a maximum current of 5 mA for the connection of analog sensors or to a 2.5 Kohm potentiometer to use with the analog input. Pin 6 of P6 is the analog Gnd.

3.7 – Incremental Encoder Input

At connector P6 (pin 1,3,4,5) , a push pull 24V Incremental Encoder input is available. The signals CLKA and CLKB must be connected to pin 3 and 4, the gnd reference is available at pin 1. At pin 5, the 24V supply 500mA max is available to power the encoder. The signal Mrk at pin 2 is not active and should be left free (It is available for future use). The maximum counting frequency is 200 kHz. On request it is available the encoder input push-pull to 5V and 5V power supply.

3.8 – CANBUS

The P3 connector allows the user to connect CANOpen expansions to expand the SU-PLC to more digital inputs and outputs, Arteco analog axis, Intelligent Servodrivers with builtin Motion Control and so on. Refer to the printed label on SU-PLC enclosure for the available Canbus signals (Connector P3). The termination of the bus is on-board provided.

3.9 – RS-232

On P2 connector RS-232 is available. RS-232 interface can be used to link to the Isagraf Workbench or HMI devices with Modbus RTU protocol. SU-PLC is a Modbus slave device. Refer to the printed label on SU-PLC enclosure for the available RS-232 signals (Connector P2). Refer to the software manual for using the RS-232 interface in each mode.

3.10 – Connessione RS-422

The connector named "expansion" is available at the lower right side of SU-PLC. RS-422 available at RJ-45 connector is alternative to RS232 serial of P2. Pin 1 is adjacent to the connector P9. The connections of the expansion connector are:

- 1) RX+ (serial data + received by SU-PLC)
- 2) RX- (serial data - received by SU-PLC)
- 3) Reserved. Leave it free.
- 4) TX+ (serial data + transmitted by SU-PLC)
- 5) TX- (serial data - transmitted by SU-PLC)
- 6) Reserved. Leave it free
- 7) +5V 200 mA max
- 8) GND

Refer to the software manual for the using the RS-422.

3.11 – plc-on Output

PLC-ON output (connector P1, pin 3), is available providing 24V - 100 mA max when the SU-PLC is executing a PLC program. PLC-ON is put to OFF if an emergency OR a block of the firmware OR a power supply voltage drop below 17.5 V occur. To restore the ON state of PLC-ON, a restart of SU-PLC is necessary. If SU-PLC does not have a PLC program, PLC-ON output is put in OFF state. In this case, however, the user must load a PLC program to SU-PLC to get PLC-ON to ON state. The output is equipped with LED indicator.

CHARACTERISTICS	DESCRIPTION	NOTES
Power supply requirements		
Power supply voltage	24 Vdc \pm 20% - 0,5 A	Protected by electronic fuse
Buffer battery	Inorganic Lithium – AA-3,6Volts	
CPU		
Microprocessor	Infineon , 20 MHz, 16 bit	
Working memory	Backup battery, write protected against power down and reset	Retentive Boolean, Integer and text variables
Monitoring functions	Watch Dog PLC active	LED: slow blinking when PLC is active, fast blinking on power supply error (in this case the PLC-ON is turned off) LED on when PLC is active
INTERFACES		
Asynchronous basic serial	1 RS232/RS485 serial port	Both available, selectable by jumper
Fieldbus	CANOpen (optional) Modbus slave	For I/O expansions connecting Standard RTU Modbus
Connections to HMI	By RS232 / RS485 Modbus RTU	Full compliance with many third part HMI equipments
SPI Interface	1 SPI port: differential configuration	As an alternative to RS422
INPUT AND OUTPUT		
On board user input	16 digital input 24 Vcc PNP	
On board user output	16 digital output 24 Vcc PNP 1,8A each output, Max 4,4A for each group of 4 output	Protected against short circuit, overcurrent, overtemperature, overvoltage and reverse voltage connection.
On board analog user input	1 analog input 0-10Volt	Resolution of 10 bit, overvoltage protected
AXIS MANAGEMENT		
Encoder counting	1 encoder counter 200 KHz, 32 bit	Internally Multiplied x 4
Encoder interface	24V Push-Pull	
Encoder reading	Motion Control Function available	Position and speed reading thanks to "ReadPos" function
DEVELOPMENT TOOLS		
Development environment	ISaGRAF® Tool programming software	Compliance to standard IEC 61131-3
Available programming languages	SFC, FDB, LD, ST, IL, FC	All usable in the same project
Advanced features	Function symbols to read the position. Function symbols to manage the variables, Function symbols to manage the personalization of the serial port	In adding to the standard IEC 61131-3 programming languages
Case	Plastic case, Standard DIN	Dimensions: 160mm x 95mm x h 60mm
Mounting	For DIN guide	
Certifications	CE IEC61131-2 / IEC61131-3	Certified by the manufacturer

Chapter 4 – Expansions

4.1 – Expansions through differential SPI interface

SU-PLC can also be expanded through the differential builtin SPI interface using the available SPI Expansions. Each module provides two Expansion connectors, one for connecting to the SU-PLC or to the previous SPI expansion, the other connector for the connecting to the next SPI expansion. 30 modules can be connected to the SPI expansion bus. All these I/O can be directly controlled by the user's program like all the I/O of the SU-PLC.

Available Expansions:



I/O-EXP-PLC

Expansion for SU-PLC with the expansion cable l=0,5m included. It provides 8 optoisolated digital in PNP 24VDC + 4 optoisolated digital out 1A PNP 24VDC protected against overcurrent. It can be connected also 10meter far from the SU-PLC.




I/O-EXP-16I-16O

EXPANSION providing 16 digital in 0-24VDC PNP + 16 digital out 0-24VDC 1A protected against overcurrent.



Chapter 5 – Examples of use

5.1 – Example of connectivity and usage

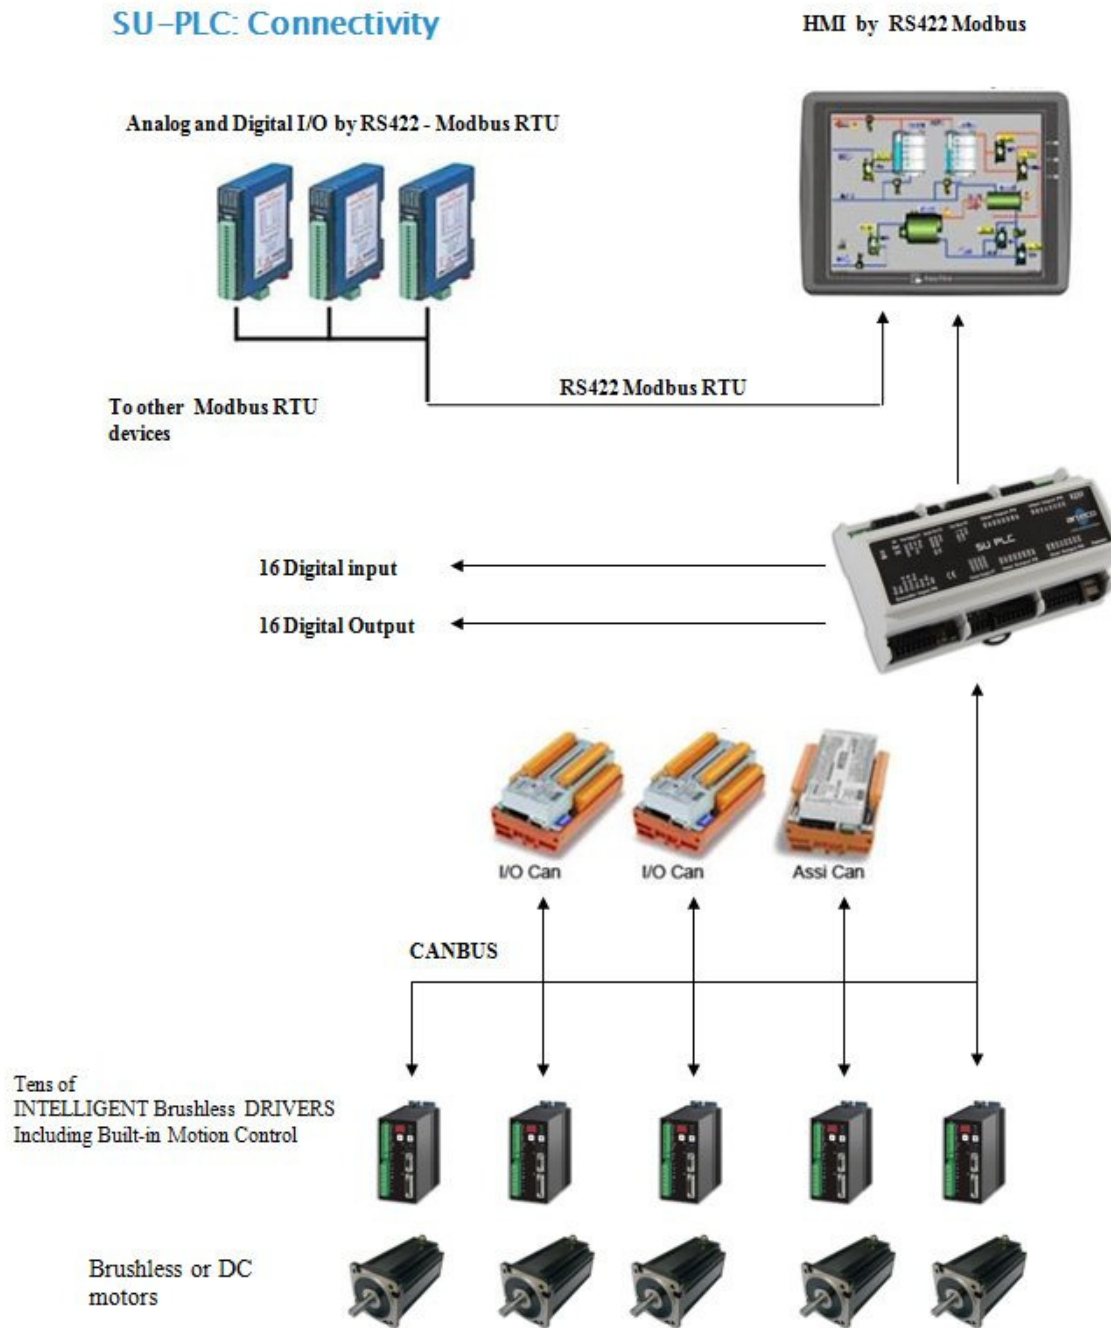

5.2 – Example of how to get simple low cost ON/OFF Axis Control

