

USER'S MANUAL | ULTRASONIC CLEANER

# UC 2800



**LUXVISION®**  
PRECISION INSTRUMENTS

# Notification

Dear Users,

Thank you for your purchase of UC 2800 Ultrasonic Cleaner. Please take time to read our user's manual carefully before use.

This guarantees you to make full use of this unit and prolongs the operation life of this unit.

## Precautions

If you have detected abnormal heat, smoke, noise or smell, immediately stop using the product.

In the event of an abnormality, turn off the power and disconnect the power plug from the power socket. Continuing to use the product may result in electric shock or fire.

Observe the instructions given below regarding the power cable:

- Be sure to use the supplied or specified power cable.
- Do not modify, forcibly bend, kink or pull the power cable.
- When disconnecting the power cable from the AC outlet, be sure to hold the cable by the plug.  
Pulling the cable may cause wire breakage or short circuit, resulting in fire or electric shock.
- Do not connect or disconnect the plug of the power cable to/from the AC outlet using wet hands.  
Doing so may result in electric shock.
- Do not touch the product with wet hands while the power cable is connected to the AC outlet.  
Doing so may result in electric shock.
- If the product will not be used for a long period, disconnect the power cable from the power source. Leaving the cable connected to the power socket for a prolonged period will consume electricity and may result in heating.

# Content

 
1. Cleaning Methods .....	4
2. Maintenance .....	5
3. Product Drawing and Indication .....	6
4. Operation .....	7
5. Warning .....	8
6. Specifications .....	9

# 1. Cleaning Methods

## Three cleaning methods (in different situations)

### 1. General cleaning

Use just tap water for general cleaning (The water should merge the article but not exceed the ruling mark).

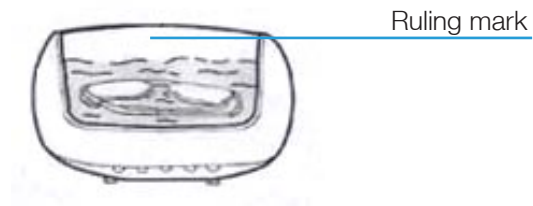

### 2. Enhanced cleaning

For professional use (jewelers, opticians, dental labs, dentists, artists, etc.). Use special cleaning liquid. For smears, add a few drops of detergent into water to enhance cleaning.



### 3. Partly cleaning

For large articles, partly cleaning as



## 2. Maintenance

1. Do not leave the cleaned item in the cleaning. Container when pouring.
2. Before draining the water, unplug the unit.



3. Do not leave water stay in the cleaning container. Empty immediately after each use.
4. Wipe the tank with towel.



---

 
 
Prohibit washing the complete unit with water to reduce the risk of electrocution.

---

5. Keep cool and dry.
6. Any repair should be performed by authorized service centers in our Guarantee Book.



### 3. Product Drawing and Indication

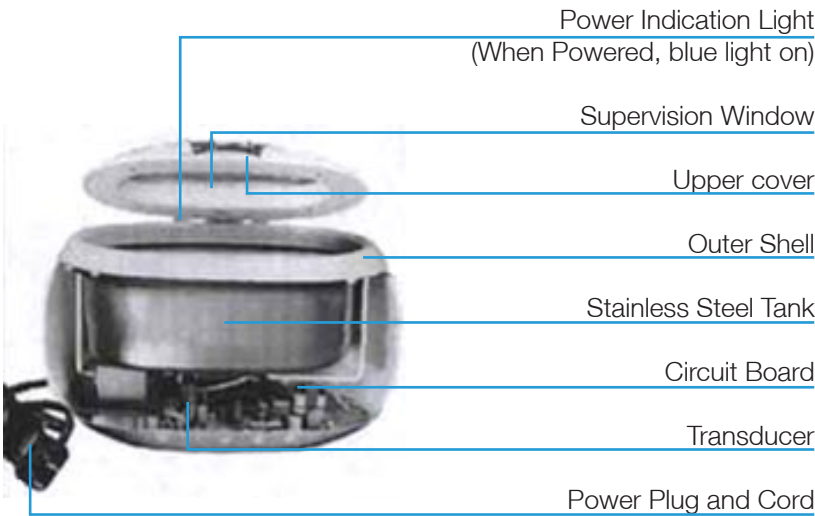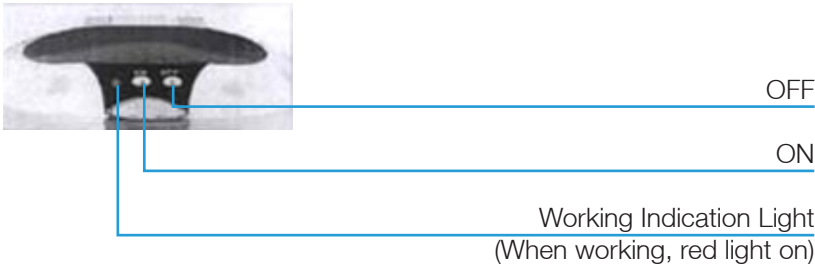

## 4. Operation

 
1. Open the upper cover, put the article into the tank, then fill with water. (The water should merge the article but not exceed the ruling mark)

---

Running without water can damage the unit.

---

2. Close the cover. Connect the unit with power. The Power Indication Light (Blue) on the inner cover will be on.

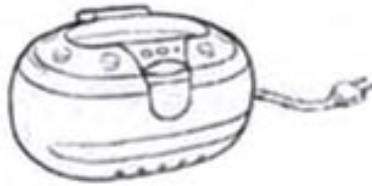

3. Press ON to start cleaning and the Working Indication Light (Red) on the upper cover will be on.

---

During cleaning, the “ZiZi” noise is normal, which comes from tank working.

---



4. After 3 minutes, the cleaning automatically stops and the Red light turns off. Or press OFF to stop. For another cleaning cycle, just repeat above process.

5. When cleaning is over, cut off the power. Open the cover, take the cleaned article out and drain the water.



## 5. Warning

**To reduce the risk of burns, electrocution, fire or injury to person**

1. A product should never be left unattended when plugged in
2. Close supervision is necessary when this product is used by, on or near children or invalids.
3. Use this product only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
4. Never operate this product if it has a damaged cord or plug. If it is not working properly, if it has been dropped or damaged, or dropped into water. Return the product to a service center for examination and repair.
5. Keep the cord away from heated surfaces.
6. Never use while sleeping or drowsy.
7. Never drop or insert any object into any opening or hose.



# 6. Specifications

50 watts of TURE ULTRASONIC Power

42,000 cycle energy wave quiet, solid state circuitry

3 minutes auto shut off

Name	Ultrasonic Cleaner	Power supply	AC 220 ~ 240V 50 Hz
Item No.	CD - 2800	Input power	50 W
Dim.	20 x 12.5 x 14cm	Timer setting	3 minutes
Tank size	600ml	WT	780 g

---

LUXVISION is not responsible or liable for indirect, special or consequential damages arising out of or in connection with the use or performance of the product or damages with respect to any economic loss, loss of property, loss of revenues or profits, loss of enjoyment or use, costs of removal or installation or other consequential damages of whatsoever nature. Some states do not allow the exclusion or limitation of incidental or consequential damages. Accordingly, the above limitation may not apply to you.

Every effort has been made to ensure the accuracy of this manual. However, LUXVISION, makes no warranties with respect to the documentation and disclaims any implied warranties of merchantability and fitness for a particular purpose. LUXVISION, Inc. shall not be liable for any errors or for incidental or consequential damages in connection with the furnishing, performance, or use of this manual or the examples herein. The information in this document is subject to change without notice.

---