

OPERATING INSTRUCTIONS

SIR 800

Compact Transmitter

Printed in Germany

If you have questions about this manual please contact:

beyerdynamic GmbH & Co. KG
Theresienstr. 8
D-74072 Heilbronn , Germany
Phone: +49 (0)7131-617-0
Fax: +49 (0)7131-617-224
Email: info@beyerdynamic.de

For further information about our products, please go to our website:

<http://www.beyerdynamic.de>

 
© 2007

beyerdynamic, Heilbronn

All rights reserved, especially (also partly) the translation, reprint, reproduction through copying or other similar methods.


beyerdynamic reserves the right to make changes without notice.

Nov-07

**CAUTION****DANGER OF ELECTRIC SHOCK
DO NOT OPEN DEVICES**

Do not open housing with mains cable connected.

 Maintenance operations may only be executed by
qualified personnel.



Our equipment and installations have been built and tested according to the latest state of the art. Under normal conditions, they do not require any special maintenance.

However, please be aware of the following:

- ☒ secure and stable position of the installation
- ☒ sufficient ventilation - never operate equipment near heat sources such as heating radiators etc.
- ☒ power connection - install all power cables to avoid damaging
- ☒ connecting cables - avoid trip-traps
- ☒ liquids - avoid penetration of liquids into the housing
- ☒ exclusively operate equipment via wall sockets that are connected to ground according to the relevant specifications and regulations

Warning: Never expose equipment to rain or humidity

Please be also aware of the fact that rough handling of the equipment, such as strong bumps or vibrations, may result in damages. Inappropriate handling and storage, i.e. handling and storage not in conformity with the operating instructions, may as well lead to equipment damages.

Content

1. About this manual	4
Symbols.....	4
2. Important remarks.....	5
2.1 For customers in the EU and in the USA.....	5
2.2 For customers in the United Kingdom	5
2.3 Safety	5
2.4 Installation	5
2.5 Cleaning.....	5
2.6 Repacking	6
2.7 General	6
2.8 Important information.....	6
3. Short description.....	7
3.1 System function	7
3.2 Use.....	7
3.3 SIR 800 Compact transmitter	8
4. Installation and starting up	10
4.1 Connecting the LINE-IN socket.....	10
4.2 Connecting RF-LINK socket	10
4.3 Connecting radiator sockets.....	10
4.4 Connecting mains power	10
5. Starting Up.....	11
5.1 Tuning input/output levels	11
6. OPERATION	12
6.1 LED AF and ON on front side.....	12
6.2 Infrared test diodes.....	12
6.3 Overview.....	13
6.4 Technical Data SIR 800	14
6.5 Optional accessories.....	15
Troubleshooting.....	16
Warranty	17

1. About this manual

Symbols

The following symbols and fonts are used in this manual:



Indicates an important note, which has to be followed to guarantee that the functions of the unit, the security of any data or your health are not put at risk



Indicates additional information, remarks and tips



Describes activities that must be performed in the shown order

Words in bold letters require your special attention.

2. Important remarks

2.1 For customers in the EU and in the USA

Our equipment has been tested and complies with the requirement of the CE test. This guarantees the protection against harmful interferences, when the equipment is operating in a commercial environment. If the unit is not properly installed to this user manual it may cause radio interferences. Any changes or modifications not explicitly approved in this manual could void your authority to operate this equipment.

2.2 For customers in the United Kingdom

The wires in the main lead are coloured in accordance to the following codes:

Green-and-yellow:	Earth
Blue:	Neutral
Brown	Live

If the colours of the wires in the mains lead of this unit are not corresponding with the coloured markings of the terminals in your plug, so please proceed as follows:

The green-and-yellow wire must be connected to the plug terminal marked with the letter E, with the safety earth symbol or with green-and-yellow colour. The blue wire must be connected to the terminal marked with the letter N or with black colour. The brown wire must be connected to the terminal marked with the letter L or with red colour.

The equipment must be connected to earth!

2.3 Safety

Check that the operating voltage of the unit is identical with the voltage of your local mains power. If a voltage conversion is required, consult your beyerdynamic dealer or qualified personnel.

Should any liquid or solid object fall into the cabinet, unplug the unit and have it checked by qualified personnel before it will be used again. Unplug the unit from the wall outlet or set the Main Power switch to OFF if it is not used for several days. To disconnect the cord, pull it out holding the plug. Never pull the cord itself.

2.4 Installation

Allow adequate air circulation to prevent internal heat accumulation. Do not place the unit on a surface (rugs, blankets, etc.) that may block the ventilation holes.

Do not install the unit in locations near heat sources such as radiators or air ducts, nor in places exposed to direct sunlight, excessive dust or humidity, mechanical vibration or shock.

To avoid condensation do not install the unit where the temperature may increase rapidly.

2.5 Cleaning

To keep the surface of the housing in a proper condition, periodically clean it with a soft cloth. Large staining may be removed with a cloth lightly dampened with a mild detergent. Never use organic solvents such as thinners or abrasive cleaners since these might damage the surface.

2.6 Repacking

Save the original shipping box and packing material. For maximum protection, re-pack the unit as originally packed from the factory.

If not supplied with the equipment, a complete transportation and storage box system is available from beyerdynamic. We recommend using this system for long-term protection and care.

2.7 General

Please keep this manual together with the compact SIR 800 transmitter. If you hand on the units to third parties, please include this manual.



Please read the manual carefully, taking special care when you see this symbol as it indicates important information!



This product is conform to the rules of the following European directive:

89/336/EWG

Council directive to the alignment of the rules of rights of all member states about the electromagnetic compatibility, modified through RL 91/263/EWG, 92/31/EWG and 93/68/EWG of the council. Further information is available on request.



The warranty will expire, if you cause defectives through inappropriate use or handling of the unit.

2.8 Important information



The unit should not be used at the maximum volume setting. Adjust the volume to a more suitable level.

High sound pressure levels will damage your hearing!

3. Short description

SIR is a system for the wireless transmission of sound using infrared light. By far the most important application is in simultaneous interpretation installations, where it is combined with interpreter consoles from beyerdynamic.

3.1 System function

The SIR system consists of several components:

The central component is the compact SIR 800 transmitter. The inputs are signals from several audio channels (for instance, several different language channels with simultaneous interpretation). It converts them into the appropriate FM signals for wireless transmission.

Infrared radiators transmit the information carried by the audio channels in the form of frequency-modulated infrared light.

Within the radiator's area, receivers are used to pick up the information transmitted in the form of infrared light signals. These receivers feature small dimensions. Headphones are plugged in to listen to their audio output. Receivers can be moved at will anywhere within the area that is fully illuminated by the radiators. They can be switched to receive up to 32 channels.

Whenever the SIR system is used as a simultaneous interpretation installation it is operating in combination with one or several interpreter consoles (e.g. SIS 1202, SID 202, MCS-D 202). The various languages are fed into the appropriate outgoing channels. The interpreter consoles also include a number of functions that are essential to ensure the uninterrupted transmission of simultaneous translation.

These consoles are installed inside sound-proofed interpreter booths.

Interpreters sit inside these booths and use headphones to listen to the original sound, which is normally called the floor channel. At the same time they speak their translation into an outgoing channel.

Wherever we have a combination of a Microphone system and interpreter consoles it is SIR's job to transmit several audio channels wireless to the auditorium.

3.2 Use

In combination with a microphone management system (such as MCS-D), the system can provide the best communication facilities for organized events that need several languages.

Each and every participant (a term often used is "delegate") can use the microphone system to speak, and what he or she says will be translated simultaneously so that other delegates will be able to listen to it in one of the languages. This technique permits direct communication in several languages even at very large scale events.

It is a simple matter to set up the SIR system in such a way that it is protected against eavesdropping from outside. Since all information is transmitted in the form of light waves, it is possible to use opaque material as necessary to limit the area to which it is to be transmitted. Dark curtains drawn across windows, for instance, are enough to shield a room reliably from the outside world.


Although the SIR system is most commonly used in combination with an interpretation system and microphone-management system, it is also possible to use it for other purposes.

During organized events, for instance, it is possible to use infrared light to transmit information to individual participants wearing receivers without disturbing anyone else present.

Another example might be museums applications. There it is possible to provide information on individual exhibits by means of infrared light radiated only to a limited area in front of the particular exhibit. Visitors listen to the information with receivers and headphones.

These particular operating instructions deal with the combination of SIR systems and interpreter consoles of the SIS and MCS-D systems. Regarding the operation of these systems, please refer to the appropriate manuals.

3.3 Compact SIR 800 transmitter

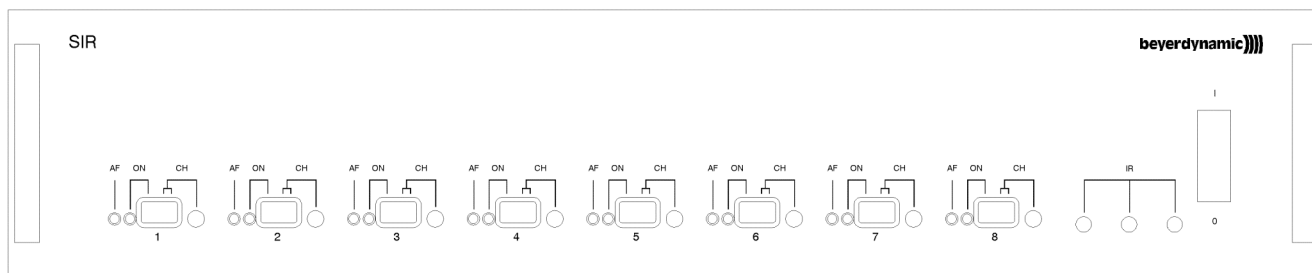

Front View

The compact SIR 800 transmitter is part of the SIR system, which serves the wireless language distribution by means of infrared light.

The sound signal is thereby converted into a frequency-modulated infrared signal and emitted via transmitting diodes. With special SIR receivers the signal is re-converted into a sound signal, which can be heard on a set of headphones. Up to 8 channels can be transmitted simultaneously with an FM narrow band modulation.

The compact SIR 800 transmitter is provided for modulating the sound signals on the different carrier frequencies and for signal amplification.

The compact transmitter consists of a 19" housing (2HU). Mounting brackets for rack assembly are also available.


Seven languages and the original (floor channel) can be transmitted.

On the front right-hand side of the compact SIR 800 transmitter there is a green POWER ON showing the ON/OFF status. Next to this there are three infrared test diodes emitting the IR-signal. With the IR receiver you can listen to the outgoing channels even without IR-Radiator.

The operating elements of the eight infrared channels are also on the front side of the console.

With miniature-switches on the front panel the frequency band can be chosen and the channels can be switched ON or OFF. With a rotating switch it is possible to assign up to 32 transmission channels. Each channel can be set from OR - Ch31.

Eight green LED ("INT") indicate the status of the corresponding interpreter channel: green LED means interpreter is "live". This gives a quick overview about the occupied channels.

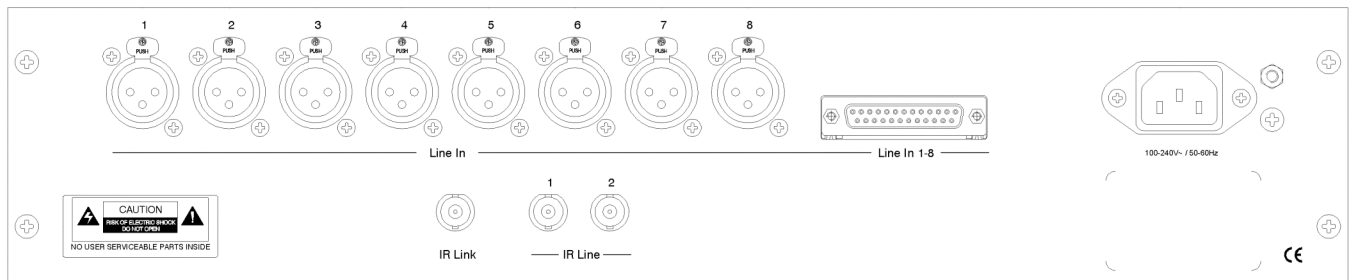

Rear view

The compact SIR 800 transmitter contains the following sockets on the rear side:

- Input 1-8: XLR sockets for feeding in the original or foreign language channel. The input is balanced via AF transformer.
- LINE IN 1-8: 25-pin Sub-D socket (TASCAM). The input is also balanced via AF transformer. A signal can be fed in via this socket or the XLR connection.
- IR-LINK: BNC socket for cascading with other compact transmitters. Use BNC-T adaptor for more than two units. **Warning:** Do not connect SIR 801 radiators to this socket.
- IR-LINE: BNC sockets 1 and 2 for connecting SIR 801 radiators. Up to 10 radiators can be connected directly at each output (IR Line 1 and 2).
- Mains power connector.
- Separate earth connection via special bolt

Unused audio channels of the SIR 800 should be turned off to increase the infrared power of the SIR 801 radiator for the actual number of channels in use.

4. Installation and starting up



The Compact Transmitter has an ex-works mains voltage setting of 90 - 250 Volts by 50 / 60 Hz. If there is another voltage range you must not connect this equipment. In connecting the system, special attention is to be paid to ensure that all cables are installed in cable ducts or that they are fixed by cable clamps or adhesive tape in such a way that there is no danger of somebody tripping over them.

When installing several SIR 800 above each other, leave 1 U at least free between them.

If the SIR 801 radiator is mounted to the ceiling, please use a safety rope to protect it from falling down.

4.1 Connecting the LINE-IN socket



XLR LINE-IN connector (female): socket for feeding in the original channel or the target languages.


4.2 Connecting RF-LINK socket



RF-LINK

BNC socket for cascading another compact SIR 800 transmitter: To manage more than 8 Outputs you can extend the SIR system with 16 or more line outputs.

4.3 Connecting radiator sockets

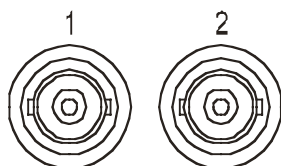


IR-LINK

BNC 1 and BNC 2: BNC sockets for connecting SIR 801 radiators. Up to 10 radiators can be connected directly.

If there are more radiators needed we recommend using an active CA 5214 distributor.

4.4 Connecting mains power

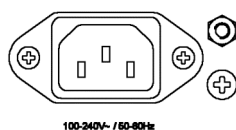

Connect the delivered cable with this socket to ensure the proper working of the Compact Transmitter.


5. Starting Up



The power supply is turned on via the power switch on the front side of the compact SIR 800 transmitter.

When you use the compact transmitter the first time it is necessary to adjust the provided channels. This procedure will allocate the transmitter frequencies to the respective channels.

For adjusting this allocation refer to the following figure. The scheme is enclosed with the Compact Transmitter as a separate sticker which may be adhering to the front panel.

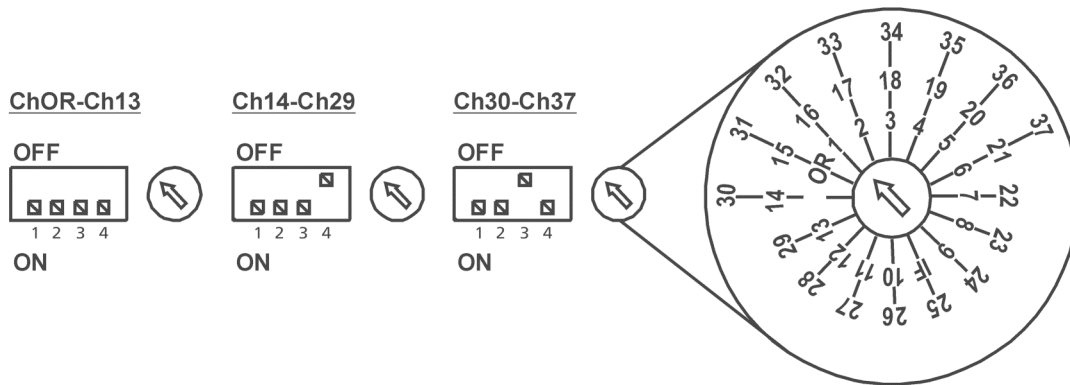

The following allocation is shown on the figure above:

First figure: Channel 1; second figure: Channel 16; third figure: Channel 32

The left DIP-switch 1 will activate the corresponding channel. DIP-switch to ON means channel is active. DIP-switch has no function.

Do not select the "IF" transmission channel.

5.1 Tuning input/output levels



Before starting a conference situation you should check the sound level in- and output to avoid level change between floor sound and interpreter sound. This is done by feed in a test signal to socket "OR-IN" and listening to the corresponding sound level.

Other controls are not necessary for a successful event.


Unused audio channels of the SIR 800 should be turned off to increase the infrared power of the SIR 801 radiator for the actual number of channels in use.

6. OPERATION

Once the SIR system has been properly started up and checked, there is usually no need for any further intervention from the operator.

Most of the work involved with audio distribution should have been completed during the pre-selection of channels and system start-up.

6.1 LED AF and ON on front side

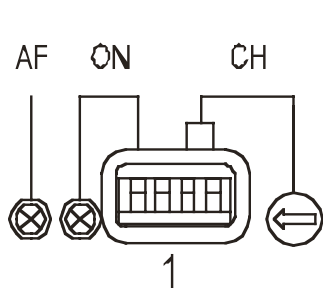

AF: This LED indicates a signal on this output (for example line 1).

ON: This LED represents the ON-status of the corresponding output channel.

Remark: You should switch off not used channels to increase the IR power.

ON- and OFF-status is set with the left DIP-switch.

6.2 Infrared test diodes



Three transmitting test diodes allow testing the receivers at a maximum distance of 3 meters between the test LED's and the receiver.

6.3 Overview

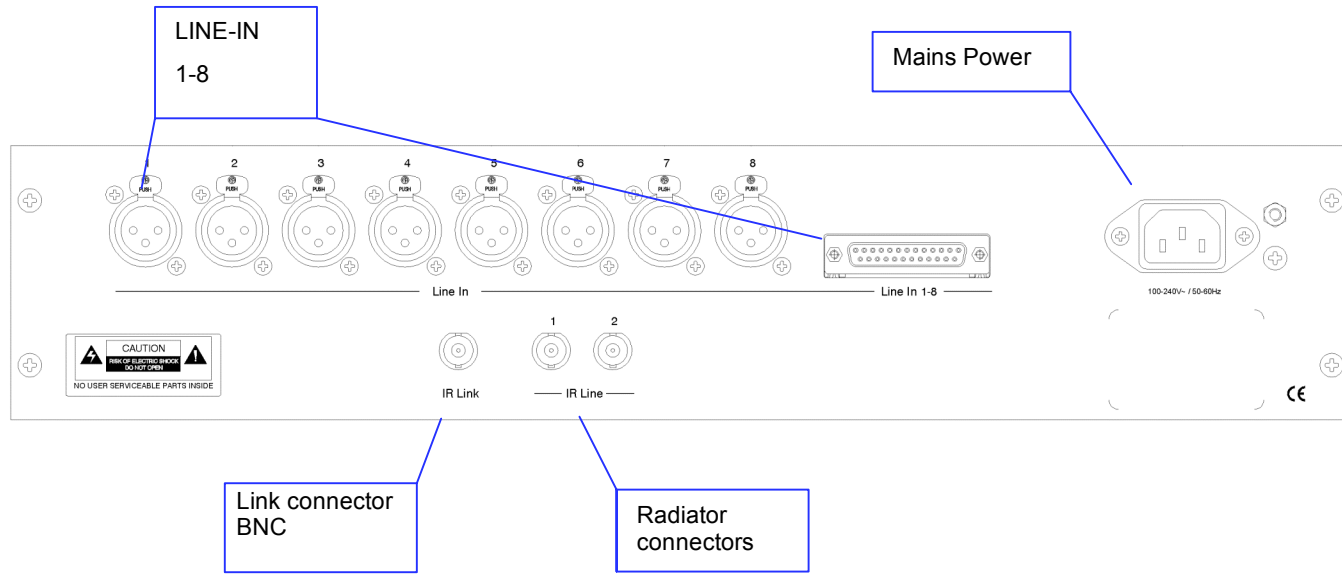
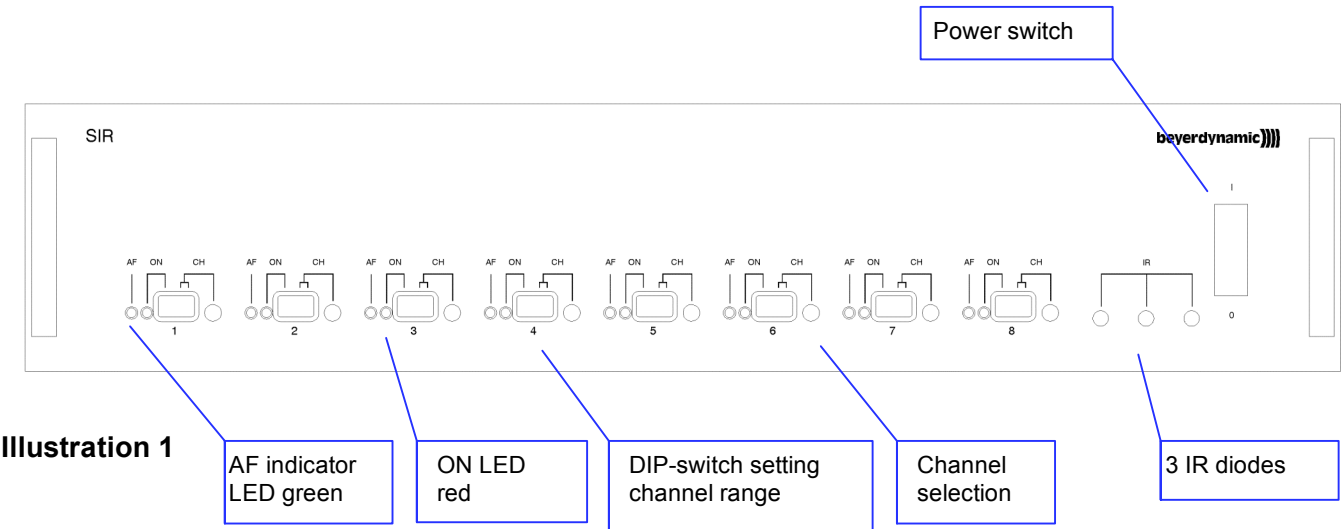



Illustration 2

6.4 Technical Data SIR 800

The unit is complying with the international standard IEC914.

Connections

- Input (8 x XLR sockets)
for input of the original language (OR) and the target languages +6 dBu, balanced
or connection to a 25-pin SUB-D socket ("TASCAM")

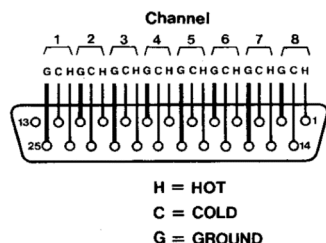

- IR-LINK (2 x BNC-socket)
1: Connection for up to 10 SIR 801 Radiators
2: Connection of up to 10 further SIR 801 Radiators
- RF-LINK (1 x BNC-socket)
for cascading (RF) with further SIR 800

Features

- Green lighted mains switch for power ON indication
- Red LEDs for channel ON indication
- Green LEDs for audio available (AF)

Transmission frequency

- 55kHz - 1335kHz (channel 31) in 40kHz steps

Intermediate frequency

- 455 kHz

Measurements

- Distortion: < 0.2%
- Signal-to-noise ratio: > 70dB
- Channel separation: > 60dB

Power Supply

- Mains power: 90 – 250 VAC, 50 / 60 Hz
- Power consumption: 40 W max

Housing

- 19", 2 HE, Aluminium, "black" anodized
- W x H x D: 433 x 88 x 305 mm

Weight

- 4.6kg

6.5 Optional accessories

(not included in delivery)

- SIR 801 Radiator
- SIR 320 Receiver
- BNC cable (50 Ohm) different length available
- CA 5103 BNC-T-adapter
- CA 5102 BNC-BNC-adapter
- CA 5101 50-ohm terminating resistor

Troubleshooting

Error description	Error cause	Error solution
Switching on the system produces no POWER ON condition (green LAMP does not light up).	The main cable connector is not properly connected to the corresponding socket of the unit. Connection cable possibly defective. The power switch is not in the correct position.	Check if there is no connection to the mains power. Replace a new mains cable. Turn on the POWER ON switch.
No clear IR signal at the SIR 320 receiver	2 or more channels switched to the same frequency	Check frequency setting on front panel and control signal using the test diodes

Warranty

beyerdynamic GmbH & Co. KG provides you with two years' guarantee on brand-new devices from the date of purchase. Please save your sales receipt and this guarantee supplement. Without this proof repairs can fundamentally only be carried out for a charge. The guaranteeing includes materials and working time for the elimination of demonstrable defects in material or workmanship. The guarantee claim is void in the case of operating errors, improper operation, electric and mechanical damage, as well as in the case of improper repairs by unauthorised workshops.

Excluded from the guarantee claim are batteries and rechargeable batteries included in the delivery, as well as parts that are subject to natural wear and tear during usage, such as connecting cables, ear cups, headband pads, etc.

The guarantee can be claimed in all countries in which legal provisions do not stand in the way of the guaranteeing.

Valid in all countries in addition to the legal provisions are the guarantees provided by beyerdynamic sales locations.

beyerdynamic rejects any guarantee, if the safety label with the serial number is removed.

beyerdynamic declares itself to agree to exchange or repair defective components due to faulty materials or manufacturing, dependent on following procedure:

- 1) The client declares that the fault is not due to empty, discharged, wrongly inserted, or faulty batteries.
- 2) You may send the defective product to:

beyerdynamic GmbH Service & Logistik Center
August-Häußer-Str. 9
D-74080 Heilbronn
Germany

- 3) Should it turn out that the fault was caused through inattentiveness or inappropriate use, the service and shipping charges will be added to the clients account.

NOTES

NOTES

NOTES

NOTES

beyerdynamic GmbH & Co. KG
Theresienstr. 8
74072 Heilbronn – Germany
Tel. +49(0)7131-617-0
Fax +49(0)7131-617-224
info@beyerdynamic.de
www.beyerdynamic.de

beyerdynamic U.K. Ltd.
17 Albert Drive
Burgess Hill RH15 9TN
Tel. +44(0)1444-258258
Fax +44(0)1444-258444
sales@beyerdynamic.co.uk
www.beyerdynamic.co.uk

beyerdynamic Inc. USA
56 Central Ave.
Farmingdale, NY 11735
Tel. +1(631)293-3200
Fax +1(631)293-3288
salesUSA@beyerdynamic.com
www.beyerdynamic.com

Non-contractual illustrations. Subject to change without notice.