



# 3DGence ONE

user manual



*Spatial Printer*

*Advanced and reliable 3D printing platform with a patented head change system.*

*PURPOSE :*

*RAPID PROTOTYPING*

*SMALL SCALE PRODUCTION*

*SUPPORT OF MANUFACTURING PROCESSES*

## **TABLE OF CONTENTS 2**

*Spatial Printer*

*Advanced and reliable 3D printing platform with a patented head change system.*

*PURPOSE :*

*RAPID PROTOTYPING*

*SMALL SCALE PRODUCTION*

*SUPPORT OF MANUFACTURING PROCESSES*

## **TABLE OF CONTENTS 2**

### **1. INTRODUCTION 5**

- 1.1. INTRODUCTORY COMMENTS
- 1.2. A FEW WORDS ON THE HISTORY OF 3D PRINTING
- 1.3. DESCRIPTION OF THE PROCESS OF 3D PRINTING
- 1.4. MATERIALS TO PRINT 9
- 1.5. STRUCTURE OF THE MANUAL 10
- 1.6. SYMBOLS 11
  - 1.6.1. LIST OF SYMBOLS OCCURRING IN THE MANUAL 11
  - 1.6.2. INDICATOR LIGHTS 11

- 1.7. SAFETY MEASURES 12
  - 1.7.1. GENERAL INFORMATION 12
  - 1.7.2. WHEN MOVING THE PRINTER 14
  - 1.7.3. ABOUT THE LOCATION OF PRINTER INSTALLATION
  - 1.7.4. PRIOR TO STARTING 16
- 1.8. ENVIRONMENTAL PARAMETERS 16

## **2. DESCRIPTION OF PRINTER 17**

- 2.1. INITIAL STEPS 17
- CONTENTS OF EQUIPMENT 19**
- 2.2. CONSTRUCTION OF PRINTER 20**
  - 2.2.1. VIEW FROM FRONT - LEFT SIDE 20
  - 2.2.2. VIEW FROM FRONT - RIGHT SIDE 21
  - 2.2.3. REAR VIEW 22
  - 2.2.4. EXTRUDER 23
- 2.3. CONTROL BUTTONS 24
  - 2.3.1. MAIN PANEL 24
  - 2.3.2. PAUSE BUTTON 25
  - 2.3.3. DESCRIPTION OF DISPLAY 25
  - 2.3.4. MENU 26

## **3. PREPARATION 30**

- 3.1. INSTALLATION OF SOFTWARE AND DRIVER 30
- 3.2. CONNECTION AND ENABLING OF PRINTER 31
- 3.3. CALIBRATION OF TABLE 31
- 3.4. MOUNTING FILAMENT 34
- 3.5. REMOVING FILAMENT 36

## **4. THE FIRST PRINT 37**

- 4.1. CONNECTING THE PRINTER TO A COMPUTER 37
- 4.2. CONFIGURATION OF REPETIER-HOST SOFTWARE 37

4.3. FIRST PRINT 39

## **5. POST-PRINTING OPERATIONS 44**

5.1. REMOVING THE PRINT 44

5.2. CLEANING 45

5.2.1. CLEANING THE PRINT HEAD 45

5.2.2. CLEANING OF OPERATING TABLE 45

5.3. TURNING OFF 46

## **6. STORAGE 46**

## **7. SOFTWARE 47**

7.1. GENERAL INFORMATION 47

7.2. LOCATION OF FACILITY 47

7.2.1. 3D VIEW 47

7.2.2. SHORTCUTS 48

7.2.3. LOCATION OF FACILITY 48

7.3. MANUAL CONTROLS 49

## **8. SERVICING 52**

8.1. Replacement of filament

8.2. Replacement of Print Head 53

8.3. Maintenance of guides and ball screws 56

8.4. Maintenance of toothed belts /gear belts 56

8.5. Updating the Printer Firmware 57

## **9. Additional information 61**

### **9.1. GUARANTEE 61**

9.2. Tips / Common problems 63

9.3 How to design models

10. Printer specifications 64

11. Useful contacts 65

## **1. Introduction**

### **1.1 Introduction**

Thank you for choosing 3DGence One 3D printer. The following manual will introduce you to the world of 3D printing, and enable you to smoothly negotiate your way around it.

Before attempting to use the 3DGence One printer, we strongly urge you to read the information contained in the manual and comply with it fully. This compliance will help to prevent any future device failures.

In the event of problems or concerns please contact our technical department at the following address: [support@3dgence.com](mailto:support@3dgence.com)

## 1.2. A FEW WORDS ON THE HISTORY OF 3D PRINTING

The date that is associated with the birth of spatial printing is the same year as Orwell's famous novel 1984, when Charles Hull (b. 1939, USA) invented a method of stereolithography (SLA). However, the appearance of the first "print" could be seen much earlier in history, as far back as ancient times when people started welding. Yes, you have read it right, it's about the technique of welding and soldering. Perhaps it is true that ancient people used primitive versions of these techniques, and only in the nineteenth and twentieth century did these methods become developed and modernized. The creation of welding torches contributed to the spread of welding, and thereby new inventive methods of joining metals. This, in turn, led to the invention of flame-plating, a technique similar to the method of 3D printing, based on applying successive layers of material – so-called incremental technology.

Reverting back to the topic of Charles Hull, it should be noted that not only did he invent the SLA method connected to toughening the epoxy or acrylic resin with the use of an ultraviolet light beam generated by a laser. He also made his mark in the history of spatial printing in another very important way. He developed a file with the extension *stl*, which is characteristic of 3D printing.

After that the development of 3D printing was very dynamic - Charles Hull patented the SLA printing technique, founded the 3D system company (which is still successful), and launched the first commercial 3D printer for sale (1992). The market slowly began to get saturated, with companies competing to find better methods of printing. 3D printing started to be applied in many important areas, e.g. medicine - in 1999 the first attempts at transplantation commenced.

An important moment for the advancement of 3D printing was the year 2005, when the first RepRap printer model was developed by Adrian Bowyer (born 1952, UK). RepRap printer is a device that can replicate its components, or in other words – it prints itself! – using FDM technology (Fused Deposition Modeling). This is a technique which applies layer upon layer of molten consumable material in the form of service lines, that is - filament). Then it can print anything a user wants at low cost. The emergence of "replicating" devices

significantly influenced the increase in popularity and universality of spatial print technology.

Nowadays there are many 3D printing techniques. Currently, FDM is the leading method. It is the cheapest and enjoys great popularity. Other techniques worth mentioning are the SLA and PolyJet, MJM (Multi-Jet Modeling), MJP (MultiJet Printing) (analogous to SLA), while the most expensive one is DMLS (Direct Metal Laser Sintering) method, which involves melting and joining metallic powder. These are just some of the growing number of ways to create spatial models, as are the vaguely defined new techniques of incremental technology.

### **1.3 3D Printing process**


#### 3D printing

*3D printing is an incremental technique, which is based on adding further layers of material to form a spatial physical model. The basis of the operation of this technology is processing (with the use of appropriate software) of a digital file of sequences of instructions that a 3D printer carries out while creating a three-dimensional object.*

#### *FFF method (FDM)*

*FFF (Fused Filament Fabrication) / FDM (Fused Deposition Modeling) - technology which consists of applying layer upon layer of molten manmade material (usually ABS, PLA or NYLON). The filament in the form of a wire is wound on a spool located on the printer and then in the semi-molten state is extruded through the extruder through a nozzle. This nozzle prints out on the table on which a creation of a physical object is made, layer by layer. The process of 3D model printing depends on its size and our precision. The average printing time takes from several minutes (for small prints) to several hundred hours in the case of large and complex prints. When printing it is a good idea to ensure that the supply of electricity to the machine is continuous and therefore it is advisable to use UPS units.*

<sup>1</sup>*FDM (Fused Deposition Modeling) - name reserved by the creator of the technology, Stratasys company*

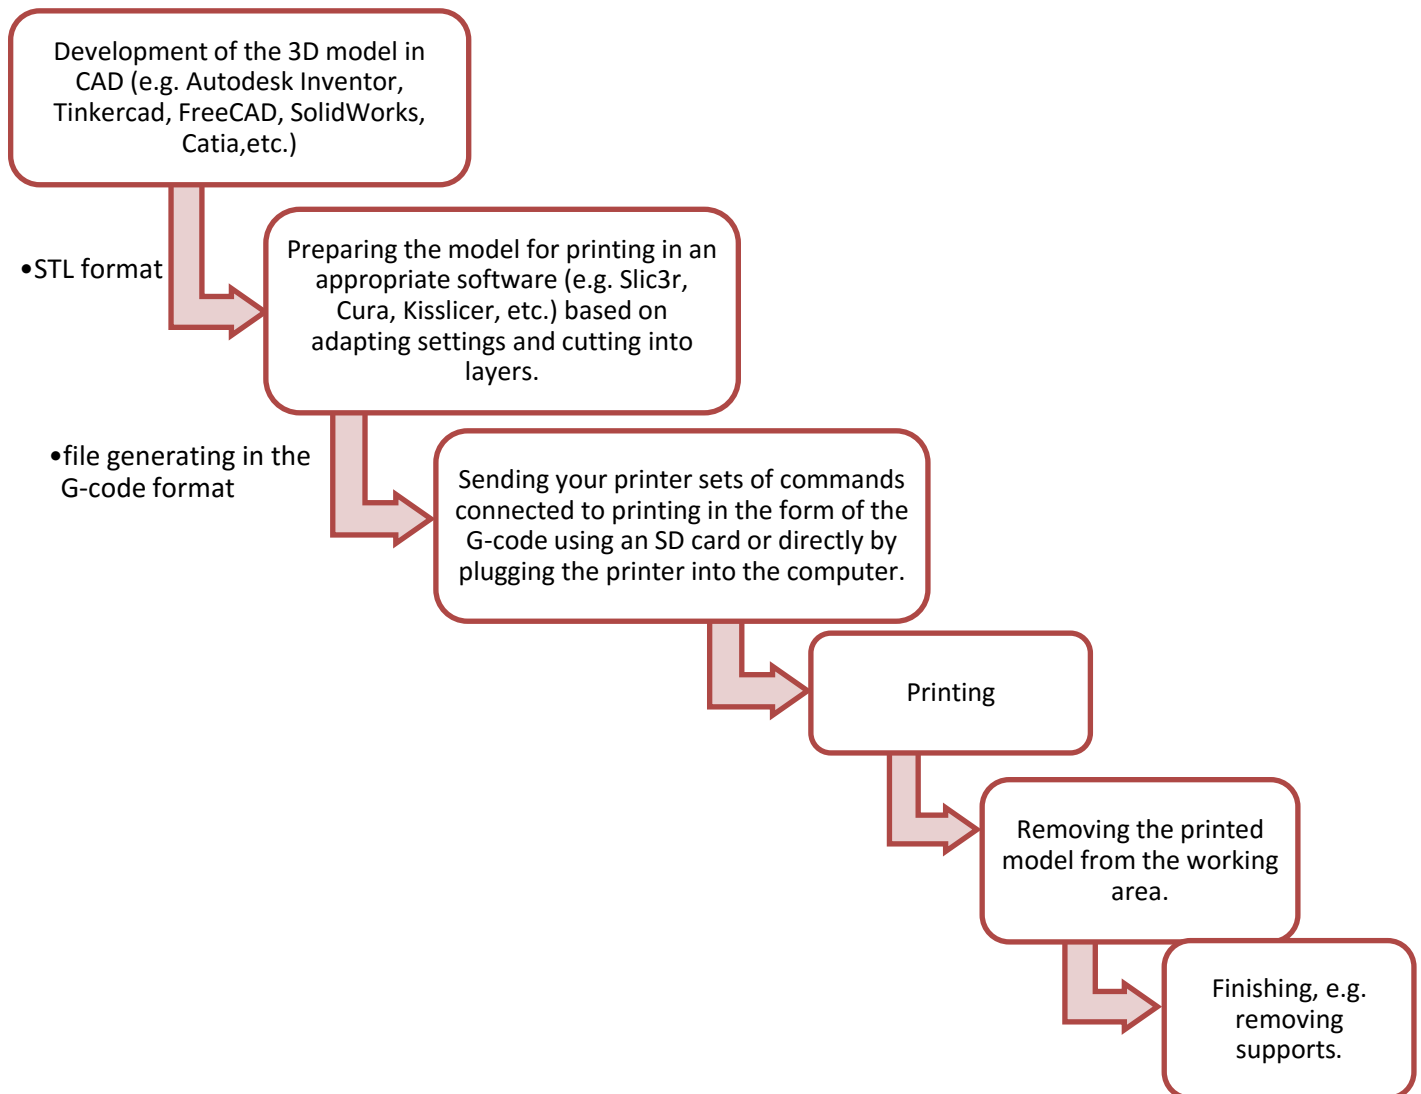

### 3D printing process

#### 1.4. MATERIALS FOR PRINTING

Currently on the market there are approximately 3 000 kinds of materials for 3D printing in FFF technology, and the number is constantly growing. Consumables are usually designed on the basis of ABS, PLA or nylon with various admixtures (e.g. bronze, aluminum) that affect the universal features of the filament. The use of particular material depends primarily on individual requirements and customer expectations.



The company 3DGence offers and recommends its own high-quality consumables for printing. The 3DGence ONE printer is adapted to use most materials available for 3D printing, and therefore it is possible to use other manufacturers' filaments with it. These materials should have a diameter of 1.75 mm, and when being used, the temperature, according to the manufacturer, should not exceed 260C.




**WARNING!** If the filament is too flexible or elastic, problems could arise when feeding material to the head. Print at your own risk.

If in doubt, please contact the technical department at 3DGence: [support@3dgence.com](mailto:support@3dgence.com)

## 1.5. STRUCTURE OF THE MANUAL




This manual has been designed in such a way that any inexperienced person starting their adventure with 3D printing should find it easy to understand and use.

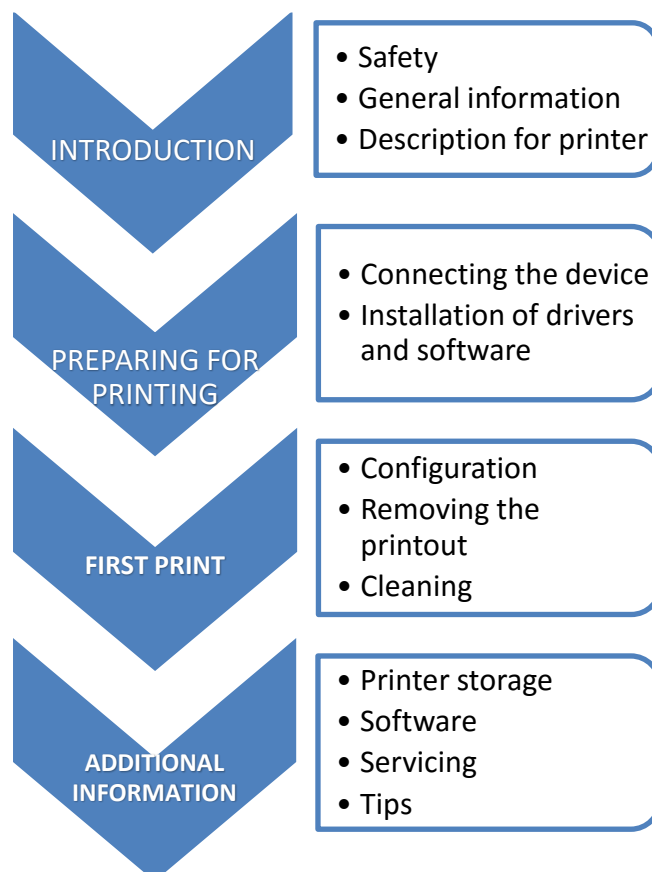The manual has been divided into four distinct sections.


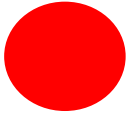
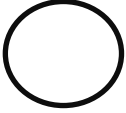


## 1.6. SYMBOLS

### 1.6.1. Symbols used in this manual:

	<p><b>Warning:</b> indicates a potentially hazardous situation, which could cause damage to your printer</p>
	<p><b>Danger:</b> indicates a potentially dangerous situation that could result in injury to the operator</p>
	<p><b>Gloves:</b> for these operations, it is necessary to wear gloves.</p>

### 1.6.2 Indicator Lights

color	indication
	<p>Overcooling of the table (you can intervene in the working zone). Depending on the light: green or blue</p>
	<p>Table temperature is above 40 Red Color Do not touch!</p>
	<p>Table warmed up, ready to work (table has reached the desired temperature). White color. Do not touch!</p>

## 1.7. SECURITY MEASURES

### 1.7.1. GENERAL INFORMATION

To ensure that your printer serves you as long and as safely as possible, you should abide by the following rules:



#### **Do not install the device:**

- outdoors
- in areas that are damp or prone to flooding
- in the vicinity of volatile and inflammable substances
- near concentrated acids or corrosive fumes
- in places easily accessible to children



#### **You must not:**

- once printing is under way, touch the printer, platform or head – there is a risk of being burnt,
- once printing is under way, insert body parts or foreign objects around the working area of the printer - this could damage the device and also could cause injury to the operator,
- touch the hot nozzle with hands, even when wearing gloves.
- touch the parts which are high voltage.
- operate the printer with wet hands.
- put any items either on or under the printer table,
- place any items containing water on the printer,
- whilst the 3DGence ONE printer is in use, it becomes extremely hot and has many moving parts. Never reach into the printer while it is operating


**You must:**

- use only the power sources with grounding (to avoid shock).
- when disconnecting the plug from the power source, hold its cover, not the cord.
- before starting any repairs or maintenance, disconnect the power source,
- protect the cable, and plug against damage.
- disconnect the power plug before any relocation/moving of the machine
- if the device is not used for a long period of time, unplug the power plug,
- periodically clean the nozzle by removing external dirt (with non-flammable material)
- always wear protective gloves when working with the printer.
- use the device away from children and animals.



**WARNING:** Heated table and head may be hot even after printing. You should check the temperature on the display before touching them, or wait 30 minutes after switching off the device (e.g., for cleaning, device removal, exchanging of nozzle, etc.)


You can remove the device or touch the operation table ONLY when the blue or green light is on (it indicates that the table has cooled down). **WARNING!** The head may still be hot. The blue (green) light concerns only the temperature on the table. The temperature of the head and of the table is indicated on the LCD panel.

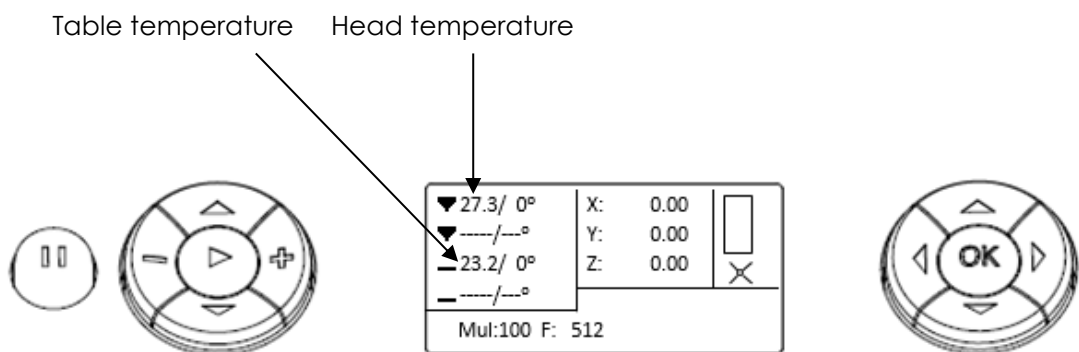

**1.7.2. MOVING**

- Before moving the machine, disconnect it from the power source.
- The machine should be cooled down and consumables should be removed.


- When moving the machine, only use the specially designated handles

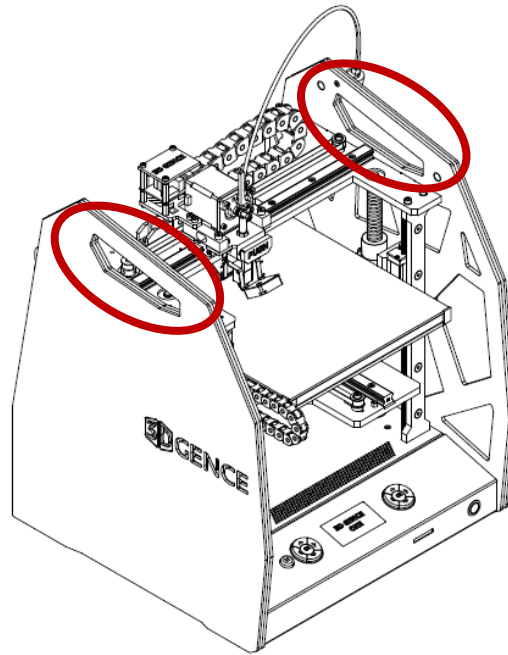


### 1.7.3. Location of machine installation

The location where the machine is installed should meet the following conditions:

- the machine should be used at room temperature,
- the machine is not designed to work in dusty environments,
- the room should be provided with ventilation appropriate for its size
- the machine should be placed on a hard, stable surface.
- this machine must not be exposed to direct sunlight,
- the machine should be placed away from heat sources and drafts.
- location of the device should be fitted with a 110V socket
- it is recommended to use UPS emergency power supplies, so that, in case of temporary power failure, the printing process is not interrupted.

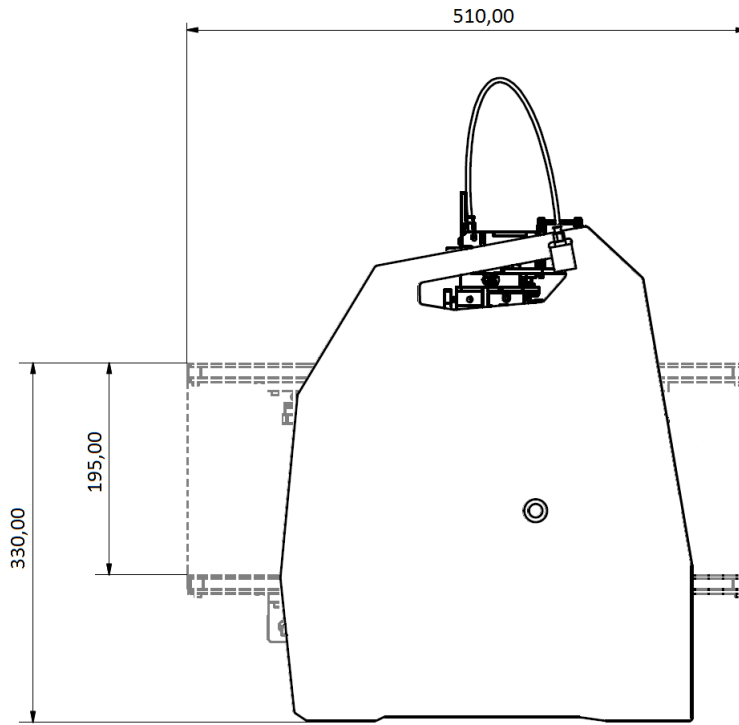

Side view of the printer indicating the operating area (extended table)

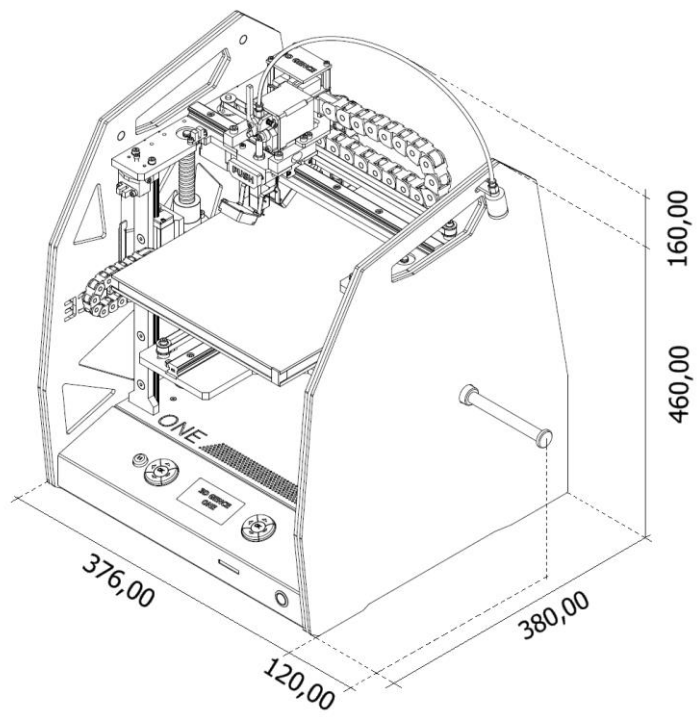

The device is powered by AC 110V. Connect it to a power outlet with a protective plug (grounding) to prevent electric shock in the event of malfunction of the device.

#### 1.7.4. BEFORE STARTING

BEFORE EACH USE OF THE PRINTER:

1. Check whether the cables have no visible fraying or other damage.

In the event of damage to the cables, you should immediately notify the 3DGENCE company's technical service department. In such circumstances, the user is prohibited from connecting the device to the power supply and / or making repairs on their own.

2. Make sure the filament is not dirty, broken, bent or tangled on the spool.

3. Make sure that in the printer working area there are no items / leftover prints that could cause a paper jam or damage to the machine.

4. Check the X and Y axes, and make sure that nothing is blocking their movement. Check that the toothed belts are pulled tight and have no damage.

5. Check whether the Z-axis stopwatch is not damaged / broken / bent.

6. Check that in the area of the printer there are no third parties who might be injured as a result of the printer operating.

**WARNING!** Information on items mentioned can be found on page 22 in section **2.1. Parts of the Printer**

#### 1.8. ENVIRONMENTAL PARAMETERS

<b>Storage temperature</b>	0 - 32 °C
<b>Operating temperature</b>	15 - 26 °C

## 2. DESCRIPTION OF PRINTER

### 2.1. FIRST STEPS

1. Open the cardboard box in the place indicated below





2. Remove the box containing printer parts



3. Pick it up by the handles and carefully pull the printer out of the box. Then remove the protection wrapper and remove the cardboard with the filament located on the printer table.




4. Remove the yellow security bands.

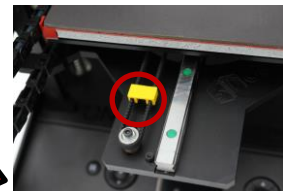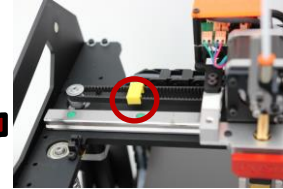

5. Attach the spool to the filament on the right side of the printer. (**Note! Left hand thread**)




6. Attach the polycarbonate covers to the sides of the printer

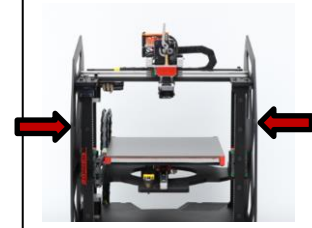




7. In the top right corner of the printer tighten the cleaning tool and the handle.

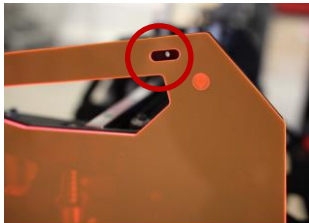

8. Push in the end of the wire of the cleaning tool into the indicated ending (as indicated in the picture), which is located on the extruder.

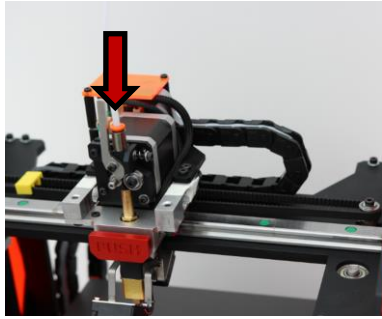

9. Install filament according to instructions included in section **3.5 Fitting filament**

10. Connect the power cables (**Ch. 3.2. Connecting and enabling of the printer**) and USB.




## EQUIPMENT

- **3DGence ONE printer**
- USB memory stick with software
- Memory card
- Filament (wire, consumables)
- Spatula
- Network cable
- USB cable
- Bowden (the wire guiding the filament to the extruder)
- Protective gloves
- Cleaner
- Spool handle
- The print head nozzle with a diameter of 0.5 mm (already installed)
- Tweezers
- Panels made of polycarbonate (sides, depending on the color version: red, blue, or orange)



## Printer parts


### FRONT VIEW - LEFT SIDE

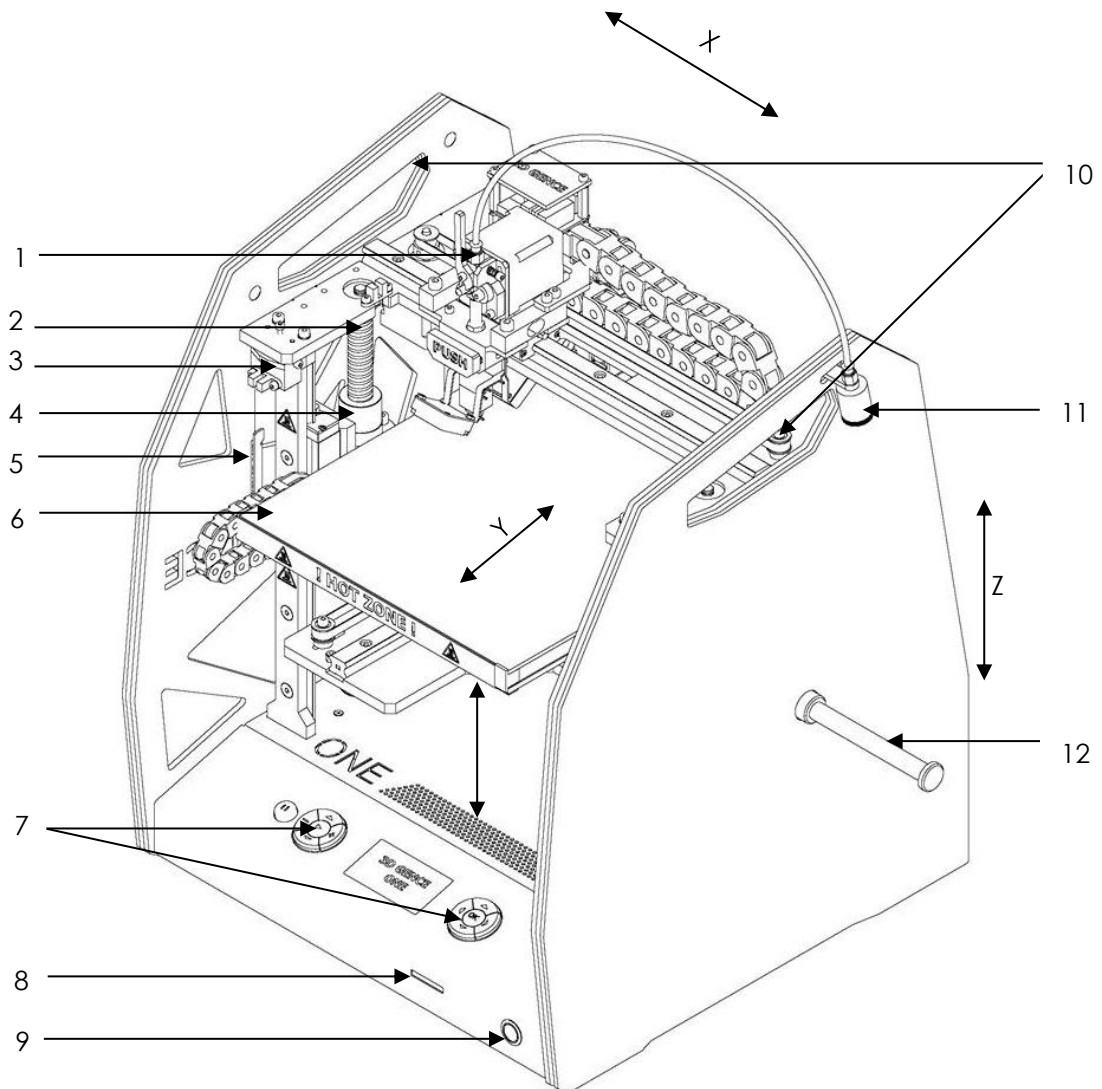

1. Extruder
2. Ball Screws
3. Z-axis limit switch
4. The ball screw nut
5. Z-axis timer/stopwatch
6. Heated table
7. Controls
8. SD card slot
9. The printer power switch
10. Carrying handles
11. Cleaner


12. Holder spool with filament (NOTE: left-handed thread!)

### 2.2.2. FRONT VIEW- RIGHT SIDE

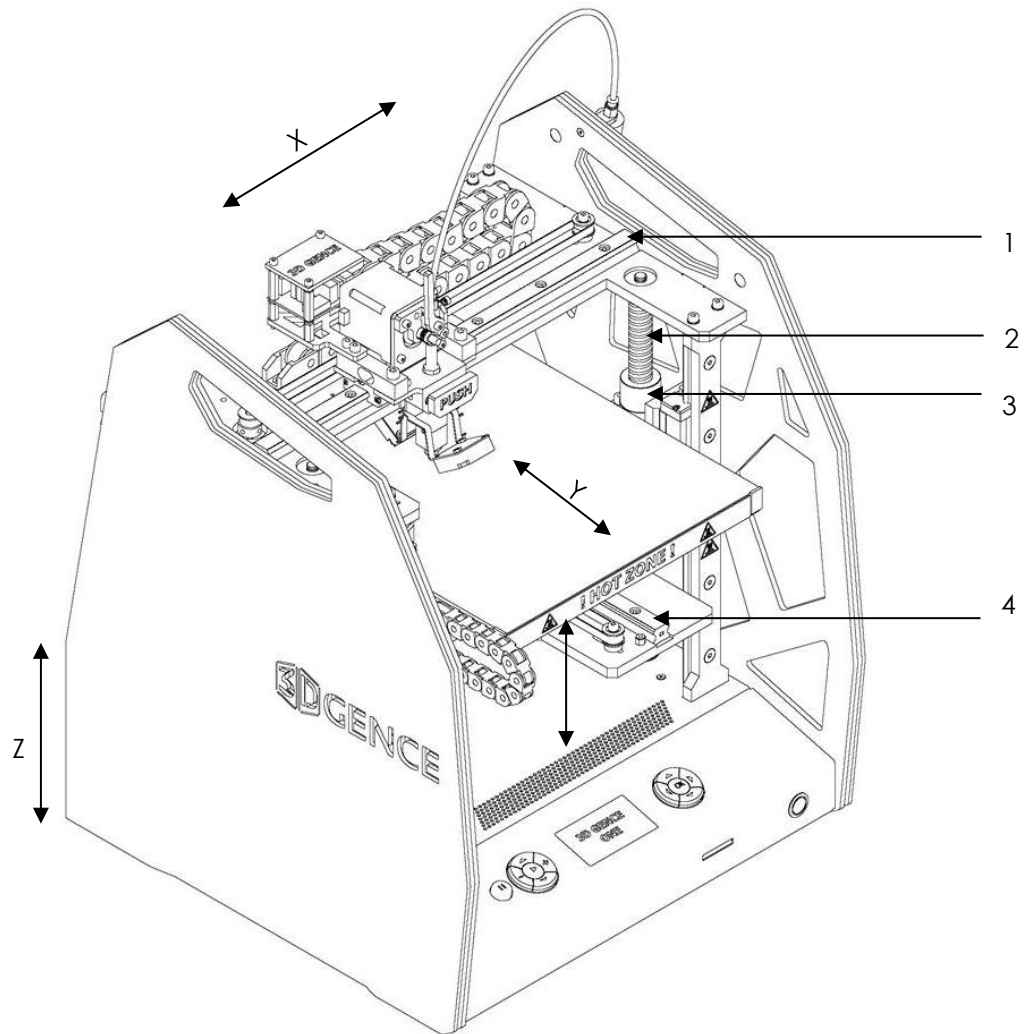


1. X-axis guide
2. Ball screw
3. The ball screw nut
4. Y-axis guide

### 2.2.3. REAR VIEW

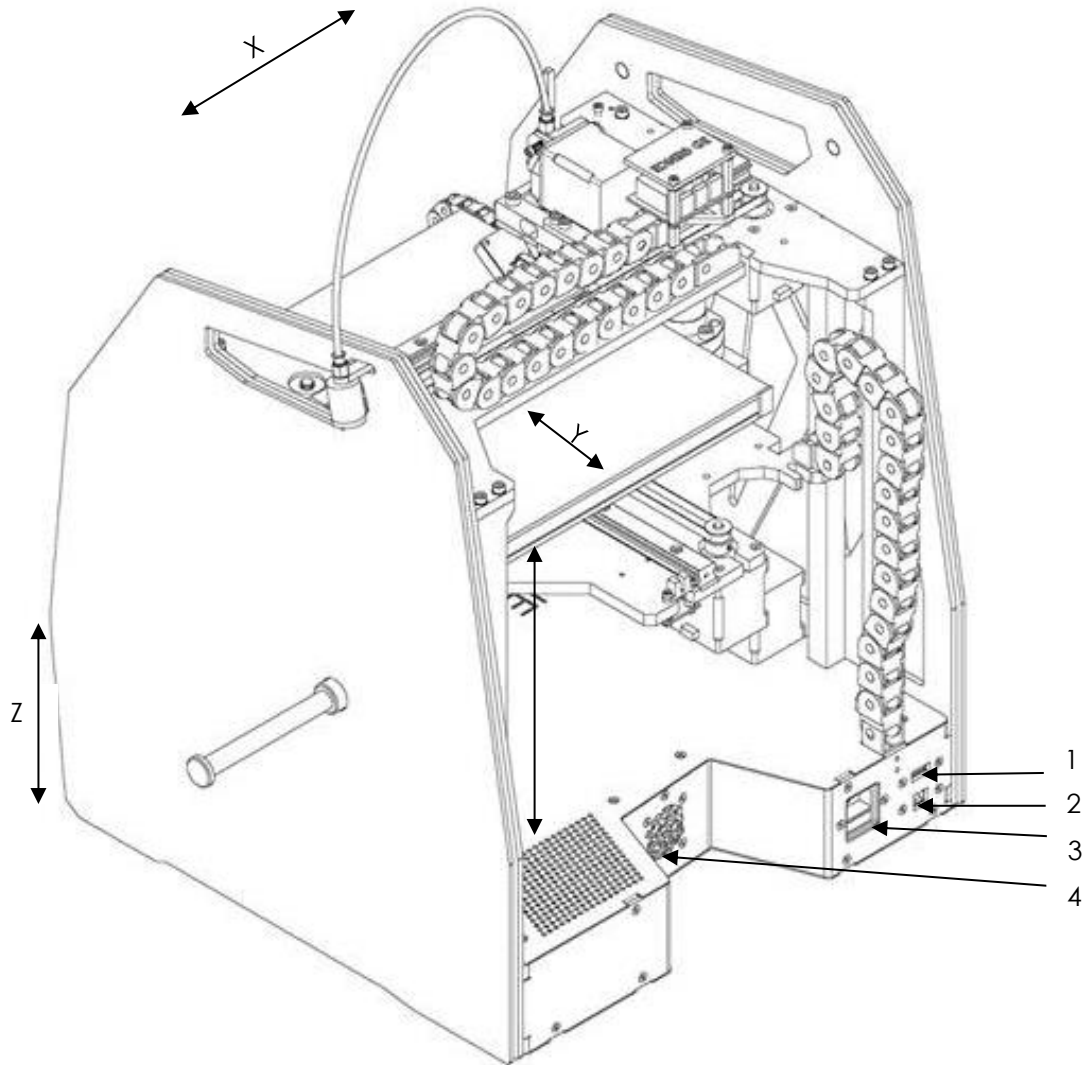

1. A USB slot (allowing the plugging in of machine to an external device, e.g. camera, memory stick etc. that are shown on the computer)
2. USB-B slot for receiving the cable which connects the printer to a computer
3. Mains Power
4. Fan. Warning! Do not obstruct!

#### 2.2.4. EXTRUDER

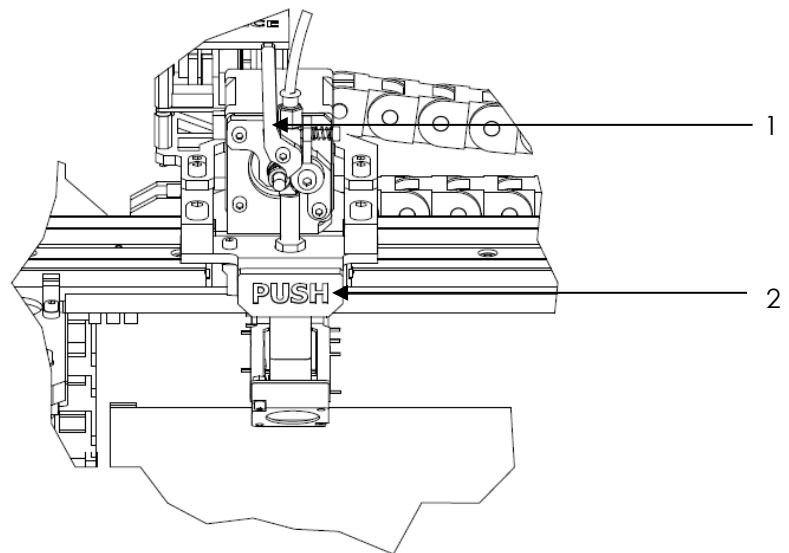


1. Lever
2. Button releasing the hotend

## 2.3. CONTROLS

### 2.3.1. MAIN PANEL



**WARNING!** Left control panel operates outside of traffic restrictions (by micro switches), damage caused by improper use is not covered by the warranty (buttons from 1 to 4).

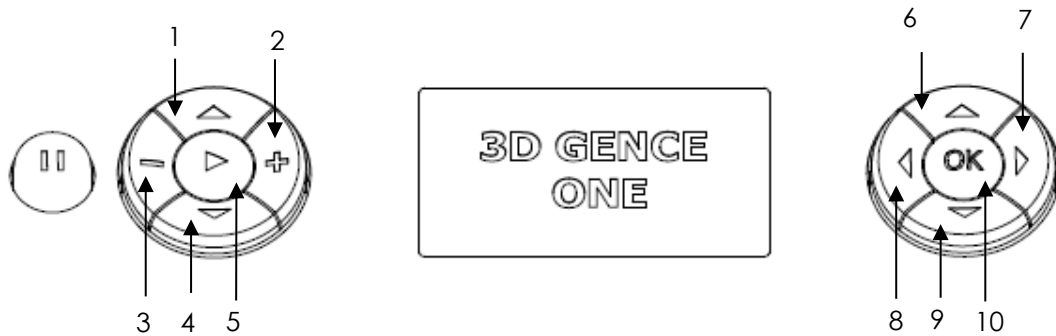


1. Upwards table adjustment button (works after referencing the Z axis).
2. Add filament button (from 200 ° C \*).
3. Filament recognition button (from 200 ° C \*).
4. Downwards table adjustment button (works on referencing the Z axis).
5. Start button (after pressing the pause button).
6. Upwards Menu navigation button (and values changer).
7. Menu navigation button values change.
8. Menu Navigation button and menu return.
9. Key down navigation menu.
10. Navigation key OK (select).

\* Applies to material PLA, in the case of ABS, set the temperature 240 ° C at the head to use the quick access keys.


**WARNING!** Buttons in point 2 and 3 are to be used after the head has warmed up to the temperature recommended by the manufacturer of the material.

### 2.3. 2. PAUSE BUTTON

- A single press will stop the printing process.
- Double-clicking will stop the printing process and the departure of the nozzle.

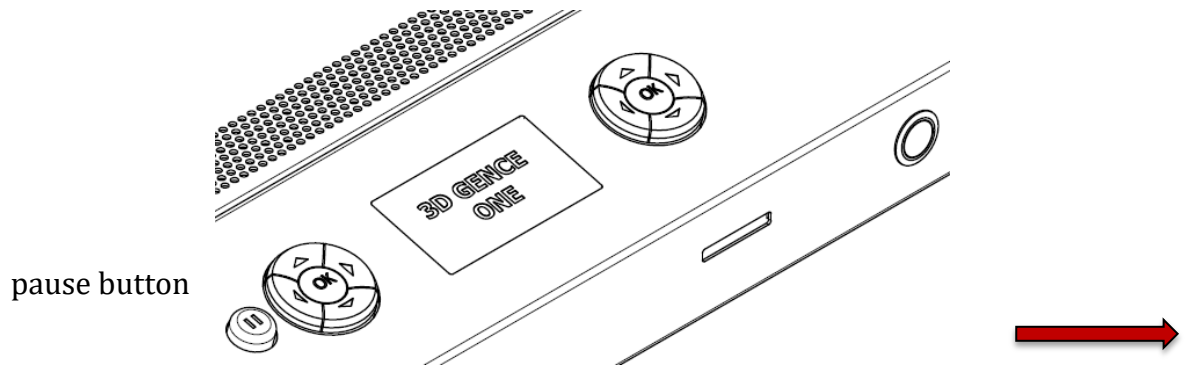


### 2.3.3. DISPLAY DESCRIPTION

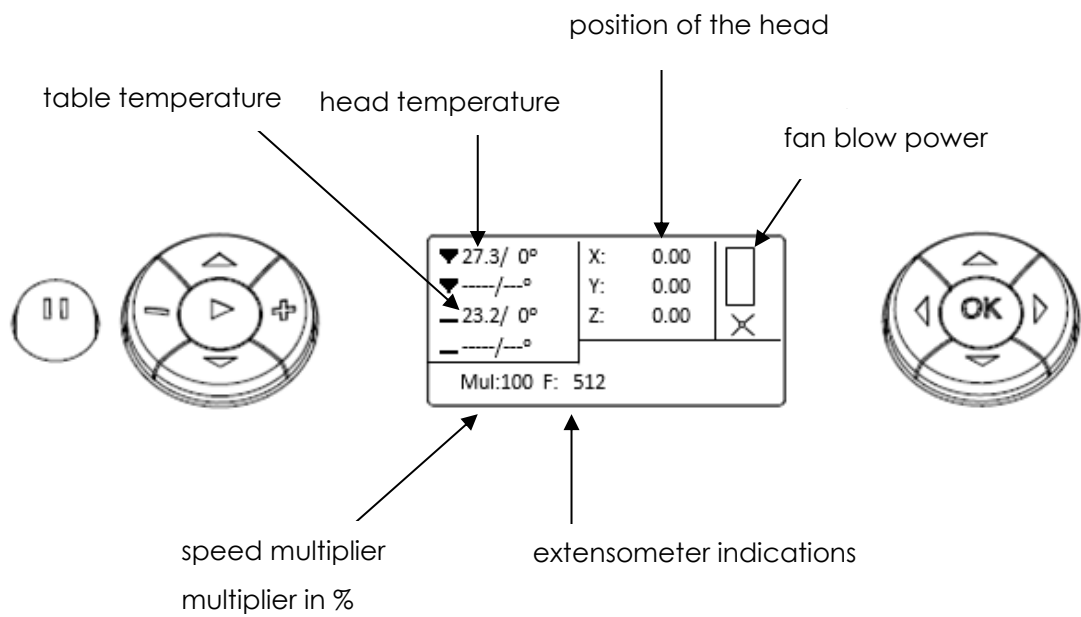





## 1. Basic settings for printing parameters

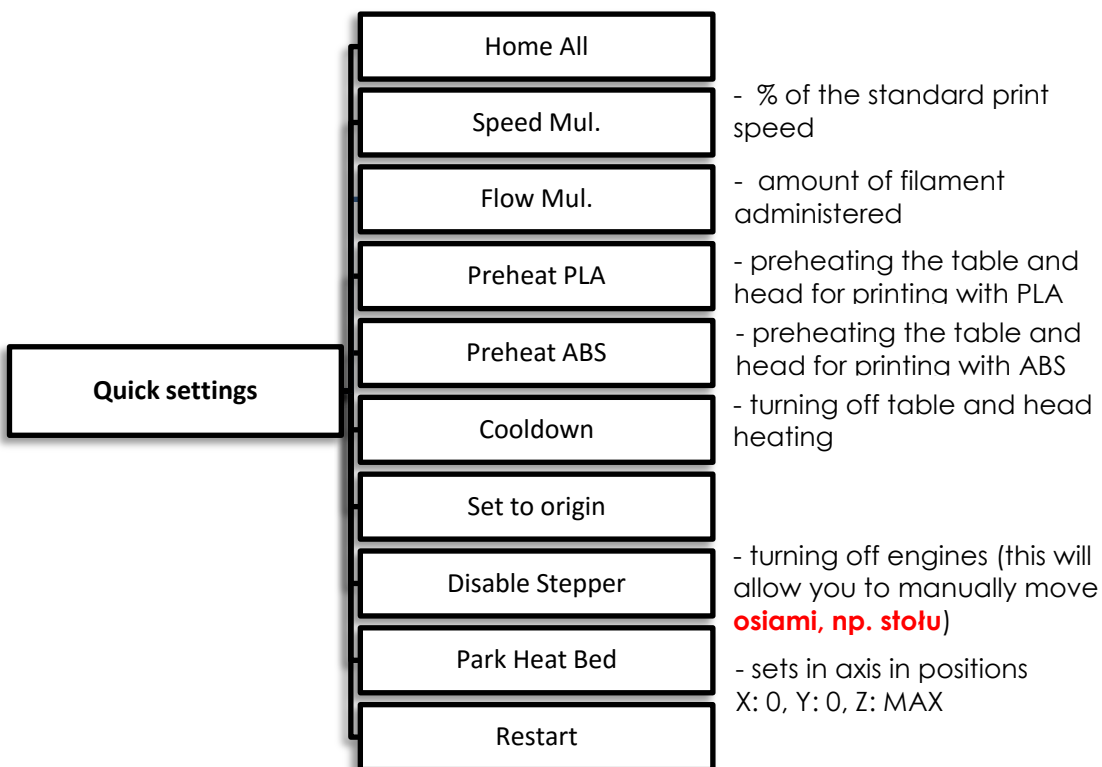

## 2. The settings for positioning axes and **extruder**.

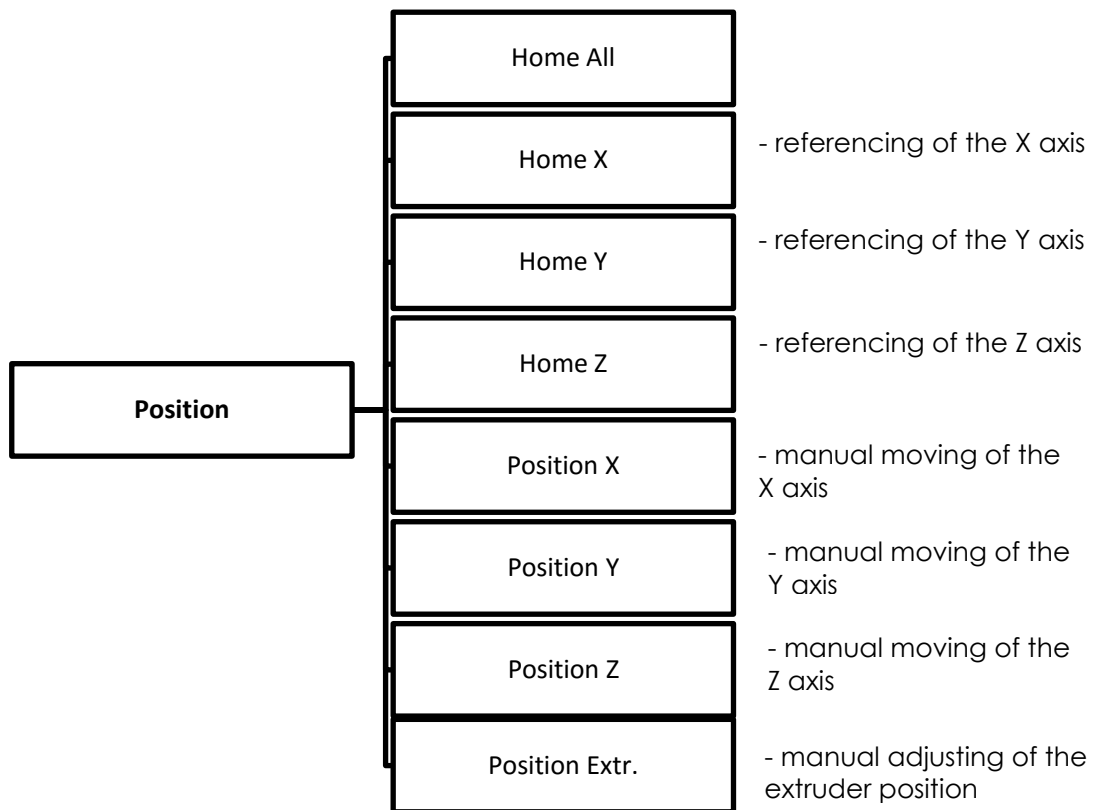


## 3. Detailed parameters settings

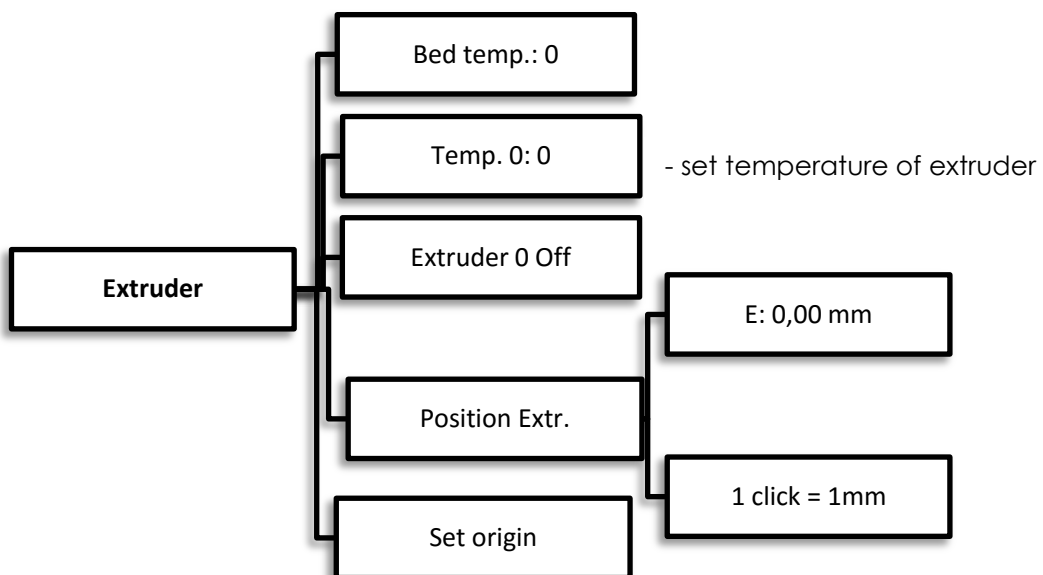


## 4. Work speed settings




## 5. SD card functions

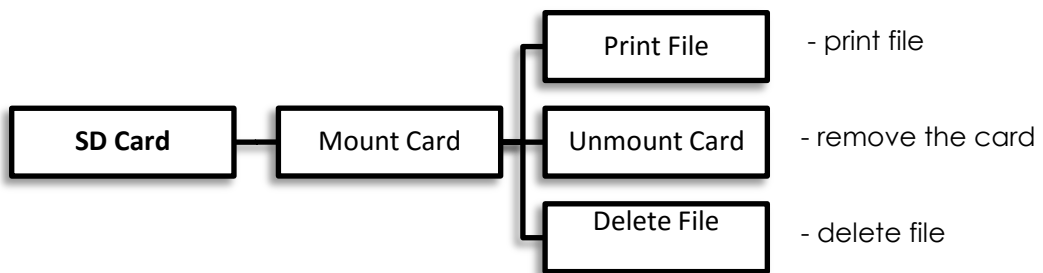

## 6. Configuration settings

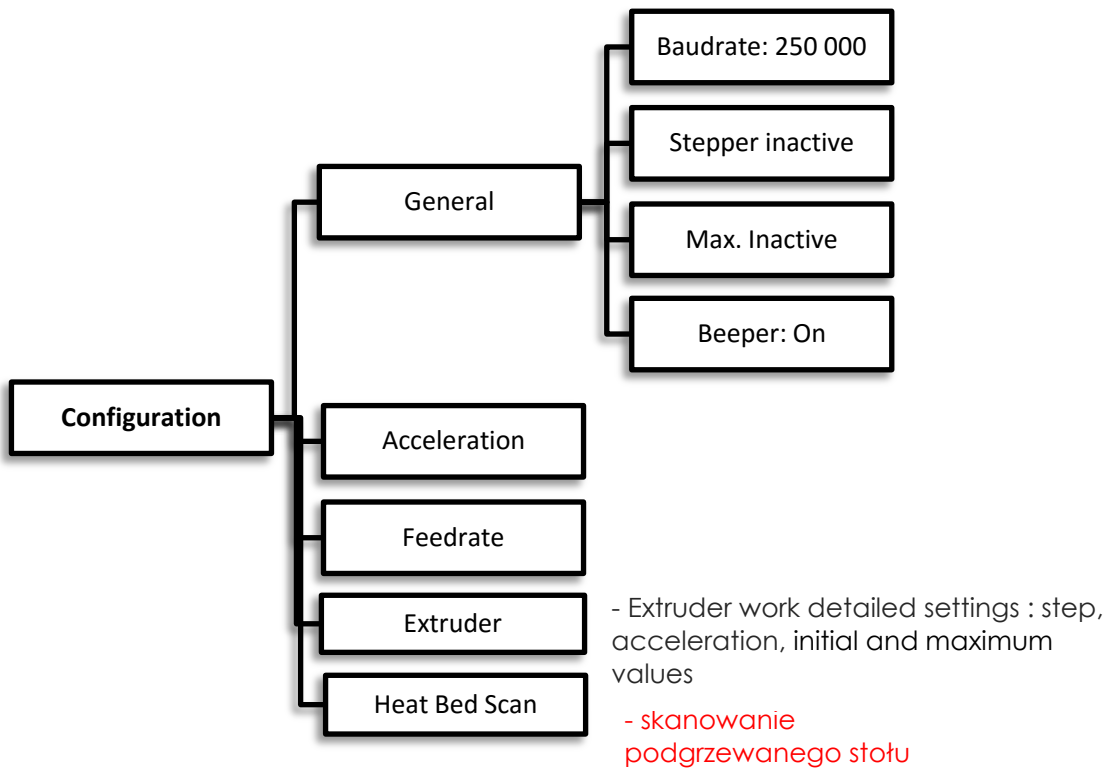

## 7. Informacje na temat oprogramowania.

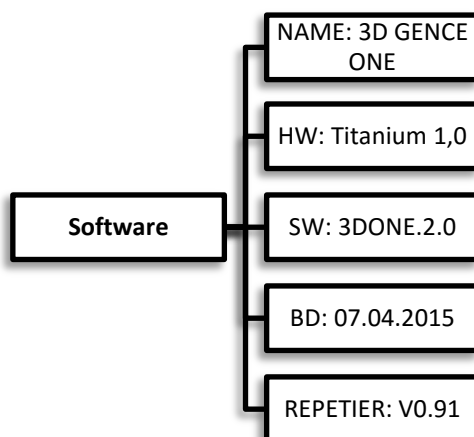

### 3. PREPARATION

#### 3.1. SOFTWARE AND DRIVERS INSTALLATION


Before connecting the device to your computer, you must install Repetier-Host software (located on the memory stick), included with the software and the current version of drivers.

In case of problems more information on installing the software can be found on the manufacturer's website:


<http://www.repetier.com/documentation/repetier-host/rh-installation-and-configuration/>

#### 3.2. CONNECTING AND ENABLING OF PRINTER

1. Place the device on a flat and stable surface and then connect it to the network.

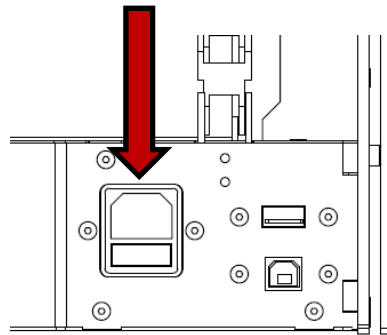

2. To turn the device on, press the ON / OFF button on the right side of the panel.

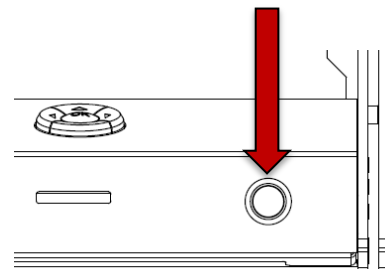


#### 3.3. CALIBRATION TABLE

The supplied printer was calibrated prior to shipment, but during transport it could have been maladjusted, and therefore it is advisable to carry out the following actions in order to avoid damage or incorrect output.

Performing the calibration process is not required before every startup of the printer – doing it once in a while will be enough.

1. Remove all dirt and leftover material from the nozzle head and clean the table with a spatula.
2. Select the HOME ALL option on the display using the right panel, and press **OK**.


**WARNING!** Observe the movement of all axes, when the axis Z reaches the limit switches, observe the distance from the nozzle end to the table. It should be about 0.5 - 0.8 mm (not more than 1 mm).

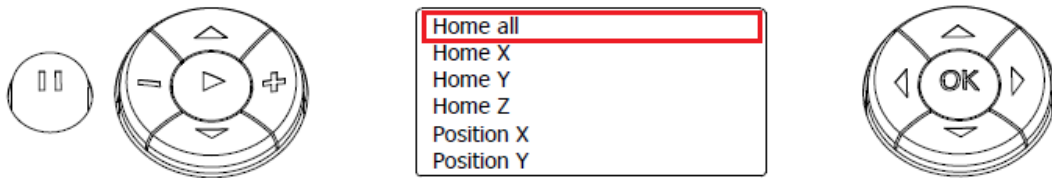


3. Select the option **EXTRUDER** on display using the right panel, then **BED TEMP** and set the temperature of the table to 100 degrees (for better results, wait 10-15 min. to stabilize the temperature of the table).



**Warning!** If the distance between the nozzle end and table is greater than 1 mm, adjust it manually, so that this distance becomes 0.5-0.8mm. For this purpose, release the screw (1) and adjust the distance using the knurled screw (2). Screwing the knurled screw clockwise will increase the distance between the table and the head. Moving the screw counter-clockwise will decrease the distance. Once you have finished adjusting with a knurled screw, check the position of the nozzle with the command **HOME Z**.

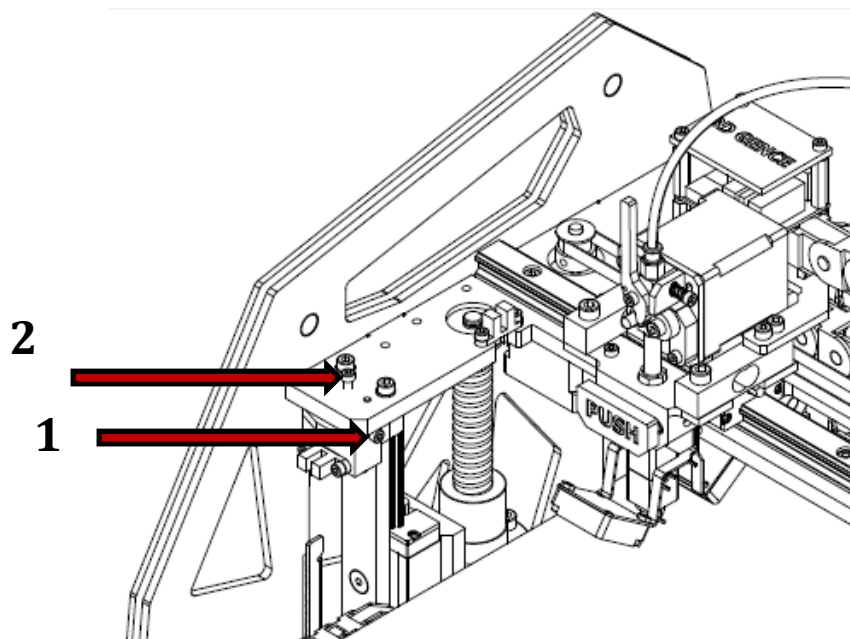

4. On the panel, select **CONFIGURATION**, and then **HEATBED SCAN**.

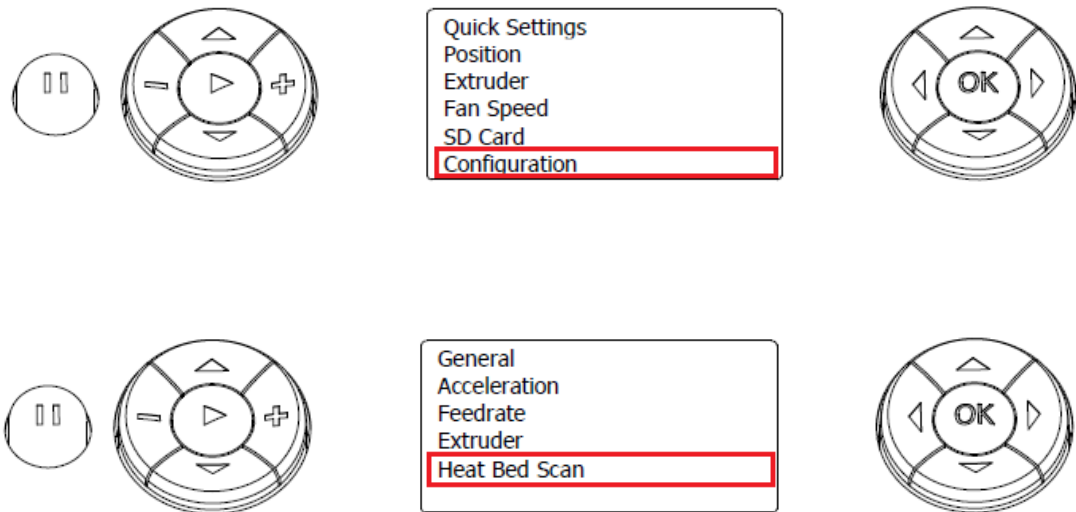

5. Wait until the scan is complete. After scanning the display will show : **HEAT BED SCAN COMPLETED.**



**WARNING!** During calibration, do not touch the head or the extruder. The calibration process can take up to 25 minutes.


**WARNING!** In the event of a loud "clicking" sound from the engine, or if any axis did not stop, immediately turn off the device and contact the technical department.

**WARNING!** In the case of a triple failure during calibration, please contact the technical department: [support@3dgence.com](mailto:support@3dgence.com)


### 3.4. Filament Mounting




1. Unpack the spool with the filament attached to the device.
2. Install the spool holder on the right side of the device (NOTE: The nut on the handle has a left hand thread!).

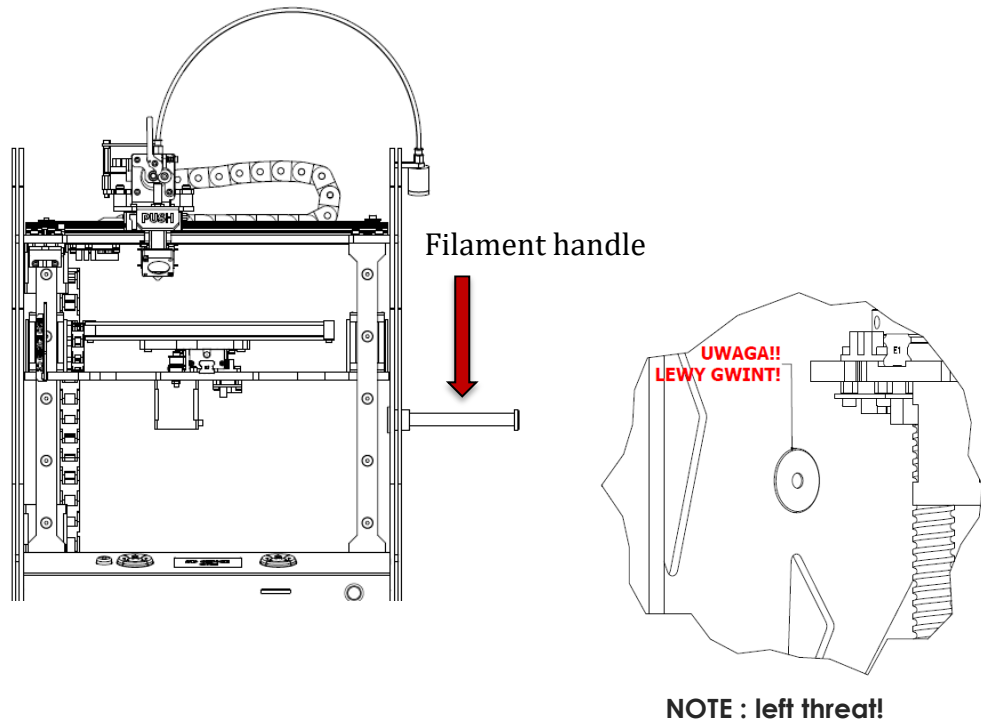


3. Place the spool on the handle.
4. Release the sealed end of the material, then cut the ending with strong scissors or pliers.
5. To place the filament in the cleaning tool– get familiar with its construction, and then do the following:

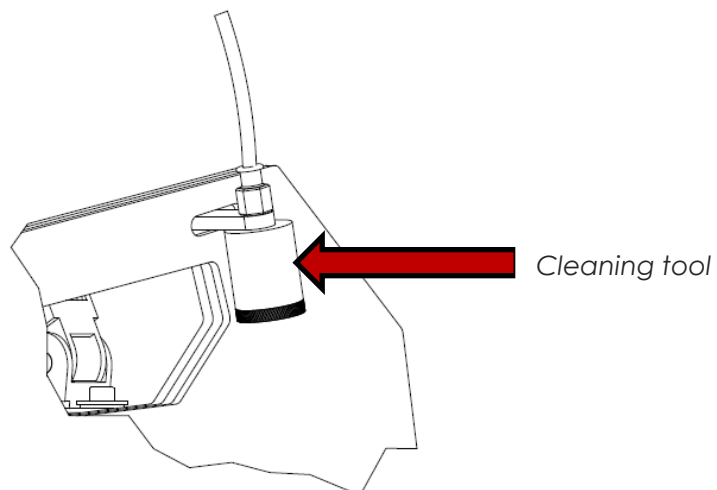




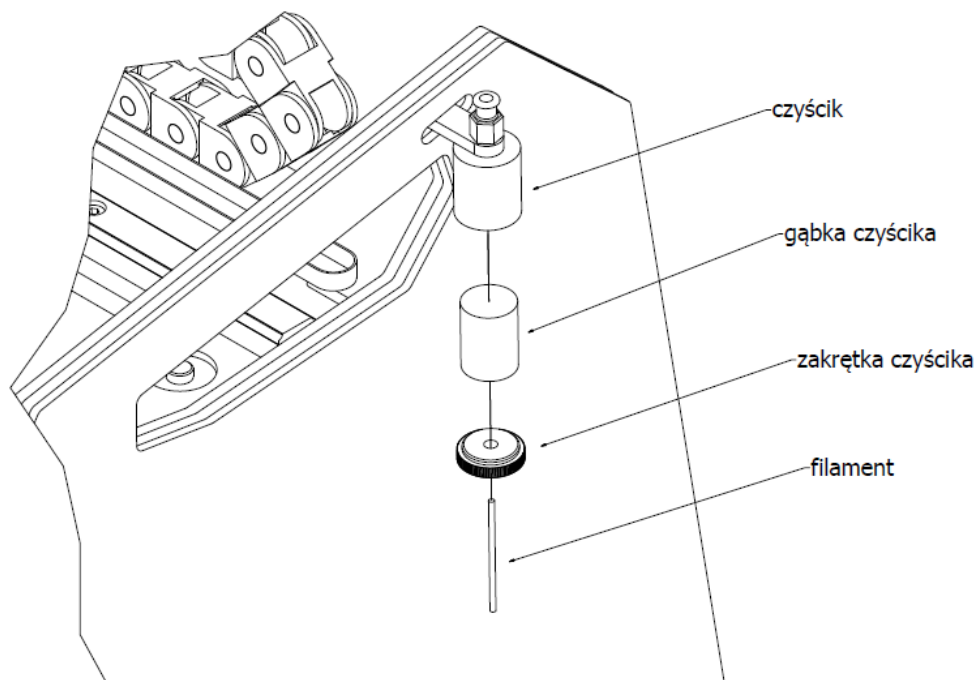

- a) pass the filament through the hole of the cleaner's nut according to the picture above,
  - b) pass the filament through the sponge located in the cleaning tool (pierce the sponge)
  - c) insert the filament with the sponge to the cleaning tool,
  - d) tighten all with the cleaning tool cap.
6. In order to pass a filament through the hot-end you should heat it to the following temperatures - in the case of PLA 220c, in the case of ABS to 250 ° C.
7. Push the filament through a tube (Bowden), and then straighten the end of it and put it in the extruder connector (if the filament is bent, cut off the tip to even out the wire).
8. Pull the extruder lever and put the filament inside until there is resistance and until you see material leaking from the nozzle, or, when using the Repetier-Host software (point 4 of this manual) extrude material by pressing the extrusion icon 1. ???

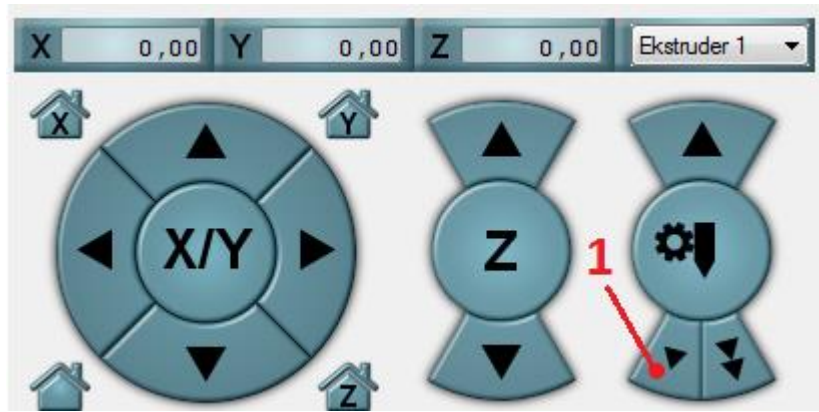


To push material through the head, you should heat it up to the appropriate temperature (see the manufacturer's specification material).

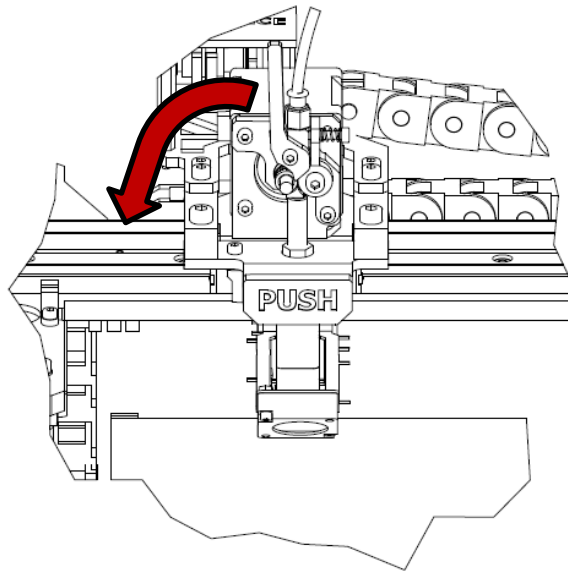

### 3.5. Filament removal

1. To remove the filament from the extruder (to replace the filament or to clean the head), first preheat the hot-end to a temperature of 200 ° C for PLA and 240°C for ABS, then pull out approx. 2 cm of the filament by pressing number 3 (buttons on the left side of the panel), then pulling the lever, firmly grasp the filament and pull it out with one vigorous stroke.

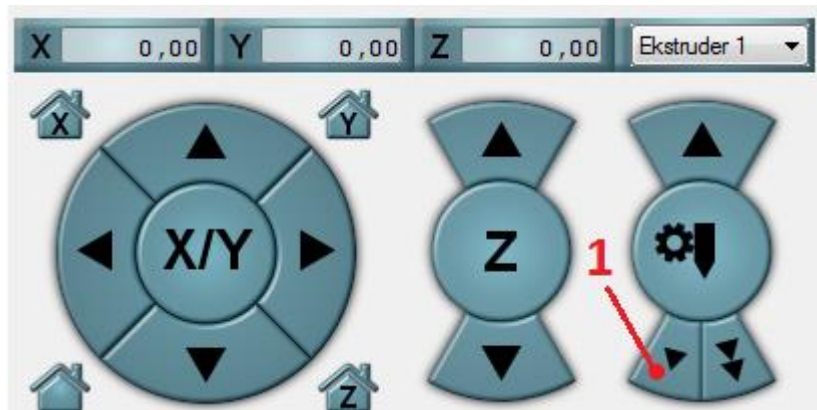


### 4. FIRST PRINT

#### 4.1. CONNECTING THE PRINTER TO YOUR COMPUTER

### 4. FIRST PRINTING


#### 4.1. CONNECTING THE PRINTER TO YOUR COMPUTER

1. **PLEASE NOTE!** Make sure you install the printers software attached to the pen drive
2. Connect the USB cable to the slot in the printer
3. Connect the other end of the USB cable to the computer.
4. Wait until the system finds the connected device.

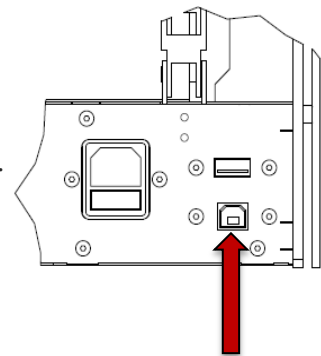


## 4.2. REPETIER-HOST CONFIGURATION

To configure the program, run it and then go to *Printer Settings* tab.

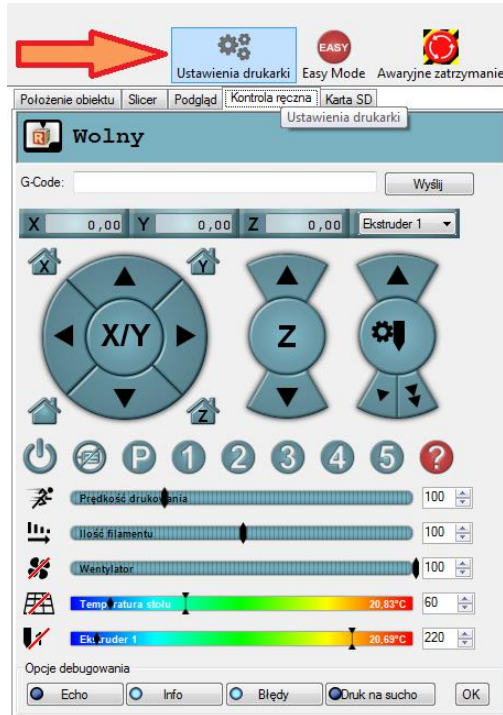


In *Connection* tab we focus on the size and transmission speed, and we set them as shown in the graphic below. Other parameters should be entered as below.

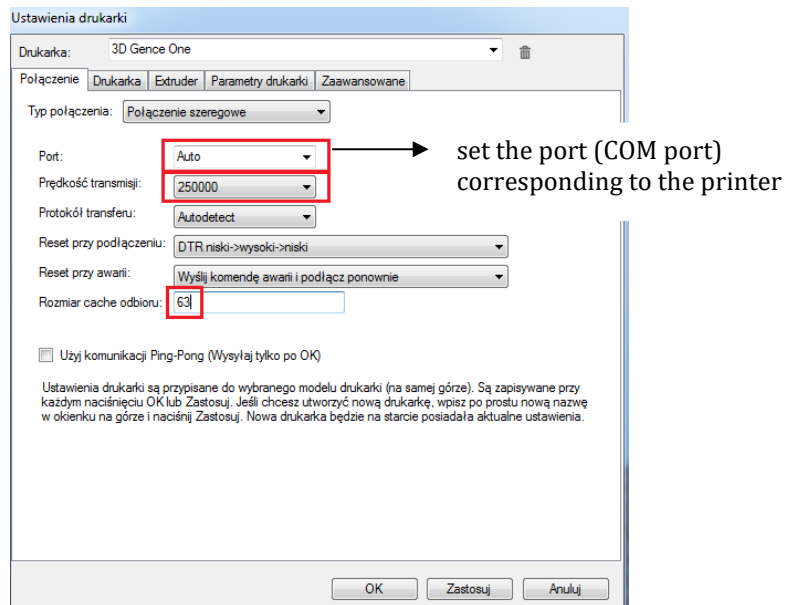


In the "COM port", select the COM port that is currently assigned to your printer (you can check the COM port by going to *Windows Control Panel => System and Security => System => Device Manager*)

If in doubt, please contact our technical department: [support@3dgence.com](mailto:support@3dgence.com)

Then go to the *Printer* tab, and set the settings as shown below. In the following tabs proceed similarly.

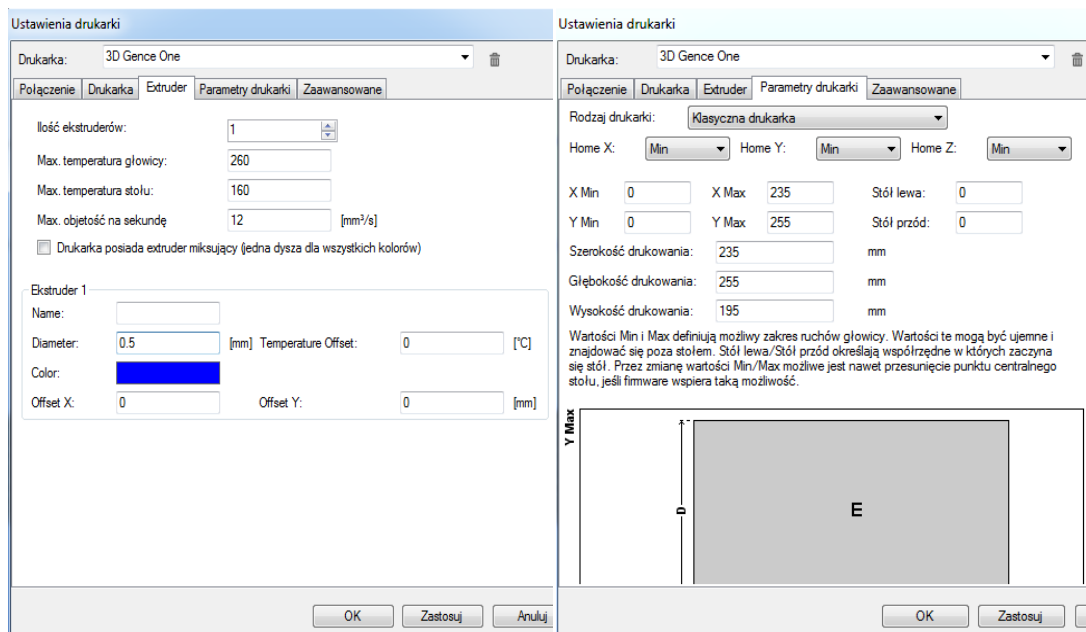

### 4.3. FIRST PRINTING

 
1. Start the 3DGence One-Repetier host software on the pen drive attached to the printer.
2. Load the object that you want to print. Select from the top menu  **Otwórz** and then select the file calibration\_30x30.stl.

Name	Date modified	Type	Size
AKTUALIZACJA SLIC3R	2015-07-27 15:10	File folder	
Firmware Updater	2015-07-27 15:10	File folder	
REPETIER	2015-07-27 15:10	File folder	
<b>STL</b>	2015-07-27 15:10	File folder	
System Volume Information	2015-07-29 13:30	File folder	

Name	Date modified	Type	Size
Ghost_emoji.stl	2014-11-02 22:39	STL File	2
<b>kalibracja_30x30.stl</b>	2014-07-05 04:38	STL File	
nakretka.stl	2015-02-11 10:47	STL File	
sruba.stl	2015-02-11 10:47	STL File	
szpachelka.0002	2015-02-11 11:49	STL File	


Type: STL File  
Size: 684 bytes  
Date modified: 2014-07-05 04:38

3. Check whether the model is in the middle of the table - *Location-center the object.*

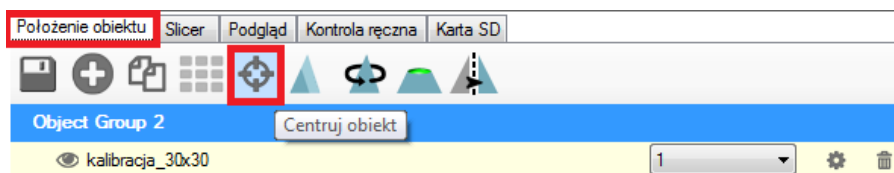


4. On the *Slicer* tab, set appropriate parameters:



- set the type of slicer *Slicer: Slic3r*,
- set the nozzle size *Print Settings: 3DGence One nozzle 0.5 mm* (if you are using a nozzle with a different diameter, select the appropriate size)
- select the type of material which you will be printing from *Printer Settings: 3DGence One PLA* (when printing from a different material, select it from the drop-down list)
- set the type of material on *Extruder 1: 3DGence One PLA 1.75 mm*.

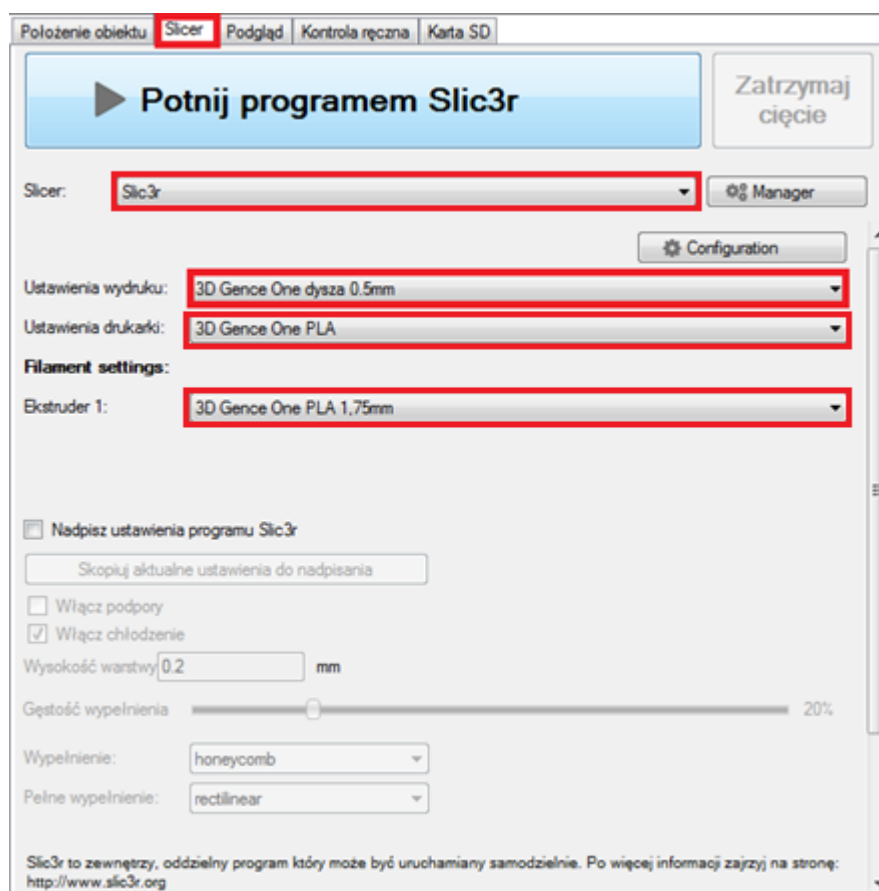

5. In 3DGence One-Repetier Host main window press *Cut Slic3r program*. Wait until the program has finished make the model!

 6. Insert the SD memory card in the computer reader.

7. Save the G-Code by clicking Save  (the icon in the upper left corner) - Save.

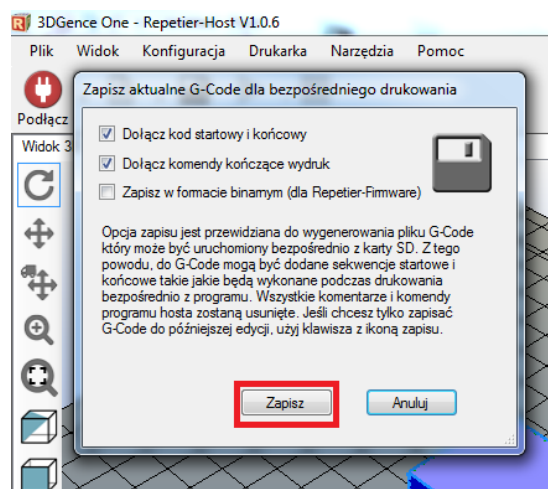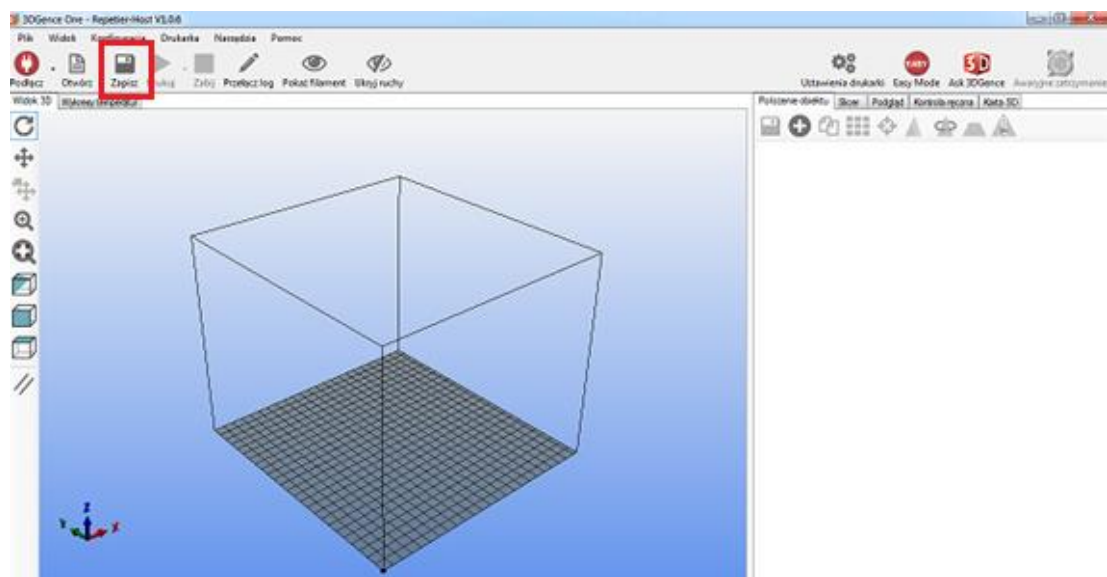





Select *memory card* as location. Wait until the window that has popped up disappears.

8. Turn on the printer by pressing the round button (ON / OFF) on the front panel.


9. Remove the memory card from your computer and insert in the printer. The reader is at the bottom of the front panel of the printer.

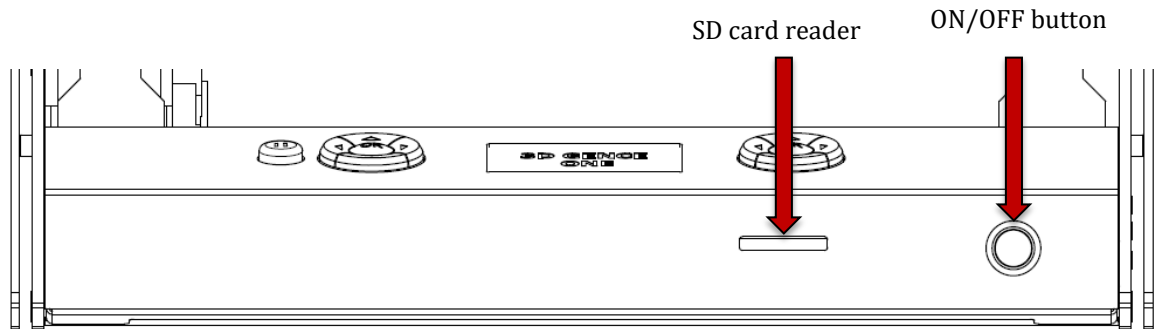


10. Select the **SD CARD** from the panel of the printer.

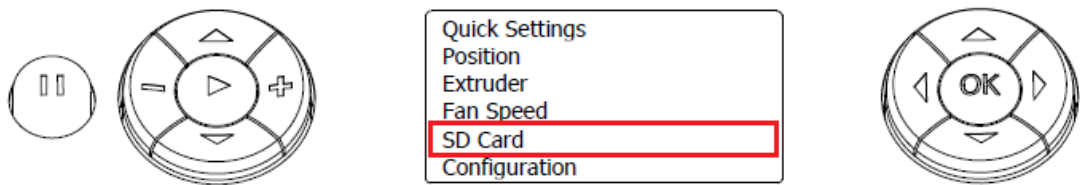

11. Then select **MOUNT CARD**.

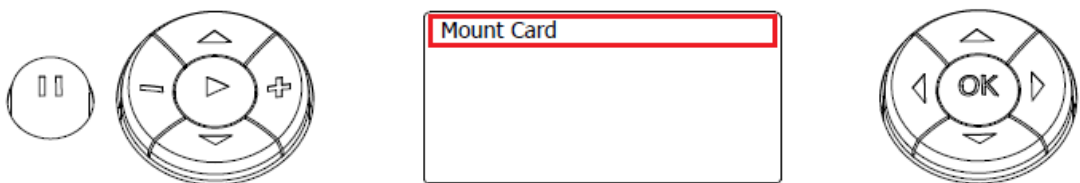

12. After selecting the **PRINT FILE** option, select the stored program from the list.

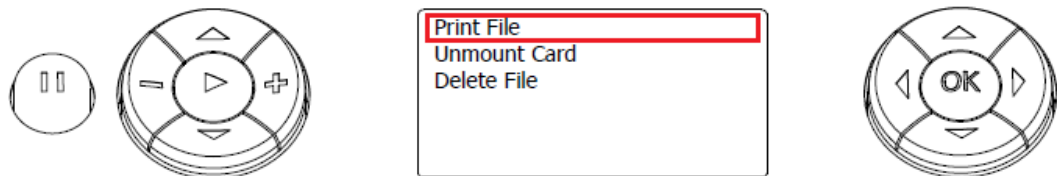

After starting the printer, it will start heating up the head and the table. When the target temperature is reached, a point scanning of the distance between the nozzle and the table will begin.

**WARNING!** Before turning on the printer, remove the dirt on the table – it can cause measurement distortion.

**WARNING!** During the point scanning do not touch the printer and make sure that the printer base is stable. The scanning system is very sensitive and can detect the pressure of anything over 1g. Any interference can disrupt the scanning procedure or falsify the measurement.


In case of failure, the measurement display will show AUTO COMP.ABORTED. In the case of a triple failure, please contact the technical department: [support@3dgence.com](mailto:support@3dgence.com)

When the measured distance is greater than 1mm, you can set it using the control buttons on the left side of the LCD panel

(arrows  one click will create a movement of about 0,025).

13. Once the printing is completed, wait until a blue / green light appears above the table and then remove the print from the heated table (detailed information on how to do this included in the next chapter *Operations after printing*).

14. To remove the SD card from the printer you must first select the option **UNMOUNT CARD**.

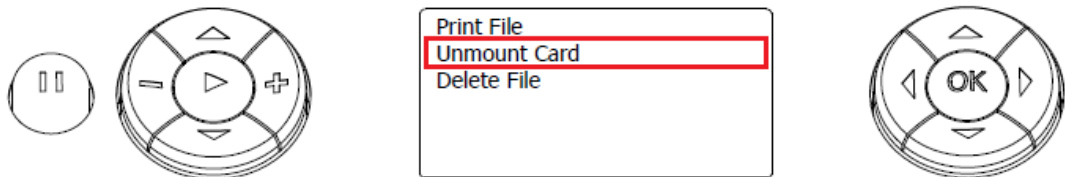


## 5. OPERATIONS AFTER PRINTING

### 5.1. REMOVAL OF PRINTED MODELS



Immediately after completion of the printing process, the work area light will become red - this means that you should NOT remove the print, but that you should wait for the temperature to drop. When the blue/green light appears in the work area, it is a sign that you can remove the printed model.

The printed model must be picked up from the table using the spatula included.

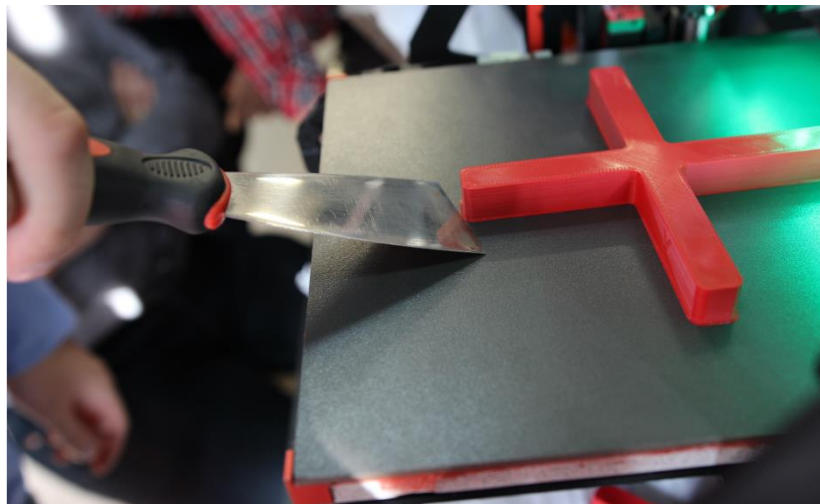

**WARNING!** Do not touch the heated table! This may cause contamination, and could lead to prints sticking together. The table can be touched or cleaned with gloves.

## 5.2. CLEANING

### 5.2.1. PRINT HEAD CLEANING



After each printing is complete, it is advisable to clean the remnants of melted / burnt material from the outer part of the nozzle and the print head.

To do this:

- **Put on the gloves!**
- From the printer menu or from the Host Repetier program, heat up the head to the appropriate temperature (depending on the used batch material, not less than 200 ° C).
- Pull the work table down to below half the height of the Z axis to facilitate access to the head and prevent possible burns from a hot table.
- With the use of non-flammable material or a metal spatula, gently remove the remains of melted / burnt material.
- After cleaning the head, turn off the heating.

### 5.2.2. WORK TABLE CLEANING



Before printing, it is recommended to clean and degrease the work table of the printer. To do this you can use a clean spatula and 10% spirit vinegar. You can also use ACETONE, BENZINE or NITRO.



**WARNING!!!** Before using the above-mentioned measures you should carefully read the accompanying instructions for use and safety instructions !!


Before cleaning the work table you should:

- **Turn off all heating elements of the machine and wait until it is completely cool!**

- Turn off the device using the power button, and then unplug the printer from the power source.
- Put the gloves on.
- Clean the ceramic table of remnants of material with a spatula, then degrease using a cloth soaked in solvent (**NOTE:** Be sure to follow the principles contained in the safety instructions attached to the solvent!). Pay special attention to degreasing in order to not expose elements made of plastic and paint into contact with the solvent, as it can damage them!
- Allow the solvent to evaporate.
- If necessary, connect the device to a power source and turn on the printer using the power button.

### 5.3. SHUTDOWN

To turn off the printer, press the ON / OFF button on the right side of the panel.

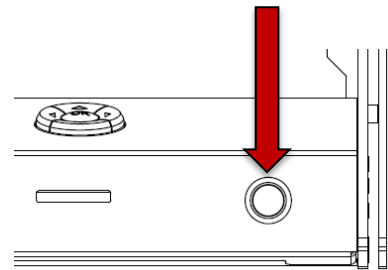

**WARNING!** Do not turn off the printer by unplugging the power cord - it may damage it.

### 6. STORAGE

1. The filament must be stored in a clean, dry place of moderate temperature. If the material gets soaked in liquid, it loses its properties, and in such a case you print at your own risk.
2. Do not leave the head heated for a long time.
3. The printer should be stored in accordance with the principles contained in section **1.4.3. Place installation.**

## 7. SOFTWARE


### 7.1. GENERAL INFORMATION

Repetier - Host is a simple to use software that is designed to prepare the model to be printed. It allows you to simulate the printing process. It has a built-in program for creating models : Slic3r, CuraEngine. There is also a G-Code editor allowing you to analyze and modify the code.








It is compatible with Windows XP (and higher), Linux and Mac OS X.

### 7.2. OBJECT LOCATION

#### 7.2.1. 3D VIEW

To import a new model, select the *Location* tab and then click the *Add object* button. 

To control the position of the model use the following buttons (activated by pressing the left mouse button) on the left side of the window:










-  Rotation (Ctrl + left mouse button)
-  move the viewpoint (Shift + left mouse button)
-  move the object (right click)
-  magnification (mouse wheel)
-  adjust the object in the workspace,
-  view control icons: isometric view, front view, top view (more option in the View tab)
-  Use a parallel projection.

### 7.2.2. SHORTCUTS

- Fit to Printer - F4 - brings the entire printer area of the printer to a maximum size.
- Align objects - F5 - brings all objects to a maximum size.
- Show Edges - Ctrl + E - turns on displaying of edges.
- Show a plane - Ctrl + F - turns on displaying of surfaces.
- Show axis compass - Alt + C - enables the display of the compass coordinates in the lower left corner.
- Switch showing of ID printer - Ctrl + I - turns on Printer ID display in the tab on the right.

### 7.2.3. OBJECT LOCATION



-  - Export all the displayed files
-  - Adding a new object (the extension \* stl, \* obj, \* AMF \* 3ds)
-  - Copy the selected object
-  - Auto adjust
-  - Set the subject in the center of the bed
-  - Scaling the selected object
-  - Rotating an object around the selected axis
-  - Cutting objects (this option has no effect on print)
-  - Creates a mirror image of the object

### 7.3. MANUAL CONTROL

After connecting the printer and proceeding to the *Manual Control* tab, the below window which describes the most important print parameters, will be displayed.

The screenshot shows the 'Manual Control' tab of a printer's software interface, titled 'Heating Extruder'. The interface includes a 'G-Code' input field with a 'Send' button, coordinate readouts for X (0,00), Y (0,00), and Z (0,00), and a dropdown menu for 'Extruder 1'. Below these are directional controls for X/Y and Z axes, and a gear icon for extruder settings. A row of buttons includes a power icon, a printer icon, 'P', and numbered buttons 1 through 5, plus a question mark. The lower section features sliders for 'Feedrate', 'Flowrate', and 'Fan', all set to 100. Temperature controls include 'Bed Temperature' at 55°C and two extruders: 'Extruder 1' at 148.00°C and 'Extruder 2' at 144.00°C. At the bottom, 'Debug Options' include 'Echo', 'Info', 'Errors', and 'Dry Run' buttons.

Information on printer status

Field to enter the G-Code /not available with EasyMode option


Extruder positioning block


control block of different speeds and temperatures

debugging



## Extruder control

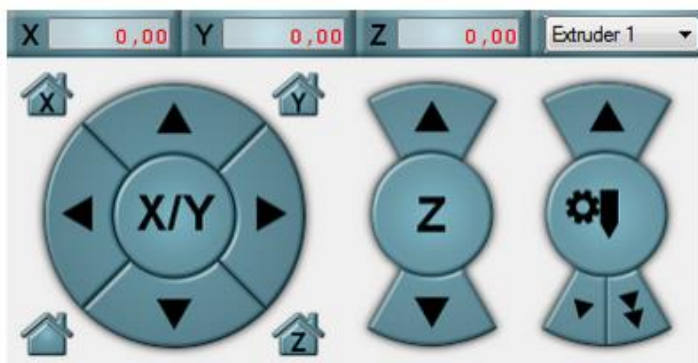

On top of this block the current position of the extruder is displayed. After connecting the printer, the coordinates are displayed in red color, which means that the host does not know where the extruder is. Therefore, you should press the Home button  to move the extruder to its specific position (coordinates change color to black - position is known).

With the use of the arrow keys you can move the extruder in any direction (within the cube of the printer). After moving the cursor on to the arrow, the distance (in millimeters) that the extruder will move after pressing the button, will be displayed.

**Warning!** When using the arrow keys, giving too large a value for extruder movement, will not result in a shift beyond the boundaries of the cube printer. If you enter a too large value as G code, the information will be immediately sent to the printer and there will be the possibility of damage to parts.

Buttons



- power supply; is not supported from all panels and requires an ATX power supply



- Engine stop

**P** - Parking: moves extruder to the parking position specified in the printer settings

**?** - Activation of the *Help* mode

**1** - Using the buttons 1-5 you can send predefined scripts 1 to 5 to the printer

### print speed



### The amount of administered filament




It allows you to adjust the flow rate (the amount of administered filament). The option is available when you turn off the *Easy Mode* option.

### Fan



It allows you to control fan speed, and can be switched on / off the same way as in the case of temperature.

### Temperature

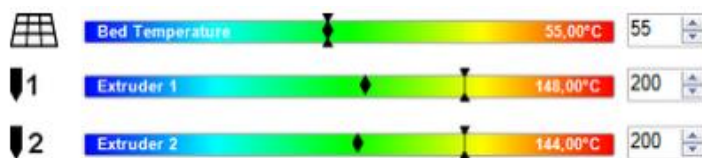

It allows adjustment of table and extruder temperature. Temperature change is also possible by clicking on the temperature curve.

## 8. SERVICING

### 8.1. FILAMENT EXCHANGE



Each filament replacement can be made only after having warmed up the print head to the right temperature.



**WARNING!** You must not remove the batch print from the cold head, as this may cause damage!

To replace the filament you must:

- Preheat the print head to the appropriate temperature (refer to the material manufacturer's recommendations).
- Pull the Teflon tube (called "Bowden") from the extruder, so as to expose the filament.
- extrude approx. 2 cm.
- Grasp the filament at the level of the connector and with a quick motion pull it from the head.



**WARNING!** slow stretching of the wire may cause blocking in the head. In this case, carefully push it back into the head, extrude approx. 20 mm through the nozzle, then quickly pull.

- Remove the spool from the holder.


**WARNING!** After removing, the spool should protect it from moisture absorption (e.g. Add to a container with a moisture absorber)

- Insert a new roll of filament and move the end of the wire through the cleaner (you must first clean the sponge in the cleaner in order to prevent dirt / dust from entering the head)
- Pull the wire through until it reaches the knurl of the extruder, use the extruder lever to release the pressure and insert the wire into the head. Release the pressure, and from the printer or Repetier Host menu, extrude the filament until it passes through the entire head.

## 8.2. Print head replacement




1. Lower the table using the option PARK HEAT BED ()
2. Remove the material (filament) from the head (see section 3.5).
3. **Wait until the head and table have cooled down!**
4. Unplug the device and remove the USB cable.
5. Press and hold the **PUSH** button, and with the other hand pull the head out of the fixing.

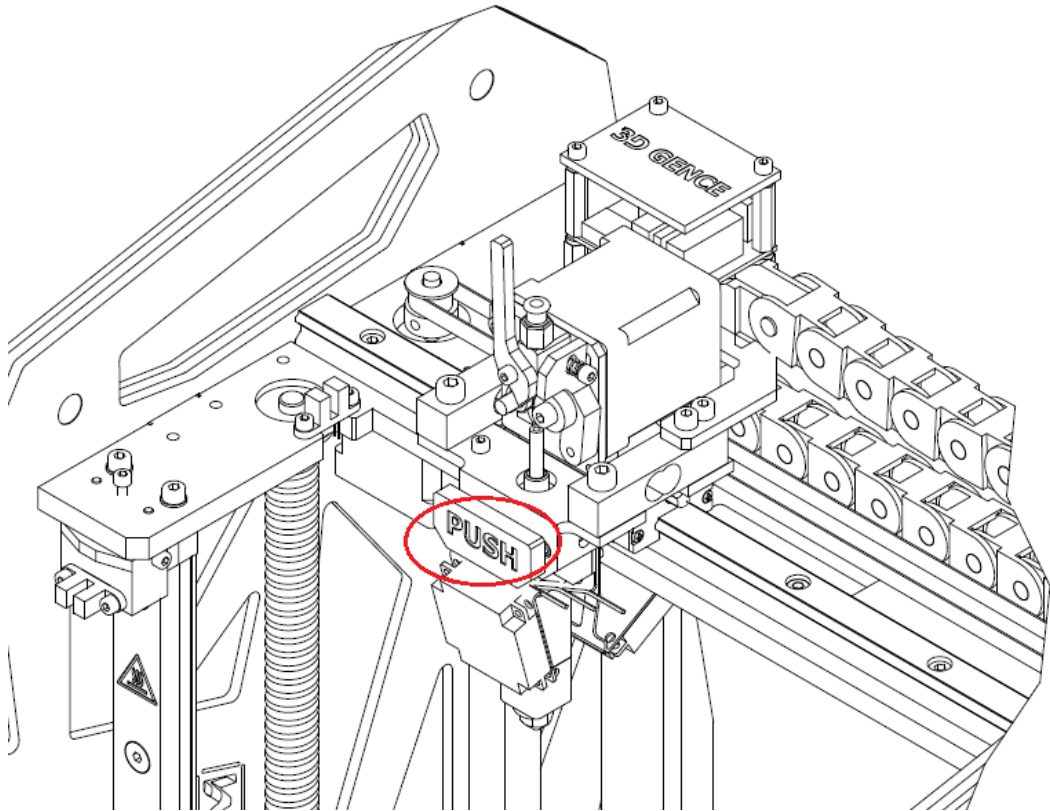


### **INFORMATION**

In case of problems with the print head, please contact our technical department ([support@3dgence.com](mailto:support@3dgence.com)).

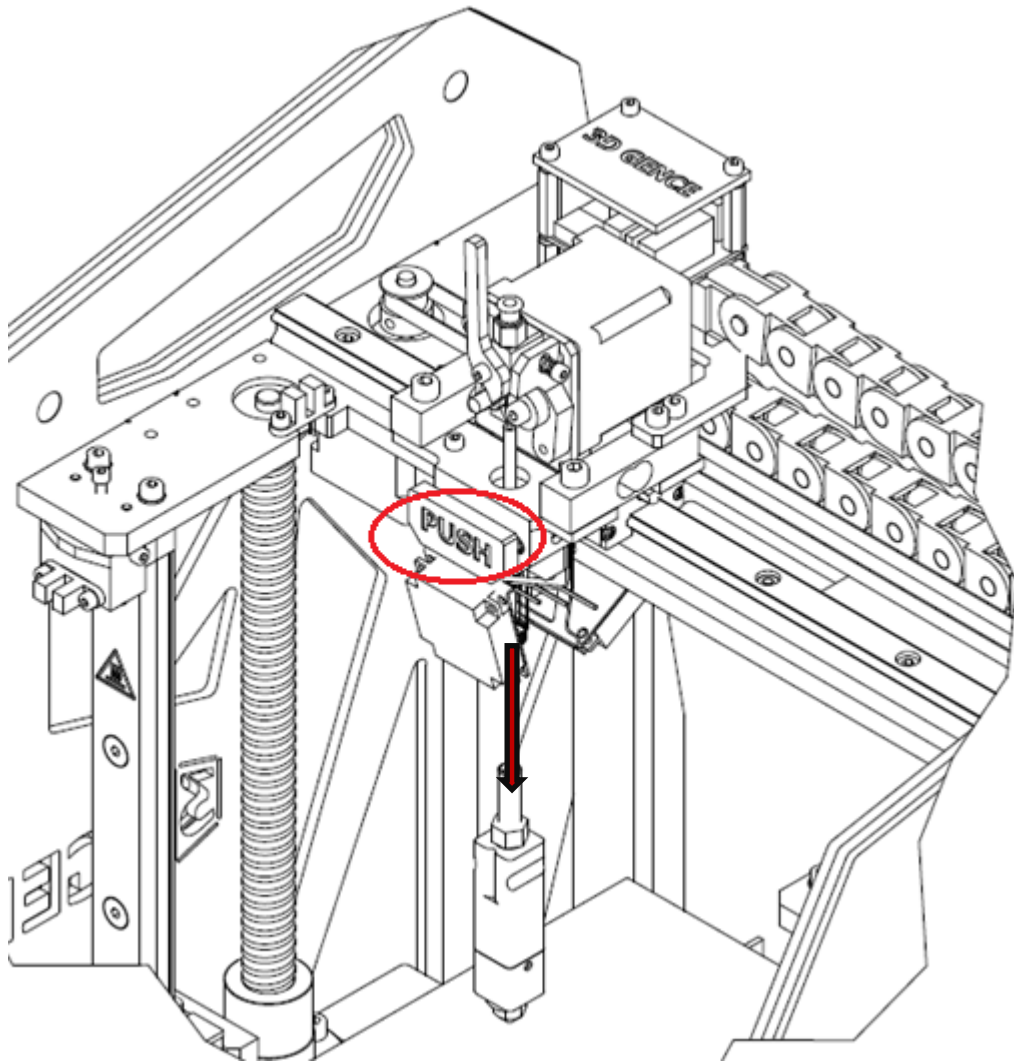


6. Slide the head into its place until you feel resistance (the groove marked in red is to be aimed in your direction). **WARNING!** PUSH button must be pressed until you feel resistance, which is a sign that the head is installed.

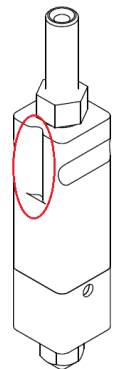

**WARNING!** Be very careful when inserting the head. To avoid bending of pins, the head must be held at all times in a vertical position!

7. Release the PUSH button.

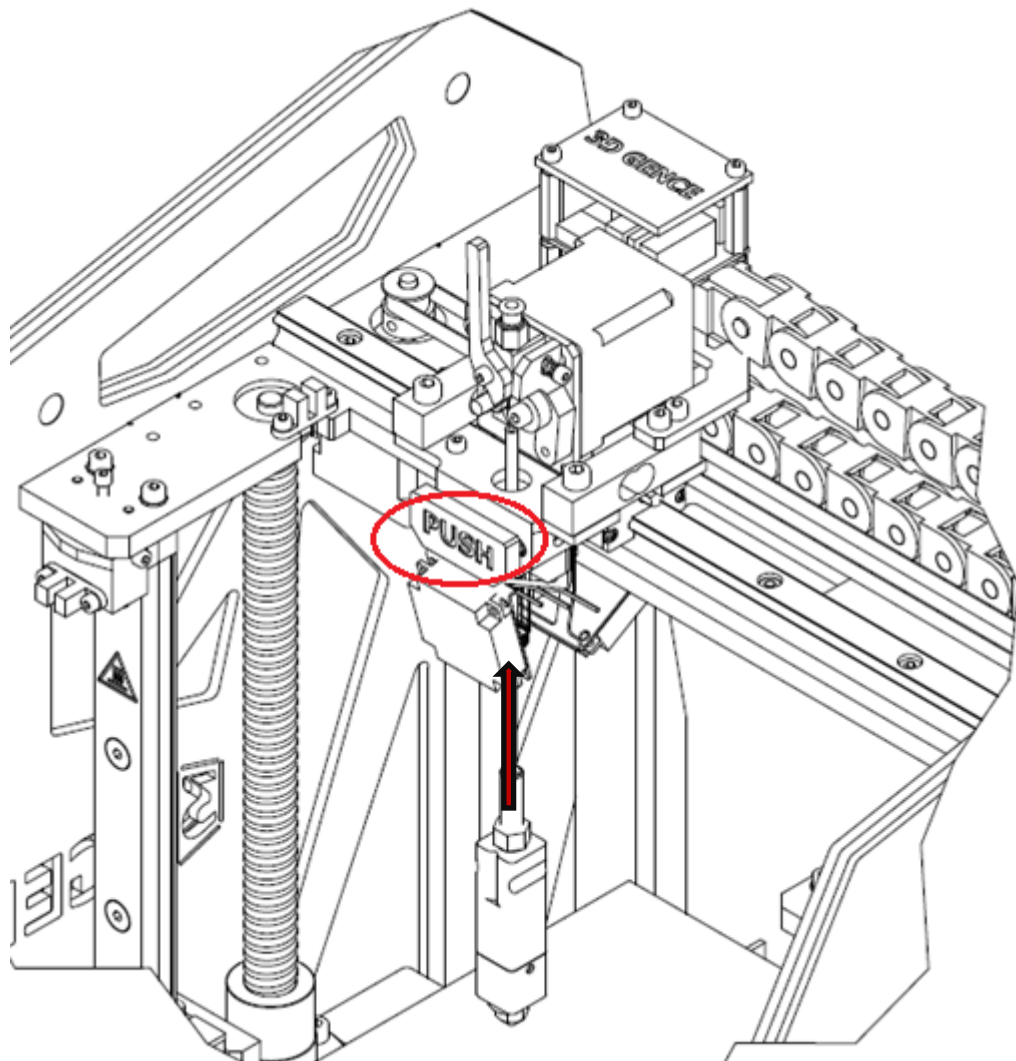

### **8.3. GUIDES AND BALL SCREW MAINTANANCE**

It is recommended that linear guides and linear guide rails are lubricated once every two months, and ball screws - once every 3 months, using lubricants (grease or oil).

When using grease lubrication we recommend lubricants according to DIN 51825 class K2K (e.g. BEACON EP1, Fa. ESSO MicrolubeG80, Optimol Longtime PD0, PD1 and PD2, Paragon EP1).

The amount which should be extruded into the linear guide rails by means of screwed in lubricating connectors is 0.5-1g. In the case of ball screws- about 2cm cubed of lubricating oil (in the amount is too big, excess lubricating oil will be pushed through the seal).



**WARNING!** Do not use dry lubricants and greases based on Teflon and graphite.

#### **8.4. Maintenance of toothed belts**

Once a month, we recommend a review of the technical condition of toothed belts involving a visual assessment of the degree of the belts wear and tear and their tightness.

A toothed belt should always be properly tightened, the simplest tightness test is an attempt to turn the belt around about 90 degrees- in this position it should present resistance. If the belt is too loose it will be possible to turn it around 180 degrees without any resistance.

Irregularities and their causes:

- Abrasion of the side of a tooth, a tooth root fracture and shearing of teeth- the reason of this is too large / small a tension or an operation of foreign bodies.
- Abrasion of the edge of a belt, the causes of this most often are the axes not set in a parallel way.
- Damage to the belt on the teeth side- it can be caused by a foreign body in the way of the belt, or damage to the gear teeth.
- Cracks / fractures on the back/ridge of the belt, most common cause is too high / low ambient temperature, the effect of foreign liquids, aging / wear.



- Broken toothed belt - the reason for this is most often a foreign body in the drive or the effects of foreign fluids.
- The abrasion of the fabric between the teeth, most often caused by too much tightness.

In case of irregularities, please contact our technical service 3D GENCE.  
**support@3dgence.com**

### 8.5. Printer Firmware update

To update the firmware of the printer, a file with the current software is necessary

\* hex format and Xloader software which can be downloaded from <http://russemotto.com/xloader/XLoader.zip>.

1. Check the version of the main module, which your printer is working on. You can do this by going to the main menu of the printer and then selecting the INFO tab. The version of the main module can be found in the "HW:" If the main menu of your printer does not have the INFO tab, contact Customer Support at: support@3dgence.com.

2. Connect the printer to a computer using a USB cable and turn on the printer.


3. Start the Xloader software

- In the "Hex file" show the path to the file containing the firmware for your printer compatible with the version of the main module of your printer (see point 1).


- For HW version: Titanium 1.0 or 1.1, select the firmware file named "3DG\_Titanium\_V (current version)".

- For HW version: Foltyn 3D Master select the file named "3DG\_3DMaster\_V (current version of software)" from firmware.


- In "Device", select Mega (ATmega2560).

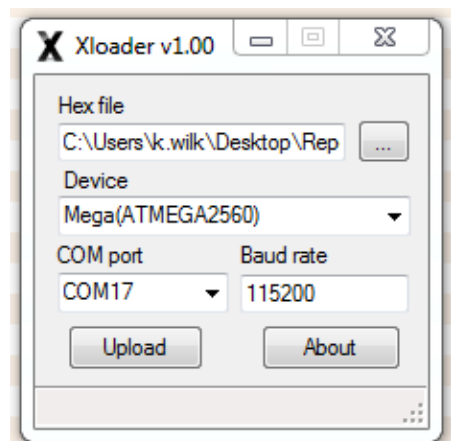


- In "COM port", select the COM port that is currently been assigned to your printer (COM port can be checked by going to *Windows Control Panel => System and Security => System => Device Manager*)

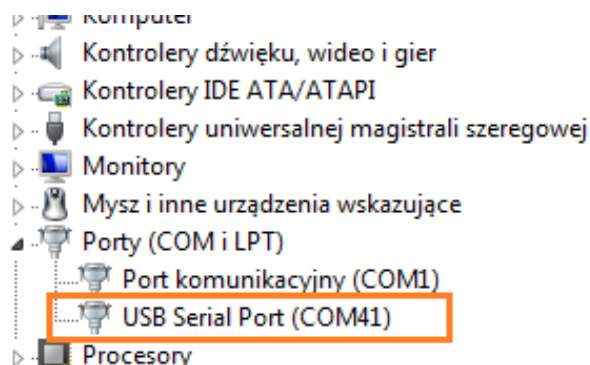

The update is not possible in the case of the printer being connected with Repetier-Host software. USB connection icon should be red as shown below.

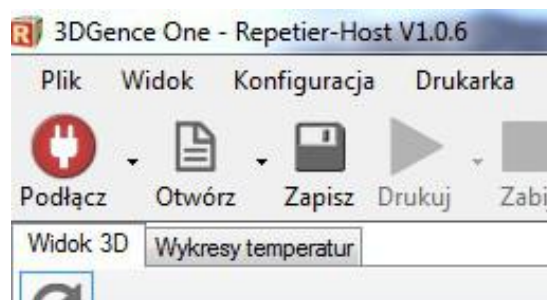

4. Apply the update by pressing the *Upload* button and wait for the update process to finish. This may take a few minutes. Upon successful completion of the update process, the message "... bytes uploaded" will be shown.

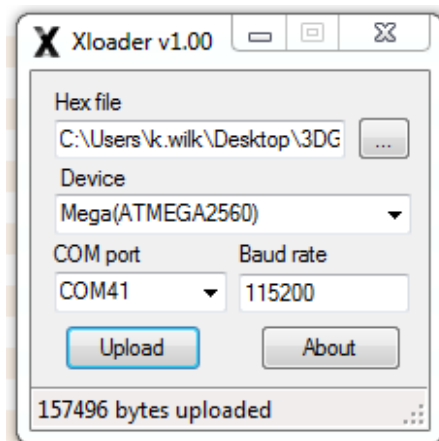

**WARNING!** During the update, do not perform any operations on the main panel of the printer or unplug the printer from the USB connector and power supply, because it could cause updating failure.

After a successful update, you must prepare your printer to work on new software (DOES NOT APPLY TO PRINTERS HOLDING ORIGINAL SOFTWARE VERSIONS above ONE.2.0). To do this:


1. Set the limit switches of the Z-axis accordingly so that the nozzle of the print head is in a referenced position at a distance of 0.5 - 0.8 mm above the work table of the printer.

**In particular you should:**

- Heat the printer table to operating temperature
- Loosen the knob regulating the protective limit switch
- Adjust the height of the limit switches by using the adjusting knob, and perform referencing of the Z-axis (Menu => Position => Home Z). Screwing the screw clockwise will increase the distance of the head above the table, while unscrewing it counter-clockwise will reduce the distance of the head above the table.
- Check the height of the head above the table, it should be in the range of approx. 0.5 - 0.8 mm.
- Check whether in any XY position the head over the table, there is no collision with the table.
- Tighten adjusting knob.



**WARNING!** Limit switches adjustment procedure must be done very carefully so as to avoid a collision between the head and the table.

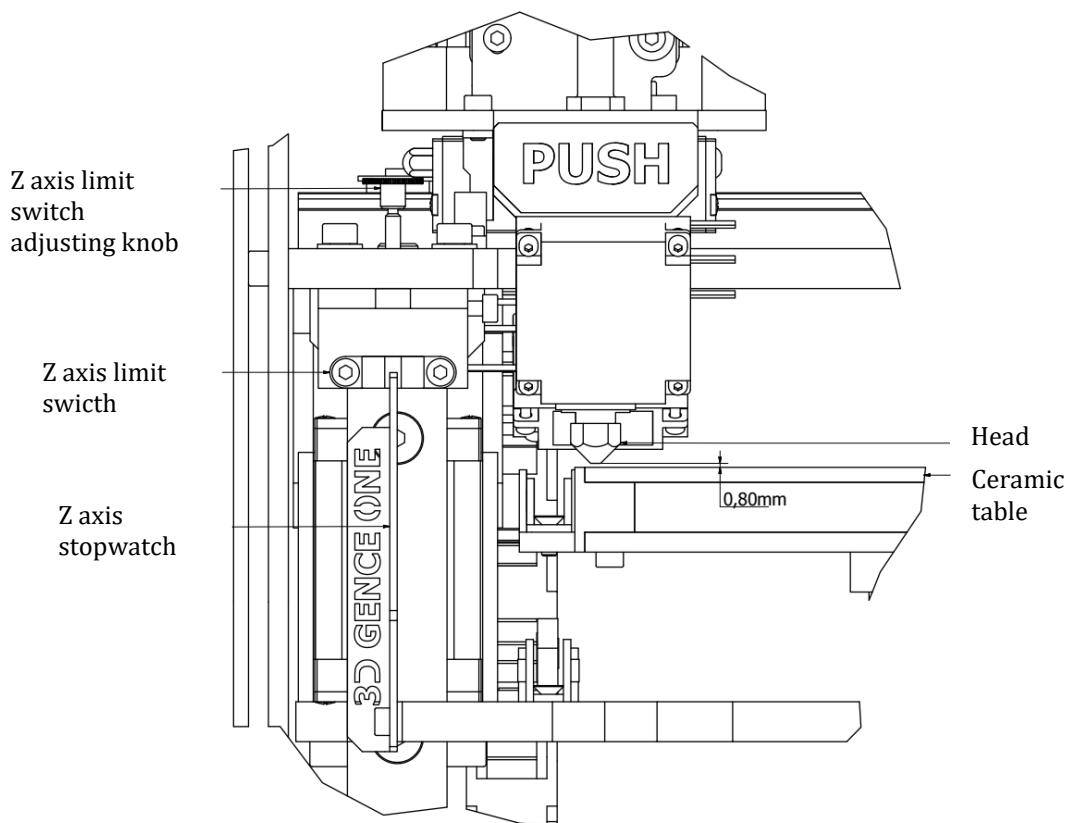

2. Perform the procedure of table scanning:

- Heat the table to operating temperature.
- Remove the filament from the head (for this purpose you must first heat it up, while the scanning procedure should be done using a **cold head**).
- Clean the tip of the print head from the remnants of the working material.
- For best results, wait 5-15 minutes to stabilize the temperature of the mechanical system of the printer.
- Select *Menu => Configuration => Heat bed scan*
- Wait for the completion of the table scanning process (Heat bed scan completed).

**WARNING!** When scanning the table, do not touch the printer, and make sure the printer base is stable. The measuring system is very sensitive and detects any pressure over 1g. Any interference could disrupt the scanning procedure.

## 9. ADDITIONAL INFORMATION

## 9.1. WARRANTY

### WARRANTY CARD

3DGence ONE version .....  
Serial Number ONE .....  
Proof of purchase number .....  
Date of sale .....

### TERMS OF WARRANTY

3DGence guarantees high quality and efficient operation of the machine during the warranty period. The Guarantee is granted for a period of 12 months from the date of sale.

The device must be used in accordance with the manual attached.

Using the device during the guarantee period, but not in accordance with the manufacturer's requirements contained in the manual, results in the loss of this guarantee.

During the warranty period, any defects attributable to the manufacturer in terms of defects in material and workmanship defects, will be repaired for free.

The basis for the repair is a written notification of the complaint, together with a detailed description of the problem, and also a stating of the cause, and presentation of this card.

In the case of a justified warranty repair, the costs of transport to the servicing location are covered by the User / Purchaser, and the return journey by the Guarantor.

In the event of unjustified sending of the machine for repair under warranty the User / Buyer shall be charged the costs of transport in both directions, as well as machine inspection costs (price according to the price list).

The warranty period shall be extended by the length of time of repair.

Repair time: up to 21 days.

This period may be extended if the repair involved buying spare parts from a manufacturer from outside the country.

The warranty does not cover:

Mechanical damage due to improper operation, failures of thermal or chemical origin, overvoltage in mains or other random events, or damage to parts caused by wear and tear during normal usage.

The user loses the right to a guarantee in case of:

- making unauthorized repairs or replacement of parts unauthorized by the Guarantor, except replacing the print head and the filament
- damage resulting from improper use, not in accordance with the manufacturer's instructions.

The original warranty card is the only basis for implementation of the warranty!

Service Annotations of inspections / repairs				
<u>Submission date of inspections/repairs and order number</u>	<u>Date of when repair was performed</u>	<u>Warranty extension</u>	<u>Overview of inspection/repair</u>	<u>Service engineer signature</u>
<b><u>NOTES:</u></b>				

## 9.2. TIPS / COMMON PROBLEMS

1. If you are printing small or very complex objects, we recommend printing at slow speed so that previous layers have time to cool down before applying the next one.
2. If the temperature is too low when printing, layers might not stick to each other and the model might have gaps.
3. If you are printing the current layer at too high a temperature, the former one may still be too soft. With a large angle of inclination, the material can slide down.
4. If the print does not stick to the table, the following problems are possible:
  - wrong temperature was selected - for the PLA set 65-75°C, for ABS - 140-150°C,
  - low quality filament - we recommend using our specially produced filaments, which are characterized by high adhesion of the material to the table (or you can use filaments by Verbatim and ColorFabb)
  - wet filament - filament should be dried in an incubator (or in an oven at a temperature of up to 55 ° C) for 1-2 hours, or on the printer table heated to 60 ° C for 2-3 hours.

**WARNING!** Do not dry the filament on the radiator / other heating sources

  - Improperly adjusted table height when printing the first layer - correct table setting when printing the first layer using hotkeys.
5. In order to improve adhesion (due to very low quality of used materials) you can apply additional coatings: PVA glue sticks, yellow masking tape, Kapton tape, dimafix spray, BuildTak self-adhesive pad (before use, we recommend that you contact technical department), ABS juice (not recommended).

For more tips and answers to frequently asked questions go to: [www.3dgence.pl](http://www.3dgence.pl)  
section: **SUPPORT**

### **9.3. How to design models**

To make sure a model can be easily printed in a 3D printer, remember a few important principles that must be adhered to at the design stage of the model.

1. The inclination of the wall must not exceed 45 °.
2. Walls of constructed models cannot be too thin (max. thickness depends on the diameter of the nozzle).
3. The minimum diameter of the holes vertically and horizontally, should be about 1-1.5 mm. If holes are larger, it may be necessary to use slides.
4. The base of the model must be designed so that a printed model has no problems with adhesion to the table.
5. The solids which the model is created from, must be merged together. If they interfere with each other, this can lead to damage during printing.

## **10. PRINTER SPECIFICATIONS**

## **11. CONTACT US**

3DGence Sp. z o.o  
ul. Mickiewicza 29  
40-085 Katowice  
Poland

Complaints, sales and promotion department:

3DGence Sp. with o.o  
Technopark Gliwice Branch



ul. Konarski 18C

44-100 Gliwice

Contact the technical department: [support@3dgence.com](mailto:support@3dgence.com)

**[www.3dgence.com](http://www.3dgence.com)**