



QUICK START MANUAL

KBMS PROGRAMMABLE RELAYS

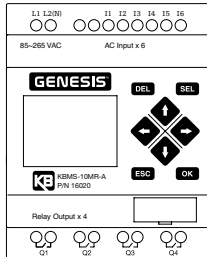

See Safety
Warning on
page 4

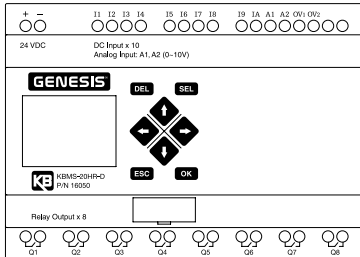

The information contained in this manual is intended to be accurate. However, the manufacturer retains the right to make changes in design which may not be included herein.

GENESIS[®]
Automation and Control

© 2003 KB Electronics, Inc.
(See back cover)

Table of Contents

	page
Introduction to the KBMS Programmable Relay	8
Specifications	10
Features by Model	11
Glossary of Terms	12, 13
Inputs	14
Outputs	14
Internal Program	14
The “AND” Gate	16 - 19
The “OR” Gate	19
Internal Memory Relay	20
Latch Type	20
Unlatch Type	20
Toggling Type	21
Differential Instruction	21
Program Sequence	22
Ladder Logic Instruction Table	23

Function Blocks	24
Counters	24
Timer Function Blocks	26
On Delay Timers	26
Off Delay Timers	28
Flasher Type Timers	29
Real Time Clocks	30
Analog Compare Blocks	33
Text/HMI Relay	37

Tables

1. "AND" Gate	19
2. "OR" Gate	19
3. Ladder Logic Instructions	23
4. Counter Types	25

Definition of Safety Warning Symbols:



Electrical Hazard Warning Symbol – Failure to observe this warning could result in electrical shock or electrocution.



Operational Hazard Warning Symbol – Failure to observe this warning could result in serious injury or death.



SAFETY WARNING – This product should be installed and serviced by a qualified technician, electrician, or electrical maintenance person familiar with its operation and the hazards involved. Proper installation, which includes wiring, mounting in proper enclosure, fusing or other over current protection, and grounding can reduce the chance of electrical shocks, fires, or explosion in this product or products used with this product, such as electric motors, switches, coils, solenoids, and/or relays. Eye protection must be worn and insulated adjustment tools must be used when working with control under power. This product is constructed of materials (plastics, metals, carbon, silicon, etc.) which may be a potential hazard. Proper shielding, grounding, and filtering of this product can reduce the emission of radio frequency interference (RFI) which may adversely affect sensitive electronic equipment. If further information is required on this product, contact the Sales Department. It is the responsibility of the equipment manufacturer and individual installer to supply this Safety Warning to the ultimate end user of this product. (SW effective 11/1992).

Be sure to follow all instructions carefully. Fire and/or electrocution can result due to improper use of this product.



This product complies with all CE directives pertinent at the time of manufacture. Contact the Sales Department for Declaration of Conformity.

CONNECTION DIAGRAMS

Figure 1A – Models KBMS-10MR-A, KBMS-10HR-A


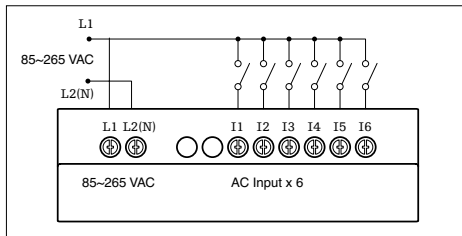



Figure 1B – Models KBMS-10MR-D*, KBMS-12HR-D

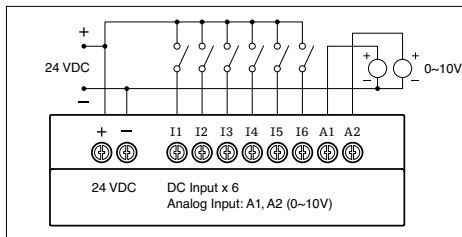

*Note: Model KBMS-10MR-D does not contain analog inputs.


CONNECTION DIAGRAMS (Continued)

Figure 2A – Models KBMS-20MR-A, KBMS-20HR-A

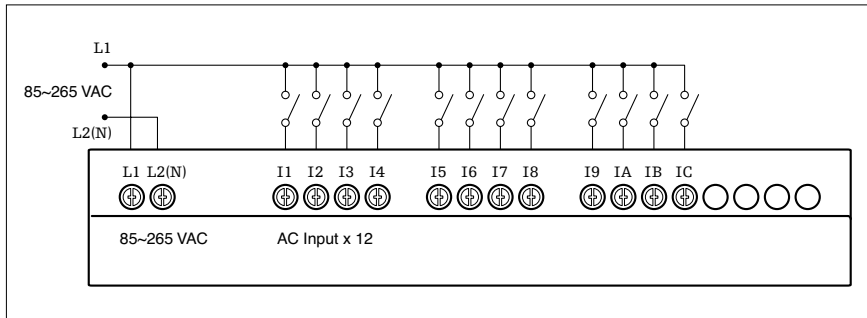

CONNECTION DIAGRAMS (Continued)

Figure 2B – Models KBMS-20MR-D*, KBMS-20HR-D

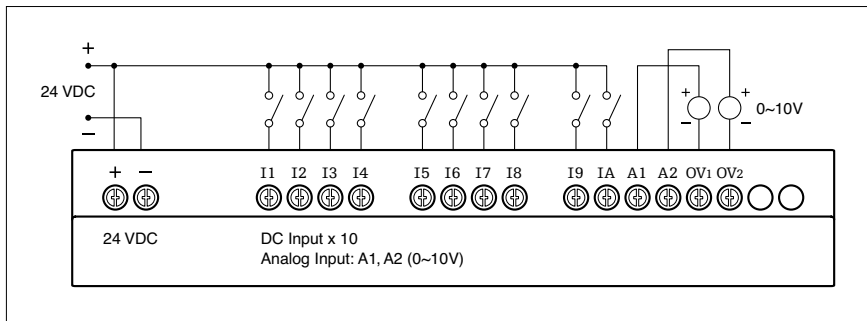

*Note: Model KBMS-20MR-D does not contain analog inputs.


INTRODUCTION TO THE KBMS PROGRAMMABLE RELAYS

The KBMS Series of Programmable Relays are designed for machine automation and process control applications. Several models are offered which provide a choice of input power (AC or DC), number of input/outputs (10, 12, and 20), and input type (digital DC or AC and 0 - 10 VDC analog). All models contain high current independent output relays. In addition, "H" suffix models offer Real Time Clock (RTC) operation and models KBMS-12HR-D and KBMS-20HR-D contain two analog inputs.

Simplified Ladder Logic Programming is accomplished with the front panel digital LCD keypad or PR-Link™ Windows® 95/98/2K/XP PC software. Additional programming flexibility is achieved with the optional EEPROM cartridge, which is used to download and upload programs from one KBMS to another.

Although simpler in design, and low cost, the compact KBMS Series, with their expanded features, can replace PLCs in many applications. Contains built-in DIN rail and slid-out tab panel mounting systems. Barrier terminal blocks facilitate wiring.

Figure 3 – Product Overview

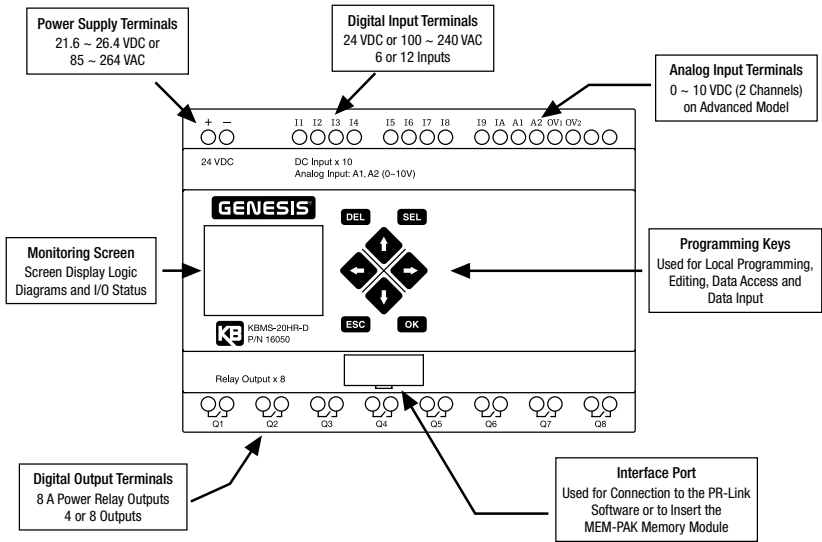

KBMS SERIES GENERAL PERFORMANCE SPECIFICATIONS

Parameter	Specification
Program Memory (Steps) (4 items x 80 lines of code)	320
Input Voltage Range – DC Models (Volts DC)	21.6 – 26.4
Input Voltage Range – AC Models (Volts AC – 50/60 Hz)	85 – 264
Maximum Power Supply Requirements – 10 & 12 I/O DC Models (mA DC)	80
Maximum Power Supply Requirements – 20 I/O DC Models (mA DC)	150
Output Relay Contact Rating (Amps @ 250 Volts AC and 24 Volts DC – non-inductive, Amps AC and DC Inductive, NEMA)	8,1.5, B300
LCD Display (Lines x Characters)	4 x 12
Input Voltage Threshold – DC Models: “On”, “Off” (Volts DC)	>15, <5
Input Voltage Threshold – AC Models: “On”, “Off” (Volts AC)	>79, <40
Input Delay Time – DC Models: “On-to-Off”, “Off-to-On” (mS)	3, 5
Input Delay Time – AC Models: “On-to-Off”, “Off-to-On” (mS)	50, 50
Maximum Vibration (G)	0.5
Operating Temperature Range (°C)	0 to 55
Storage Temperature Range (°C)	-40, 70
Maximum Humidity (Relative, Non-condensing) (%)	90
Approvals	cULus, CE

FEATURES BY MODEL

Model No.	Total I/O	Inputs			Relay Outputs	Real Time Clock (RTC)	Analog Comparator Types	Part No.
		Digital		Analog				
		DC	AC	0 - 10 DC				
KBMS-10MR-D	10	6	—	—	4	—	—	16000
KBMS-10MR-A	10	—	6	—	4	—	—	16020
KBMS-10HR-D	10	—	6	—	4	2	—	16030
KBMS-12HR-D	12	6	—	2*	4	2	7	16035
KBMS-20MR-D	20	12	—	—	8	—	—	16040
KBMS-20HR-D	20	10	—	2*	8	2	7	16050
KBMS-20MR-A	20	—	12	—	8	—	—	16060
KBMS-20HR-A	20	—	12	—	8	2	—	16070

* Analog inputs can be used as discrete inputs.

OPTIONAL ACCESSORIES

- PR-Link™ Windows® 95/98/2K/XP PC Software (Part No. 16510)
- Removable MEM-PAK EEPROM Cartridge (Part No. 16500)

GLOSSARY OF TERMS

DEBOUNCE – An instruction or set of instructions designed to go “True” for a specific condition and a single scan time.

ENABLE – This is similar to the “On” state or “On” condition. If a rung is “True”, the rung is enabled.

FALSE – This is commonly referred to as “Off” or “Off condition”.

FLASHER – This timer term is associated with cycle type function blocks. The status instruction will change state in a cyclical manner.

INSTRUCTION – A function block, input, output, internal memory relay with a corresponding address. It is used throughout the ladder program to create “rungs” or virtual circuits.

LATCH (\wedge) – A “SET” or “On” type of output instruction. Typically used to maintain an output enabled or energized until a “RESET” or unlatch output instruction of the same address is enabled.

LEADING EDGE – This term refers to the initial point in the scan cycle where the ladder logic program recognizes the change from “False” to “True” in the instruction. Opposite to “Trailing Edge”.

NORMALLY CLOSED – Normally associated with the condition of a specific contact. It is commonly used in ladder logic as a “NOT” condition. Example, if the input is wired using a normally closed contact,

the input instruction is programmed as a “Normally Open” to simulate the contact closed condition when in “Run mode”. Normally Closed ladder logic symbols are in lower case letters. (Example: i,c, m).

NORMALLY OPEN – This term refers to the condition of a specific contact. Also called an open contact. This contact is also programmed as an open contact instruction to simulate its contact status in the ladder logic. Normally Open Ladder logic symbols are in capital letters. (Example: I,T, M).

RESET – Look at “Unlatch”.

RUNG – This a virtual circuit or set of instructions in a single line that resides in the memory of the controller. A rung can only be “True” if all conditions or instructions are “True”. If the rung is “True” the output will be enabled.

SET – Look at “Latch”.

TOGGLE (P) – Also called toggling or pulse, this output type will change status on every “Leading Edge” condition change. This instruction is sometimes called an “alternator relay” function.

TRAILING EDGE – This term refers to the time specific interval where the rung or instruction condition changes from “True” to “False”.

TRUE – This term is commonly referred to as “Enable” or “On” condition for a rung or instruction.

UNLATCH (V) – This output type is used to change the status of “Latch” output. Typically both the “Latch” and the “Unlatch” work as set.

INPUTS

Actual devices provide AC or DC input signals to the KBMS Series of Programmable Relays. These include push buttons, limit switches, proximity switches, pressure switches, toggle switches, or any other devices that provide an on/off signal. The models with analog inputs (0 ~10 VDC) use a voltage that represents a value. The analog inputs are provided by a transducer or process signal. In a typical application these signals can represent temperature, fluid levels, or distance. The analog inputs can also be used as on/off inputs.

OUTPUTS

The KBMS provides independent isolated output relay contacts rated for 8 amps 250 VAC (NEMA type B300) or 24 VDC. These outputs can turn on solenoid valves, lamps, motor contactors, relays, and many other devices used in machine and process control.

INTERNAL PROGRAM

The KBMS programmable relay uses an internal ladder logic program composed of individual rungs that perform decision making processes based on inputs, outputs, counters, timers, and internal memory relay(s). When the rung condition is “True”, the output relay, counter, timer, or internal coil is enabled. Many of the functions of the KBMS are described in later sections of this manual.

The KBMS Programmable Relays are easily programmed using the 8 buttons on the unit.

SEL

Select: Used to show the selection of available instructions types. Holding this button for 3 seconds in the “Stop” mode will display all “H” Text/HMI displays. This feature is only programmable with PR-Link Windows” based software.

OK

OK: Use this button to accept the displayed selection of instruction and is also used with the Main Menu Option.

Note: Press the “SEL” and “OK” simultaneously to insert a rung above the cursor position.

ESC

Escape: Used to exit the displayed screen. When in the ladder screen press the ESC to display the main menu. If in a function block, the ladder screen will be displayed.

DEL



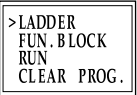



Delete: Used to delete an instruction or rung from the ladder program.





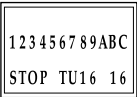


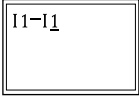

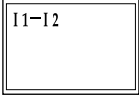
The 4 navigational buttons are used to move the cursor within the functions or ladder program. *Note: Toggle down to the RUN option on the main menu screen to place the KBMS in the “Run” mode.*

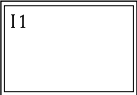THE “AND” GATE


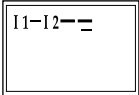

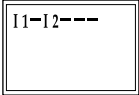



The “AND” gate uses two inputs to control an output. To program an “AND” gate use the following procedure.

Step	Button(s) to be pressed	Action	KBMS Display
1	Apply Power to KBMS	Active Status Page will Displayed.	
2		Exit Active Status Page and Access Main Menu Page.	
3		Accepts Option From Main Menu (Ladder).	
4		Displays Available Instruction set.	


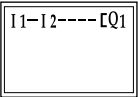
“AND” Gate Rung (Continued)

Step	Button(s) to be pressed	Action	KBMS Display
5		This moves the cursor to the next Instruction Area.	
6		Displays Available Instruction Set.	
7		Moves the cursor to the address position.	
8		Use UP Arrow to change the address of I1 to I2.	

“AND” Gate Rung (Continued)

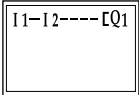Step	Button(s) to be pressed	Action	KBMS Display
9		<p>This action will place the cursor on the Next Instruction Area.</p>	
10		<p>Press select 3 times to obtain the rung connect instruction (--).</p>	
11		<p>This will place the cursor on the 4th and last instruction area. This must be an output.</p>	
12		<p>Press to display.</p>	

“AND” Gate Rung (Continued)

Step	Button(s) to be pressed	Action	KBMS Display
13		This Button Accepts the First Default Output Instruction ([Q1])	

This completes the programming of the “AND” gate.




Note: To place the KBMS in “Run” mode, press the  to enter the main menu. Toggle down using the  button to “Run.” Then press the  button. Table 1 illustrates the relationship between the inputs I1 and I2 to output Q1.

Table 1 – “AND” GATE

I1	I2	Q1
Off	Off	Off
On	Off	Off
Off	On	Off
On	On	On

THE “OR” GATE

This example, in Figure 4, also uses two inputs, I1 and I2 and output Q1. This is a common “OR” gate circuit, which operates as follows: If (input 1 or input 2) is “True” then output Q1 will energize.

Figure 4 – “OR” Gate

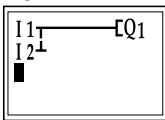


Table 2 – “OR” GATE

I1	I2	Q1
Off	Off	Off
On	Off	On
Off	On	On
On	On	On


INTERNAL MEMORY RELAY

This example in Figure 5 is similar to the "AND" gate program except it uses the internal memory relay M1. This instruction is not a physical output, but rather an internal logic instruction, which ultimately controls the actual output Q1.

Note: The actual output and internal memory relay instruction also include "latch" (\wedge), "unlatch" (\vee) and pulse or "toggle" (**P**) features.

LATCH – The "Latch" instruction, shown in Figure 6, allows for the output to remain "On" after the rung is no longer "True". The following is a timing representation the "Latch" instruction. See Figure 7.

Figure 7 – Latch Instruction

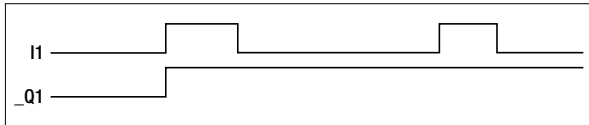

UNLATCH – The "Unlatch" output instruction disables the output when the rung is "True". See Figure 8, and Figure 9 on page 21.

Figure 5 – "AND" Gate


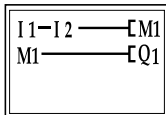


Figure 6 – "Latch"

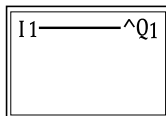

Note: If the rung goes "True" again it will not "unlatch" the output.

Figure 8 – "Unlatch"

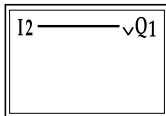


Figure 9 – Unlatch Instruction


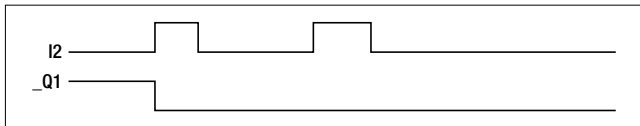


Figure 10 – “Toggle”

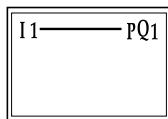

TOGGLE (P) – This output instruction toggles the output based on a change of input state. The output will alternate between the “On” and “Off” for every leading edge of the input. It can “latch” and “unlatch” from the same rung logic. See Figures 10 and 11. This instruction may eliminate many rungs of logic; which will save programming time and processor memory.

Figure 11 – Toggle Instruction


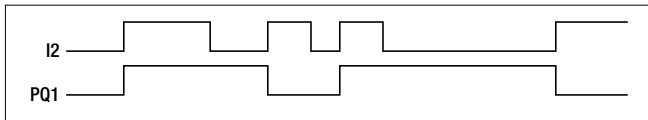


Figure 12 – “Differential”

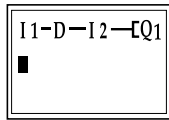


DIFFERENTIAL INSTRUCTION – The differential “On” and differential “Off” are “single scan time” executable instructions. It activates upon a change in the rung logic and turns “Off” after 1 scan time. These are commonly used to reset timers and counters within a program. Figure 12, and Figure 13 on page 22, illustrate a differential “On” instruction when used with an “AND” gate. It limits the duration of input instructions equal to the scan time.

Note: It takes I2 to be “True” for the differential “On” to enable the Q1 output relay. The duration of D and Q1 is 1 scan time. This instruction gives the KBMS the flexibility to update and clear timers and counters without “debounce” logic.

The differential “Off” contact instruction works in the same manner with a normally closed contact profile.

Figure 13 – Differential “On” with “And” Instruction

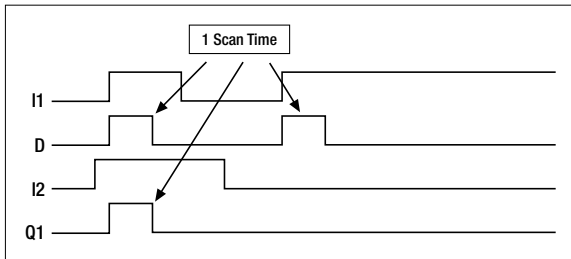

PROGRAM SEQUENCE

The program scan sequence, illustrated in Figure 14, represents the ladder logic scan process. The columns are first scanned (left to right) and then move to the function block to complete the scan sequence. By strategically placing the instructions within the ladder diagrams the KBMS can duplicate control schemes common to larger logic controllers (PLC's).

Figure 14

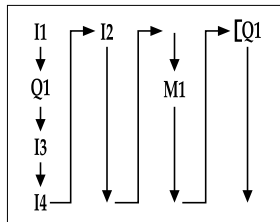


Table 3 – LADDER LOGIC INSTRUCTIONS

Element	Output	N.O. Contact	N.C. Contact	Description
Input		I (I1~IC)	i (i1~iC)	Actual terminal input
Output	([, ^, v, P)Q			Output relay instruction
Output Contact		Q (Q1~Q8)	q (q1~q8)	Contact status is determined by output relay
Internal Memory Relay				Internal memory relay
Internal Memory	([, ^, v, P)M	M (M1~MF)	m (m1~mF)	Contact status is from internal memory relay
“ON” Differential		D		1 Scan instruction executable “On” change
“OFF” Differential			d	1 Scan instruction, executable “Off” change
Real Time Clock (RTC)		R (R1~R8)	r (r1~r8)	Contact status is determined by RTC block address
Counter Contact		C (C1~C8)	c (c1~c8)	Contact status is determined by counter address
Timer Contact		T (T1~TF)	t (t1~tF)	Contact status is determined by timer address
Analog Compare		G (G1~G4)	g (g1~g4)	Contact status is determined by analog compare address
HMI / Text Output	H (H1~H8)			Text display only.

*Press the SEL button for 3 seconds to display the Type 1 “H” text in stop mode.


FUNCTION BLOCKS

The function blocks are programmed in the 4th area. They use an address instruction, which is then used in the ladder program to control the status of the rungs. The function blocks can be accessed directly from the Main Menu or when programmed into the ladder rung. After selecting the instruction, a function block will appear, which is to be configured as required.

COUNTERS – A total of 8 counters with 4 counter types can be used in the logic program. The counter functions as both an “Up” and a “Down” counter based on the status of the control instruction, or input instruction (“I2” in Figure 15). The various counter types are shown in table 4, on page 25.

COUNTER FUNCTION BLOCK – In the example in Fig 15, the “1” on top of the function block represents the counter type. The accumulated value is shown as “0002” and the preset as “0003”. The counter has a count resolution of 1 and a maximum count of 9999. Cascading is possible for higher counts if required. In this example, “I3” is the reset instruction and it will set the accumulated value to zero. “C1” is the counter number. The “C1” instruction

Figure 15 – “Counter”

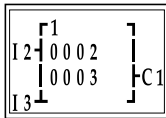

changes status as the accumulated value is compared to the preset value. Counter types 3 and 4 are retentive, therefore will retain the count during a power loss condition. Counter types 2 and 4 are capable of count overflow, therefore the accumulated value can exceed the preset value.

Figure 16 illustrates an example of a typical non-retentive, no overflow “Count up Instruction” set for a preset value of 3. The Counter status instruction C1 then triggers the actual output Q1 when input I1 goes “True” and “False” 3 times (see Figure 18).

Note 1: The counter reset instruction I3 and direction instruction I2, which are entered in the function block, are not shown in Figure 18.

Note: In the initial main menu screen the user can enter the function block separately, however, changing the values in the counter are done through the ladder programming menu selection by selecting the function block.

As illustrated in Figure 17, the reset input of I3 sets the counter’s accumulated value back to zero. If I2 is enabled the counter will count down.

Table 4 – Counter Types

Counter Number Type	Count Overflow	Memory Type
Counter 1	No	Non-Retentive
Counter 2	Yes	Non-Retentive
Counter 3	No	Retentive
Counter 4	Yes	Retentive

Figure 16

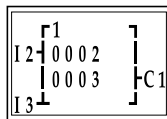


Figure 17 – Type 1 Counter Instruction



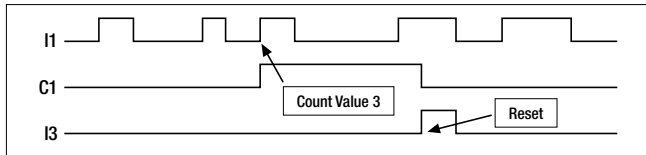


Figure 18

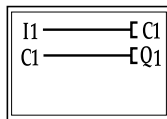

Counter function blocks are used in many applications, such as counting cycles, scheduling preventative maintenance, controlling sequential processes, and “homing” devices.

TIMER FUNCTION BLOCK – The KBMS contains 7 types of timers, which are separated into 3 groups, On Delay, Off Delay, and Flasher (or Cycle). A total of 15 timers can be used in the logic program. The timer functions are controlled through a set of instructions. This set of instructions control the timer type, time base range, and reset. The timer base resolution is 0.1 sec., for timer base 1, 1 sec. for timer base 2, and 1 min., for timer base 3. The maximum timer value for all timers is 9999. In the example in Figure 19, the “1” instruction on the left represents the time base selection. The timer type instruction is the “1” on top. In the Figure 19, the preset time is shown as “008.0”. Type “1” timer blocks do not have a provision for a reset instruction, therefore the value will “Reset” when the rung to the timer is “False”.

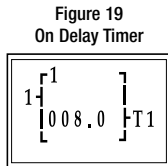

The timer address in Figure 19 is “T1”. This is the timer instruction, which will change status as the respective timer value is compared to the preset value. The reset instruction or input will set the timer back to a count of zero when energized. The reset instruction is not shown in the ladder logic, however it is programmed into the timer function block directly.

On Delay Timer – The “On Delay” timer type 1 is used to offset the “On” state of an event for a preset amount of time. This time is the preset value “008.0” in the example which will change the state of the status instruction when the timer’s accumulated value reaches the preset value. The “On Delay” timer can be value reten-

tive which accumulates time into the function block by adding the time values for which the logic rung is “True”. The status will change state when the accumulated value is equal or greater to the preset value. This timer status instruction is then addressed in the ladder logic of the program. Figures 20 and 21 illustrate the “On Delay” timer operation, in addition to the retentive value feature. The input “I2” is enabled, therefore the rung is “True”. The timer starts its clock and when the accumulated value is equal or greater to the preset value in the timer the status instruction in the example, “T1” changes state. If the value is not reached, the retentive feature of this timer type will hold the accumulated value (005.6 sec) and add any subsequent time events to the accumulated value. This will change the status instruction state once the accumulated value is equal or greater than the preset value (010.0). The accumulated value of a retentive timer will remain in the timer until the reset instruction or input instruction is “True”.

Figure 20

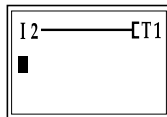


Figure 21

Type 2 “On” Delay


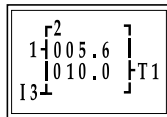


Figure 22 – Type 2 “On” Delay Instruction

If the timer were not a retentive value timer, it would reset to zero after I2 was no longer energized.

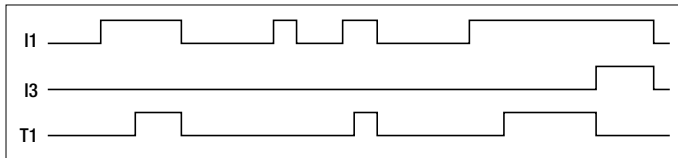

Off Delay Timer – Just as the “On Delay” timer offsets the operation of an event or input, the “Off Delay” timer is used to offset the “Off” operation of an output instruction. This is helpful in applications where the process requires some additional time beyond the “False” instruction. The “Off Delay” timers are also available in retentive and non-retentive types along with 3 time base ranges.

“Off Delay” type 3 timer supports negative or trailing edge “On” operation. This feature allows the timer to change state after the condition is “False” for the preset time value. If the condition is “True” again before it times out, the timer will reset and the status instruction remains “True”. Figure 23, illustrates “Off Delay” timer operation in the ladder logic and its effects on the status instruction. This example uses a non-retentive, negative edge “Off Delay” timer being activated by I2 with the status instruction controlling the actual output Q2.

Figure 24, and Figure 25, on page 29, illustrates how the “Off Delay” timer type 4 differs from the “Off Delay” timer type 3. In type 4 the output Q2 does not turn “On” when input I2 first goes “True”, but rather when input I2 goes “True”, and then “False”. Q2 will stay on until the accumulated value is equal to the preset value “010.0”, at which time Q2 will turn “Off”. If input I2 goes “True” again before the timer accumulated value is equal to the preset value, Q2 will turn off and the timer will “Reset”. Input I3 is the reset for the timer. Input I3 must be “False” for the timer to operate. When input I3 goes “True”, the timer will “Reset” and Q2 will go “Off”.

Figure 23


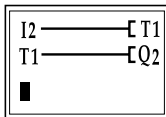


Figure 24
“Off” Delay

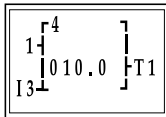

Note: The reset instruction will clear the T1 value and set the output “False” (Off).

Flasher Type Timers – Timer types 5 through 7 are flasher timers which are useful in setting machine processes in

motion in a coordinated manner. The timers can be used as signal clocks to drive events within the ladder logic and trigger counters as alarms if the process does not follow an intended routine. Cycle timer type 5 is a single time cycle timer. When the function block timer is enabled through the rung conditions the timer changes the status instruction in equal time increments until the rung condition is “False”. Figure 28 illustrates the type 5 timer while the rung in Figure 27 calls for I2 to be “True” for the timer to start its operation.

Figure 28 – Type 5 Flasher Instruction

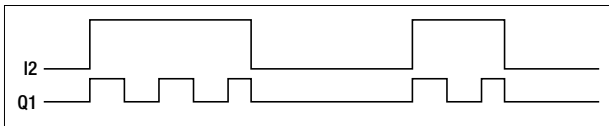


Figure 25 – Type 4 “Off” Delay Instruction

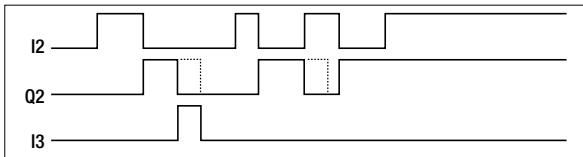


Figure 26
Flasher Timer


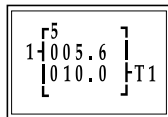


Figure 27

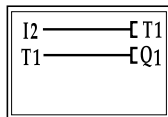

Cycle timer type 6 is similar to type 5 in operation, except the rung condition can be pulsed (or momentary) and must be “Reset” through the reset instruction to stop the timer operation.

As illustrated in Figure 29, the signal from I1 can enable the flasher timer. The type 6 timer requires the “Reset” instruction to be enabled to turn the timer off.

See Figures 30 and 31. If the reset instruction is disabled, the timer will operate again. This

function block is typically used with other timer function blocks. The type “7” flasher timer operates as combination of 2 timers which separately control the “On”, and “Off” time. Timer type 7 is programmable through PR-Link® software and can be edited through the function keys.

REAL TIME CLOCK (RTC) – This function is built into the advanced “H” suffix models only. There are 2 types of real time clock function blocks. The current day and time must be programmed in

Figure 29

 


Figure 30 – Type 6 Flasher


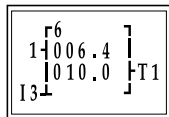


Figure 31 – Type 6 Flasher Instruction

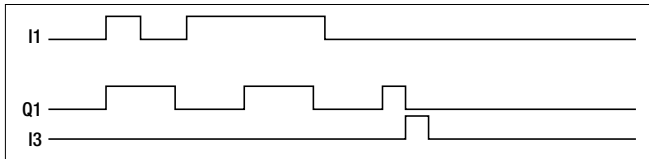

order for the RTC to operate. The control time is programmed using the Real Time Clock option on the main menu (press ESC to access the main menu). A total of 8 RTC functions can be used in the logic program. The RTC can be used to control external outputs or internal memory relays.

In Figure 32, the “1” specifies the RTC as type “1”. The “MO-FR” are the days of operation. The timers will turn on at 8:00 a.m. and turn off at 5:00 p.m. (17:00) each day Monday thru Friday. In the example the current time is indicated as “15:59”. The rung must be programmed to enable the RTC function block for the output instruction (R1~R8) to change state (see Figure 33). The data entry uses for the days of the week, “Su, Mo, Tu, We, Th, Fr, Sa and Su”. The hours and minutes are in the 24 hour format (eg. 15:59 = 3:59 p.m.).

The type 1 RTC timer functions as a time of day timer with a single “day skip” feature. A typical application of this function is for energy management and time driven events. The RTC needs a “True” condition in the ladder program to run. An example of RTC type 1 is shown in Figure 34 on page 32.

Figure 32

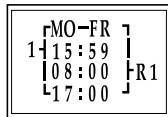


Figure 33


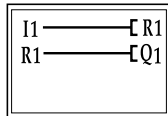


Figure 34 – Type 1 RTC Timing Chart

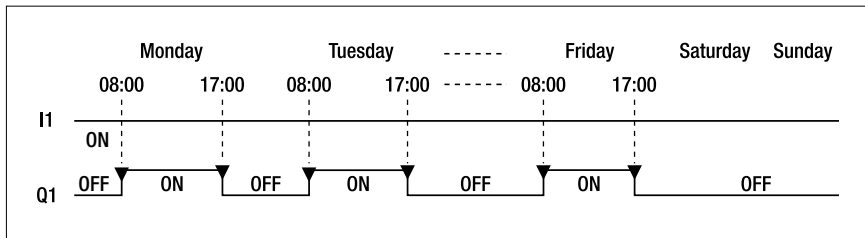

The RTC function type 2 operates as a daily on/off interval timer.

The example in Figures 35 and 36 are for the type 2 RTC function. This example has the function (R2) block controlling “Q2” to go “On” on Monday at 8:00 a.m. and “Off” on Sunday at 5:00 p.m.

Figure 35

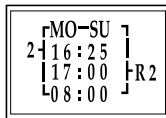


Figure 36


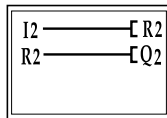


Figure 37 – Type 2 RTC Timing Chart

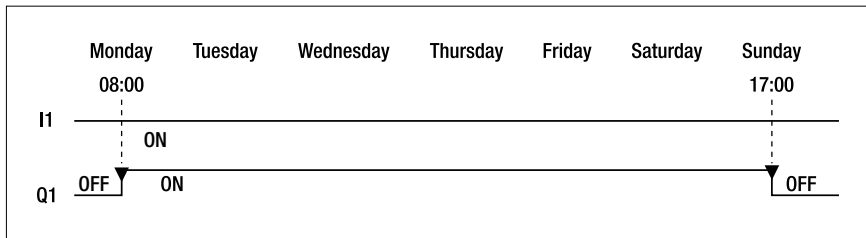


Note: The RTC has memory backup protection during AC power loss for 72 hours.

ANALOG COMPARE FUNCTION BLOCKS – There are 7 analog compare functions in the KBMS. The analog input(s) to be compared must be 0-9.99VDC. Up to 4 analog compare function blocks can be used in the logic program. These function blocks compare the values of analog inputs with each other or with a reference value within the function block.


The function block instructions are used to specify the function mode. Figure 38 is an illustration of an analog function illustrating the control instructions and analog and reference values. In the example, the “1” is the function mode type, “4.00V” is the voltage to analog input 1 (A1), “3.00V” is the voltage to analog input 2 (A2) and the “0.00V” is the reference (R).

Figure 38
Analog Type 1

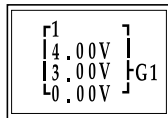

In types 2 and 3 the reference is displayed but not used in the compare decision. Similar to the function blocks, the analog compare function blocks require the logic rung to be “True” for its operation. In Figure 39 when I1 input is “True” the function will enable the relay output Q1. There are seven types of analog compare functions available as described below:

Figure 39

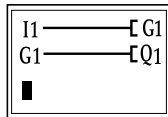

Type 1 – When input A1 is less than or equal to (A2+R) and greater than (A2–R), G1 will turn on. In summary, the condition for the output G1 to be energized is $(A2+R) \geq A1 \geq (A2-R)$. Therefore when the value of A1 is between the two conditions, the analog compare function instruction is “True”. See Figure 40, on page 35.

Type 2 – This function makes a comparison between the analog inputs only. When A1 is less than or equal to A2, G1 will enable. When A1 is greater than A2, G1 will disable. See Figure 41, on page 35, for a graphical illustration of this function.

Figure 40 – Type 1 Analog Compare Function


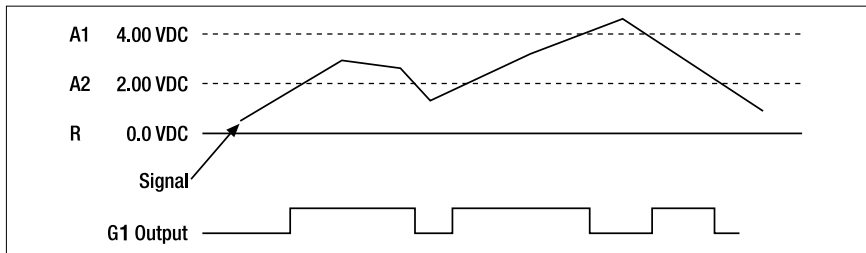



Figure 41 – Type 2 Analog Compare Function

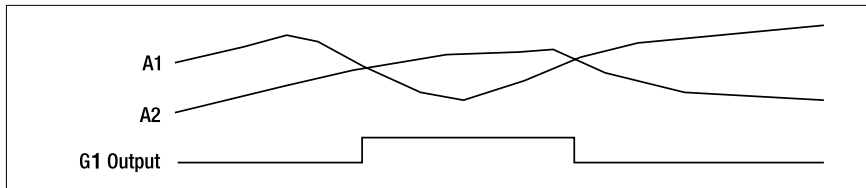

Type 3 – This function is similar to type 2 except the inputs are reversed. When A2 is less than or equal to A1, G1 will turn “On”. When A2 is greater than A1, G1 will turn “Off”. This function may be used in conjunction with type 2 analog compare functions which can be used to signal out of range conditions.

Type 4 – In this function when A1 is less than or equal to R, G1 will be “True”. When A1 is greater than R, G1 will go “False”. The value of A2 is not referenced when using the type 4 analog compare function block. The following illustration shows how this function block reacts to the variations in the analog input. (See Figure 42).

Figure 42 – Type 4 Analog Compare Function

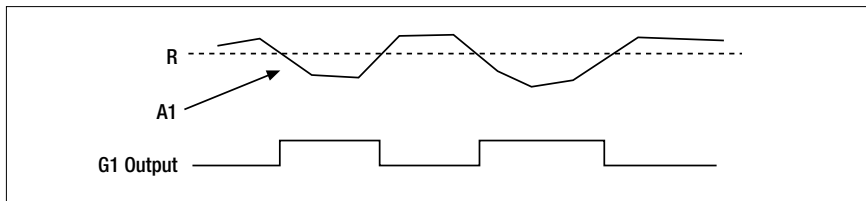

Type 5 – This function is similar to the type 4 analog compare function except the output is enabled when the signal is equal or above the reference level. When A1 is greater than or equal to R, G1 will be “True”. When A1 less than R, G1 will turn “False”.


Note: *The next 2 analog compare function blocks behave similar to type 4 and 5 except they utilize the A2 input channel as opposed to the A1. (A1 is not referenced in this function.)*

Type 6 – In this function when A2 is less than or equal to R, G(X) will turn “True”. When A2 is greater than R, G1 will turn “False”. *(A1 is not referenced in this function.)*



Type 7 – In this function when A2 is greater than or equal to R, G(X) will turn “True”. When A2 is less than R, G1 will turn “False”. *(A1 is not referenced in this function.)*

TEXT/HMI “H” RELAYS – This feature of the KBMS can only be programmed with the optional PR-Link software package. For information contact your local Genesis distributor or call 1-800-221-6570.

MECHANICAL SPECIFICATIONS AND CONTROL LAYOUT (Inches /mm)
KBMS-10MR-D, 10MR-A, 10HR-A, 12HR-D

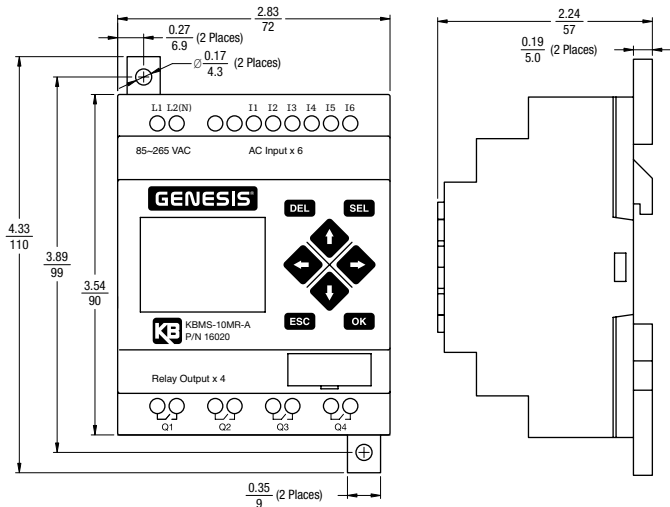

MECHANICAL SPECIFICATIONS AND CONTROL LAYOUT (Inches /mm)
KBMS-20MR-D, 20MR-A, 20HR-D, 20HR-A

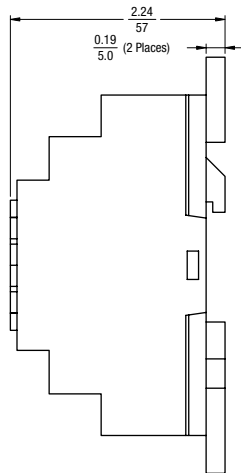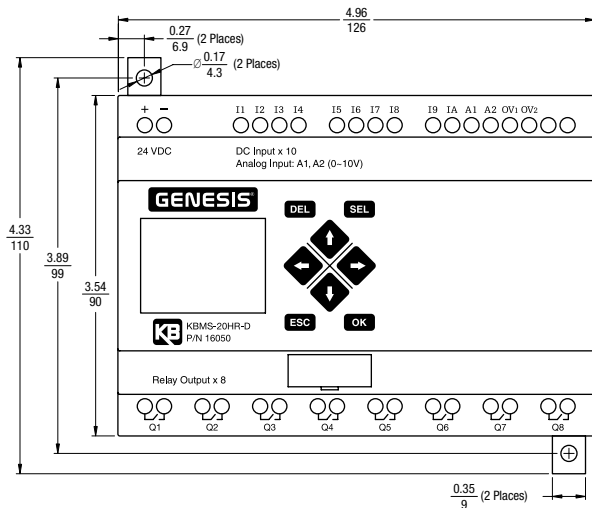

LIMITED WARRANTY

For a period of 18 months from the date of original purchase, KB Electronics, Inc. will repair or replace, without charge, devices which our examination proves to be defective in material or workmanship. This warranty is valid if the unit has not been tampered with by unauthorized persons, misused, abused, or improperly installed and has been used in accordance with the instructions and/or ratings supplied. The foregoing is in lieu of any other warranty or guarantee, expressed or implied. KB Electronics, Inc. is not responsible for any expense, including installation and removal, inconvenience, or consequential damage, including injury to any person, caused by items of our manufacture or sale. Some states do not allow certain exclusions or limitations found in this warranty and therefore they may not apply to you. In any event, the total liability of KB Electronics, Inc., under any circumstance, shall not exceed the full purchase price of this product. (rev 2/2000)

COPYRIGHT © 2003 by KB ELECTRONICS, INC.

All rights reserved. In accordance with the United States Copyright Act of 1976, no part of this publication may be reproduced in any form or by any means without permission in writing from KB Electronics, Inc. (8/22/02)

“KB” and “GENESIS” are registered trademarks of KB Electronics, Inc.



KB Electronics, Inc.

12095 NW 39th Street, Coral Springs, FL 33065-2516 • (954) 346-4900 • Fax (954) 346-3377
Outside Florida Call TOLL FREE (800) 221-6570 • E-mail – info@kbelectronics.com
www.kbelectronics.com