

User Manual

MEDION[®] **MULTIMEDIA PC** **MEDION[®] AKOYA[®] P4120 D**



**Product
Info**



www.aldi.com.au

+ VIDEO

QR codes take you where you want to go quickly and easily

Whether you require **product information**, **spare parts** or **accessories**, details on **warranties** or **aftersales services**, or if you want to watch a **product demonstration video**, our QR codes will take you there in no time at all.

What is a QR code?

A QR code (QR = Quick Response) is a type of matrix that can be read with a smartphone camera and that contains a link to a website or contact details, for example.

Advantage: You do not need to manually enter a website address or contact details.

How it works

To scan the QR code, all you need is a smartphone with QR code reader software and an internet connection*.

This type of software can be downloaded for free from your smartphone's app store.

Try it out now

Just scan the QR code with your smartphone and find out more about the Aldi product you have purchased.*

Your Aldi Service Portal

All details mentioned above can also be found in the Aldi Service Portal at www.aldi.com.au.

 


 
* Depending on your tariff plan you may be charged for the connection.

Contents

Overview	4
Device parts.....	6
About these operating instructions.....	10
Safety information	12
Package contents.....	15
Setting up the PC.....	16
Connecting.....	19
Starting up for the first time.....	24
Mouse.....	26
Keyboard	26
Hard drive	27
Optical drive	30
Card reader	32
Graphics system	33
Sound system	33
USB connection.....	34
Network operation	34
Settings.....	36
FAQ - Frequently Asked Questions	38
Customer service	39
Transport	41
Cleaning and care	41
Upgrading/modifying and repair	41
Recycling and disposal	43
Legal Notice	44
Index	45
Warranty Details.....	47
Repair and Refurbished Goods or Parts Notice	48
Warranty Certificate	49

A

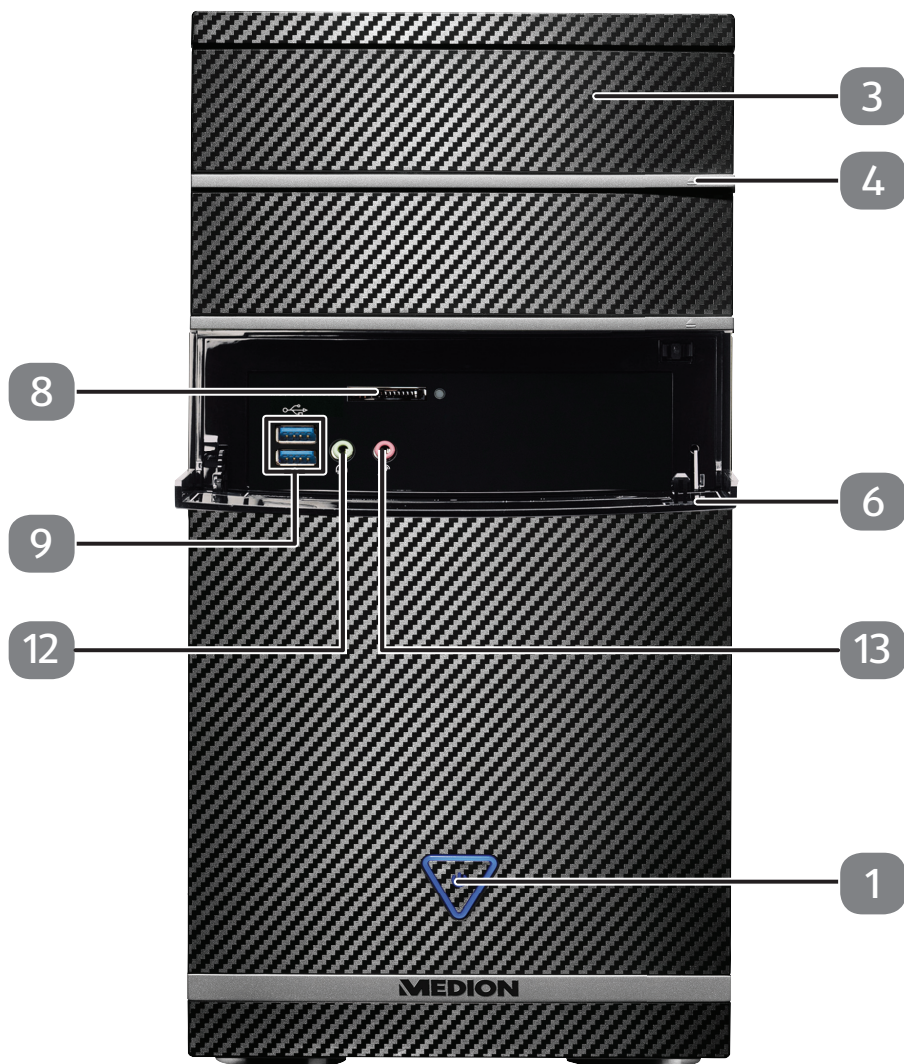

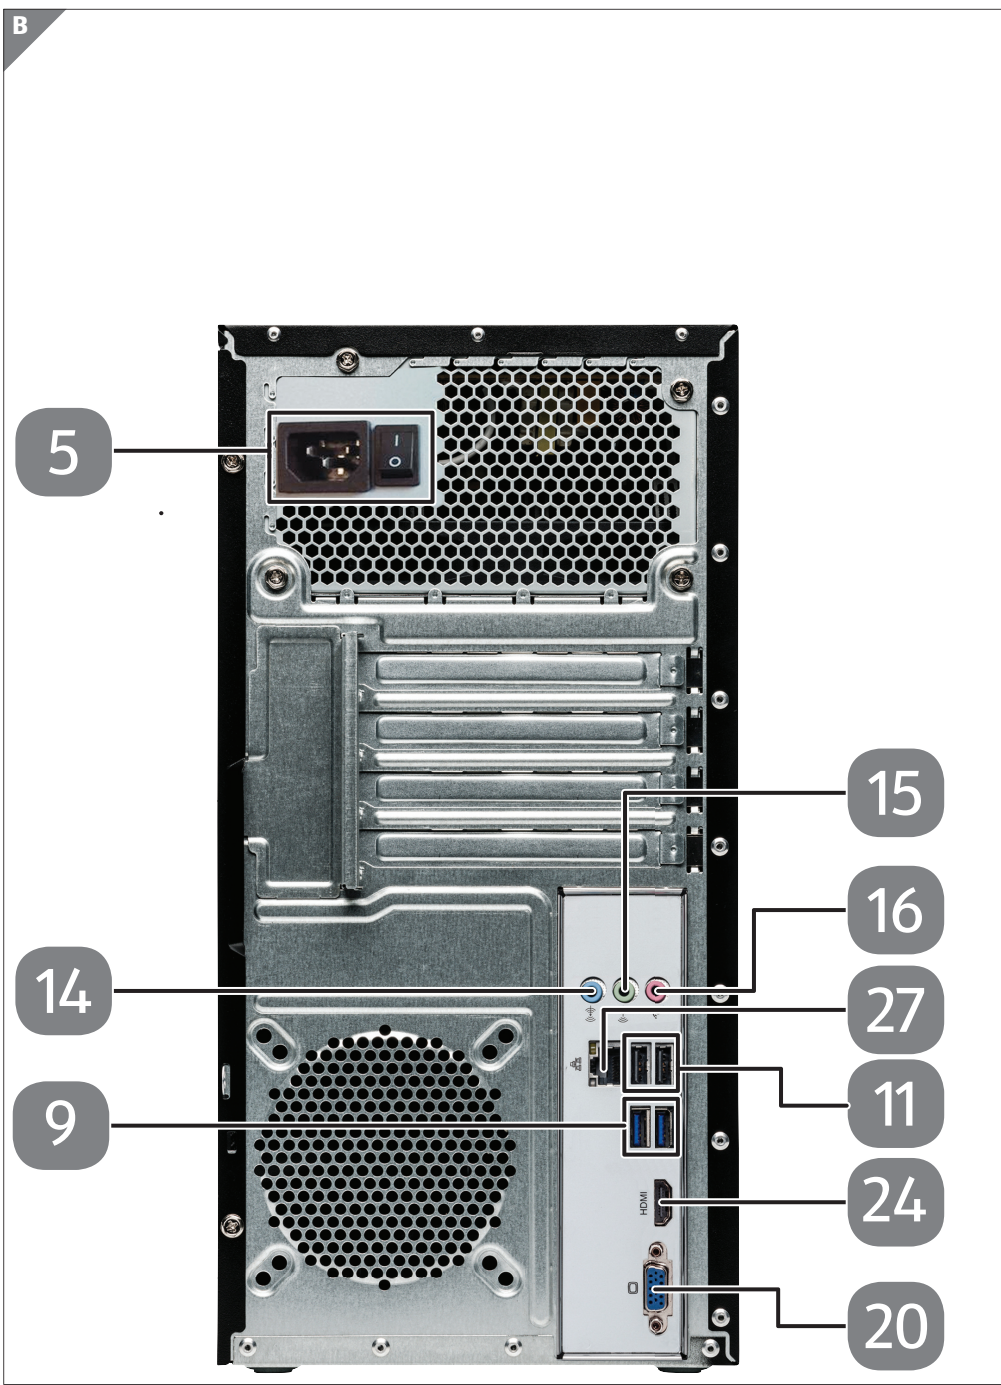

Device parts

- 1 On/off switch/operating mode
- 3 Optical drive
- 4 Optical drive eject button
- 5 Power supply (mains cable socket & mains switch)
- 6 Front panel
- 8 Card reader
- 9 USB 3.0 ports
- 11 USB 2.0 ports
- 12 Headphones socket
- 13 Microphone socket
- 14 Audio input / Speaker RS (rear out)*
- 15 Headphones socket / Speaker FS (front out)*
- 16 Microphone socket / Speaker CC/SS (center/subwoofer out)*
- 20 VGA monitor connection
- 24 HDMI connection
- 27 LAN network (RJ45)

* Ports with dual function. Configuration is set with the included software.

Contents

Overview	4
Device part	6
About these operating instructions	10
Warning symbols and key words used in these operating instructions.....	10
Proper use.....	11
Declaration of conformity	11
Information on trademarks.....	12
Safety information.....	12
Dangers for children and people with reduced ability to operate machinery.....	12
Operating safety	13
Never carry out repairs yourself.....	14
Data backup.....	14
Package contents	15
Setting up the PC	16
Installation location.....	16
Environmental requirements	16
Ergonomics	16
Connecting	19
Connecting the cables	19
Opening and closing the front cover	20
Connecting the monitor.....	20
Connecting an HDMI device	20
Connecting USB devices	21
Connecting the audio output / headphones / speaker boxes.....	21
Connect microphone.....	22
Connecting audio input / recording source	22
Connecting the network (LAN)	22
Connecting power supply	23

Starting up for the first time	24
Starting up your PC.....	24
Mouse	26
Left button	26
Right button	26
Scroll wheel.....	26
Keyboard.....	26
The Alt, Alt Gr and Ctrl keys	27
Hard drive	27
Important directories	27
Optical drive.....	30
Loading a disc.....	30
Removing the disc	31
Playing/reading discs	31
Blank CDs and DVDs	32
Card reader	32
Inserting a memory card	32
Removing memory card	33
Graphics system	33
Sound system.....	33
USB connection	34
Network operation.....	34
Wireless LAN (Wi-Fi)	34
Settings	36
Reset PC to factory settings.....	36
UEFI firmware setting	37
FAQ - Frequently Asked Questions.....	38
Customer service	39
What to do in case of hardware problems	39
Find the cause	39
Faults and possible causes	39
Do you need more help?	40

Driver support	40
Transport	41
Cleaning and care	41
Upgrading/modifying and repair	41
Notes for service technicians.....	42
Recycling and disposal	43
Legal Notice.....	44
Index	45
Warranty Details	47
Repair and Refurbished Goods or Parts Notice	48
Warranty Certificate.....	49

About these operating instructions



Read the safety instructions carefully before using the device for the first time. Note the warnings on the device and in the operating instructions.

Always keep the operating instructions close to hand. If you sell the device or give it away, please ensure that you also pass on these instructions.

Warning symbols and key words used in these operating instructions

⚠ DANGER!

This signal word indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

⚠ WARNING!

This signal word indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.

⚠ CAUTION!

This signal word indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.

NOTICE!

This signal word warns of possible damage to property.



WARNING!

Warning: danger due to excessive volume!



This symbol gives you useful additional information on assembly or operation.



Declaration of conformity (see section 'Declaration of conformity'): Products that feature this symbol meet the requirements of the EC directives.

Proper use

This device is designed for the use, management and editing of electronic documents and multimedia content, as well as for digital communication and it is only intended for private and not commercial/industrial use.

Please note that we shall not be liable in cases of improper use:

- Do not modify the device without our consent and do not use any auxiliary equipment which we have not approved or supplied.
- Use only spare parts and accessories that we have supplied or approved.
- Heed all the information in these operating instructions, especially the safety information. Any other use is deemed improper and can cause personal injury or damage to the device.
- Do not use the device in extreme environmental conditions.

Declaration of conformity

This PC is supplied with the following wireless features:

- Wireless LAN

The manufacturer hereby declares that the product conforms to the following European requirements:

- R&TTE Directive 1999/5/EC
- Ecodesign Directive 2009/125/EC
- RoHS Directive 2011/65/EU.

If your device operates with a network connection in the 5 GHz frequency range of the integrated wireless LAN solution, the device may only be used inside buildings in the EU.*

Full declarations of conformity are available at www.medion.com/conformity.



* In order to meet this requirement, you should not use channel range 34 - 64 on your wireless LAN access point.

Information on trademarks

MS DOS® and Windows® are registered trademarks of Microsoft®.

Intel®, the Intel® logo, Intel Inside®, Intel Core®, Ultrabook™ and Core Inside® are trademarks of the Intel® Corporation in the USA and other countries.

HDMI®, the HDMI logo and High-Definition Multimedia Interface are registered trademarks of HDMI Licensing LLC.

Other trademarks are the property of their respective owners.

Safety information

Dangers for children and people with reduced ability to operate machinery

This device is not intended for use by people (including children) with reduced physical, sensory or mental abilities or for those without experience and/or knowledge, unless they are supervised by a person responsible for their safety or they have been instructed in its use.

- Children should be supervised to ensure that they do not play with the product.
- Children should not be allowed to use this device without supervision.
- Keep the device and accessories out of reach of children.



Risk of suffocation!

Packaging film can be swallowed or used improperly. Therefore, there is a risk of suffocation!

- Keep packaging material such as plastic film or plastic bags away from children.

Operating safety

Read this section carefully and follow all instructions given. The instructions will help you to operate your PC reliably and help increase its service life.

Liquids penetrating the device may impair the electrical safety of the product.

- Avoid exposing the device to water droplets or spray and do not place anything containing water, e.g. vases, on the device.

The slots and openings on the PC are for ventilation purposes.

- Do not cover these openings as this could cause the device to overheat.
- When setting up the PC make sure that it has a minimum clearance of 20cm on all sides.
- Do not insert anything into the PC through the slots and openings.
This could result in an electrical short circuit, an electric shock or even ignite a fire which will damage your PC.

There is a risk of electric shock or fire when the PC casing is open.

- Never open the casing of the PC!
- Never use the PC when the casing is open.

There is a risk of electric shock or fire when the mains adapter is open.

- Never open the mains adapter!
- Never manipulate the mains adapter or live components!

The optical drives (CDRW, DVD, DVD-RW) constitute class 1 laser equipment.

- Do not remove the drive cover as invisible laser radiation can escape.

Switch the PC off immediately/do not switch the PC on and contact customer services if ...

- the power cable or the attached plugs are burnt or damaged.
 - Have faulty mains adapters/mains cables replaced only with original parts.
These parts should not be repaired under any circumstances!
- the PC casing is damaged or liquid has penetrated into the device.
 - Have the PC inspected by customer services first. Otherwise, it may not be possible to operate the PC safely and there is a risk of fatal electric shock!

Never carry out repairs yourself



Risk of electric shock!

There is a risk of electric shock if repairs are not carried out by qualified personnel!

- Never try to open or repair the product yourself!
- In the event of a fault, please contact the Service Centre or an approved repair specialist.

Data backup

NOTICE!

Data loss!

Back up your data on external storage media before each update. We do not accept any liability for compensation claims arising from the loss of data or any consequential damages incurred.

Package contents

Please check your purchase to ensure that all items are included. If anything is missing, please contact us within 14 days of purchase. If you do contact us, please give your serial number.

The following components are supplied with the PC you have purchased:

- PC System
- cabled keyboard & mouse
- mains cable
- welcome poster
- operating instructions incl. warranty card



Risk of suffocation!

Packaging film can be swallowed or used improperly. Therefore, there is a risk of suffocation!

- Keep packaging material such as plastic film or plastic bags away from children.

Setting up the PC

Setting up your PC in the right way helps to ensure that your PC is comfortable to operate.

Installation location

- Set up all components on a stable, level and vibration-free surface and only operate them on a surface of this kind to prevent the PC from malfunctioning.
- Keep your PC and all connected devices away from moisture and avoid dust, heat and direct sunlight. This will avoid faults or damage to your PC.
- Your PC is not suitable for use at VDU workstations within the meaning of §2 of the German VDU workstation regulation.

Environmental requirements

- The PC can be operated at an ambient temperature of +10 °C to +35 °C and at a relative humidity of 30% - 70% (non-condensing).
- When switched off, the PC can be stored at temperatures from -20 °C to 50 °C.
- During a thunderstorm, disconnect the mains plug and, in particular, remove the network cable and, if applicable, the antenna cable. For extra safety, we recommend using an overvoltage protection device to prevent your PC from sustaining damage from the mains supply as a result of power surges or lightning strikes.
- After transporting the PC, wait until it has reached ambient temperature before switching it on. Major changes in temperature or fluctuations in humidity can cause moisture to build up within the PC due to condensation – this can cause an electrical short circuit.

Ergonomics



Avoid dazzle, reflections and strong bright-dark contrast in order to protect your eyes.

The monitor should never be placed next to a window because this is the brightest part of the room in daylight. This brightness can make it more difficult for the eyes to adjust to the darker monitor.

The monitor should always be positioned so that the direction of vision is parallel to the window frontage.

The parallel line of vision should also be maintained in relation to artificial lighting equipment. In other words, the same criteria and principles apply where the workspace is illuminated with artificial light.

 
If it is not possible to position the screen as described, the following can be helpful:

- Rotate, lower or tilt the monitor;
- Slatted or vertical blinds on the windows;
- Partitions or changes to artificial lighting.



Take regular breaks when working at your monitor to prevent tenseness and fatigue.

Sitting for a long time without changing position can be uncomfortable. Correct posture is very important for minimising the risks of physical problems or damage.

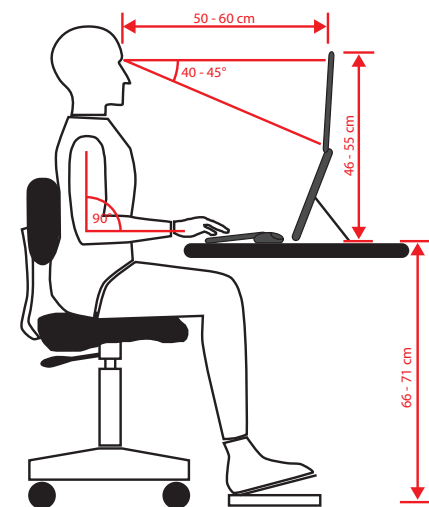

- **In general** – change your position frequently (around every 20-30 minutes) and take regular breaks to avoid tiredness.
- **Back** – when sitting at your workstation, your back must be supported by your chair's backrest, which must be upright or angled slightly back.

- **Arms** – your arms and elbows should be relaxed and loose. Your elbows should be close to your body. Hold your forearms and hands roughly parallel to the floor.
- **Wrists** – when working with the keyboard, mouse or trackball, your wrists should be stretched out and not bent at an angle of more than 10°, where possible. Make sure that your wrists are not resting on the table edge itself.
- **Legs** – your thighs should be horizontal or angled slightly down. Your lower legs should form an angle with your thighs of approximately 90°. Your feet should be resting flat on the floor. Use a foot rest if you need one, but first make sure that your seat height has been adjusted correctly.
- **Head** – your head should be upright or bent very slightly forward. Do not work with your head or upper body twisted.
As you work, the top edge of the monitor should be at eye level or very slightly lower.
The distance between the monitor and the person viewing it depends on individual requirements. Distances between 50 and 70cm are commonly used.

Connecting



The devices listed are **not** necessarily supplied. You only need to connect up those components that you want to operate on your PC. If you do not have the described device, you can simply skip the relevant point and carry out these steps at a later point in time if required.

Connecting the cables

Follow the instructions below to connect your PC correctly and safely:

- Maintain a distance of at least one metre from sources of high-frequency and magnetic interference (TV sets, loudspeakers, mobile phones, DECT telephones, etc.) in order to avoid malfunctions and data loss.
- Please note that only shielded cables that are shorter than 3 metres may be connected to the external interfaces of this PC. Please only use double-shielded cables for printer cable connections.
- Position the cable so that it cannot be stepped on or tripped over.
- To avoid damaging the cables, do not place any objects on them.
- In order to prevent cable breaks, do not crush or bend cables, because this could cause a short circuit.
- Do not apply force when connecting cables and plugs and make sure that connectors are the right way round.
- Do not connect any devices to the PC which do not meet the requirements set out in the EN60950 standard “Information Technology Equipment – Safety” or the EN60065 standard “Audio, video and similar electronic apparatus - Safety requirements”.
- Only connect peripheral devices – such as keyboard, mouse and monitor, etc. – when the PC is switched off to avoid damage to the PC or the devices.

Some devices may also be connected while the computer is running. This is generally the case for devices with a USB connection. In all cases, observe the relevant operating instructions.

- In addition, when connecting your peripherals only use the connecting cables supplied with those devices.
- Do not expose plug connections to impacts/pressure, e.g. from lateral forces. This could cause internal and external damage to the product.

- When you disconnect a cable from your device, pull it out by holding the plug and not the cable.
- Do not exchange the supplied cable for another one. Use only the supplied cable as this cable has been extensively tested in our laboratory.
- Ensure that all connection cables are connected to their corresponding peripheral device to avoid any interference radiation. Disconnect any cables that are not required.

Opening and closing the front cover

Some connections are behind the front cover. This is very useful because you can quickly and conveniently make frequently used connections without turning around the PC. The closable cover also protects the connections.

Connecting the monitor

Your PC has a **VGA** connection **20**.

NOTICE!

Risk of damage!

If your monitor has several inputs, only ever connect one data cable to avoid problems with signal allocation.

- Ensure that the plug and the socket fit together precisely in order to avoid any damage to the contacts. Due to its asymmetrical shape, the plug will only fit into the socket in one position.
- Connect the screen data cable with the graphics system socket. Remove the white protective ring (if present) on the monitor plug.
- When connecting a VGA device to the monitor cable, screw the screws in hand-tight.

Connecting an HDMI device

HDMI stands for “High Definition Multimedia Interface”, which is an interface for fully digital transfer of audio and video data.

- You can connect a television set, monitor or projector to this socket **24** if these output devices have the corresponding connection.

Connecting USB devices



Only connect your USB devices after initial set-up of your new PC. This will prevent unnecessary confusion during installation. These devices can normally be connected during operation. Please refer to the operating manual for your peripheral device.

- The PC's USB power outputs are protected by a fuse (limited power source as per EN60950). This ensures that, if there is a technical defect in the PC, the peripheral devices connected to the affected sockets will not be damaged.

Normally, a choice of several connection sockets **9** / **11** is available.

NOTICE!

Risk of damage!

Ensure that the plug and the socket fit together precisely in order to avoid any damage to the contacts. Due to the arrangement of the contacts, the plug will only fit into the socket in one position.

- Connect devices (printer, scanner, camera, etc.) to the corresponding socket **9** / **11**.



Where possible, always connect your devices to the port that they were originally installed on. Otherwise you will be assigned a new ID and the drivers will need to be reinstalled.

Connecting the audio output / headphones / speaker boxes

Connect active speaker boxes for playback or an audio connection cable for recording. Read the operating instructions for your stereo to find out which input you need to use (usually Line In or Aux).

- Connect the cable to the green socket **12** on the back of your PC with the 3.5mm stereo jack.

Connecting the headphones

Connect the headphones/earphones here.

- Connect the cable to the green socket **12** on the back of your PC with the 3.5mm stereo jack.



Damage to hearing!

Excessive volumes when using headphones or earphones, as well as changes to the default settings on the equaliser, driver, software or operating system, can generate excessive acoustic pressure that can cause hearing loss.

- Before pressing play, set the volume to the lowest setting.
- Start playback and increase the volume to a comfortable level.

Connect microphone

- Connect a microphone to the pink socket **13** with a 3.5mm mono jack.
- Position the microphone so that it is not pointing directly at the speaker. This will prevent acoustic feedback that creates a loud whistling sound.

Connecting audio input / recording source

This connection is used for connecting external analogue audio sources (e.g. stereo system, synthesizer).

- Connect the cable to the pale blue socket **14** with the 3.5mm stereo jack.

Connecting the network (LAN)

You can prepare your PC for network operation using the network connection.

A network cable normally has two RJ45 plugs so it does not matter which side is connected to which socket.

- Plug one end of the network cable into the PC socket **27**.
- Connect the other end to the other PC or hub/switch.

You can find more information on this in the section "Network operation".

Connecting power supply

Finally, connect your PC and monitor to the power supply.

- Plug the mains cable into the socket and then connect it to the mains cable socket **5** on your PC.

Please observe the following safety information:

 **DANGER!**

Risk of electric shock!

Even when the mains switch **1** is off, some components of the device are live.

- Pull the mains plug out of the socket to disconnect your PC from the power supply and isolate the device entirely from voltage sources.
- The mains plug socket must be near the PC and easy to reach.
- Only operate the PC on earthed, domestic power supply sockets.
- Use only the mains cable supplied.
- For extra safety, we recommend using an overvoltage protection device to prevent your PC from sustaining damage from the mains supply as a result of power surges or lightning strikes.
- The standard PC mains adapter has an on and an off switch **5**. These can be used to switch the PC on and off. When the switch is at the OFF (0) setting, no power is being supplied.

Do not start up your PC yet!

- Please read the next section first to find out what you need to look out for during start-up.

Starting up for the first time

The operating system and all hardware drivers are pre-installed. You do not need to install any of the discs supplied.

For some programs (e.g. telephone CDs or encyclopaedias), it may be necessary to insert the relevant disc to call up the data stored on it. The software will prompt you to do this if necessary.

Once you have made all of the connections and screwed on all of the required connections, you can start up your PC:

Starting up your PC

- Switching on the monitor.
 - Switch on the mains switch **5** by moving it to the setting **I**. (Set this switch to **0** to disconnect the power supply.)
 - Press the On/Off switch **1** once to switch on your PC.
- Your PC will now start and run through various steps.



There should be no bootable disk (e.g. the recovery disc) in the optical drive as this will prevent the operating system from being loaded from the hard drive.

The operating system will be loaded from the hard disk drive. The loading process takes a little longer during the initial setup. Once all the necessary data has been entered, the operating system will be set up. The operating system is fully loaded once the Windows® start-up screen appears.

NOTICE!

Data loss!

The initial installation may take a few minutes. Do not disconnect the PC from the power supply during initial installation and do not switch it off. This may adversely affect the installation. Only switch off the PC when installation has been successfully completed and the start screen appears.

- Follow the instructions on the screen. Step-by-step instructions will guide you through the process to be followed.

- The welcome procedure takes you through several screens and dialogues.
- Choose your required language and then the country you require.

Licence agreement

Please read through the licence agreement carefully. It provides important legal information about the use of your software product. To view the text in full, you must move the scroll bar downwards using the mouse until you reach the end of the document. You accept the licence agreement by checking the “I accept the agreement” button. Only this entitles you to use the product in accordance with the terms and conditions.

After entering a computer name you can connect your PC to the Internet immediately on the “Wireless” page if you already have a WLAN system or access point installed.

If you choose to skip this step, you can connect to the Internet later via the Windows® interface.

If you have already set up an Internet connection, you can now log in to your PC using a Microsoft account.

The Microsoft Store allows you e.g. to purchase new apps or update previously installed apps.

If you log in on a local account, you can set up a Microsoft account later at any time.

The following animated windows are purely for information about using the new Windows® operating system.

No entries of any kind may be made during the animation. The Windows® interface appears after the login process.

NOTICE!

Data loss!

In the first few days following the initial installation, Windows might update and configure data (e.g. with new updates), which can result in delays in the PC shutting down and starting up. For this reason, do not switch the PC off prematurely. This may adversely affect the installation.

Mouse

In addition to the two standard buttons, the mouse also features a third button in the scroll wheel.

Left button

The left mouse button is used to make a selection (click once) and to confirm this selection (double click).

Right button

The right mouse button is used to call up commands (context menus) in certain places.

Scroll wheel

The scroll wheel in the middle has two functions:

- you can use the wheel to scroll through long documents e.g. websites or text files.
- depending on the configuration of the mouse, the wheel can also be used as a third button.

The scroll wheel can be configured via the mouse settings in the control panel.



If the mouse pointer moves jerkily on the screen, please try operating it on a different surface (mouse pad). Glass and metallic surfaces might cause problems.

Keyboard

In addition to the standard numbers and characters, the keyboard can also be used to enter a number of special characters, as well as to perform certain commands depending on the program. These special functions are controlled using the keys **Alt**; **Alt Gr** and **Ctrl**.

The Alt, Alt Gr and Ctrl keys

The **Alt** key is used in combination with other keys to perform particular functions. These functions are determined by the program being used. To enter a keyboard shortcut with the **Alt** key, you press and hold down the **Alt** key as you press the other key. The **Alt Gr** key works in a similar way to the **Alt** key, but is used to obtain certain special characters. The **Ctrl** key (Control) performs program functions in the same fashion as the **Alt** key.

Hard drive

The hard drive is your main memory medium and combines high storage capacity with rapid data access.

Your PC is supplied with an OEM version* of the Microsoft Windows® operating system which fully supports all of the PC's performance features. We have configured your PC's hard drive so that you will be able to work with it optimally without having to install any additional drivers yourself.

The Windows® operating system requires part of the capacity to manage the hard drive and, therefore, the hard drive's full capacity is not available. This explains any differences between the BIOS display and the operating system display. The PC's operating system, other applications and security data are located on the hard drive meaning that the full capacity is already reduced.

NOTICE!

Data loss!

Never try to switch off the PC while it is accessing the hard drive as this could lead to a loss of data.

Important directories

NOTICE!

Data loss!

Do not delete or modify these directories or their content otherwise data may be lost or system functionality may be impaired.

* Original equipment manufacturer/program versions purchased from the manufacturer which are usually sold in conjunction with end devices

The root partition (**C:**) contains the operating system, the applications and the “Documents” folder for the configured user.

We have listed the most important directories below and described their contents.

C:\User

This directory contains a folder for each user configured on the computer. In this folder, there are a number of important files and folders required for starting and operating Windows® that are hidden by default for security reasons.

C:\Programs

This directory contains the files belonging to the installed applications.

C:\Windows

The main directory for the Windows installation. This directory contains the files for the operating system.

The second partition (**D:**) is used for data backup and also contains drivers (**D:\Drivers**) and utilities (**D:\Tools**) for your PC.



Depending on the configuration of the computer, there may be other partitions with different drive designations. Therefore, it should be noted that the drive designation “D:\” given here is an example and may be different on your computer.

D:\Drivers

This directory contains copies of the drivers required for your PC. These files may be required after a system restore.

D:\Tools

You will find additional programs and other documentation about your PC here.

D:\Recover

You will find the system recovery files here with which you can restore the computer to the factory settings.

NOTICE!

Data loss!

In addition, you will find the start-up files for the system restore tool,

as well as the installation files for Windows®, on other non-rewritable partitions. These partitions are not visible and cannot be deleted.

Optical drive

Loading a disc

NOTICE!

Risk of damage!

The high speeds in the drive can cause defective media to break and damage your device. Damage caused by faulty media is not covered under warranty and repairs will be chargeable.

- Do not use scratched, broken, dirty or poor quality discs.
- Do not stick protective film or other stickers onto the discs because the adhesive could damage the surface of the disc and destroy your data.
- Inspect discs carefully before inserting them. If damage or dirt is visible, do not use these discs.
- Press the eject button **4** on the optical drive **3** to open the drawer.
- Insert the disc into the drawer with the label facing upwards so that it is lying flat.
- Check whether the disc can move freely.
- Carefully push the drawer until you feel some resistance and the drawer automatically moves back into the optical drive.


In the factory settings, your optical drive is allocated the drive letter “**E:**”. You can conveniently access the data on your discs using Windows Explorer (**Computer**). Run Windows Explorer using the shortcut on the taskbar or by simultaneously pressing the Windows key and the “**E**” key. When accessing DVD videos (or audio and video files on conventional data CDs), the pre-installed media player is used automatically.

Removing the disc

NOTICE!

Data loss!

Do not try to remove the disc from the drive while the PC is accessing the optical drive.

- In order to remove the disc, press the eject button  again.
- Remove the disc and store it in a CD case.
- Close the drive again.

Playing/reading discs



Some discs start automatically when they are inserted. This depends on the operating system and the corresponding settings.

The optical drive on your PC is capable of playing audio CDs, DVD films or data discs. Once a disc has been loaded, a dialogue box opens containing various playback options. Normally, there will be a number of different options available.

Playback of DVD film titles includes decoding MPEG2 video, digital AC3 audio data and decoding CSS-protected content.

CSS (sometimes also referred to as Copy Guard) is the name of a data protection program used by the film industry to protect against illegal copying. Among the many controls for CSS licensees, the most important of the playback restrictions involve country-specific content. To make it easier to create geographically separate film releases, DVD titles are coded for specific regions. Copyright laws require that each DVD film be limited to a specific region (usually the region where it is sold). DVD film versions can be published in multiple regions but CSS rules require that each CSS decoder system may only be used for one region.



The region setting can be changed **up to five times** via the viewing software before the last setting becomes permanent. If you then wish to change the region setting again, this must be carried out by the manufacturer. Any shipping and configuration costs must be borne by the user.

Blank CDs and DVDs

Normal CDs are pressed from a glass master and then sealed. With blank discs, digital information is burned on using the drive's laser. They are therefore more sensitive than conventional discs.

Because of this, it is essential to avoid, particularly in the case of unused blanks:

- exposure to direct sunlight (UVA/UVB radiation)
- scratches and damage
- extreme temperatures

Card reader

If your PC is equipped with a card reader  8, you can use the following types of memory card.

When inserting the memory cards, ensure that the contacts are facing in the right direction, as specified in the list below. Inserting a card incorrectly may damage the card reader and/or the card.

Card type	Connection contacts
SD; SDHC (Secure Digital)	facing downwards
MMC (MultiMediaCard)	facing downwards
Memory Stick	facing downwards
Memory Stick Pro	facing downwards

Inserting a memory card

NOTICE!

Risk of damage!

The memory cards can only be inserted in one direction. Please observe the instructions in the section above.

- Slide the card in as far as it will go.

When a card is inserted into a slot, it is allocated a free drive letter on the workstation (but only if it is a removable data medium).

Removing memory card

- Pull the card out of the slot and store it properly.

Graphics system

This program gives you the option of customising your desktop. This includes the background image, the screensaver and other settings for your screen and your graphics card. The program can be started as follows:

- Right-click on the Windows desktop.
- Then left-click on **Show settings**

or

- Select the menu option **Settings** from the Start menu.
- Select the **System** option.
- Then click on **Screen**.
- Select the option **Adjust display** in the dialogue box that is now open.

Sound system

The external audio connections can be configured so that you can connect a surround sound system.

If you wish to change the default volume, click the loudspeaker icon in the taskbar.



Damage to hearing!

Excessive volumes when using headphones or earphones, as well as changes to the default settings on the equaliser, driver, software or operating system, can generate excessive acoustic pressure that can cause hearing loss.

- Before pressing play, set the volume to the lowest setting.
- Start playback and increase the volume to a comfortable level.

USB connection



Devices connected directly to the USB BUS may not draw more than 500 mA. The power output is protected by a fuse (limited power source as per EN 60950). If you want to connect devices that require more power, you need to connect them to two USB ports using a Y cable.

The USB 3.0 ports are fully backwards compatible with USB 2.0 and 1.1.

- Where possible, always connect your USB devices to the same port that they were originally installed on. Otherwise you will be assigned a new ID and the drivers will need to be reinstalled.

Network operation

Wireless LAN (Wi-Fi)

Your PC is equipped with WLAN. The components (module, antenna) have already been integrated into your PC and activated. You can disable this function using the Windows® device manager if required.

Wireless LAN enables you to establish a network connection to a corresponding remote station.



Do not operate your PC's wireless LAN function in areas where there are radio-sensitive devices (e.g. in hospitals etc.). If you are unsure whether the use of these devices will result in damage or interference, disable this option.

Requirements

A so-called LAN access point can be used as a remote station. An access point is a radio-transmitting device that communicates with your PC and controls access to the connected network. LAN access points are frequently found in large offices, airports, train stations, universities or Internet cafés. They provide access to particular services and networks or to the Internet. Access permissions are generally necessary and often result in usage charges. Access points often have built-in DSL modems. These so-called routers establish the connection to the existing DSL Internet connection and the wireless LAN. A connection can also be established to another end device using wireless LAN functionality without an access point. Without a router, however, the network is restricted to those devices directly connected to it. The wireless network connection works in accordance with the IEEE 802.11n* standard and is compatible with the IEEE 802.11b/g standard. Other standards (802.11a etc.) are not supported.

If encryption is used for the transfer, the same procedure must be used for all devices. Encryption is a procedure to protect the network from unauthorised access.

The transfer speed can vary depending on the distance and the number of users accessing the remote station.

* To make use of the full performance, a WLAN router compatible with the 802.11n standard is required.

Settings

Reset PC to factory settings

In the event of problems with installation or other software problems which make it necessary to reinstall the software, Windows® offers three options for reinstalling Windows® on your PC.

First ensure that you have backed up all important data and programs.

Start system restore

- After restarting, press the F11 key or start up the PC with the F11 key held down to launch **PowerRecover**.

or

- Click the **PowerRecovery** Windows® desktop app to run the program from the Windows® desktop.

You will be offered the following possible options:

- **Burn drivers and tools onto an optical disc**

Create a support disc

- **Update your PC, without damaging your data**

Update your PC, without deleting your data.

- **Restoring the factory settings**

Choose between two recovery options:

- **Reset to HDD - user data not saved**

All data on the PC will be permanently deleted.

The factory settings will be restored.

- **Reset to HDD - user data saved**

The factory settings will be restored and all user data under **C:\USER** will be backed up.

NOTICE!**Data loss!**

The recovery process takes a long time when you select the option to back up user data. Only the data located in the folder C:\USER will be backed up. All other data will be deleted. It is therefore important to perform regular data backups to external data media. We do not accept any liability for claims for compensation arising from a loss of data or for any consequential damages.

- Click **Next** and follow the on-screen instructions to restore the factory settings.

UEFI firmware setting

The UEFI firmware setting (the basic hardware configuration of your system) offers you numerous configuration options for operating your PC.

For example, you can modify the operating mode for interfaces, security features or power supply management.

NOTICE!**Data loss!**

The PC has already been configured by the manufacturer to ensure optimum operation. Please only change settings where strictly necessary and if you are familiar with the configuration options.

Executing the UEFI firmware setting

You can only run the configuration program upon system start-up. If you have already started up your PC, exit Windows® and restart your PC.

- Before restarting your PC, press the button **Entf** and hold it down until the message **Entering Setup** appears.

Clear CMOS (optional)

If you have changed settings that unexpectedly result in the PC becoming unstable, you can delete the CMOS memory using the **Clear CMOS** button and restore the UEFI to its factory settings.

FAQ - Frequently Asked Questions

Where can I find the necessary drivers for my PC?

- The drivers can be found in the second hard drive partition in the Drivers and Tools folders.

What is Windows activation?

- You will find a relevant section in these operating instructions containing detailed information on this topic.

How do I activate Windows?

- Windows is activated automatically as soon as an Internet connection is established.

How do I activate Windows without an Internet connection?

- Windows can also be activated over the telephone. Follow the instructions in the section **Windows activation** to activate Windows by telephone.

When is restoring factory settings recommended?

- This method should only be selected as a last resort. Read about the alternatives in the **System restore** section.

How do I perform a data backup?

- Perform a backup or backup synchronisation of selected data onto external media to familiarise yourself with the technology. A backup is of no use if you are unable to recover the data or if the medium is faulty or is no longer available.

Why do I need to reinstall my USB device even though I have already done it?

- If the device is not operated on the same USB port as the one it was installed in, it automatically receives a new identifier. The operating system then treats it like a new device and tries to reinstall it.
- Use the installed driver or connect the device to the port on which it was originally installed.

Customer service

What to do in case of hardware problems

Malfunctions can sometimes have different causes, so we have included a guide that might help to solve any problems.

If these tips don't do the trick, then we'll be more than pleased to help you out. Just give us a call!

Find the cause

Start by carefully checking all the cable connections. If the indicator lights are not working, ensure that the PC and all peripheral devices are correctly connected to the power supply.

- Check the mains socket, mains cable and all of the switches in the main socket's circuit.
- Turn off the PC and check all cable connections.
- Do not swap around the cables for the various devices, even if they look exactly the same. The polarity of the various cables may be different.
- Once you have ensured that the power supply to the device is working correctly and all connections are intact, then switch the PC back on.

Faults and possible causes

The screen is black.

- Make sure that your PC is not in hibernate mode.

Wrong time and date displayed.

- Click the clock display in the taskbar. Select the option **Change date and time settings...** and then set the correct values.

The cards in the card drive will be allocated a different drive letter after the reboot.

- This can happen if the card reader updates its slot during system start-up. New IDs are issued, if required, which can lead to some cards having new drive letters.

No data can be read by the optical drive.

- Check whether the disc has been inserted correctly.

The mouse or keyboard does not work.

- Check the cable connection.
- If you have a wireless mouse or wireless keyboard, check the batteries and the receiver.

Not enough space is available on the hard disk drive.

- Save data you do not need to CD-Rs, DVDs or other external media.

The PC will not start.

- If the cable connections are correct, try resetting the PC's mains adapter. Move the mains switch on the back of the PC to the position **0 (OFF)**. Then press and hold the mains switch on the front for 10 seconds. Wait another 5 seconds and start up your PC again.

Apps (e.g. the weather app) cannot be displayed as live tiles.

- Check the date, time zone and time.

Do you need more help?

You've checked through the suggestions in the previous section and you're still having problems? Then call the hotline for the country where you bought the PC.

We will try to help you over the phone. Before contacting us, however, please have the following information ready:

- Have you made any upgrades or modifications to the initial configuration?
- What peripheral devices do you use?
- What messages, if any, appear on the screen?
- What software were you using when the problem occurred?
- What steps have you already taken to try and rectify the problem?

Driver support

The system has been thoroughly and successfully tested with the installed drivers in our test laboratory. It is normal in the computer sector, however, for the drivers to need updating from time to time.

This is because there may be compatibility problems with other components (programs, devices) which have not yet been tested.

Transport

Please note the following advice on transporting your PC:

- Pack your PC using the original packaging to avoid transport damage.

Cleaning and care

You can extend the life expectancy of your PC by following the advice below:



None of the parts inside the PC housing require cleaning or maintenance.

- Always unplug the device and disconnect all cables before cleaning. Clean the PC with a damp, lint-free cloth.
- Do not use solvents, corrosive agents or aerosol-based detergents.
- Do not use CD-ROM cleaning discs or similar products that clean the lens of the laser to clean your optical drive (CD/DVD). The laser does not need to be cleaned.
- Dust can block the ventilation openings, which can lead to overheating and malfunctions. Check at regular intervals that the ventilation openings guarantee adequate air circulation (approx. every 3 months). Use a vacuum cleaner to remove dust from the ventilation openings. If your device regularly attracts a lot of dust, we recommend that you also have the inside of your PC housing cleaned by a specialist.

Upgrading/modifying and repair

Upgrades and modifications to your PC should only be carried out by qualified specialists. If you do not have the necessary qualifications, have the work carried out by a qualified service technician. Please contact your customer service department if you are having technical problems with your PC.

if a repair must be carried out, please contact only our authorised service partner.

Notes for service technicians

- Before opening the housing, disconnect all power and connecting cables. If the PC is not disconnected from the power supply before being opened, there is a risk of fatal electric shock. There is also a risk that the components could be damaged.
- Internal components of the PC may be damaged by electrostatic discharge (ESD). Carry out repairs, as well as system enhancements or modifications, at an ESD workplace. If such a workplace is not available, wear an antistatic cuff or touch an earthed, metallic object. We will charge for any repairs to damage caused by incorrect handling.
- Use only original replacement parts.

CAUTION!

Risk of explosion!

There is a lithium battery on the motherboard.

Batteries are special waste and must be disposed of properly.

- Never try to recharge the battery.
- Do not expose the battery to high temperatures or fire.
- Please note the polarity when changing the battery.
- Keep batteries away from children.
- Replace the battery only with the same type (CR 2032).

Information on laser radiation

- Laser equipment classified as laser class 1 to laser class 3b can be used in the PC. The equipment meets the requirements for laser class 1.
- By opening the housing of the optical drive, you will have access to laser equipment classified up to laser class 3b.

The following should be observed when removing and/or opening this laser equipment:

- The integrated optical drive contains no parts that require repair or maintenance.
- Repairs to the optical drive should only be carried out by the manufacturer.

- Do not look directly into the laser beam, even when using optical instruments.
- Do not allow yourself to be exposed to the laser beam. Avoid exposing your eyes or skin to the laser beam – either directly or through scattered laser radiation.

Recycling and disposal

If you have any questions about disposal, please contact your sales agent or our service centre.



Packaging

Your device has been packaged to protect it against transportation damage. Packaging is raw material and can be re-used or added to the recycling system.



Appliance

At the end of its service life, the device should not be disposed of with the household rubbish. Enquire about the options for environmentally friendly and appropriate disposal.



Batteries/rechargeable batteries

Do not dispose of used or defective batteries in the household rubbish! They should be taken to a collection point for used batteries.

Legal Notice

 
Copyright © 2014

All rights reserved.

This operating manual is protected by copyright.

Mechanical, electronic and any other form of reproduction is prohibited without the written permission of the manufacturer.

Copyright is owned by the company:

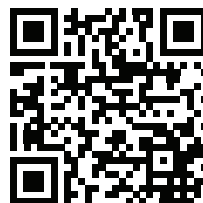

Medion AG

Am Zehnthof 77

45307 Essen

Germany

Subject to technical and optical changes as well as printing errors.

The operating manual can be reordered via the service hotline and is available for download via the service portal at www.medion.com/au/service/start/.

You can also scan the QR code above and download the operating manual onto your mobile device via the service portal.

Index

C

Cable connections	19
Card reader	31
Memory Stick	31
Memory Stick Pro	31
MMC	31
Removing memory cards	32
SD	31
SDHC	31
Cleaning and care	40
Cleaning agents	40
Clear CMOS	36
Connection	19
Audio input	22
Audio output	21
HDMI	20
Headphones	21
LAN	22
Microphone	22
Monitor	20
Power supply	23
Recording source	22
Speaker	21
USB devices	21
Customer service	38

D

Data backup	14
Declaration of conformity	11
Disposal	42
Driver support	39

E

Environmental requirements	16
Ergonomics	16
Arms	18
Back	17
General	17
Head	18
Legs	18
Wrists	18

F

Factory settings	35
System restore	35
FAQ	37
Front slot cover	20

G

Graphics card	32
Graphics system	32

H

Hard drive	27
Hardware problems	38
HDMI	20

I

Important directories	27
Installation location	16

K

Keyboard	26
----------------	----

L

Laser radiation	41
-----------------------	----

M

Monitor	20
Mouse	26

N

Network.....	22, 33
LAN.....	22
LAN access point.....	34
Wireless LAN.....	33

O

Operating safety	13
Operation	
Keyboard.....	26
Mouse	26
Optical drive.....	29
CD-ROM.....	29
DVD.....	29

P

Power supply.....	23
Proper use.....	11

R

Recycling	42
Repairs.....	40

S

Security	
Cable connections	19
Connection	19
Service technician.....	41
Setting up the PC	16
Sound system.....	32
Start-up	24
System restore.....	35
Burn drivers and tools onto an optical disc.....	35
PowerRecovery.....	35

Reset to HDD - user data not saved.....	35
Reset to HDD - user data saved ...	35
Restoring the factory settings.....	35
Update your PC, without damaging your data.....	35

T

Transport.....	40
Troubleshooting.....	38

U

UEFI firmware setting.....	36
Upgrades/modifications.....	40
USB	21, 33

W

Wireless LAN	33
--------------------	----



MEDION[®]

Multimedia PC P4120 D (MD 8324)

Warranty Details

The product is guaranteed to be free from defects in workmanship and parts for a period of 24 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

AFTER SALES SUPPORT

  **1300 884 987**

 **www.medion.com.au**

2

YEARS WARRANTY



MEDION®

Multimedia PC P4120 D (MD 8324)

Repair and Refurbished Goods or Parts Notice

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the Supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost.

We recommend you save this data elsewhere prior to sending the product for repair.

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type of use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 884 987 or write to us at:

MEDION Australia Pty Ltd
St Leonards, NSW 2065
Australia

Service Hotline Operating Hours: Mon-Fri 08:30AM to 06:00PM EST
Australia@medion.com

AFTER SALES SUPPORT

  **1300 884 987**

 www.medion.com.au



Warranty Certificate

PRODUCT NAME Multimedia PC

BRAND NAME MEDION®

PRODUCT NUMBER 92975

MODEL NUMBER MD 8324

Name

Address

Email

Daytime Tel No

Date of Purchase

Serial Number

We recommend that you attach a photocopy of your receipt, showing the date of purchase, to this Warranty certificate and keep for your reference. Please do not send to the address below. In the event of a product fault, please call the Customer Service hotline. Please ensure that you have the product details (as shown on this card) at hand so that we are able to respond as quickly and efficiently as possible.

MEDION Australia Pty Ltd

St. Leonards, NSW 2065

Australia

MEDION Help Desk 1300 884 987 (Operating Hours: Mon-Fri 08:30AM to 06:00PM EST)

Australia@medion.com / www.medion.com.au

AFTER SALES SUPPORT



1300 884 987



www.medion.com.au

09/2015

2

YEARS WARRANTY



Warranty Certificate

Congratulations! You have made an excellent choice of this quality product. Our commitment to quality also includes our service. Should you, contrary to expectations, experience defects due to manufacturing faults, ALDI will provide you with a warranty against defects as follows:

Warranty

The product is guaranteed to be free from defects in workmanship and parts for a period of 2 years from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Proof of Purchase

This warranty is valid for the original purchase and is not transferable. Please keep your purchase docket, tax invoice or receipt as the best proof of purchase, and as proof of date on which the purchase was made.

Extent of Warranty

This warranty is limited to defects in workmanship or parts. All defective products or parts will be repaired or replaced. This warranty does not cover batteries or any other consumable items.

Normal Wear and Tear

This warranty does not cover normal wear and tear to the products or parts.

Exclusions

This warranty does not cover:

- Any defects caused by an accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorised modification, loss of parts, tampering or attempted repair by a person not authorised by the distributor.
- Any product that has not been installed, operated or maintained in accordance with the manufacturer's operating instructions provided with the product.
- Any product that has been used for purposes other than domestic use.
- Any damage caused by improper power input or improper cable connection.

To Make a Claim

This warranty against defects is provided by ALDI Stores, Locked Bag 56, St. Marys Delivery Centre, NSW 2760, Phone (02) 9675 9000. If a defect in the goods appears within 3 years, you are entitled to claim a warranty, please contact or send all warranty claims to:

MEDION Australia Pty Ltd

St Leonards, NSW 2065

Australia

Hotline: 1300 884 987 (Opening hours: Mon - Fri 08:30AM to 06:00PM EST)

Internet www.medion.com.au

E-mail Support australia@medion.com

When making a return, please ensure the product is properly packaged so as to ensure that no damage occurs to the product during transit.

Please provide the original or a copy of the proof of purchase. Also please make sure you have included an explanation of the problem.

Please note the costs of making a warranty claim, including any return postage, will be covered by the supplier identified above.

Please note that upon receiving your warranty claim, the supplier will send, via the post or email, a repair and refurbished goods or parts notice. Please provide your email address and advise the supplier, if you wish to obtain a repair and refurbished goods or parts notice via email.

AFTER SALES SUPPORT



1300 884 987



www.medion.com.au

09/2015

2

YEARS WARRANTY



Made in China

MEDION AG
AM ZEHNTHOF 77
45307 ESSEN
GERMANY
www.medion.de

AFTER SALES SUPPORT



1300 884 987



www.medion.com.au

MODEL: MD 8324

PRODUCT CODE: 92975

09/2015

2

**YEARS
WARRANTY**