



Sandwich Maker

Model: RS1936SM

Dear Valued Customer

Thank you for choosing to purchase this appliance, we appreciate your business. We believe that we have provided a product, which is value for money.

TECHNICAL INFORMATION

Please make sure that your house installation voltage corresponds to the voltage marked on the unit.

Mains supply:	230 – 240V ~ 50 Hz
Output:	750 Watts

INSTRUCTION MANUAL

SAVE THESE INSTRUCTIONS

IMPORTANT SAFEGUARDS

When using electrical appliances basic, safety precautions should always be followed, including the following:

1. Carefully read these instructions before using your appliance.
2. Keep out of reach of children. This appliance is not intended for use by young children or infirm persons without supervision. Young children must be supervised to ensure that they do not play with the appliance
3. **VERY IMPORTANT:** Do not immerse in water or other liquids or use near wash basins or sinks. Ensure that the appliance does not get wet (water splashes etc.) and do not use it with wet hands.
4. Do not touch hot surfaces. Use handles.
5. Unplug from Mains outlet when appliance is not in use and before cleaning.
6. Always ensure that the sandwich maker has completely cooled down before storing and before cleaning.
7. An appliance dropped or damaged should not be used until examined by a service engineer.
8. Do not permit the mains lead to come in contact with hot objects. Please ask a service engineer to replace a worn or damaged mains lead immediately with an approved lead of the same size and type. A damaged cord must be replaced by the manufacturer or its service agent or a suitably qualified person in order to avoid a hazard.
9. Use this appliance only for its intended use.
10. The appliance should not be used outdoors, placed near a hot gas or electrical burner or placed in a heated oven.
11. Do not let cord hang over edge of table or counter.
12. An appliance should never be left unattended when plugged in.
13. This appliance must be earthed.

14. This appliance is intended for household use only and not for commercial or industrial use.
15. If appliance is to be used by a third party, please supply the instruction manual with it.
16. No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling.

CAUTION

Do not attempt to service this appliance yourself. Refer servicing to qualified service personnel.

FEATURES

- Thermostatically controlled fast and even heat distribution.
- Thermostatic lights. The red light illuminates to indicate that sandwich maker is on and heating. This light will turn on and off, as the thermostat automatically keeps the sandwich maker at the proper cooking temperature. The green light indicates the sandwich maker is ready to use.
- Scissor action divides each sandwich into two snack size servings and seals in the filling.
- Non-stick cooking plates make sandwiches easy to remove after cooking and for easy cleaning.
- Rubber feet that prevent sandwich maker moving and marking bench top.
- Securing catch that holds sandwich maker firmly closed to seal the sandwiches.

BEFORE INITIAL USE

After unpacking the sandwich maker, open cover and wipe top and bottom plates with a damp cloth or towel. Brush or wipe the toasting grids with a small amount of vegetable oil or non-stick cooking spray.

OPERATING INSTRUCTIONS

- Plug the sandwich maker into an AC power outlet and ensure that the indicator light comes on indicating that power is available.
- Close the sandwich maker and prepare sandwich while the appliance is heating.
- When the sandwich maker is ready (after about 5 minutes) the red indicator light will go off and the green indicator light will come on.
- Fully open the sandwich maker, place a slice of bread in the bottom half with the buttered side against the plate.
- Place filling on top of bread. Keep filling about 10mm clear of edge of bread so that the out side edges can be sealed.
- Place top slice of bread with the buttered side up and carefully close the two parts of the appliance. Do not force the appliance shut as steam may be ejected from between the plates risking burning of fingers.
- NOTE: During toasting the indicator lights will cycle "on" and "off" while the thermostat keeps the sandwich maker at the correct operating temperature.
- Your sandwich will take between 2-5 minutes to cook depending on filling and required result.
- Open the sandwich maker and remove the sandwich. Use a plastic or wooden spatula. Never use a metal knife as this may damage the non-stick coating.
- Prepare further sandwiches if required whilst one is cooking. After use, remove the plug from the wall socket.

CARE AND CLEANING

- After use and before cleaning, remove plug, wait for sandwich maker to cool.
- Wipe the inside and edges of the plate with absorbent paper towelling or a soft cloth.

- Should filling be difficult to remove, pour a little cooking oil onto the plate and wipe off after 5 minutes, when the food has softened.
- Wipe the outside with only a slightly moistened cloth ensuring that no moisture, oil or grease enter the appliance.
- Do not clean the inside or outside with any abrasive scouring pad or steel wool as this will damage the finish.

TO STORE: Unplug sandwich maker and allow to cool. Store in its box or in a dry place. Store the cord loosely coiled. Never wrap it tightly around the unit. Store the cord coiled securely around the cord storage base. Do not put any stress on cord where it enters the appliance as this may cause the cord to fray and possibly break.

SANDWICH MAKER RECIPES

Bacon, Lettuce and Tomato

4 Slices White Bread
1 Tomato, Sliced
Few Pieces of Lettuce
4 Thin Slices Bacon
Softened Butter

Spread one side of the bread with softened butter, put two slices on the sandwich maker, buttered side down. Arrange the tomato, chopped lettuce and grilled bacon on top. Cover with the other slices of bread, buttered side up. Toast for four minutes.

Scrambled Eggs and Bacon

4 Thin Slices Bacon
4 Slices White Bread
Softened Butter
2 Tablespoons Milk
Salt and Pepper
1 Large Egg
½ Oz Butter

Grill the Bacon and cut into pieces. Scramble the egg with butter, milk and seasoning until lightly set. Spread one side of the bread with softened butter, put two slices on the sandwich maker, buttered side down. Arrange the scrambled egg and bacon on top and cover with the other slices of bread, buttered side up. Toast for four minutes.