

USER MANUAL



To make sure the long lifetime of the digital photo frame, PLS pay attention to reading this user manual!

DIRECTORY

PREFERENCE

SUMMARIZE

APPEARANCE INTRODUCE

REMOTE CONTROLLER INTRODUCE

USE'S GUIDE

LANGUAGE SET

TROUBLE SHOOTING

PRODUCT SPECIFICATION

Preference

Appreciate for your choice to our digital photo frame. We prepare the service manual for your reference so that you can operate this machine easily.

Safety & Maintain

To make sure the long lifetime of the digital photo frame, PLS pay attention to following

factors:

1. When you use this machine firstly, PLS read the manual carefully.
2. Please pay attention to the warning and follow the instruction in the manual.
3. Please use the AC Adapter together with the machine, don't use any other adapter. Otherwise your digital frame will be damaged.
4. Please avoid sprinkling the water on the machine. When you use it, Please be far from the water.
5. Don't press the digital frame greatly, otherwise the product will be damaged. Also please put the digital frame on the flat and steady surface to avoid the damage.
6. All the opening hole or the slot is used for the ventilation. Don't block up all these hole to disperse the hot. Also don't put and store the product near to the heat object or the place full of dust. Otherwise the digital frame will become very hot and lead to danger.
7. Please pay more attention and follow the power criterion in the bottom or back of the digital frame. If you are not sure the local voltage, please consult the local dealer or your power supply company.
8. Don't trample or press the cable.
9. If you use the extension cable to supply the power to the digital frame, please make sure that the total Ampere of the total power consumption for all the electric equipment in one extension is not more than the max Ampere of extension or the plug on the wall stipulated.
10. Don't put any other thing but the right memory card into the slot of the machine. You should know there is a large danger when you put anything into the machine and touch the inverter inside the machine. Especially warn the child don't do like that.
11. LCD panel is easy to be destroyed, please don't press or bump it strongly.
12. Don't touch the bottom of the digital frame for a long time to avoid the burn your skin. As the long-playing frame will get very hot.
13. Don't put the AC Adapter on the non-ovenproof surface when it is in the working status. It is the normal circs that the AC Adapter disperse the hot when it works.
14. Before clean the product, please cut off the power and pull out the plug firstly. Then use the soft and clear fabric to clean. Please be careful that you can not use any kind of sprayer solvent or the other cleanser.
15. Before you move it, Please make sure that you have cut off the power

16. For safety reasons, never watch or turn on TV while driving.

17. It is very dangerous to watch or operate TV while driving]

 
18. A few highlights or dark spots may occur on the LCD screen. It is a very common problem to the active matrix display technology, and does not necessarily mean any defects or faults. Never try to repair this machine by yourself. In case of any fault or failure, please turn off the TV set at once, and notify our Company or the authorized dealer. The TV set is made up of many precision electronic components. Any disassembly or modification may lead to damage or breakage.

I. (Summarize)

This chapter introduces different parts of the digital photo frames, please know well the unit before operation.


1. Envisage appearance

1. LCD TFT screen
2. Frame
3. Plastic cabinet
4. IR window

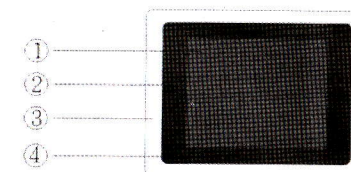


1. 2 Rear appearance

 1. Built-in speaker
2. Stand
3. USB host slot
4. DC power input slot
5. Function has been closed
6. AV output slot

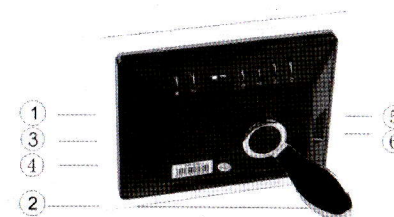


1.3 Bottom Side appearances

 1. USB slot
2. SD, MS, MMC, SM XD card slot
3. CF card slot

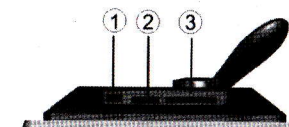

1.4 Top side appearance

 - ① POWER SWITCH
- ② ENTER
- ③ STOP
- ④ ▲▼◀▶ : UP, DOWN, LEFT, RIGHT

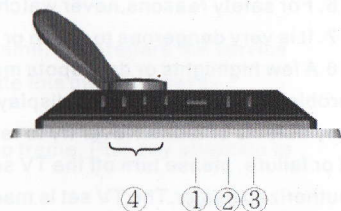

ENTER: enter or starting control column.

STOP : stop and return to the main menu.

UP : stop state: up.

 
starting control column state: close control column,
photo view state: starting brightness, contrast, hue/Color
Temperature control column.

DOWN : stop state: down.

LEFT : stop state: left/return;

RIGHT: stop state: right/enter.

II 、 Remote controller introduction

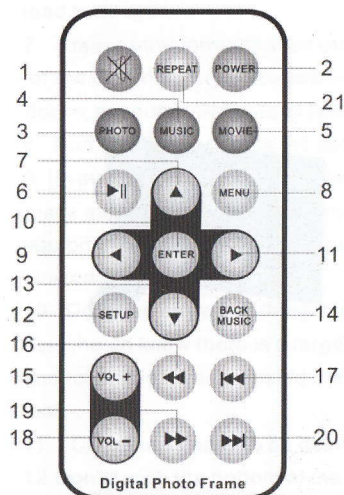

1. MUTE: Press this key to sound off in playing mode, press again to sound on. Or press VOL+/VOL- to sound on in the mute mode.
2. POWER: Press one time to power off, press one time to power on again.
3. PHOTO: Enter the photo file playing mode directly.
4. MUSIC: Enter the music file playing mode directly.
5. MOVIE: Enter the movie file playing mode directly.
6. PLAY/PAUSE: Play or pause current playing program, it can be used to "enter" sometimes.
7. UP: Move the cursor up.
8. MENU: Stop the current playing and returns.
9. LEFT: Move the cursor left.
10. ENTER: Confirm and play.
11. RIGHT: Move the cursor right.
12. SETUP: Enter the basic setup function.
13. DOWN: Move the cursor down.

14. BACKMUSIC: Enter into playing photo with the background music.

(Note: 1. Slideshow can not be playing in the SETUP mode.

2. The photo can not be rotate in slideshow mode.)

15. VOL+: Adjust the volume+

16. Fast backward.

17. Previous key.

18. Adjust the volume-.

19. Fast forward.

20. Next key.

 
21. When you used COPY or DELETE, it can help you do.

III 、 User's guide:

3.1. Operation interface


Insert the power supply then turn on the power switch will be display the following menus: (If you insert card of SD/MS/MMC/SM/CF, It can display like following, if not it only display "setup" and "calendar" functions.)

3. 1. 1 "Cards select"----enter into playing mode.
3. 1. 2 "Setup"----enter into basic setup.
3. 1. 3 "Calendar"----enter into calendar, alarm and time display.

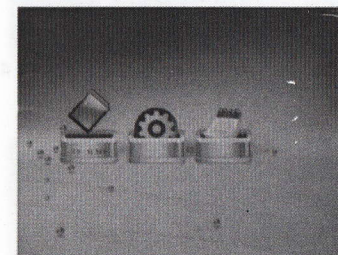

3. 2 Functions to select the menu:

 
You can enter into "MOVIE"/"MUSIC"/"PHOTO" or "FILE" MODE.

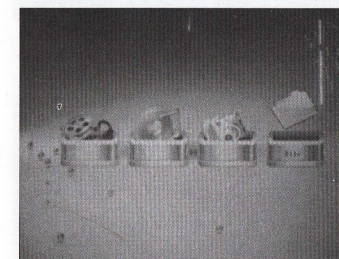

3. 3 UP, DOWN, LEFT, RIGHT select then press ENTER button to enter the Playing mode.

Explain:

 - a) ▲ / ▼ Select file and press ENTER button to confirm.
- b) ▲ / ▼ Select file and press ENTER button to play.
- c) MENU Return to the last menu.

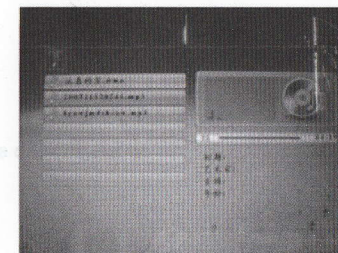

3. 4 File management

Copy file

- In the file edit: on need copy files to press **▶** and can select your wanted file (Chart 1).
- Press **REPEAT** to select your purpose. COPY or DELETE. (Chart 2)
- Select the COPY then select the destination. (Chart 3)
- Press ENTER button to confirm.
- Select the **DELETE** item in this mode and can delete the file(Chart 4).

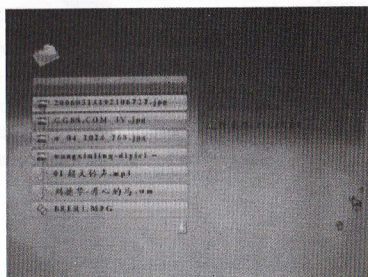 


Chart 1

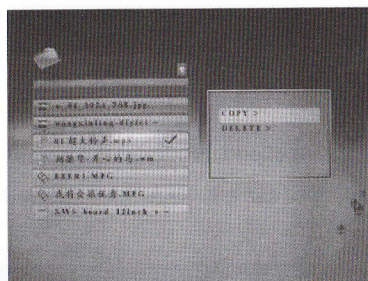 


Chart 2

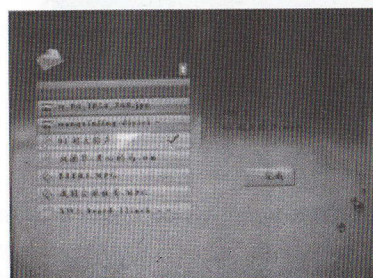 


Chart 3

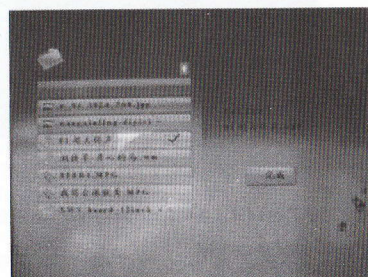 


Chart 4

3. 5 Movie

used **◀/▶** on the screen information to select and press ENTER to finish related function when play(Chart 5). Press **MENU** to return menu

Mainly information function:

Press **REPEAT** the control interface.

- Estate display(play、pause or stop)
- Play time
- Play or pause
- Stop
- Return to previous movie
- Fast backward
- Fast forward
- Enter to next movie
- Zoom on



Chart 5. Movie play & information

3. 6 Play photo

Mainly information function:

- Estate display
- Play or pause
- Stop to play
- Previous song
- Next photo
- Display files name

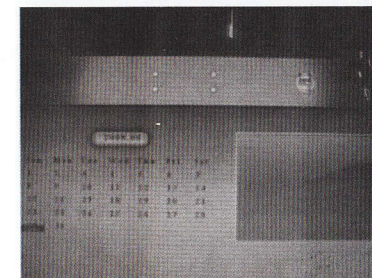 


Chart 6. Music play & information

3. 7: Clock menu introduce:

 
Mainly disply information:

- Each monthly calendar
- Picture display
- Time display
- Alarm time




3. 8: SETTINGS introduce:


- Press **▲/▼** to select
- Press **▶** or **◀** to select subdirectory
- Press **ENTER** to confirm
- Press **MENU** to return

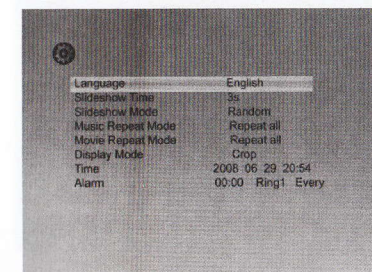


IV、Others set

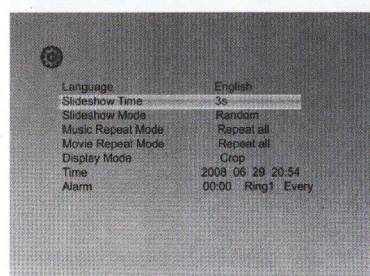 

 
**Background music
play the picture of speedy**

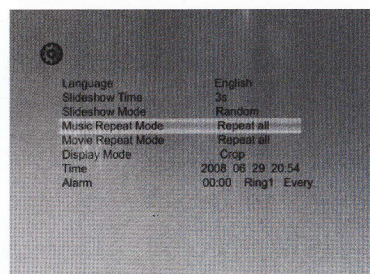


Music Playing Mode Set

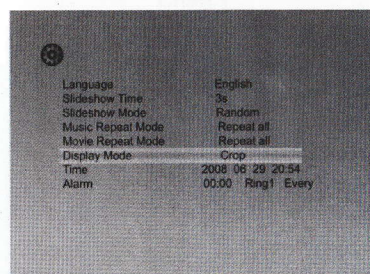 


Display Mode Set

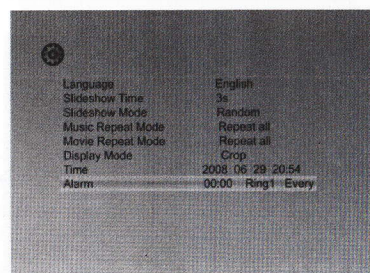 


Alarm set

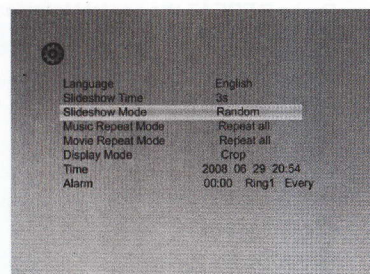 


Picture convert mode

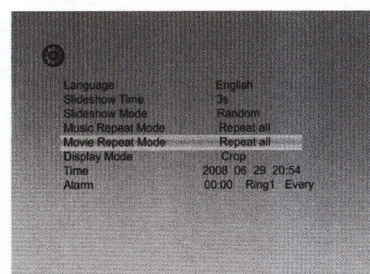 

Movie Playing Mode Set

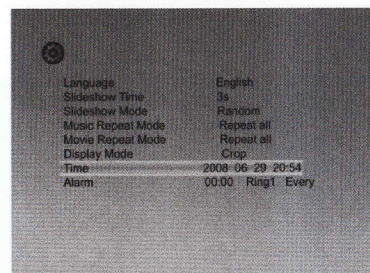 

Clock set

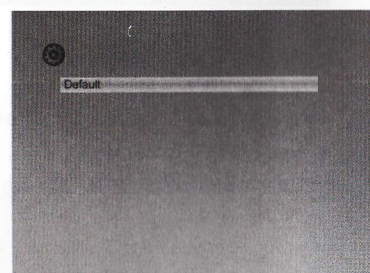 

Default Set

V、Troubles and shooting

Problems	Analysis
No sound	1. The Mute button is on 2. The volume is in the lowest level.
No background music	Slide Music is off
Can't power on	1. AC plug does not connect well 2. AC adaptor can not work
Can't copy	Memory card does not insert correctly.
No response when connecting computer	1. System version is too low 2. USB port has problem
Remote controller does not work	No battery, no power

VI、Product specification

Input Formats: Compact Flash® (CF type I & II), Micro Drive TM (MD), Memory Stick®(MS), Memory stick DUO®, MultiMedia Card TM(MMC), Secure Digital TM (SD), Mini-SD TM, USB Pen Drive

Supported File Formats: JPG, MP3, AVI

Supported Built-in Flash: 2GB NAND FLASH

Support: Windows Me/2000SP4/XPSP2