

## ALL RIGHTS RESERVED

Spice Retail Ltd. ©2015. All rights are reserved. No part of this document can be reproduced without permission. All trademarks and brand names mentioned in this publication are property of their respective owners.

While all the efforts have been made to ensure the accuracy of contents in this manual, we presume no responsibility for errors or omissions or statements of any kind, whether such errors are omissions or statements resulting from negligence, accidents, or any other cause. We operate a policy of continuous development and reserve the right to make changes, modifications and improvements to the device, device features/specifications or any of its parts without prior notice.

Your device may have preinstalled bookmarks and links for third party internet sites and may allow you to access third party sites. These are not affiliated with Spice, and Spice does not endorse or assume liability for them. If you access such sites, take precautions for security or content.

The limited warranty does not cover user manuals or any third party software, settings, content, data or links, whether included/downloaded in the product, whether included during installment, assembly,

shipping or any other time in the delivery chain or otherwise and in any way acquired by you. To the extent permitted by applicable law(s), Spice does not warrant that any Spice software will meet your requirements, will work in combination with any hardware or software applications provided by a third party, that the operations of the software will be uninterrupted or error free or that any defects in the software are correctable or will be corrected.



*Note: User's Manual is provided just to guide the user about the functionality of the device. This does not seem to be any certificate of technology. Some functions may vary due to modifications and up-gradations of software or due to printing mistake.*

## TABLE OF CONTENTS

SAR (SPECIFIC ABSORPTION RATE) .....	8
<b>UNDERSTANDING YOUR DEVICE .....</b>	<b>9</b>
GENERAL INFORMATION .....	9
TECHNICAL SPECIFICATIONS.....	9
DEVICE OVERVIEW .....	10
POSITION OF KEYS .....	10
FUNCTION OF KEYS.....	11
STATUS ICONS .....	12
<b>GETTING STARTED.....</b>	<b>13</b>
INSTALLING SIM CARD AND BATTERY.....	13
INSTALLING MEMORY CARD .....	13
CHARGING THE BATTERY .....	14
SWITCH ON/OFF THE DEVICE .....	14
AUTOMATIC CUSTOMER REGISTRATION.....	15
<b>BASIC OPERATIONS .....</b>	<b>15</b>
TO MAKE CALLS.....	15
TO DIAL INTERNATIONAL NUMBER.....	15
ANSWER/REJECT AN INCOMING CALL .....	16
<b>MAIN MENU .....</b>	<b>16</b>
CONTACTS .....	17
MESSAGE.....	18
CALL LOGS .....	19
MULTIMEDIA.....	21
SPICEGANG .....	22
SETTINGS .....	22
ORGANIZER.....	27
FUN & GAMES .....	29
INTERNET .....	29
SUPPORT AND CONTACT .....	30
ENVIRONMENTAL CONCERN .....	31

## SAFETY PRECAUTIONS

Please read the following safety guidelines before using the device.

- Do not use the phone while you are driving.
- Do not place magnetic storage media near your phone. Radiation from the phone may erase the information stored on them.
- Keep your phone and its accessories away from children.
- Mobile phones can interfere with the functioning of medical devices such as hearing aids or pacemakers. People having active medical implants should keep their cell phone at least 15 cm away from the implant.
- Permanent hearing loss may occur if you use earphones or headphones at high volume.
- Use a wireless hands-free system (headphone/ headset) with a low power Bluetooth emitter.
- Keep your calls short or send a text message (SMS) instead. This advice applies specially to children adolescents and pregnant women.
- Use cell phone when the signal quality is good.
- Keep distance – Hold the cell phone away from body to the extent possible.
- Do not press the phone handset against your head. Radio Frequency (RF) energy is inversely proportional

to the square of the distance from the source -- being very close increases energy absorption much more.

- Put the cell phone on speaker mode.
- If the radio signal is weak, a mobile phone will increase its transmission power. Find a strong signal and avoid movement – Use your phone where reception is good.
- Metal & water are good conductors of radio waves so avoid using a mobile phone while wearing metal-framed glasses or having wet hair.
- Let the call connect before putting the handset on your ear or start speaking and listening – A mobile phone first makes the communication at higher power and then reduces power to an adequate level. More power is radiated during call connecting time.
- If you have a choice, use a landline (wired) phone, not a mobile phone.
- When your phone is ON, don't carry it in chest/breast or pants pocket. When a mobile phone is ON, it automatically transmits at high power every one or two minutes to check (poll) the network.
- Reduce mobile phone use by children as a younger person will likely have a longer lifetime exposure to radiation from cell phones.

**Notice:**

- Do not dismantle the device or accessories otherwise, manufacturer is not liable to pay for damages as the device and accessories are not covered by warranty.
- Use only original batteries and charging devices.
- Please back up your important data timely and keep them properly. The company is not liable for any failure to call or loss of data due to mis-operation, poor signal or power cut, etc.
- All the screens in this manual are for reference only, and some contents actually displayed may depend upon the presetting of the service provider or the network operator, or the SIM card. If any functions referred to in this manual are different from those of your device, please follow your device.
- Do not put use it in a place with flammable gas such as a petrol pumps. The temperature recommended for using the device is 5-35°C. Do not touch the charger, power cable or socket with wet hands. This may cause an electric shock.



*If your phone or any of its accessories do not function normally, then please visit your nearest authorized service facility. The qualified personnel will assist you, and if necessary, will arrange for the service.*

## **Myths and Facts**

Various Myths about Mobile Handsets & Mobile base stations:

Myth - Mobile phone use cause headaches.

Fact - Headaches are not related to Mobile phone use and there is no scientific evidence.

Myth- It is safer using a mobile phone in a car as the car shields from the radiation.

Fact - The RF radiation is increased by Mobile phones when used in a car to overcome the shielding.

Myth- Mobile phones cause brain cancer to the people who use it.

Fact - There is no scientific evidence that Mobile Phone can cause brain cancer.

Myth - Nobody is investigating the health effects of RF radiation.

Fact - The World Health Organization, many national & international organizations and independent expert groups are coordinating to investigate health effects of RF radiation.

## **SAR (Specific Absorption Rate)**

Your device conforms to the Indian guidelines for exposure to radio waves. The limits are given in terms of a unit referred to as the Specific Absorption Rate (SAR), which is a measure of the amount of radio frequency energy absorbed by the body when using a mobile phone. The SAR value as per the Indian guidelines standard is 1.6 Watts per kg (Watt/kg), averaged over a 6 minutes period and taken over a volume containing a mass of 1 gram of human tissue. The highest SAR value of device when tested is maximum **0.973 Watt/kg**. You can check the SAR value of your handset by pressing **\*#07#**.



## UNDERSTANDING YOUR DEVICE

### General Information

Your device encloses features, such as **Digital Camera**, **Video Player**, **Audio Player**, **FM Radio** etc. The SIM card inserted in the slot1 is called Master SIM, and the one in the slot2 is known as Slave SIM.



### Technical Specifications

Battery	Li-ion 3.7V/850mA
Charger	Input: AC100-300V 0.2A 50-60Hz Output:DC5.0V-500mA
Dimensions	117.5mm*51mm*13.9mm
Weight	68.3gms
Screen	4.50cm QVGA 128*160
Standby Time*	10~12days
Maximum Talk Time *	3~4Hours

*\* The standby time and maximum talk time depend upon the network signals and settings.*

## Device Overview



## Position of Keys











 
1. Receiver	2. Display
3. LCD Screen	4. Slave SIM/LSK/Menu Key
5. Master key	6. Navigation key
7. RSK	8. End/Power key
9. Speaker	10. Camera
11. Battery Cover	

## Function of Keys

Key	Description
<b>Master SIM Key</b>	To make/answer a call from Master SIM. In the standby mode, press this key to view Call Logs.
<b>Slave SIM /LSK/Menu Key</b>	To make a call from Slave SIM. In the standby mode, press the key to access Main Menu.
<b>RSK/Right Soft Key</b>	Use RSK to execute the functions indicated at the right of the prompt bar on the screen.
<b>End/Power Key</b>	End an ongoing call. Press and hold this key to turn on or off the device.
<b>Navigation Keys</b>	In the editing mode, use the keys to move the cursor. In the standby mode, press the keys to access the function assigned to these keys.
<b>Keypad</b>	Use to enter numbers, letters and special characters. In the standby mode, long press <b>0 Key</b> to switch on the FM Radio. Press <b>RSK and # key</b> to lock/unlock keypad. Long press <b>* key</b> to switch on the torch.

## Status Icons

The table below lists various icons that might appear on the status bar while using the device. Apart from the icons for signal strength level and the power, other icons are displayed as per the current mode and priority of the device.

Icon	Description
	Indicates the network signal strength of Master SIM.
	Indicates the network signal strength of Slave SIM.
	Indicates the current battery capacity.
	Indicates that there is an unread SMS in Master SIM.
	Indicates that there is an unread SMS in Slave SIM.
	Indicates that there is a missed call in Master SIM.
	Indicates that there is a missed call in Slave SIM.
	Indicates that Alert type of current profile is Only Ring.
	Indicates that the current profile is Headset mode.
	Indicates that alarm clock is set as activated.
	Indicates the current keypad-locked state.

## GETTING STARTED

Please switch off your device before inserting or removing the battery/SIM card or memory card.

### Installing SIM Card and Battery

Your device is provided with two SIM slots for two different SIM cards. The SIM card inserted in the slot1 is called Master SIM, and the other one in the slot2 is known as Slave SIM.

- Remove the back cover of the device.
- Hold the phone with the front facing downwards; pull the cover.
- Insert the SIM cards and battery in the device.
- Attach the battery.
- Push the battery cover until it clicks into place.

### Installing Memory Card

Your device supports T-Flash card, which is a multimedia memory card used to multiply the memory of the device. The T-flash card is small and should be pulled out and installed carefully and prudently in order to avoid any kind of damage.


- Switch off your device.
- Remove the battery cover.
- Slide the T-Flash card into the slot.
- Attach the battery.
- Push the battery cover until it clicks into place.

## Charging the Battery

The device prompts a warning tone and message stating insufficient battery when the battery power of your device is low.

Please follow the instructions mentioned below to charge your device:

- Plug the connector of the charger into the jack of the device.
- Plug the charger into a standard AC wall outlet.

*Note: When  is shown on the screen, it indicates that there is not enough power and you should now charge your device. When charging is complete, the battery icon will stop flashing. You must fully charge the battery before using the device for the first time. It is recommended to charge the battery for four hours before using the device for the first time. If the device is turned on during charging, you can still make or answer calls, but this will consume battery power, thus will extend the charging time of the device.*

## Switch On/Off the Device



To turn on/off the device, press and hold the **End/Power Key**. If you have enabled the SIM Lock function then enter the PIN code (4 to 8 digits secret code of your SIM card). It is pre-configured and provided to you by your network operator or retailer. If you enter an incorrect PIN code 3 times in succession, your SIM card will be locked. To unlock it, you must obtain a code from your network operator.

## Automatic Customer Registration

After 1 hours of usage a SMS from the device will be sent automatically for the customer registration. *Note: standard SMS charges apply.*

## BASIC OPERATIONS

### To Make Calls

If the icon  /  appears on the screen, then you can make or receive calls.

- Input the phone number (should affix the international/ national/regional code or district code if necessary) and then press the Master/Slave SIM key to make a call.
- You can select a number from Contacts and call the Contacts person.

*Tip: The signal strength may influence the quality of connection.*

### To Dial International Number

Your device supports dialing the international emergency phone number, also the distress number 112. With the device, you can dial an emergency call in any country or region under the normal situation regardless of SIM card inserted when the device is located within the coverage of the GSM network. Input the emergency phone number and press **Master/Slave**

**SIM Key** to dial. The device will select the main network automatically after powered on if it is located within the coverage of the main network. The device can use other network, called as roaming, if the device is not located within the coverage of the main network when the network operator protocol permits. You can dial or answer a call when the symbol of the network operator appears on the screen.

## Answer/Reject an Incoming Call

- Press **Call/Master SIM Key** to receive the incoming call. You can use the earphone to answer the call when the generic headset is inserted in the device.
- Press **End Key** to reject an incoming call.

## MAIN MENU

Menu guides you to the various applications, features and utilities available in your device. In the idle mode, press Menu/Slave SIM key to access the Main Menu. Use the navigation keys to choose the desired operation and press Ok to enter the selected operation.

Contacts	Message	Call logs
Multimedia	<b>Spice Gang</b>	Settings
Organizer	Fun & Games	Internet



## CONTACTS

This menu refers to the directory wherein all the Contacts are stored in an alphabetical order. You can view, edit, delete, send message and perform various other functions on each contact of your phonebook.

### Add New Contact

- Go to Main Menu > Contacts > Options > New
- Press ok > select the storage and enter the details

### Search Contact

- Go to contacts and input the initials of a name to be searched.
- Select a desired entry from the list.

Select a Contact from the list and press Ok/Center Key to perform the following operations:

- View contact: view the detailed info of the selected Contacts.
- New: add a new contact.
- Write message: send message to the Contacts.
- Call: call the Contact.
- Delete: delete the Contact.
- Import/Export: select to move/copy/import/export the contacts.
- Send vcard: send contact via bluetooth or SMS.
- Others: access this menu for other settings.

## MESSAGE

Your device features, sending and receiving of SMS (Short Message Service). Press LSK key to access Main Menu and then select Messages.

### Write message

You can create and send SMS to a particular Contact using this sub-menu.

### Inbox

Inbox sub-menu enables you to view all the messages received on your Master/Slave SIM.

### Outbox

The messages that do not reach the receiver successfully get stored in the Outbox folder.

### Drafts

The created messages can be saved to drafts folder for future use. After selecting a message from the Drafts folder, select Options to edit/delete or send the saved message from the desired SIM.

### Sentbox

All the messages that are sent successfully can get stored in sent messages.

### **Security inbox**

You can put the received messages which you want to be locked by password, not allowed to be seen.

### **Templates**

Your device is provided with some commonly used pre-defined messages. These messages can be edited and send instantly.

### **Voice mail server**

You can edit your voice mail number and call it.

## **CALL LOGS**

Call Logs sub-menu lets you view the call details i.e. the missed, received & dialed call logs. In the standby mode, press LSK key to access Menu > Call logs.

### **Missed Calls**

With this function, you can check recent missed calls. Scroll the Up/Down keys to select a missed call. Press OK key to access missed call information, and perform operations, such as View, Call, Delete, Edit before dialing, Send message ,add to contacts.

### **Dialed Calls**

With this function, you can check recent dialed calls. Press OK key to access dialed call information, and

perform operations, such as View, Call, Delete, Edit before dialing, Send message ,add to contacts.

### **Received Calls**

With this function, you can check recent received calls. Press OK key to access received call information, and perform operations, such as View, Call, Delete, Edit before dialing, Send message ,add to contacts.

### **Rejected Calls**

With this function, you can check recent rejected calls.

### **Delete All**

You can delete all records of missed calls, dialed calls or received calls by accessing this sub-menu.

### **Call Timers**

In this menu you can check during time of Master/slaver SIM last call, dialed calls, received calls and you can reset all.

### **GPRS counter**

In this menu you can check the GPRS quantity of Master/slaver SIM last sent, last received, all sent, all received and you can reset counter.

## MULTIMEDIA

This menu is specifically designed for the entertainment purpose of the user. To enter this menu, go to the Main Menu and select Multimedia. The various multimedia features offered by your device include **Image, Camera, Video Recorder, Video Player, Audio Player and FM Radio.**

### Camera

Your device is provided with Camera, which supports the photographing and video shooting functions.

### Image

Pictures taken can be accessed quickly through Image Viewer. Select an image to view and press ok key to perform operations, such as, use the image as wallpaper.

### Video Recorder

In standby mode, select Menu > Multimedia > Video recorder to launch the video recorder and shoot your videos.

### Video Player

Your device supports playing various video formats. To access the Video Player, go to Multimedia and select Video Player. All the videos available in the storage selected by you will be displayed. Select a video clip and press OK key to open it.

### **Audio Player**

Audio player allows you to play audio files. Please save your audio files in the My Music folder of the memory card. You can pause, play and change song using the navigation keys or earphone button.

### **FM Radio**

You can use your device to listen to FM radio stations after inserting the headphones. When in the Radio interface, press options to view channel list and settings.

### **SpiceGang**

SpiceGang has different content categories from where you can download wallpapers, play GPRS games, get sports update, connect to your friends and do much more. All services within Spice Gang are GPRS based services. Please contact your operator for GPRS settings.

### **SETTINGS**

In the standby mode, press Menu key to access Menu > Settings.

## **Call Settings**

### **Dual SIM**

Set the appropriate options of Multi-SIM.

### **Call divert**

According to the conditions you have set for transfer, the incoming calls will be transferred to voicemail or the appointed number in the appropriate conditions.

### **Call waiting**

Activate, the network will notify you of a new incoming call while you have a call in progress (Network Service).

### **Call barring**

This feature allows you to restrict the phone call or answer an incoming call.

### **Hide ID** (Requires the network to support)

Hide ID: The receiver hide your phone number when you make a call.

Display own ID: The receiver will show your number when you are dialing.

Display ID by network: The network will decide whether the receiver can show your phone number while you are dialing.

### **Others**

You can set the other options of the call settings.

*Note: The provision of Auto call recorder/Smart Call Recording is only an additional feature being provided by the manufacturer; however its proper usage, in accordance with*

*law of the land, shall be the responsibility of buyer. The buyer of this phone shall be responsible to ensure that the Smart Call Recording is not used for any illegal or immoral purpose. The use of audios recorded through Smart Call Recording, as legal evidence, shall be subject to applicable laws in this regard.*

### **Phone Settings**

- Date and time: change the settings related to date and time.
- Language settings: Your device supports English and Hindi language.
- Shortcut settings: You can set shortcuts for some functions you often use.
- Auto Power on/off: Set scheduled power on/off time.
- Restore factory settings: Enter the default password 1122 to reboot the factory setting.

### **Display**

Set wallpaper / idle display/ brightness/backlight etc.

### **Security**

This function allows you to activate password to protect your phone against unauthorized use.

**-PIN:** You can switch on or off to activate the PIN lock function to protect your phone. And you can change the PIN code.

**-Modify PIN2:** You can change the PIN2 code.

**-Phone locked:** You can switch on or off to activate the phone lock function to protect your phone. If you switch



Phone Lock on, you need to enter the password to set the request on. The default password is "1122".

**-Modify the cellphone password:** You can change password here. The default password is "1122".

**-Auto keypad lock:** You can set the keypad lock time as you prefer desire.

**-Lock screen by end-key:** You can choose to enable or disable this feature. Open this feature, you can just press the end key to turn off the backlight and lock the keyboard automatically when the phone screen is bright. If the keypad is locked, you can unlock it by pressing right soft key and then # key.

### **-M tracker**

Now be sure of your device with Mobile Tracker. This feature allows users to track their device if it is lost or stolen. Switch on Mobile Tracker application and whenever a new SIM is inserted in your device you will receive a SMS on pre-defined numbers.

#### 1) Status

This function requires your network support. You can set ON or OFF. When the function is ON the device will send a message to the number which you have set. The message will tell you that which number is using your device now.

#### 2) Change password

TIP: This function requires your network support. First you need change the password before you access this function and the default password is 1122.

### **-Privacy**

Now you can protect your Call Logs, Contacts, Messages and File Manager by using Privacy lock feature. If it is switched on then all these services will become password protected. The default password is 1122.

## **Profiles**

The phone provides pre-defined user profiles that allow the operations of the phone to best suit the environment you are in. The profiles are **Normal, Silent, Meeting, Indoor, Outdoor and Flight mode**. The phone will automatically enter the headset profile if you connect the headset to your phone.

### **Normal**

#### Settings

- You can choose to change the ring, volume, ring type and alert type settings
- System alert: Set On/Off.

### **Silent**

Ring, Volume and Alert type mustn't be set. Select "Activate" in "Options".

### **Meeting**

Please select activate to enable the meeting mode on. In the standby mode, long press # key to enable/disable meeting mode.

### **Indoor**

Please refer to "General" for more details.

### **Outdoor**

Please refer to "General" for more details.

## **Flight mode**

Phone cannot receive any signal at Flight mode. You can activate flight mode in this menu.

## **Bluetooth**

Your phone is designed to be compliant with Bluetooth technology. Bluetooth technology enables wireless connections between electronic devices. The Bluetooth connection can be used to listen to stereo music, send images, video, texts and vcard.

## **Connections**

Please Contacts the network operator for the following network service.

- **Network Selection:** You can choose Automatic or Manual to select the network (Auto is recommended). When you select Automatic, the device will make the selection according to the network. If you select Manual, you will have to select the network manually.

## **ORGANIZER**

This menu gives you access to a number of features including **My files, Ebook, Calculator, Recorder, Calendar, Alarm and Torch**

### **My files**

My Files enables you to browse, open and manage the data saved in Memory card. The device supports the T-Flash card. You can use my files to conveniently

manage various directories and files on the T-Flash card. You can also format the storage of memory card.

### **Ebook**

This menu lets your read .txt files.

### **Calculator**

The mobile phone is provided with a calculator with basic functions. You can carry out the basic arithmetic operations using the in-built calculator of your device.

### **Recorder**

You can record conversations, which will be saved to the Audio folder under File Manager. After selecting a recording, you can select to set as ringtone, send by bluetooth etc.

### **Calendar**

You can view and edit the memo of a specified date with this function.

### **Alarm**

Your device provides alarms and you can set them as per your need. If you have configured an alarm, an icon indicating that you have configured the alarm will appear on the status bar.

## **Torch**

Go to organizer > torch to turn on /off the torch. In the idle mode press \* to switch on the torch.

## **FUN & GAMES**

This menu is specifically designed for the entertainment of the user. The device is provided with interesting game namely Brick N Ball. Your device also features Cool buddy; access this menu for entertainment entities. Please ensure that you have GPRS settings activated.

## **INTERNET**

You can use the network-related services with this function.

## SUPPORT AND CONTACT

You can visit [www.si2imobility.com/spicemobiles/](http://www.si2imobility.com/spicemobiles/) for additional information, downloads and services related to your Spice handset.

For further assistance or queries, you can call on SPICE customer care number **1860 200 1003** or mail at [customercare@smobility.in](mailto:customercare@smobility.in) or [product@smobility.in](mailto:product@smobility.in).

*Note: After sales service of the device is confined to the country in which the purchasing is done.*



## ENVIRONMENTAL CONCERN

### **Help us save Our Environment..GO GREEN..!!**

All our endeavors are directed towards providing environment friendly products to you. The material used in our devices are recyclable and can be reused to make new products. We strive to make products that are safe for our consumers as well as the environment. Come join hands with us and make world a better place to live.

Preserve natural resources for future generations by recycling your phone. The phone contains some metals, when recycled properly; these can be put back into circulation, decreasing the need for new metal mining. Recycling reduces the need for raw materials, saves energy, helps mitigate Global Warming and reduces pollution, reduces waste products in landfills; therefore preserving natural resources for the future and saving the planet.

Follow some simple steps and contribute towards saving the planet.

#### **DOs**

- Recycle your handset and its accessories.

- To protect natural resources and to promote re-use of the material, kindly separate batteries from other type of waste.

### **DON'Ts**

- Do not dispose off your mobile and its battery in fire.
- Do not dispose your mobile with the regular waste.
- Do not over charge your handset. Remove the charger when battery is full.

### **Don't trash your phone, instead RECYCLE it**



This logo signifies that this product and/or its constituents should not be disposed off with other household waste.

### **Hazards of Improper handling, accidental breakage, damage and /or improper recycling of hazardous elements**

If this product is improperly handled, broken or damaged or carelessly recycled or disposed off in the



fire, can result in environmental and data security concerns, including the following:

- Affect nearly every system in the human body and result in birth defects, brain, heart, liver, kidney and skeletal system damage. They will also significantly affect the nervous and reproductive systems of the human body ;
- When burned, create cancer-producing dioxins which are released into the air we breathe ;
- If thrown in landfills, may leach into groundwater affecting your local community ;
- In warm climates, the oxidation of mercury in the environment can be accelerated, leading to the creation of oxidized Hg atoms that are known to be associated with ozone depletion; and
- Improper recycling additionally results in data security issues, as private electronic information remains on hard drive, if not properly removed before disposal.

### **How to Recycle**

Please get your electronics products recycled only through authorized recyclers, approved by Pollution Control Board. We provide facility of recycling of our products. For details of our collection centers, please visit our website or call our customer care. **Help us to GO GREEN.**

**Constitution of Hazardous Elements in your Device:**

Your device does not contain the following hazardous elements in a proportion higher than the limits provided hereunder:

- maximum concentration value of 0.1% by weight in homogenous materials for lead, mercury, hexavalent chromium, polybrominated biphenyls and polybrominated diphenyl ethers ; and
- maximum concentration value of 0.01% by weight in homogenous materials for cadmium.