

iVu Barcode Reader (BCR) User's Manual

Rev. A 1/25/2012



Contents

1 Product Support and Maintenance	4
1.1 Product Support	4
1.2 Maintenance	5
2 Overview of the Sensor	6
2.1 Installation	6
2.1.1 Components	6
2.1.2 Cable Connections	9
2.1.3 Installing and Connecting the Sensor	14
2.2 Live Mode Overview	16
2.2.1 Read/No Read, Pass/Fail, Match/No Match	17
2.2.2 Trigger Modes	17
2.2.3 Compare Data	17
2.2.4 Output 1 and Output 2	17
2.2.5 Remote Teach	18
2.3 iVu Emulator	18
3 Main Menu Reference	19
3.1 Main Menu	19
3.2 System Menu	20
3.2.1 Sensor Mode	21
3.2.2 Sensor Configuration	21
3.2.3 Sensor Information	22
3.2.4 Lock Sensor	23
3.2.5 Communications Menu	23
3.2.6 Discrete I/O	27
3.2.7 Display Settings	29
3.2.8 Reboot Sensor	30
3.2.9 Firmware Update	30
3.3 Imager Menu	31
3.3.1 Auto Exposure	31
3.3.2 Exposure	31
3.3.3 Gain	32
3.3.4 Trigger	32
3.3.5 Focus	33
3.3.6 Strobe	34
3.3.7 FOV	35
3.4 Inspection Menu	36
3.4.1 Barcode Menu	36
3.5 Logs Menu	41
3.5.1 Inspection Logs	42
3.5.2 System Logs	44
3.5.3 Communication Logs	44
4 Display Modes	45
4.1 Display/Hide Annotations	45
4.1.1 Inspection Statistics	46
4.1.2 Inspection Results	46
4.1.3 Barcode Viewer	47
5 Setting up for an Inspection	48
5.1 Acquiring a Good Image	48
5.2 Setting Up a Barcode Application	51
5.3 Setting up for Data Compare	52

6 iVu BCR Command Channel	55
6.1 Command Channel	55
6.2 Setting Up Serial Communications	56
6.3 Testing and Troubleshooting iVu Command Channel Communications	58
6.3.1 Using the Port Status Screen for Testing RS-232 Communications	58
6.3.2 Understanding the Communication Log	59
6.3.3 Using the iVu Command Channel Sample Application or a Terminal Program for Testing	60
6.3.4 Verifying Basic Receive Functionality	60
6.3.5 Verifying Basic Transmit Functionality	61
6.4 Command Channel Commands	62
6.4.1 Command Flow	63
6.4.2 String Delimiters and Escaping	63
6.4.3 Command Channel Command Synopsis	63
6.5 Conventions Used for Examples	66
6.6 Examples	67
6.6.1 Example 1: How to Trigger the Sensor and Retrieve Barcode Data using the Command Channel	67
6.6.2 Example 2: How to Modify Barcode Compare Data Using the Command Channel	67
6.7 iVu Command Channel Reference	68
6.7.1 BCR_INPUT Command Group	68
6.7.2 BCR_RESULT Command Group	68
6.7.3 History Command Group	69
6.7.4 Info Command Group	69
6.7.5 Inspection Command Group	70
6.7.6 Status Command Group	71
6.7.7 System Command Group	71
6.7.8 Teach Command	71
6.7.9 Trigger Command Group	72
6.7.10 Command Channel Error Codes	72
7 iVu Series: Updating the Sensor	75
7.1 Update Process	75
7.2 How to Set or Modify a Sensor Name	75
7.3 How to Reset the Sensor Password	76
7.4 How to Use Bitmap Image Files with the iVu Emulator	77
8 LED Indicator Troubleshooting	78
8.1 Errors	78
8.2 Warnings	78

1 Product Support and Maintenance

This section provides general Banner resources and specific documentation for installers and operators of this iVu BCR Vision Sensor.



WARNING: Not To Be Used for Personnel Protection

Never use this product as a sensing device for personnel protection. Doing so could lead to serious injury or death. This product does NOT include the self-checking redundant circuitry necessary to allow its use in personnel safety applications. A sensor failure or malfunction can cause either an energized or de-energized sensor output condition.

1.1 Product Support

Banner provides the following resources for quickly setting up and operating the sensor.

Documentation

Online Help

When setting up or monitoring inspections using the iVu sensor's integrated display, you can get online help on any screen by clicking the Help icon in the upper-right of the screen.

PDF Documentation

The iVu Series Image Sensor documentation is available in a convenient printable format (PDF) on the installation CD or on the [Banner Web site](http://www.bannerengineering.com) (<http://www.bannerengineering.com>)

Banner Website

The most current iVu Series sensor information is available on the Banner website:

www.bannerengineering.com

Warranty Service

The iVu Image Sensor is designed for reliability. Do not open the housing; it contains no field-replaceable components. If repair is necessary, do not attempt to repair the sensor yourself; return the unit to the factory. Should it become necessary to return a sensor to the factory, please do the following:

1. Contact the Banner Factory Application Engineering group at the address or numbers listed below. They will attempt to troubleshoot the system from your description of the problem. If they conclude that a component is defective, they will issue an RMA (Return Merchandise Authorization) number for your paperwork and give you the proper shipping address.
2. Pack the sensor carefully. Damage which occurs during return shipping is not covered by warranty.

Factory Support

Call, e-mail, fax, or write your local Banner representative or a Banner Applications Engineer for support. Applications Engineers are available from 8:00 A.M. to 5:00 P.M. Central Time, Monday through Friday, excluding holidays.

Phone	Local: 763.544.3164 Toll Free: 1.888.3.SENSOR (1.888.373.6767)
Fax	763.544.3213
E-mail	sensors@bannerengineering.com
Address	Banner Engineering Corp. 9714 10th Avenue North, Minneapolis, MN 55441 USA

To help Banner better assist you, be ready to provide the following information:

- iVu firmware version (to find the version number, click **Main Menu > System > Sensor Information**)
- Sensor Model Number and Date Code, which are found on the bottom of the sensor.
- Exact wording of any messages that appeared on your screen
- A description of what you were doing and what happened
- A description of how you tried to solve the problem
- Error Codes (see [LED Indicator Troubleshooting](#) on page 78)

1.2 Maintenance

Maintenance tasks include keeping the hardware free of dust and dirt and possibly updating the iVu firmware as new versions become available.

Cleaning the Sensor

Regularly remove any dust or dirt from the Sensor using a soft cloth. If needed, slightly dampen the cloth with a weak solution of neutral detergent. Avoid getting dirt on the imager (the area behind the lens). If the imager is dirty, use anti-static compressed air to blow off the dust.

Updating the iVu Firmware

The current version of iVu firmware is available for download from the Banner website. See the Banner Website for the firmware download link.

2 Overview of the Sensor

The iVu BCR sensor reads a wide variety of barcodes. The package consists of lighting, sensor, lens, and display. Appropriate cables and mounting brackets can be ordered for each application. Additionally, other lenses, brackets, filters and external lights are available. Installation, setup, and configuration can be done quickly without requiring a PC to configure the sensor.

- No external PC required to configure the sensor
- USB 2.0 compliant host provided for easy updating and diagnostics
- Image processing expertise is not required
- Integrated or remote color touch screen display
- High speed processing

iVu BCR reads the following barcode types:

- DataMatrix (ECC 200) barcodes
- Linear barcodes
 - Code128
 - Code39
 - CODABAR
 - Interleaved 2 of 5
 - EAN13
 - EAN8
 - UPCE
 - Postnet
 - IMB
 - Pharmacode



2.1 Installation



2.1.1 Components

iVu with Integrated Display

The iVu Series sensor comes fully assembled with the lens and an integrated ring light if so ordered. The integrated touchscreen display has a plastic cover to protect the display. You will need to remove this cover when setting up the sensor. When the display is not in use be sure to keep the display covered to protect it.

If not using an integrated ring light, you will need to have another lighting source. Various lights are available from Banner.

	1	Focusing Window
	2	Focusing Window Locking Clip
	3	LED - Green: Power; Red: Error
	4	LED - Green: Pass; Red: Fail
	5	Integrated Display

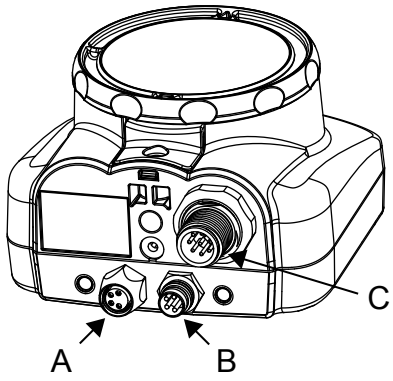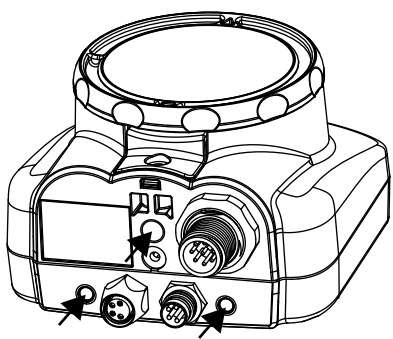
	A	8-pin Euro-style (M12) female USB Cable Connector
	B	I/O Cable Connector
	C	12 -pin Euro-style (M12) male Power and I/O Cable Connector
	Mounting Bracket Mounting Holes (uses supplied three M4 x 4 mm screws)	



iVu with Remote Display

The iVu sensor for use with a Remote Display comes fully assembled with the lens and an integrated ring light if so ordered. Although the Remote Display is not required for normal sensor operation, you will need it to set up the sensor and when you want to monitor inspections.



NOTE: If not using an integrated ring light, you will need to have another lighting source. Various lights are available from Banner.


	1	Focusing Window
	2	Focusing Window Locking Clip
	3	LED - Green: Power; Red: Error
	4	LED - Green: Pass; Red: Fail

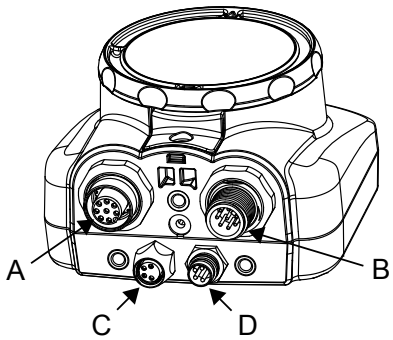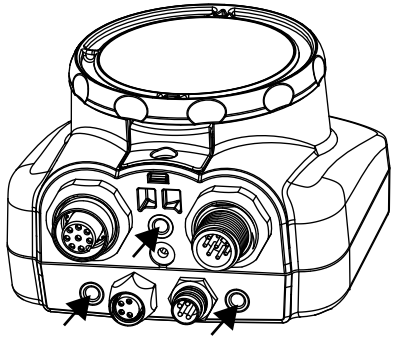	A	8-pin Euro-Style (M12) female Remote Display connector
	B	12-pin Euro-style (M12) male Power and I/O Cable Connector
	C	4-pin Pico (M8) female connector
	D	I/O Cable Connector
	Mounting Bracket Mounting Holes (uses supplied three M4 x 4 mm screws)	

2.1.2 Cable Connections

Cable Connections for iVu BCR with Integrated Display

The power and I/O cable for the iVu BCR sensor is available in 2, 5, 9, and 15 m (6, 15, 30, 50') lengths. The connector on the sensor is shown below (B).

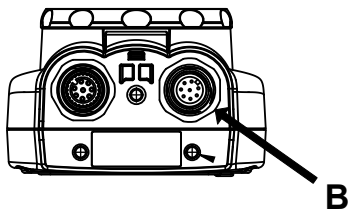


Power I/O Connections			
Pin #	Wire Color	Description	Direction
2	Brown	10-30V dc	Input
7	Blue	Common (Signal Ground)	Input
6	Pink	External Trigger	Input
5	Gray	Remote Teach	Input
1	White	Output 1	Output
8	Red	Ready	Output
4	Yellow	Strobe Out (5V dc only)	Output
3	Green	Output 2	Output
9	Orange	Not used	N/A
10	Light Blue	RS-232 TX	Output
11	Black	RS-232 Signal Ground	Output

Power I/O Connections			
Pin #	Wire Color	Description	Direction
12	Violet	RS-232 Rx	Input

NOTE: Microlens model shown, C-Mount model connections are identical.

Cable Connections for the iVu BCR with a Remote Display

The cable connections on the iVu sensor are shown below, and power I/O connections (**B**) are defined in the **Power I/O Connections** table below.

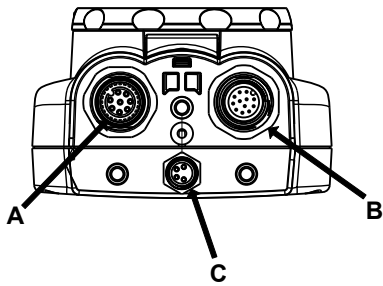

A	Remote Display Connector
B	Power I/O Connector
C	USB Connector

NOTE: Microlens model shown, C-Mount model connections are identical.


Power I/O Connections			
Pin #	Wire Color	Description	Direction
2	Brown	10-30V dc	Input
7	Blue	Common (Signal Ground)	Input
6	Pink	External Trigger	Input
5	Gray	Remote Teach	Input
1	White	Output 1	Output
8	Red	Ready	Output
4	Yellow	Strobe Out (5V dc only)	Output
3	Green	Output 2	Output
9	Orange	Not used	N/A
10	Light Blue	RS-232 TX	Output
11	Black	RS-232 Signal Ground	Output
12	Violet	RS-232 Rx	Input

iVu Trigger, Remote Teach, and I/O Waveforms

The iVu has two input signals—Trigger and Remote Teach. The default setting is to detect the Trigger or Remote Teach input on the low to high transition. This setting can be changed in the **Main Menu > System > Discrete I/O > Input Polarity** screen on the sensor.

iVu Low-to-High Trigger and Remote Teach Input Waveforms


The iVu Trigger and Remote Teach input waveforms are shown below.

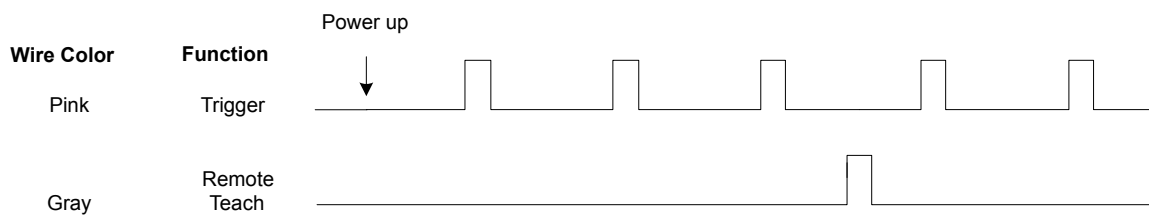

The sensor triggers from low to high, and Remote Teach behaves electrically like trigger (see above).

iVu High-to-Low Trigger and Remote Teach Input Waveforms

The iVu High-to-Low Trigger and Remote Teach input waveforms are shown below.

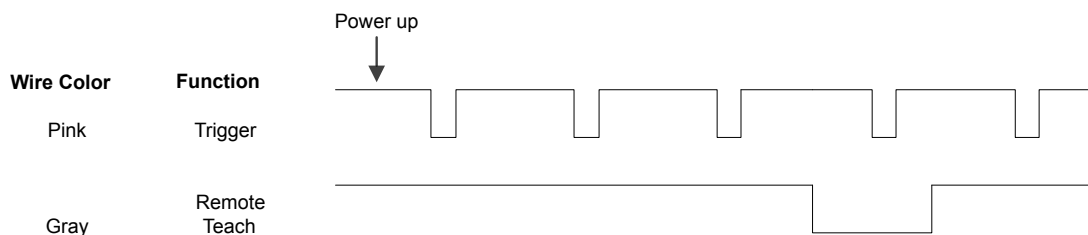


The sensor triggers from high to low, and Remote Teach behaves electrically like trigger.



NOTE: If the device used to trigger or remote teach the iVu BCR is a sinking device (that is, NPN), then there are two options regarding the use of a pull-up resistor:


Option 1: Put a pull-up resistor, rated approximately 1k ohm, between the sensor's positive (+) voltage and the sensor's input as shown below.

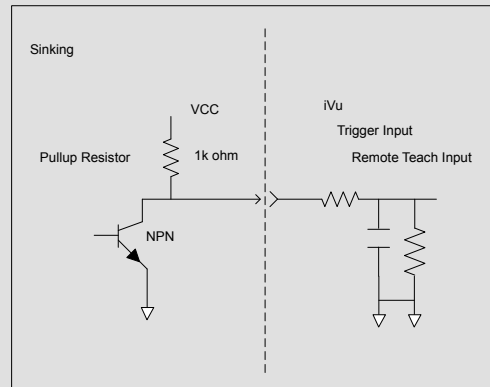


Option 2: Enable the Input Pullup in the iVu BCR software (**Main Menu > System > Discrete I/O > Input Pullup**).

iVu Output Waveforms

PNP Outputs

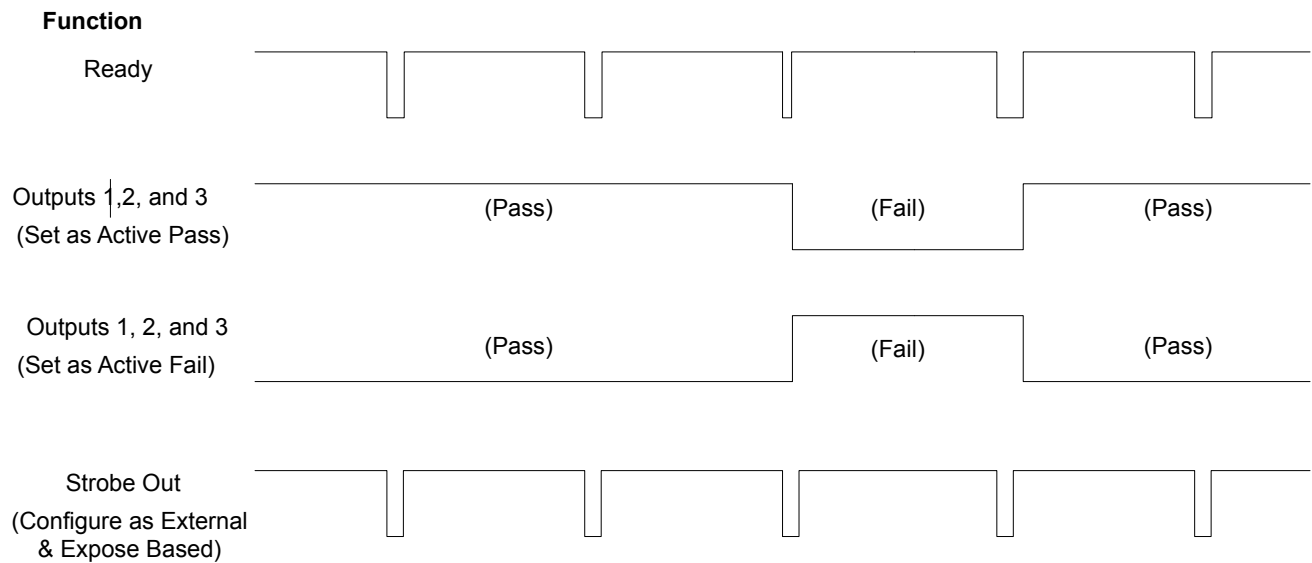

NPN Outputs

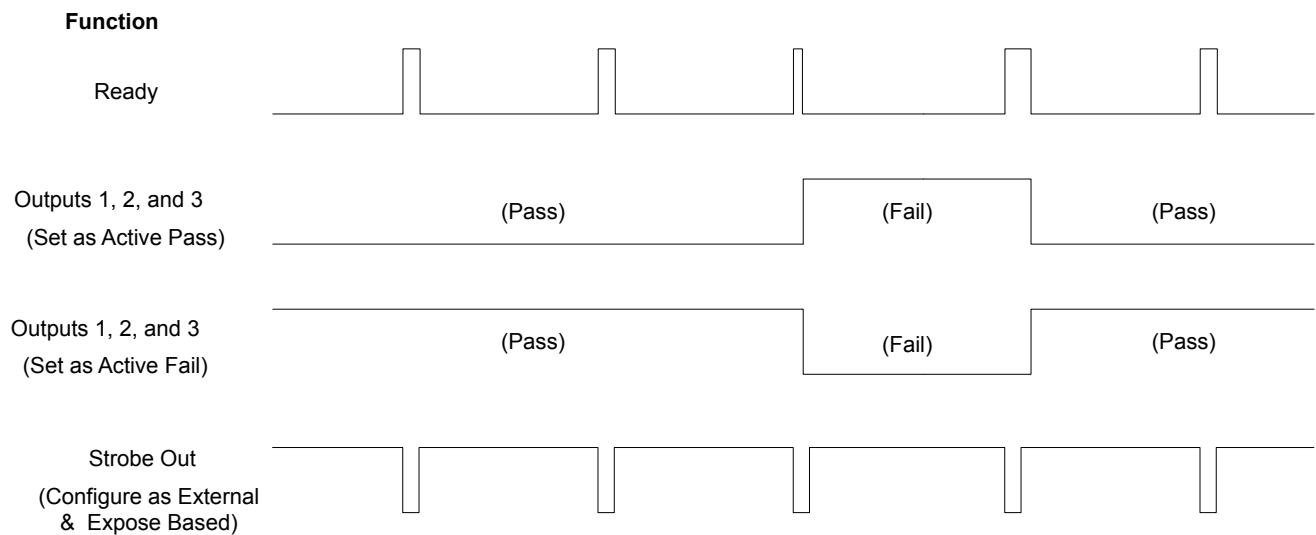

2.1.3 Installing and Connecting the Sensor



The iVu BCR sensor requires a bracket for mounting. Three brackets are available from Banner. The brackets allow the sensor to be mounted either perpendicular to the part or at an adjustable angle.

Available iVu Brackets		
SMBIVURAL	SMBIVURAR	SMBIVUU
		


Thread three M4 x 4mm screws through the bracket into the mounting holes in the bottom of the sensor. Tighten all three screws.

Installing Filters on the iVu Series Sensor



NOTE: Failure to follow these instructions can cause damage to your iVu Series sensor.

To install a filter on the iVu Series sensor with Micro Lens, use the illustration as a guide and follow the steps listed below.

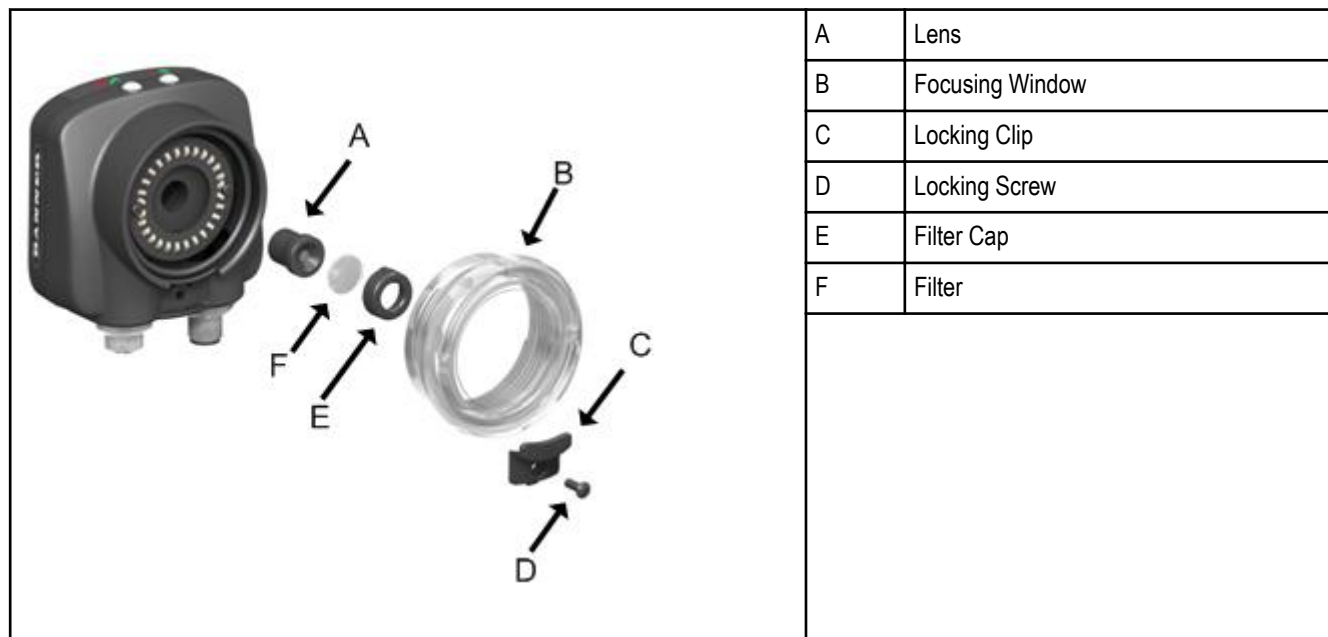

1. Use the 1/16" hex key to remove the Focusing Window locking screw (D).




NOTE: The Locking Clip (C) inserts in a groove near the top of the Focusing Window (B). When removing the window, the Locking Clip will be loose. Be careful not to lose the clip while removing the window.

2. Unscrew the Focusing Window by turning it clockwise approximately 5 complete turns or until the Focusing Window disengages from the light/lens assembly.



NOTE: The light/lens assembly may include an integrated ring light or a blank disk if an integrated ring light is not used. Be careful that the light/lens assembly does not pull out when removing the Focusing Window. Give a slight tug on the Focusing Window when you think you've unscrewed it far enough. If the lens assembly moves with the window, continue to rotate the window clockwise until the lens assembly does not move.


3. Set the Focusing Window aside. Be careful not to get any debris on the window's O-ring.
4. If present, remove the protective covering on the filter.
5. Place the filter into the Filter Cap and press the cap onto the lens.
6. Once the filter is installed, place the Focusing Window back into the housing while inserting the Locking Clip into the groove as shown below.

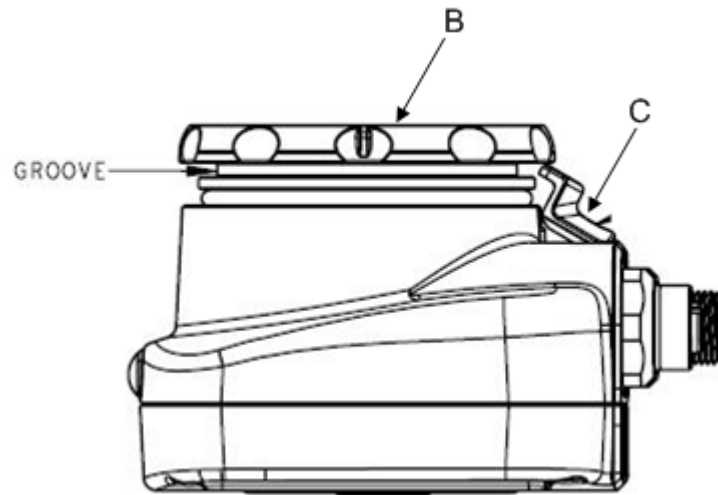

7. Press the Focusing Window onto the housing to make sure that it seats correctly (that is, there is no gap between the window and housing. Rotate the window counter-clockwise at least two turns.
8. Replace the locking tab screw but do not tighten until you have set up and focused the sensor again.

To install a filter on the iVu Series sensor with C-Mount Lens, use the illustration as a guide and follow the steps listed below.

C-Mount Models

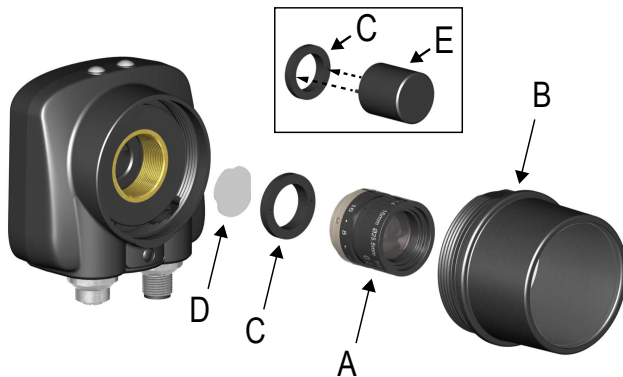

A	C-Mount Lens
B	Lens Enclosure
C	Retainer Ring (optional)
D	Filter (optional)
E	Filter Retainer Ring Tool

NOTE: Filter Kits are available separately.

1. Remove the Lens Enclosure and Lens.
2. Install filter behind the retainer ring. Make sure it is fully seated.
3. Using the provided retainer ring tool, thread the retainer ring until it firmly seats the filter.
4. Replace the Lens and Lens Enclosure on the camera.



CAUTION: Avoid the damage that electrostatic discharge (ESD) can cause to the sensor. Always use a proven method for preventing electrostatic discharge when installing a lens or attaching a cable.

2.2 Live Mode Overview

The iVu BCR can be configured to evaluate one or more of the supported barcode types and can look for a specific number of barcodes from 1 to 10. The barcode types are selected on the integrated touch screen by accessing **Main Menu > Inspection > Barcode Type** . The barcode count is selected on the touch screen by going to **Main Menu > Inspection > Barcode Count** .

This section describes some general iVu BCR concepts.

2.2.1 Read/No Read, Pass/Fail, Match/No Match

The following describes what is meant by Read/No Read, Pass/Fail, and Match/No Match:

- A Read condition occurs when the configured number of barcodes are found in a scan. These barcodes must be error-free.
- A No Read condition occurs when the configured number of barcodes are not found in a scan.
- If the sensor is configured where Data Compare is **disabled**, Pass and Fail are the same as Read and No Read.
- If the sensor is using the Data Compare feature, Pass indicates that a good barcode was found and the data compared.
- If the sensor is using the Data Compare feature, Fail indicates that either no good barcode was found or the data did not compare.
- A Match condition occurs when the required number of barcodes are found and the compare is successful.
- A No Match condition occurs when the required number of barcodes are found, but the compare is not successful.

2.2.2 Trigger Modes

The iVu BCR has four trigger modes that determine how the sensor captures and processes images:

- External - Single
- Continuous
- External - Gated
- Command

2.2.3 Compare Data

The iVu BCR has a data compare feature for comparing read barcode data against reference data. Data can be manually entered by accessing the **Main Menu > Inspection > Data Compare > Set Data** screen. Data of up to 3200 characters can be entered. Additionally, the data compare feature provides for masking characters within the data.

There are two other ways to enter compare data:

- Importing the last read data while viewing the **Set Data** screen. The new data is effective on the first trigger that occurs after this action.
- Using Remote Teach. When a Remote Teach occurs, the data of the first read barcode is saved as Data Compare input. Inspections executed on the next trigger will use the new data for comparison with subsequently read barcodes. If the previous input data contained any masked characters, Remote Teach will retain the masked characters **only** if the new data is of the same length as the previous input data. If the length does not match, masking is removed.

The sensor tries to compare full length of this string with the data read from the barcode. If not equal, inspection will be marked as Fail.



NOTE: If the sensor reads more than one barcode in the field of view, only the first barcode data that the sensor reads can be compared.

2.2.4 Output 1 and Output 2

The sensor has two output signals that you can configure for Pass, Fail, Read, No Read, Match, No Match, System Error, and Missed Trigger. The default settings are Pass for Output 1, Fail for Output 2.



NOTE: For all outputs, the default setting is Latched, which means that the signal is active until the results of an inspection cause a change in the signal output. If Pulsed is selected, the default pulse width is 50 ms.

2.2.5 Remote Teach

The Remote Teach function is a method of remotely updating compare data while the iVu sensor is running. The sequence of events for executing a Remote Teach as follows:

1. With the sensor Ready, pulse the Remote Teach line.
2. The sensor recognizes that the Remote Teach line has been pulsed and waits for the next valid trigger.
3. At the next valid trigger, Ready goes inactive (the Green Ready LED shuts OFF), and the sensor acquires a new image.

When a Remote Teach occurs, the data of the first read barcode is saved as Data Compare input. Inspections executed on the next trigger will use the new data for comparison with subsequently read barcodes. If the previous input data contained any masked characters, Remote Teach will retain the masked characters **only** if the new data is of the same length as the previous input data. If the length does not match, masking is removed.

2.3 iVu Emulator


The iVu Emulator is a Windows application that allows you to operate in a Windows environment exactly as you would on the iVu Series sensor itself. In general, the Emulator is an inspection debugging tool where you can:


1. Import stored inspections and configuration from an iVu sensor.
2. Modify inspection parameters on the emulator.
3. Restore the updated configuration back to the sensor.

3 Main Menu Reference

3.1 Main Menu

The Main Menu has four sections. Select: Inspection to modify inspection settings Imager to run the Auto Exposure routine and to make adjustments to functions like exposure, gain, and strobe. System to set output signals, communication channel parameters and to manage the device. Logs to configure and view System and Inspection Logs.

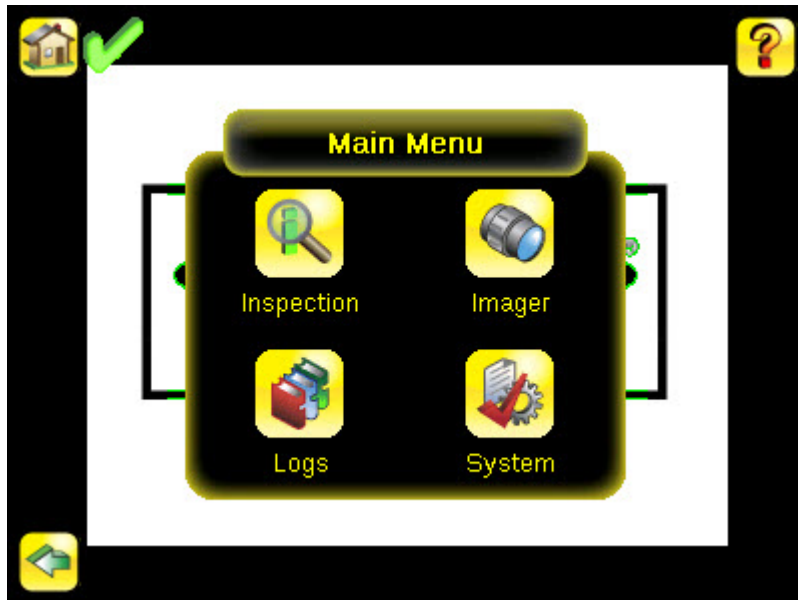


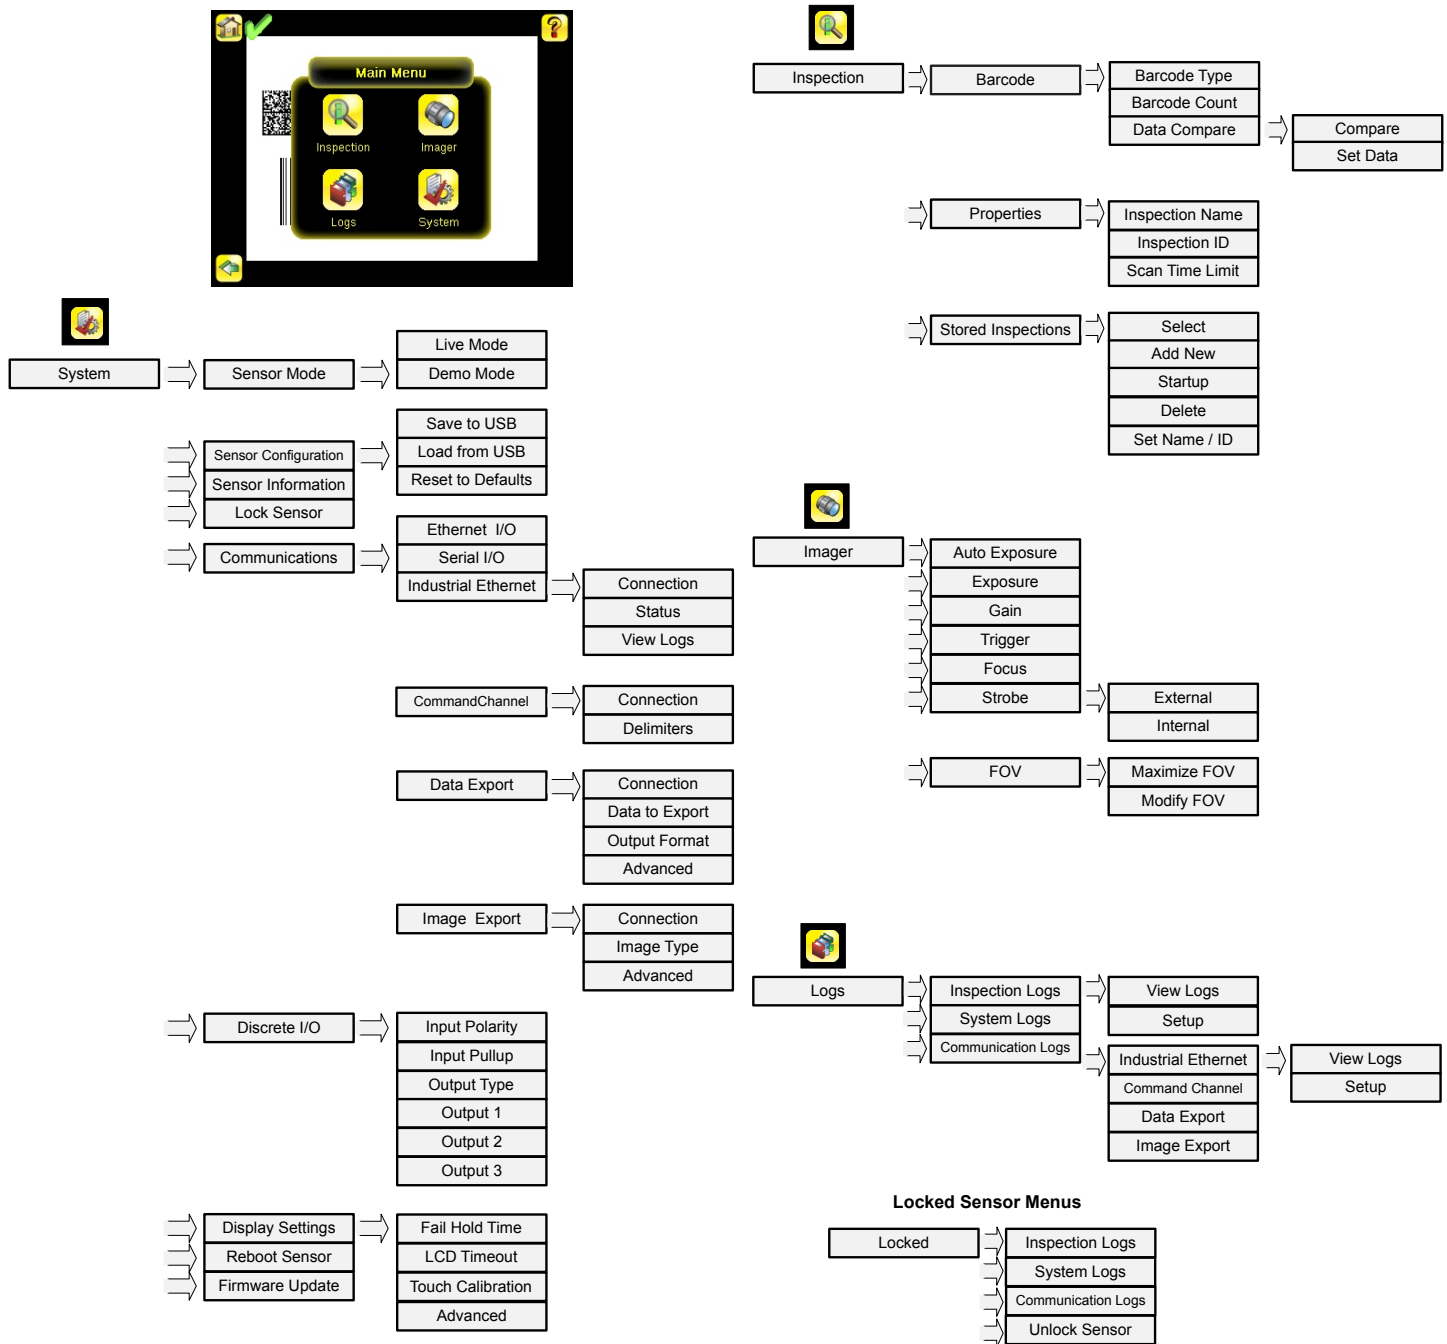

3.2 System Menu

The System menu icon is on the Main Menu, and is used to manage the sensor. The System menu provides for selecting Sensor Mode, updating sensor firmware, backing up and restoring sensor Configuration and other general system-level operations.

Main Menu > System

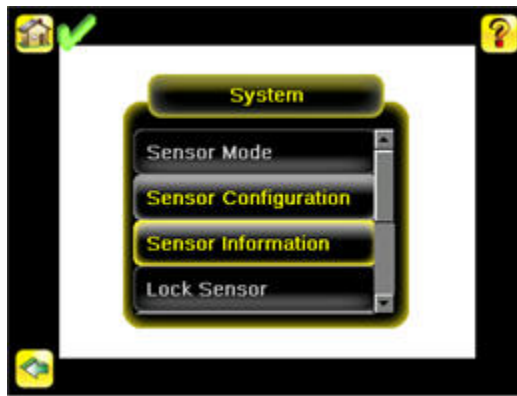

3.2.1 Sensor Mode

Main Menu > System > Sensor Mode

The sensor has two operating modes:

- Live Mode, which is the normal operating mode where the sensor captures live images, scans, and verifies barcodes
- Demo Mode, where inspections are run on stored images and inspection parameters.


The first time you power up the iVu Series sensor, it starts in Demo Mode. Demo Mode uses stored images and inspection parameters that demonstrate how the sensor is set up without having to worry about focus, lighting, or triggers. In this mode, you can learn how to make adjustments working with the three sensor types while observing how the adjustments affect the sensor results. To exit Demo Mode, go to **Main Menu > System > Sensor Mode** and select Exit Demo Mode. When you exit Demo Mode, the sensor reboots into its normal operating mode with default settings.

3.2.2 Sensor Configuration

The Sensor Configuration menu provides for:

- Saving sensor Configuration to the USB drive
- Restoring sensor Configuration from the USB drive
- Setting Scan Time Limit
- Resetting the sensor to defaults
- Updating sensor firmware

Main Menu > System > Sensor Configuration

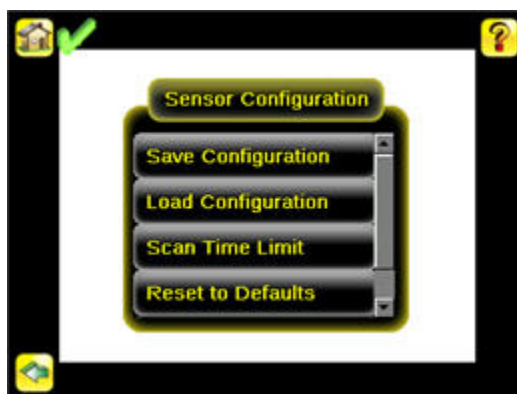

Save to USB

The Save to USB screen provides for saving sensor Configuration to a USB flash drive. The saved configuration information can be used as a backup or as a way to clone configuration information for other sensors.

Main Menu > System > Sensor Configuration > Save to USB



NOTE: On the Emulator, this option is **Save Configuration**.

Load from USB

The Load from USB screen provides for restoring sensor Configuration from a USB drive. This operation will remove all existing inspections and replace them with inspections contained in the configuration file on the USB.

Main Menu > System > Sensor Configuration > Load from USB




NOTE: On the Emulator, this option is **Load Configuration**.

Reset to Defaults

Resets all sensor configuration to factory defaults. This operation will remove all existing inspections and replace with factory default.

Main Menu > System > Sensor Configuration > Reset to Defaults

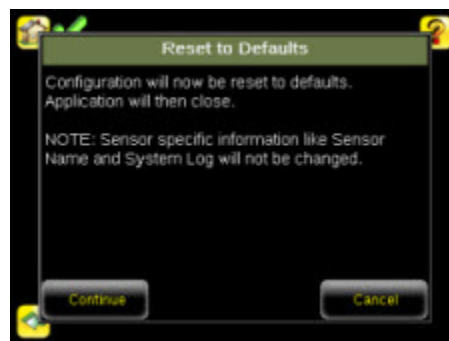


3.2.3 Sensor Information


The Sensor Information screen displays the following sensor information:

- Serial Number
- Firmware Version
- Boot Number
- Up Timer
- Hour Count
- Model Number
- Sensor Name


Main Menu > System > Sensor Information


Sensor Information	
Serial Number	H01234567890123456
Emulator Version	iVuPlus_BCR_v1.0.2
Boot Number	10
Up Timer	1:23:55
Hour Count	36
Model Number	IVUPTBR08



 
Sensor Name 

 Copyright (C) 2011 - Banner Engineering Corporation

Click the right-arrow next to the Sensor Name field to display a software keyboard that allows you to change the Sensor Name.

Sensor Name Edit  



3.2.4 Lock Sensor

This option provides for locking the sensor to prevent accidental modification of settings. When locked, the sensor only provides access to pass/fail statistics, as well as the ability to view logs and to save them to a USB device. A lock icon in the upper left corner of the sensor display indicates that the sensor is locked. Note that the sensor can be locked with or without a password. If a password is not used, unlock the sensor by clicking on the Unlock Device menu. When a password is used, it must be 4 digits entered using the software keypad. If the password is lost, use the Password Reset Utility software provided in the CD to obtain a Reset Key.



NOTE: This menu option is not available on the Emulator.


Main Menu > System > Lock Sensor**3.2.5 Communications Menu****Main Menu > System > Communications**

The Communications menu is used to configure the serial I/O channel. There are three menu options:

- Serial I/O for configuring the Serial port
- Industrial Ethernet settings
- Command Channel for enabling or disabling commands to the sensor through Ethernet or Serial channels
- Data Export Channel for enabling or disabling the channel for data export only




NOTE: Either Data Export Channel OR Command Channel can be enabled.

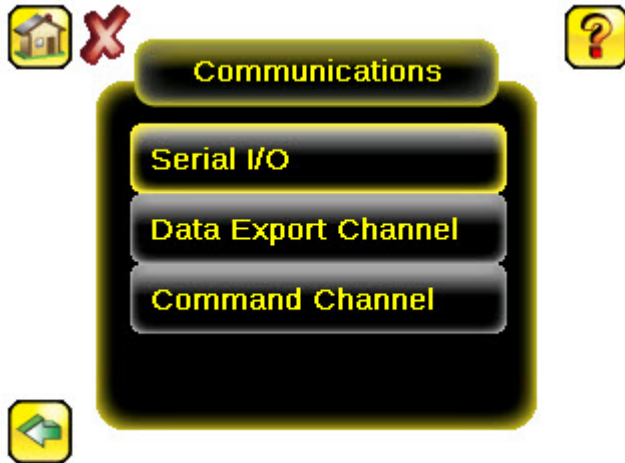

Port Settings for Serial I/O

Main Menu > System > Communications > Serial I/O

In the Serial I/O screen you can select values for Baud Rate, Stop Bits and Parity Control.

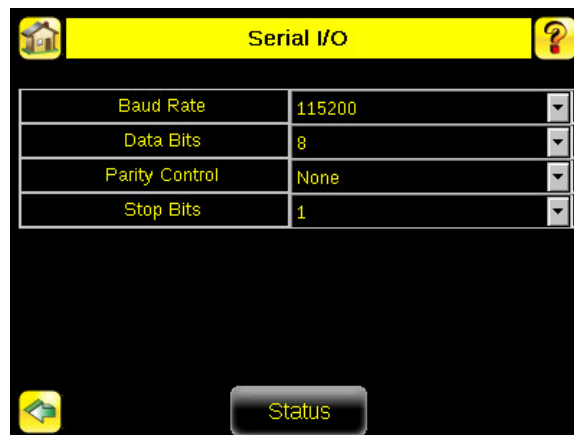

Command Channel


Main Menu > System > Communications > Command Channel

The iVu command channel is a bi-directional communication protocol that currently supports ASCII via the RS-232 serial interface, and enables other devices to remotely control the iVu sensor and to access sensor results.

Connection

Main Menu > System > Communications > Command Channel > Connection

The Connection screen is used to enable or disable the Command Channel.

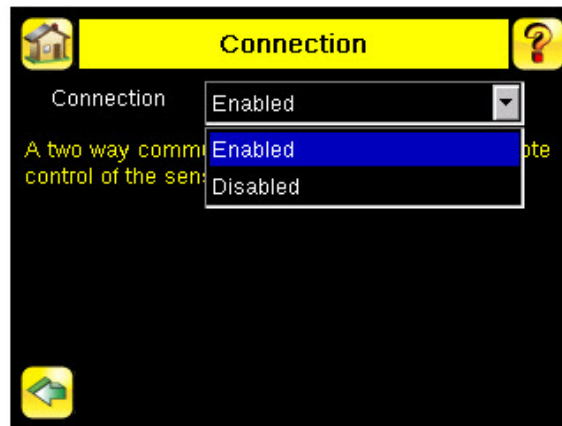


Delimiters

Main Menu > System > Communications > Command Channel > Delimiters

In the Delimiters screen, there are three delimiter options that you can set:

- Field Delimiter, which determines what is used to separate data that the sensor is sending out to a remote device.
- End of Frame, which determines the delimiter used to indicate the end of a frame.
- String Delimiter, which determines what is used to enclose a string field during both input and output operations.

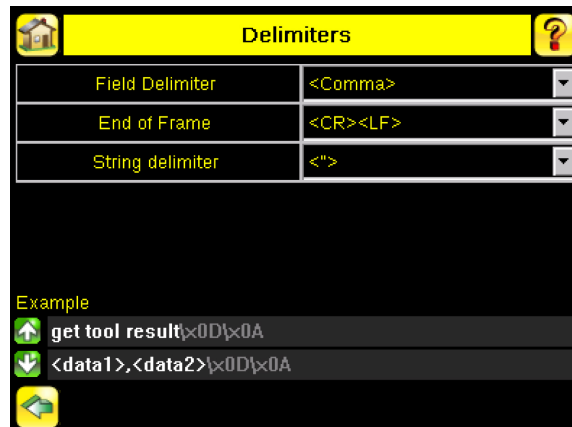

Use the drop-down lists to select the appropriate delimiter. The example at the lower part of the screen displays how the data will look in the output or input streams.

Data Export Channel


Main Menu > System > Communications > Data Export

When the Data Export Channel is enabled, the sensor will transmit selected inspection data when triggered.

Connection

Main Menu > Communications > Data Export > Connection


The Connection screen is used to enable or disable the Data Export Channel.

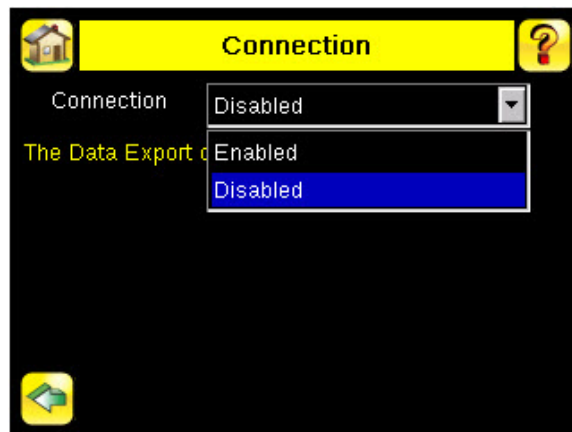

Data To Export

Main Menu > System > Communications > Data Export > Data To Export


The options in the Data To Export screen are used to determine what barcode data is exported via the serial port.

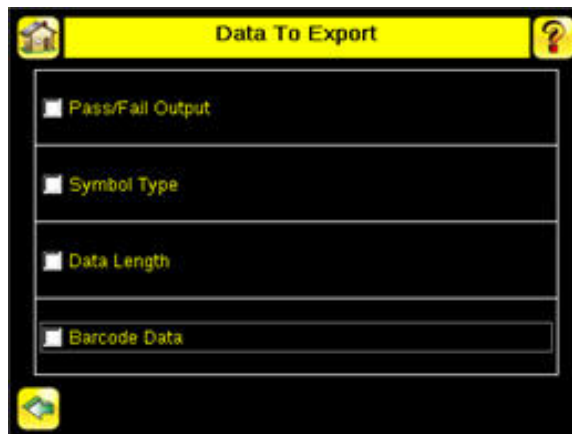

Output Format

Main Menu > System > Communications > Data Export > Output Format

In the Output Format screen, use the drop-down lists to select Start and End Strings as well a delimiter. In the field at the bottom of the screen is an example of how the data will look when it is output.

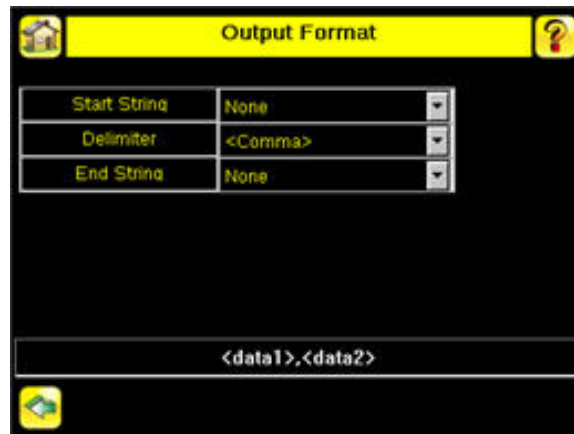

3.2.6 Discrete I/O

The Discrete I/O options are used to adjust iVu input and output settings.

Main Menu > System > Sensor Configuration > Discrete I/O




Input Polarity

The iVu has two input signals—Trigger and Remote Teach. The operation of these signals is dependent on the Input Polarity setting.

- **Low To High** - The Trigger and Remote Teach are detected on a low to high transition of the signal.
- **High To Low** - The Trigger and Remote Teach are detected on a high to low transition of the signal.

The default setting for a PNP sensor is Low To High, and for an NPN sensor it is High To Low. The user can change the setting on the Input Polarity screen.

Main Menu > System > Sensor Configuration > Input Polarity

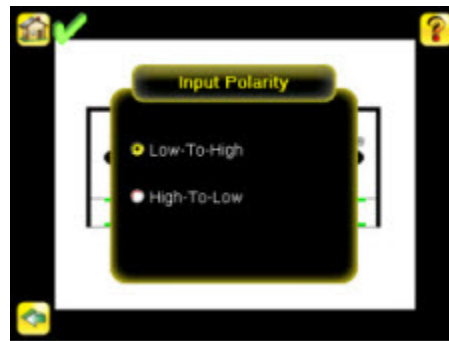

Input Pullup

Main Menu > System > Sensor Configuration > Discrete I/O > Input Pullup

The NPN version of the iVu sensor triggers from high to low, and Remote Teach behaves electrically like trigger. If using the NPN version of the sensor, select Enable.

The PNP version of the iVu sensor triggers from low to high, and Remote Teach behaves electrically like trigger. If using the PNP version of the sensor, select Disable.



Output 1

Output 1 can be configured for Pass, Fail, Read, No Read, Match, No Match, Missed Trigger, or System Error.


- A Read condition is when the configured number of barcodes are found in a scan. These barcodes must be error-free.
- A No Read condition is when the configured number of barcodes are not found in a scan sequence. This will not occur in Continuous Scan mode.
- If Data Compare is disabled, Pass and Fail are the same as Read and No Read.
- If the sensor is using Data Compare, Pass indicates that a good barcode was found, and the data compared.
- If the sensor is using Data Compare, Fail indicates that either no good barcode was found, or the data did not compare.
- A Match condition occurs when the required number of barcodes are found and the compare is successful.
- A No Match condition occurs when the required number of barcodes are found, but the compare is not successful.
- A Missed Trigger condition occurs when a trigger is received while sensor is busy inspecting the previous image. This output signal will be set to active state. This signal will be reset up on resetting the 'History' on the statistics page.
- A System Error condition occurs when a fatal error is detected on the sensor. This output signal will be set to active state. This signal can be reset upon resetting the 'History' on the statistics page, or executing a 'ClearSystemError' command through command channel.

The default setting is Pass and Latched for Output 1. If Pulsed is selected, the default Pulse width is 50 ms.



NOTE: For Latched the signal is active until the results of an inspection cause a change in the signal output.

Main Menu > System > Sensor Configuration > Discrete I/O > Output 1

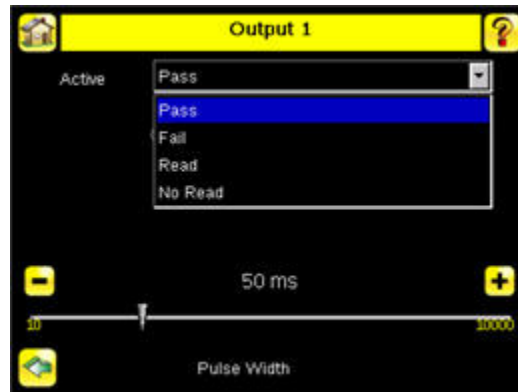

Output2

Output 2 can be configured in a similar fashion to Output 1.

The default setting for Output 2 is Fail and Latched.

3.2.7 Display Settings

The Display Settings menu is for setting the Fail Hold Time, LCD Timeout, doing a Touch Screen Calibration. Display optimization can be enabled in the Advanced menu option.

Main Menu > System > Display Settings



Fail Hold Time

The Fail Hold Time determines how long a failed image is displayed on the LCD so that you can see what failed. The sensor will continue to process any triggers and the inspection will continue normally. This time delay is just for the screen. You can set this parameter from 0 to 3600 seconds using the slider at the bottom of the screen.

Main Menu > System > Display Settings > Fail Hold Time

LCD Timeout

The LCD screen dims after a user-selectable period when the device is not being used. Use the arrow keys or slide the bar at the bottom of the screen to set the LCD screen time out.



NOTE: This screen is not available on the Emulator.

Main Menu > System > Display Settings > LCD Timeout

Touch Calibration

Touchscreen Calibration may be necessary if the software does not correctly respond when an icon on the screen is pressed. The calibration routine aligns the touch screen's coordinates to the display behind it. Be sure to follow the prompts on the screen when executing the Touchscreen Calibration function.



NOTE: This screen is not available on the Emulator.

Main Menu > System > Display Settings > Touch Calibration

Advanced

The Advanced Display screen allows you to edit the response of the display screen settings. Disabling this function may cause the display and touchscreen to be lethargic when sensor is busy.

Main Menu > System > Display Settings > Advanced

3.2.8 Reboot Sensor

The Reboot Sensor screen allows you to force a reboot of the sensor.



NOTE: This option is not available on the Emulator.

Main Menu > System > Reboot Sensor

3.2.9 Firmware Update

The Firmware Update screen is used to load the latest sensor firmware. The Firmware Update screen lists the firmware versions it finds in the BANNER\FIRMWARE folder on the USB drive. When you receive a firmware update from Banner Engineering, be sure to put it in the BANNER\FIRMWARE folder on the USB drive.




NOTE: The **Firmware Update** menu is not available on the Emulator.

Main Menu > System > Firmware Update

3.3 Imager Menu

The Imager menu icon is on the Main Menu, and lists parameters that affect the characteristics of the captured image.

Main Menu > Imager

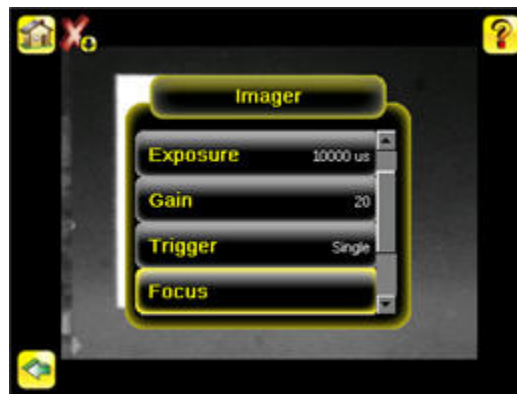

3.3.1 Auto Exposure

Auto Exposure optimizes the exposure time and gain for the current lighting conditions. Multiple triggers are required to complete this function.




NOTE: The Auto Exposure option is not available on the Emulator.

Main Menu > Imager > Auto Exposure

3.3.2 Exposure

Exposure is the amount of time the sensor allows light to energize the imager. Increasing the exposure time by moving the slider to the right allows more light to energize the imager, which brightens the image.

Main Menu > Imager > Exposure

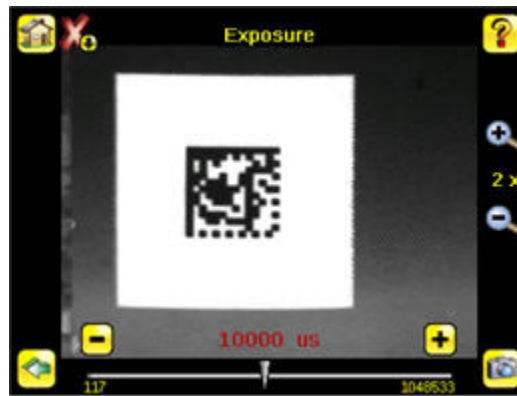

3.3.3 Gain


Gain is an electronic boost to the image signal. Increasing Gain by using the right arrow key or moving the slider to the right increases image brightness without increasing exposure time. Note that Gain brightens both the light pixels and dark pixels and may reduce the image quality.

Main Menu > Imager > Gain

3.3.4 Trigger

Main Menu > Imager > Trigger

A Trigger is a signal that makes the sensor capture a barcode image and decode it. From the drop-down list, select either Continuous Scan, External - Single, or External - Gated.

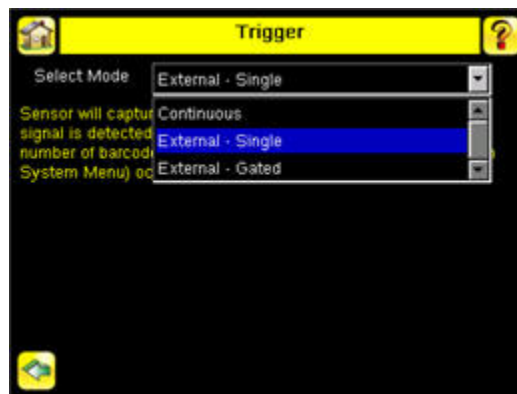

External-Single Mode

In External-Single mode, the sensor depends on an external trigger. For each trigger, the sensor captures an image and executes one scan through the configured barcode types looking for the specified number of barcodes. This trigger mode uses the Scan Time Limit parameter (**Main Menu > System > Sensor Configuration > Scan Time Limit**) to limit the amount of time the sensor will attempt to scan for barcodes on an image.

Continuous Mode

In Continuous mode, the sensor uses internal timing to continuously capture images. For each captured image, the sensor scans through the configured barcode types looking for the specified number of barcodes. If the specified number of barcodes is found, a Read event occurs. If the specified number of barcodes is not found, the sensor captures another image and repeats the scan. There are two parameters that are used to fine-tune how Continuous Scan mode operates:

- Same Code Reject Time (set at the bottom of **Main Menu > Imager > Trigger**)—time in seconds that must elapse before the scanner will report a previously scanned symbol again. A different symbol will be read immediately.
- Scan Time Limit (**Main Menu > System > Sensor Configuration > Scan Time Limit**)—limits the amount of time the sensor will attempt to scan for barcodes on an image.



NOTE: A No Read condition will **not** occur in Continuous mode as another image capture and scan automatically follows.

External-Gated Mode

External-Gated mode is similar to Continuous mode. While an external trigger input signal is active, the sensor continues to capture images and run barcode scans until a successful Read occurs or the External Trigger input signal becomes inactive. The External - Gated mode uses the Scan Time Limit parameter (**Main Menu > System > Sensor Configuration > Scan Time Limit**) to limit the amount of time the sensor will attempt to decode barcodes on an image.



NOTE: A No Read condition will **not** occur in External - Gated mode while the external trigger is active.

Command Mode

In Command mode, the sensor will capture images when Trigger commands are received. The sensor will be receiving trigger commands through the command channel.


3.3.5 Focus

The Focus Number displayed at the bottom of this screen is used to fine-tune image focus. Loosen the lock on the lens cover, turn the focus ring on the sensor until the Focus Number peaks (or the image appears sharp), then lock the focus ring.



NOTE: For the Focus Number to work, the sensor must be triggering and the images must be similar over time.


Main Menu > Imager > Focus

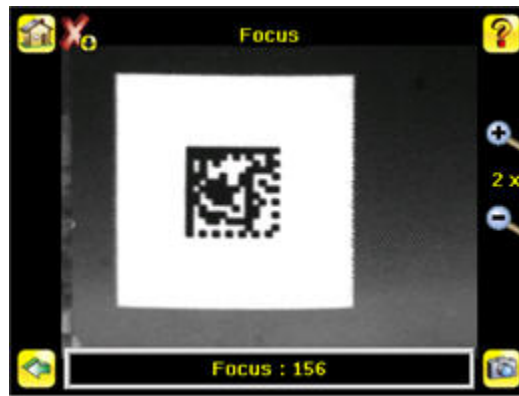

3.3.6 Strobe

The Internal Strobe configures the operation of the integrated ring light. The External Strobe configures the operation of an external light.


Main Menu > Imager > Strobe

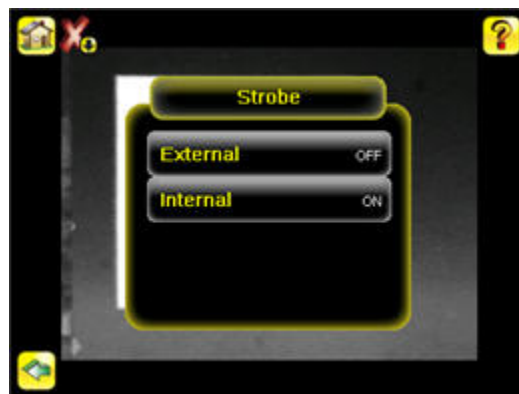

External

The External Strobe is a 5V output that can be used for an external light. Setting options are Always ON, Always OFF, or Exposure Based. If Exposure Based is selected, then the external light is on during the time the sensor is capturing an image.


Main Menu > Imager > Strobe > External

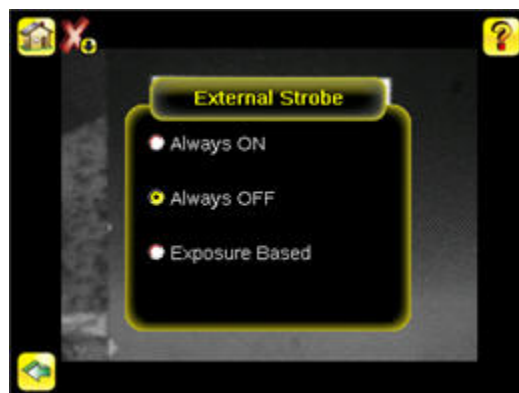

Internal

The Internal Strobe setting configures the operation of the integrated ring light. Setting options are Always ON, Always OFF, or Exposure Based. If Exposure Based is selected, then the ring light is on during the time the sensor is capturing an image.


Main Menu > Imager > Strobe > Internal

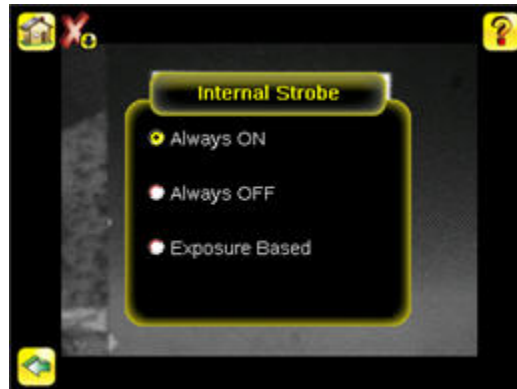

3.3.7 FOV

The field of view (FOV) is the area that the sensor can see at a given working distance. The working distance is the distance from the sensor's lens cover to the part being inspected. By default, the sensor uses the entire FOV in its operation. The effective FOV can be reduced in order to speed up the processing time of an inspection, or to decrease background noise.

Main Menu > Imager > FOV

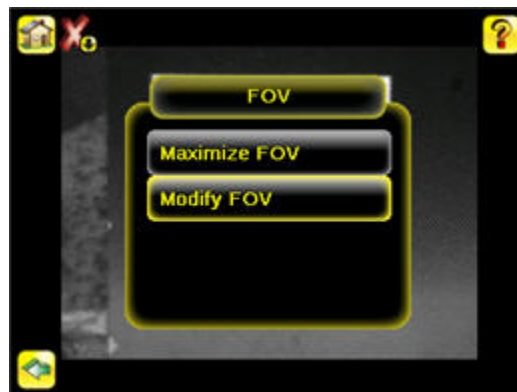

Maximize FOV

If the FOV has been modified and you want to get back to the default quickly, click the **Maximize FOV** menu option to restore the FOV to the entire sensor display.

Main Menu > Imager > FOV > Maximize FOV



Modify FOV

Use this option to reduce the size of the FOV.

Main Menu > Imager > FOV > Modify FOV



3.4 Inspection Menu

The Inspection menu icon is located on the Main Menu. The Inspection Menu provides options to set inspection parameters on currently running inspection and manage stored inspections.

Main Menu > Inspection

3.4.1 Barcode Menu


The Barcode Menu is the location for Barcode Type, Barcode Count, and Data Compare screens.

Main Menu > Inspection > Barcode


Barcode Type

Main Menu > Inspection > Barcode Type

The first time the sensor is powered up, the selection checkboxes for DataMatrix and All Linear barcode types are checked. The best practice is to check only the barcode type(s) applicable for your particular application. Note that, if All Linear is unchecked, a single linear barcode type can be selected instead.

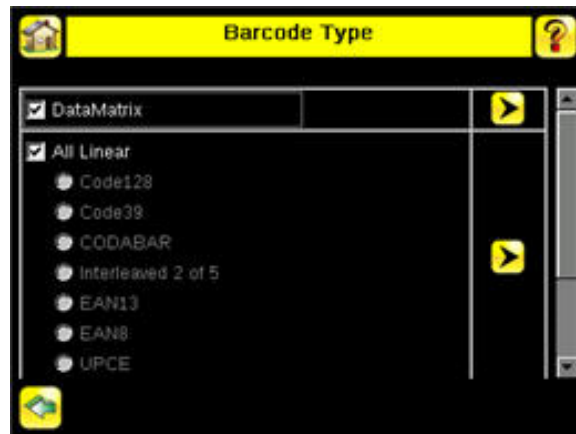

DataMatrix Settings

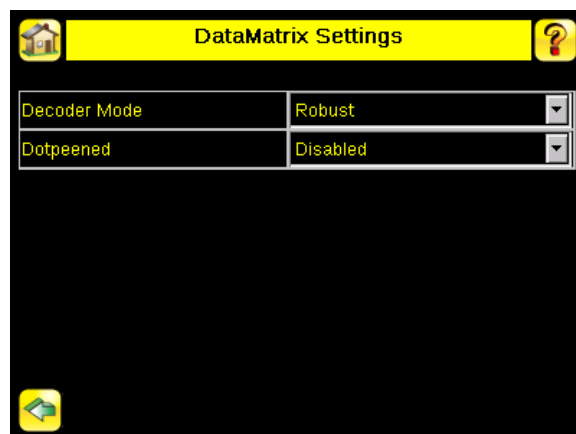

Decoder Mode

The Decoder Mode determines which decode algorithm to use and how imperfections in barcode images are handled. When you select Fast from the drop-down list, the sensor uses an algorithm that is tailored for speed. The algorithm does NOT correct for barcode image imperfections. The Fast setting has the best results on high-contrast images that contain high-quality barcodes. When you select Robust, the sensor uses an algorithm that performs routines to correct for imperfections of the barcode image.

Dotpeened

Enabling Dotpeened causes the decoder to be run in a method that is optimized for dot peened data matrix barcodes.

All Linear Settings

The All Linear settings described below apply to the following barcode types:

- Code 128
- Code 39
- CODABAR
- Interleaved 2 of 5
- EAN13
- EAN8
- UPCE
- Postnet

- IMB

All Linear	
Checksum Verify	Enabled
Relaxed Quietzone	Enabled

Checksum Verify only applies to Code 39 and Interleaved 2 of 5.

Change in Relaxed Quietzone setting will also affect 'Pharmacode' barcode type.

Checksum Verify

When checksum is enabled, the sensor uses a checksum to verify the integrity of the barcode being read.

Relaxed Quietzone

The Quietzone is a blank margin on either side of a barcode that indicates where the barcode begins and ends. If this Quietzone isn't big enough, the sensor can have trouble decoding the barcode. By enabling Relaxed Quietzone there is a greater tolerance with respect to the quiet zone required before and after the barcode.

Pharmacode Settings

Pharmacode	
Scan Direction	Left to Right
Relaxed Quietzone	Enabled

Change in Relaxed Quietzone setting will also affect 'All Linear' barcode type.

Scan Direction

For Pharmacode, you can select one of the following for Line Scanning:

- Left to Right
- Right to Left
- Top to Bottom
- Bottom to Top
- Omnidirectional

Use Omnidirectional scanning if barcode can appear inverted on part being inspected. If 'Compare' is enabled, the sensor attempts to compare that string to decoded data in both scan directions. Inspection is marked as PASS if at least one string matches. The data that successfully matched is displayed on the screen and is exported through communication channels as requested.

If Omnidirectional scan is selected, but 'Compare' is disabled, the data decoded from left-to-right scan will be reported.

Relaxed Quietzone

The Quietzone is a blank margin on either side of a barcode that indicates where the barcode begins and ends. If this Quietzone isn't big enough, the sensor can have trouble decoding the barcode. By enabling Relaxed Quietzone there is a greater tolerance with respect to the quiet zone required before and after the barcode.

Barcode Count

Main Menu > Inspection > Barcode Count

In the Barcode Count screen, select the number of barcodes you want to decode. You can select from 1 to 10.




NOTE: For IMB, Postnet and Pharmacode barcode types, the sensor will decode only one barcode for each of these types regardless of the Barcode Count setting. This means that if there is one of each of these types in an image, and the Barcode Count is set to 3, the sensor will decode all three; however, if there are three IMB barcodes, for example, the sensor will always only decode one IMB barcode.



Data Compare


Main Menu > Inspection > Data Compare

The menu options here are used to set up the sensor for Data Compare. Note that, if the Barcode Count is greater than 1, only the first barcode data can be compared or used in a remote teach operation. To see which barcode is the first one, turn on annotations.

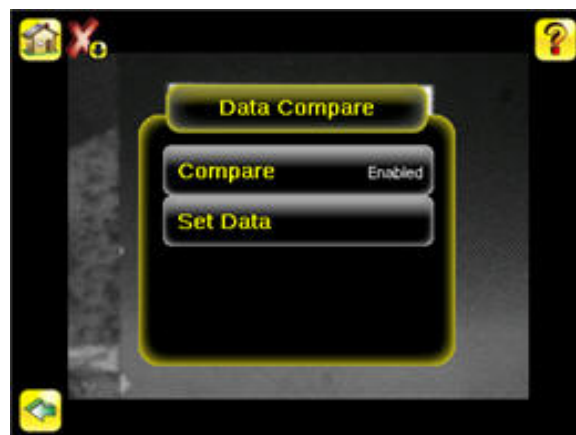

Compare


Use this menu to enable or disable Data Compare. If Data Compare is enabled, data can be defined in the Compare Data screen. The data can be retrieved from a previously scanned barcode, or it can be entered using the software keyboard on the touch screen, and insignificant characters can be masked within the data.

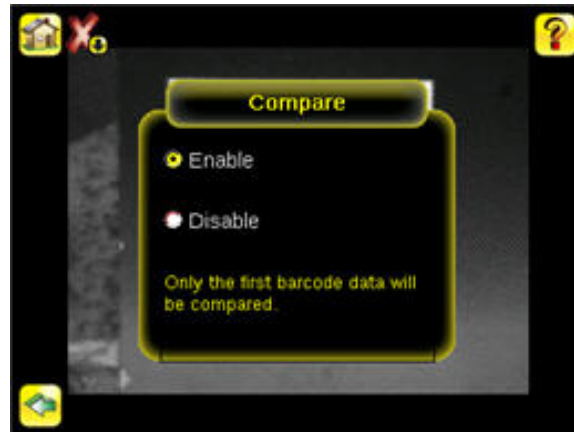

Compare Data

The Compare Data screen allows you to specify data against which you can compare a read barcode. Note that, if the Barcode Count is greater than 1, only the first barcode data can be compared or used in a remote teach operation. To see which barcode is the first one, turn on annotations.

- Click the Show last read data button to use the last read barcode data for the data compare.
- Click the Edit button to enter data using a software keyboard on the touch screen.
- Click the Mask button to select characters in the data to mask from the data compare. To mask a character, use the arrows at the bottom of the screen to move the cursor (|). When the cursor is to the left of a character you want to mask, click the Mask button. The character will change to green with a slash through it. If you want to unmask a character, make sure that the cursor is to the left of the masked character, and click the Unmask button.

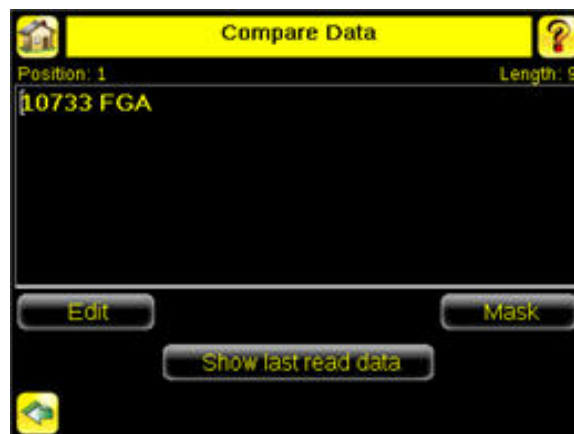

Edit Compare Data

The Edit screen displays data that was previously read or entered in the text field. The Position of the cursor within the characters displayed (|) in the text field is indicated at the top of the screen. Additionally, the number of characters is indicated by Length. Use the left and right arrows below the software keyboard to move the cursor between the displayed characters. Place the cursor to the right of any

character and use the back-arrow at the top of the screen to delete that character. Use the button at the bottom right of the screen to cycle through different character entry keyboards: text entry (with a button to toggle between upper- and lower-case characters), numeric entry, special character entry, and hex character entry.




Last Read Data

Click the Show last read data button to use the last read barcode data for the data compare

Mask Data

To mask characters in the data, move the cursor to the left of the character(s) to be masked, and click the Mask button. A masked character will appear gray with a strikeout (\) indicator. To unmask a previously masked character, click the UnMask button. Note that, when using Remote Teach to set new barcode data, if the previous input data contained any masked characters, Remote Teach will retain the masked characters only if the new data is of the same length as the previous input data. If the length does not match, masking is removed.

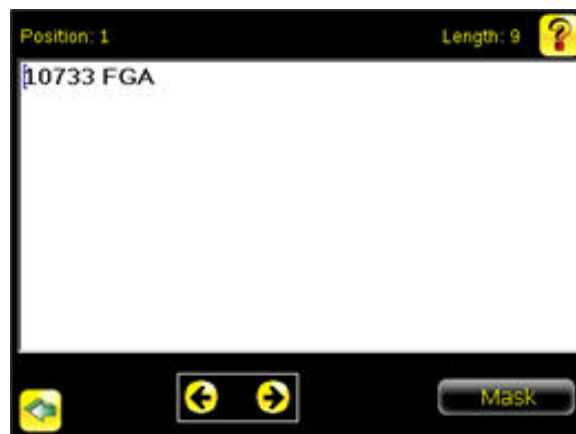


3.5 Logs Menu

The Logs menu icon is on the Main Menu, and is used to set up, view, and save Inspection and System Logs.


Main Menu > Logs**3.5.1 Inspection Logs**

This menu provides for configuring and viewing Inspection Logs. Inspection Logs are stored inspection records that include a captured image, the parameters used to inspect it, and the results of that inspection. Up to ten Inspection Logs can be held in memory on the sensor. The next ten overwrite the previous. Inspection Logs can be saved to the USB drive so that the logs can be imported to the emulator.

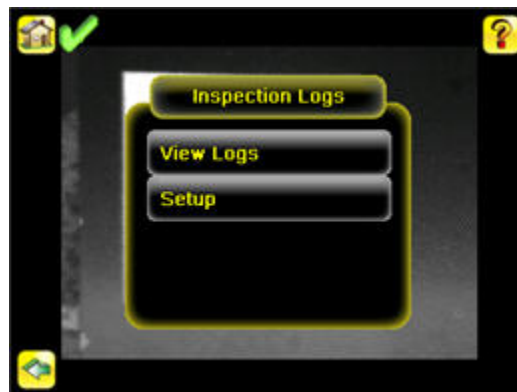Main Menu > Logs > Inspection Logs**View Logs**

Inspection Logs appear as a strip of film. You can select a frame to view a specific image. Use the icon in the lower right of the screen to save the logs to the USB drive. Logs saved to the USB drive can be imported into the emulator. Click the Clear button to clear Inspection Logs.

Main Menu > Logs > Inspection Logs > View Logs

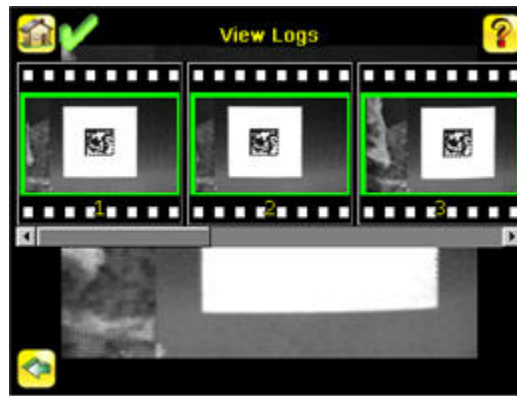

The View Inspection Log screen is used to debug an inspection, and shows one inspection in read-only mode. Click the upper-left icon to cycle through views. When in Statistics view, the table title has arrows to switch between Inputs and Results of the Inspection.


Use the left and right arrow keys at the bottom of the screen to navigate through the all stored Inspection Logs.



Setup

Use the radio buttons to Disable Logging, or to log Passed Inspections, Failed Inspections, or All Inspections.

Main Menu > Logs > Inspection Logs > Setup

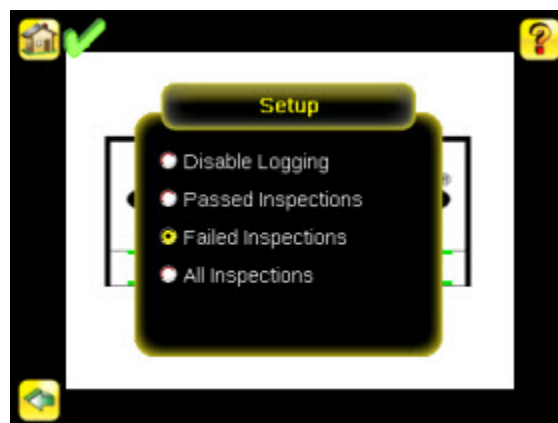

3.5.2 System Logs

The System Log contains configuration change information, other notifications, and any errors or warnings that may be encountered.

- Click the icon in the upper left corner of the screen to show/hide the time column.
- Click Clear Log button at the bottom of the screen to clear the System Log.
- Click the icon at the lower-right of the screen to save the System Log to the USB drive.



NOTE: System log will not log changes while in Demo mode. Additionally, the Emulator does not log changes.

Main Menu > Logs > System Logs

3.5.3 Communication Logs

The Communication Log contains logs for the two communications channels; Command Channel and Data Export. The features below are available for each of the logs:

- Click the icon in the upper left corner of the screen to show/hide the time column.
- Click Clear Log button at the bottom of the screen to clear the log.
- Click the icon at the lower-right of the screen to save the Log to the USB drive.



NOTE: Communication log will not log changes while in Demo mode. Additionally, the Emulator does not log changes.

Main Menu > Logs > Communication Logs

4 Display Modes

In the upper left of the screen is an icon for accessing different Display Modes:


- Display Annotations
- Hide Annotations
- Display Statistics.

4.1 Display/Hide Annotations

Click the icon in the upper-left of the screen to display annotations. When annotations are on, the display shows the data the sensor has read.



If the sensor reads more than one barcode in the field of view (FOV), in addition to the read data, the display indicates the index of each read barcode. In the example below, the top barcode is 1 and the bottom barcode is 2. It is important to note that, if the sensor reads more than one barcode, only the first barcode data (index #1) can be compared or used in a remote teach operation

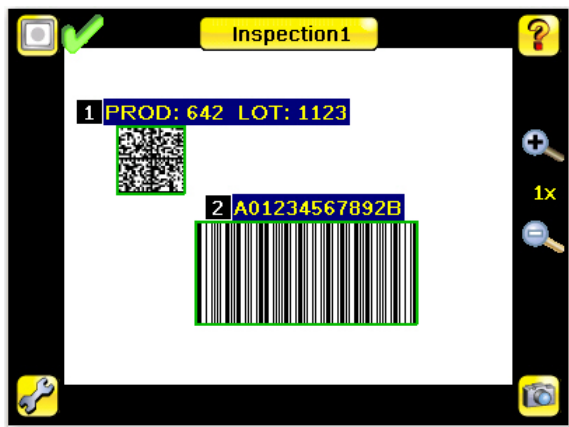

Click the icon in the upper-left of the screen to hide annotations.



4.1.1 Inspection Statistics

The History screen shows inspection statistics:

- Count Range - minimum and maximum number of objects observed
- Passed - running total of parts that passed inspection
- Failed - running total of parts that failed inspection
- Missed triggers - running total of missed triggers
- Time Range - minimum and maximum inspection times observed



4.1.2 Inspection Results

Click the right-arrow button on the History screen to see Inspection Result. The Inspection Result screen shows the last Frame number, the Barcode Count, the Inspection Time and read Barcode Data for each barcode.




4.1.3 Barcode Viewer

To view detailed information about a particular barcode, click the arrow next to the Barcode # to access the Barcode Viewer screen.

If Data Compare is disabled, The Barcode Viewer screen shows a single text box indicating the index number of the barcode and the data the sensor is reading. The data is displayed in yellow.



If Data Compare is enabled and the barcode is the first one, there are two text boxes. The upper one displays the data read from the barcode, and the lower text box shows the data from the Data Compare screen. The sensor does a position-by-position match and the characters that match are in yellow and mismatches are in red.

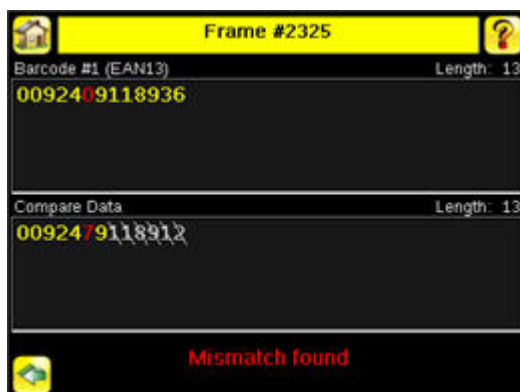

5 Setting up for an Inspection


In order to set up for an inspection, you need to:

1. Acquire a good image.
2. Set up a barcode application
3. Set data compare parameters


5.1 Acquiring a Good Image

The iVu Series sensor needs to capture a good image to ensure that it can read the barcode(s) correctly.


1. Go to **Main Menu > Imager > Auto Exposure** to run the **Auto Exposure** routine.
2. Check the lighting.
 - Make sure that the lighting is constant and consistent (unchanging over time, no shadows or hot spots).
 - Capture the barcode with lighting that optimizes its contrast and separates it from the background. Depending on the target, this may mean the integral ring light is not the best choice and other Banner lights should be considered.
 - Adjust the mounting angle to provide the clearest image of the barcode. The mounting bracket lets you easily position and adjust the sensor on your line. Typically, a slight angle will help with read robustness.
3. If needed, go to **Main Menu > Imager > Auto Exposure** to run the **Auto Exposure** routine a second time or adjust **Gain** and **Exposure** manually:
 - **Main Menu > Imager > Gain**

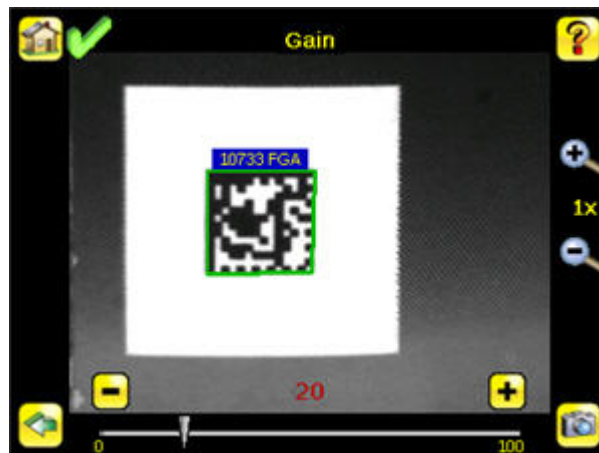

- **Main Menu > Imager > Exposure**

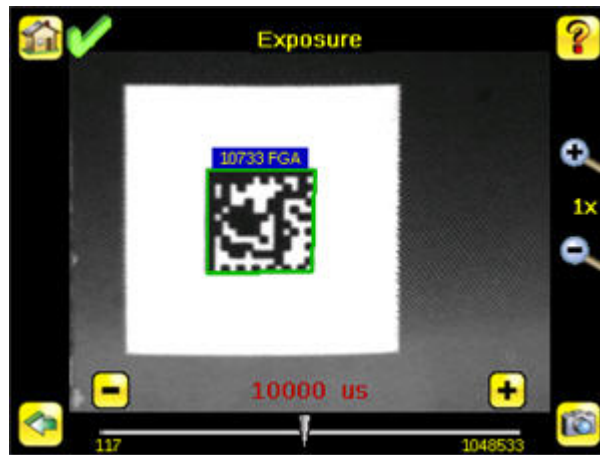

4. Go to **Main Menu > Imager > Focus** to adjust the focus while monitoring the **Focus Number**:

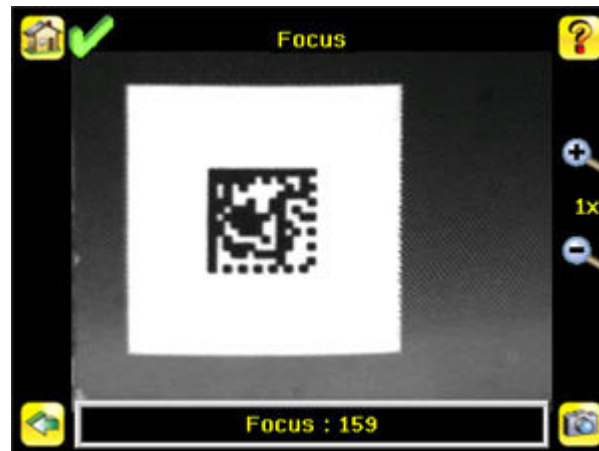

For Micro-lens Models Only:

1. Use the supplied 1/16" hex key to loosen the Focusing Window locking screw (D), then adjust focus on the iVu Series sensor using the clear Focusing Window (B).
2. Adjust focus while monitoring the focus number. To ensure the best image, adjust the focus until the Focus Number peaks.



NOTE: Turning the Focusing Window counter-clockwise focuses on closer objects, while turning the Focusing Window clockwise focuses on more distant objects.




3. Once the best image has been acquired, lock the focusing window.

Micro-Lens Models

	A	Lens
	B	Focusing Window
	C	Locking Clip
	D	Locking Screw
	E	Filter Cap (optional)
	F	Filter (optional)
NOTE: Filter Kits are available separately.		

For C-Mount Models Only:

1. Remove the Lens Enclosure
2. Adjust focus while monitoring the focus number. To ensure the best image, adjust the focus until the Focus Number peaks.
3. Replace the Lens Enclosure on the camera.

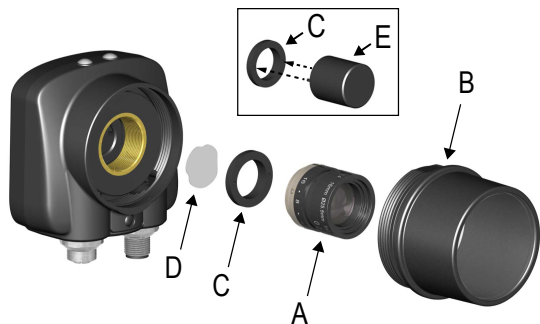C-Mount Models


A	C-Mount Lens
B	Lens Enclosure
C	Retainer Ring (optional)
D	Filter (optional)
E	Filter Retainer Ring Tool

NOTE: Filter Kits are available separately.

5.2 Setting Up a Barcode Application


This section describes how to set up the iVu BCR sensor.

1. Go to **Main Menu > Inspection > Barcode Type** to select one or more Barcode Types from the list.

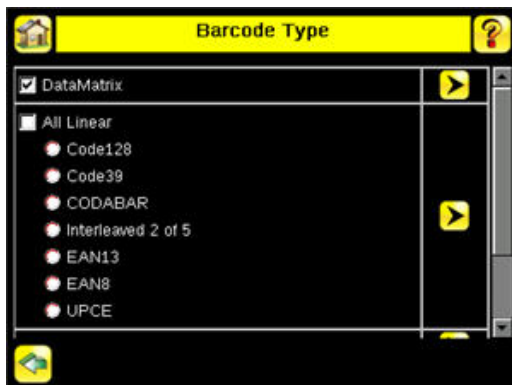

NOTE: To ensure optimal performance, select only the barcode types for your application. For example, if you use only one of the of the barcode types listed for All Linear, uncheck the box next to All Linear, and select a radio button next to the desired linear barcode type. If you use only DataMatrix, uncheck all the boxes except the one next to DataMatrix.

2. Go to **Main Menu > Inspection > Barcode Count** to select the number of barcodes (1 to 10) to be read at one time.

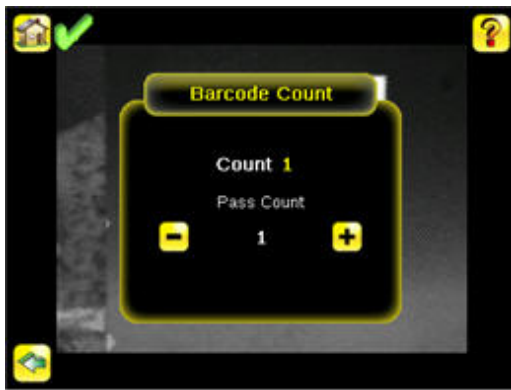


Once the sensor has been set up as described:

- Each successfully read barcode is marked by a green bounding box. If annotations are on, the barcode data is also displayed.
- Any case where data does not compare is marked with a solid red bounding box. If the barcode is marked with a dotted red bounding box, this indicates a checksum error or quiet zone violation.
- Any barcodes in the field of view that the sensor does not detect (for example, because they are not one of the barcode types selected), are unmarked.


5.3 Setting up for Data Compare

This section describes how to set up the iVu BCR sensor to compare decoded barcode data against some reference. For this example, the reference data will be from a previously decoded barcode.


1. Go to the **Main Menu > Inspection > Data Compare > Compare** to Enable data compare.

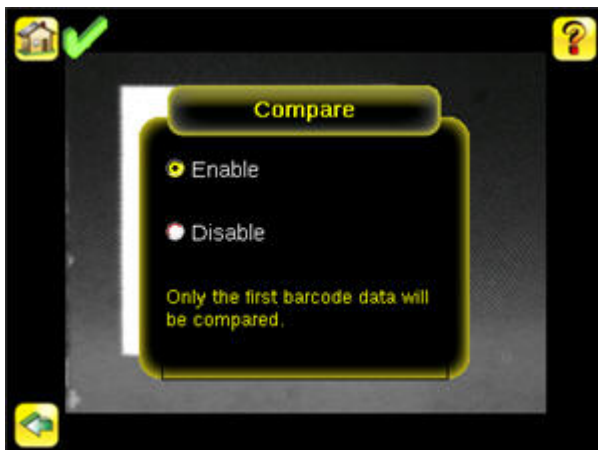


2. Go to the **Main Menu > Inspection > Data Compare > Set Data**, and click the **Show last read data** button.

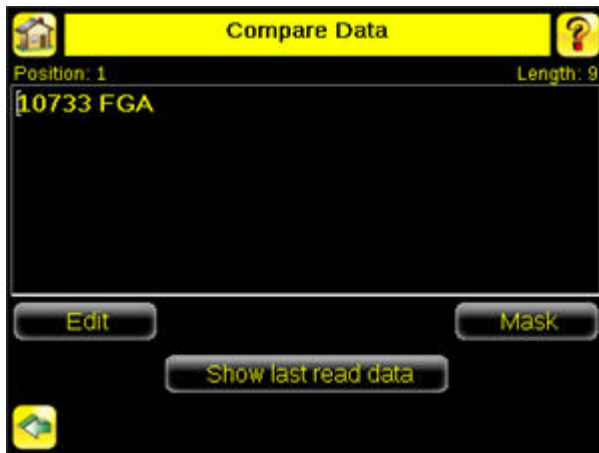

3. Press the **Yes** button.

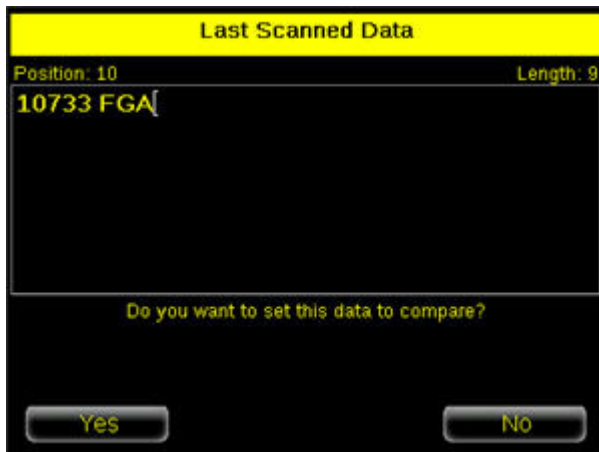

4. Press the Home icon to return to the main screen.

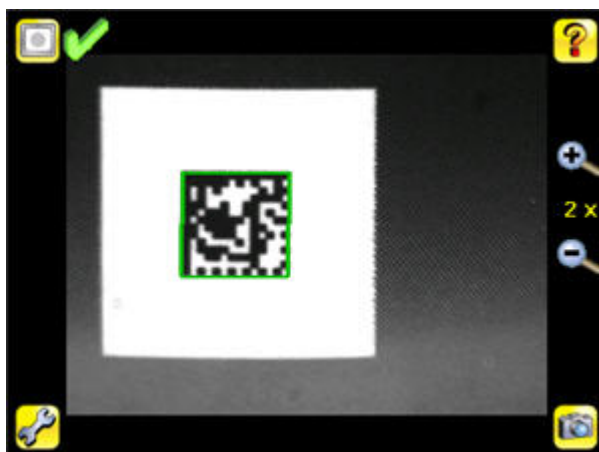


For all subsequent triggers, when the sensor reads the barcode data, it will compare it against this reference data.

6 iVu BCR Command Channel

6.1 Command Channel

The iVu BCR command channel is a bi-directional communication protocol that currently supports ASCII via either Ethernet or the RS-232 serial interface, and enables other devices to remotely control the iVu sensor and access sensor results.

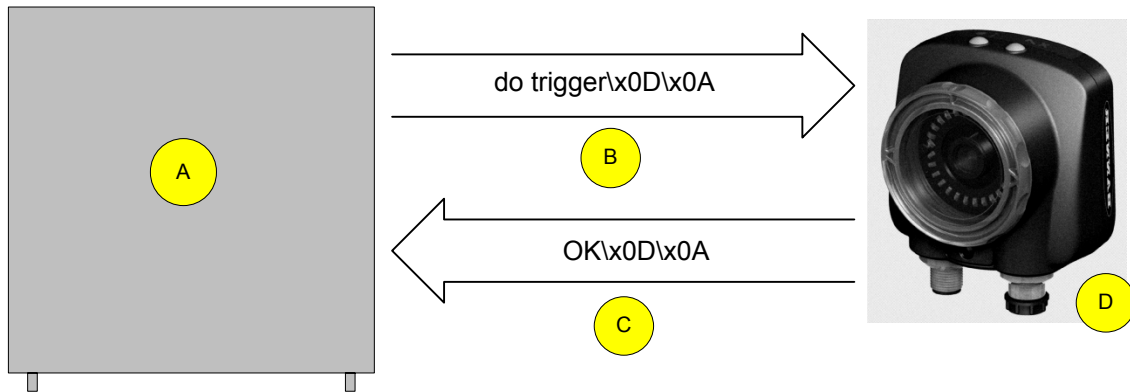

A Control Device, which can be a PLC, PC program, or a terminal

B Request Frame

C Response Frame


D iVu Plus Sensor

The following are some of the functionality available via the command channel:

- Get sensor information (such as version and sensor name)
- Control "discrete" I/O (such as trigger and teach)
- Get sensor results (such as sensor status)
- Change the running inspection

6.1 Command Channel Sample Application

The iVu BCR installation CD has a Command Channel sample application that provides an easy interface to execute commands. In a production environment, you will need to create your own application for bi-directional communication with the sensor.

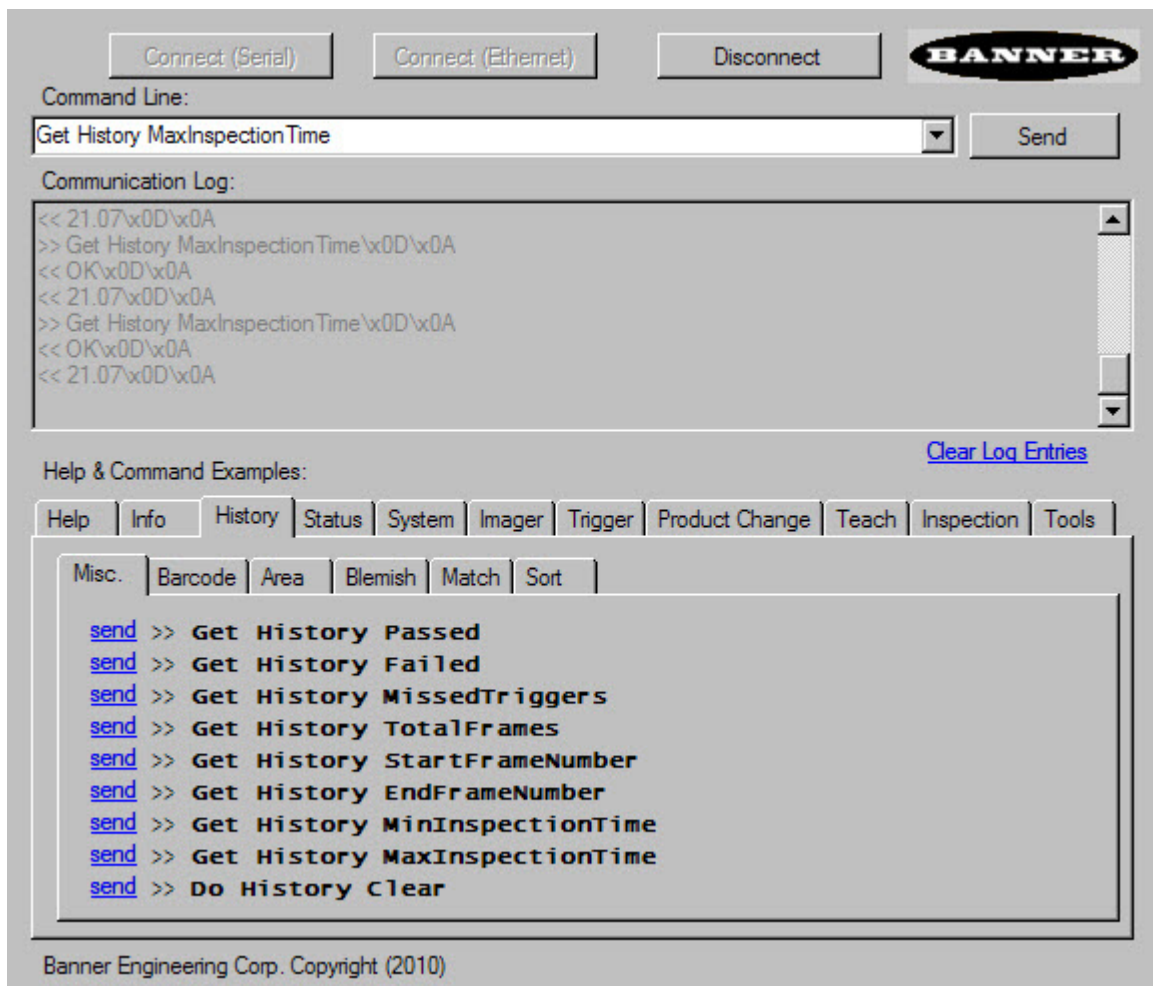

6.2 Setting Up Serial Communications


The general flow for setting up for serial communications:

1. Prepare the connection — RS-232 wiring.


Electrically connect the control device and the iVu sensor. On the iVu, the pins/wire colors used for serial communications via RS-232 are shown in the table below.

iVu RS-232 Connections		
Pin #	Wire Color	Description
10	Light-Blue	TX
11	Black	Signal Ground
12	Violet	RX


2. Enable the command channel. Go to **Main Menu > System > Communications > Command Channel > Connection**.

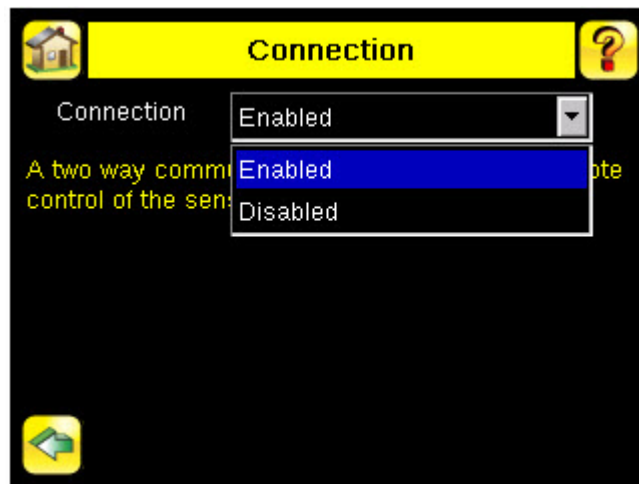

3. Configure port settings (baud rate, data bits, parity, and stop bits) on the iVu to match the settings on the control device. Go to **Main Menu > System > Communications > Serial I/O**.

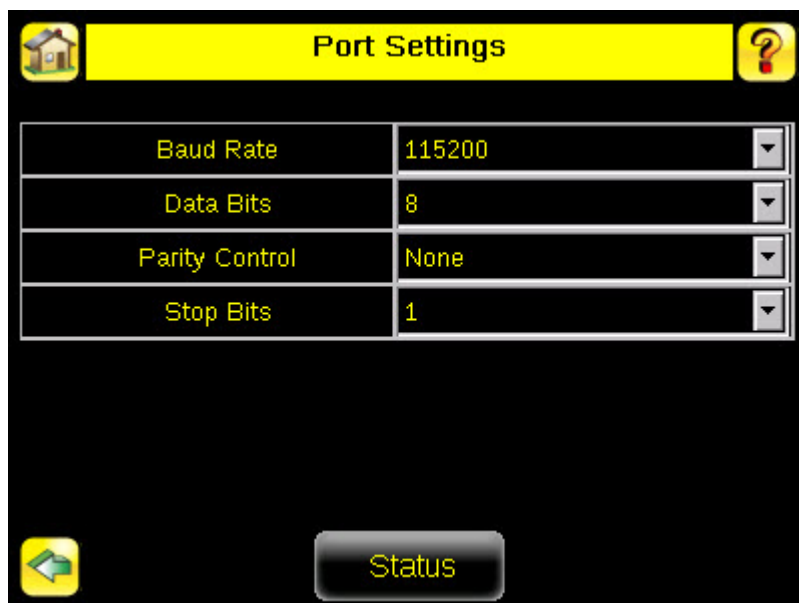


4. Configure end-of-frame delimiters. Go to **Main Menu > System > Communications > Command Channel > Delimiters**.

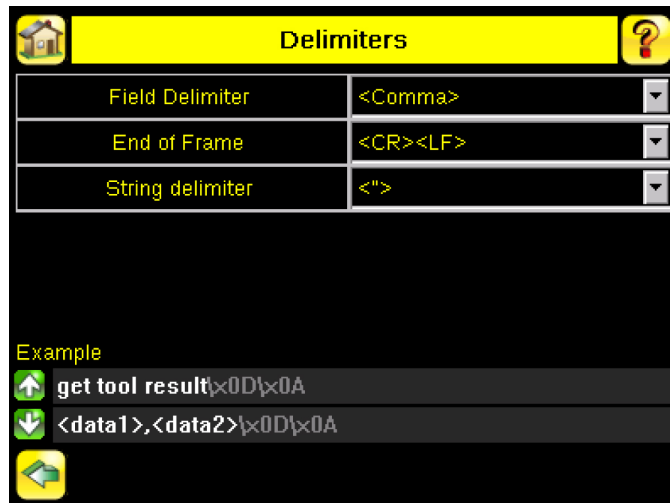

Valid end-of-frame delimiters are: <comma>, <colon>, <semicolon>, <CR>, <CR><LF>, <LF><CR>, or <ETX>.

5. Optionally, if you want to trigger the iVu from the control device, set the trigger mode to Command (go to **Main Menu > Imager > Trigger** and select Command from the drop-down).

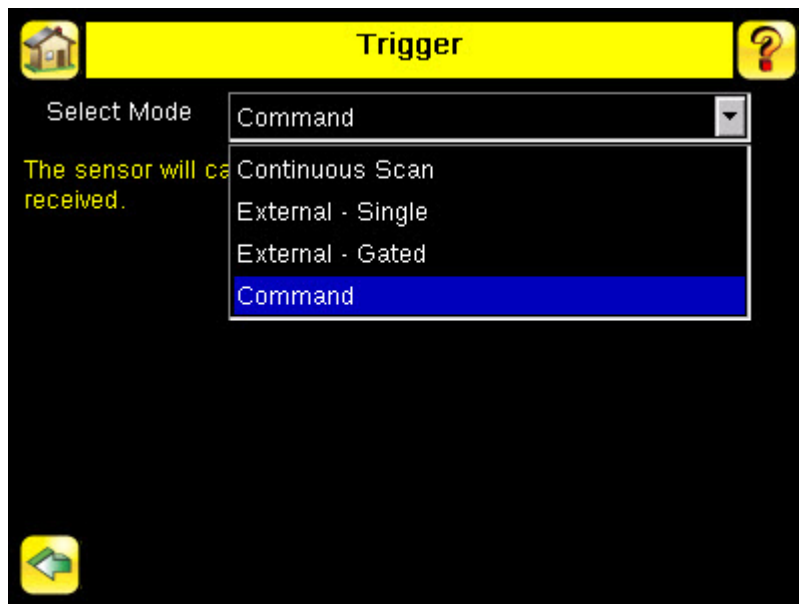


6. Verify that the iVu receives and transmits data correctly.

6.3 Testing and Troubleshooting iVu Command Channel Communications

6.3.1 Using the Port Status Screen for Testing RS-232 Communications

The Port Status screen can be used to ensure data is entering and exiting the sensor. This can be useful for debugging issues such as improper wiring, mismatched baud rates, or other serial I/O issues. To access the Port Status screen, go to **Main Menu > System > Communications > Serial I/O** and click on the Status button.

- The upper field shows the bytes received (request frame) on the iVu from the control device.
- The lower field shows the bytes sent (response frame) from the iVu to the control device.

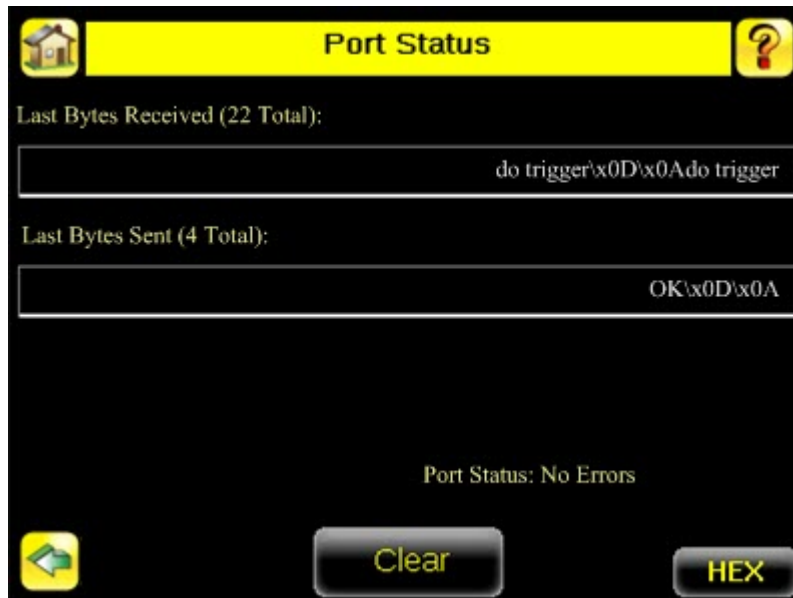

Port Errors

The Port Errors screen can help to debug communications channel issues: Parity, Break, and Framing indicate mismatched port settings or, in the case of Break, incorrect cabling.

6.3.2 Understanding the Communication Log

The Communication Log can be used to ensure commands are properly formed (syntax is correct), and provides a history of commands issued along with responses to these commands. To access the Communication log, go to **Main Menu > Logs > Communication Log**.

The iVu Plus sensor includes the following Communication Logs:







- Command Channel Log that can be used to ensure that commands are properly formed (syntax is correct), and provides a history of commands issued along with responses to these commands. To access the Command Channel Log, go to **Main Menu > Logs > Communication Logs > Command Channel**.
- Data Export and Image Output logs that are purely output logs (that is, there is no receive activity to log).



Some notes about the logs:

- To see an expanded view of each entry, click on the small right-triangle control on each entry.
- To save the log, click the save icon. The saved communication log can be loaded into the emulator for troubleshooting offline.

The table below describes the icons used in the Communication Log, the up-arrow indicates an incoming request to the iVu from the control device; the down-arrow indicates an outgoing response from the iVu to the control device.

Icon	Description
	Port opened.
	Port closed.
	Indicates that the command has been processed without errors.
	Indicates that the incoming entry is stalled (no new bytes), or end-of-frame delimiter was not received, or client is not reading data on ethernet.
	If the response frame contains an error or is dropped, the log entry icons for the request and the response frames will be colored red, and the displayed error count will increment by one.
	If the command takes a long time to process, the last long entry will change to an hourglass (for example, during trigger of long inspections).

For Ethernet channels:

- The channel's log will show an Enabled entry that indicates which port is being listened to.
- When a client connects, a log entry is added that indicates which IP address connected.
- When a client closes the connection, a log entry indicates that the channel is no longer being listened to.

6.3.3 Using the iVu Command Channel Sample Application or a Terminal Program for Testing

The easiest way to test that the iVu command channel is correctly receiving and transmitting data is to use either the iVu Command Channel Sample App (available on the installation CD) or to use a terminal program running on a PC:


If using a terminal program, in the terminal program's configuration:

- Set new-line transmit to <CR><LF> (and set the end-of-frame delimiters on the iVu to match).
- Enable local echo.
- Set the Serial port set up so that the PC port number's baud rate, data, parity, and stop bits match those setup on the iVu.

6.3.4 Verifying Basic Receive Functionality

To verify the iVu can receive request frames from the requesting device:

1. On the iVu Sensor, go to the **Main Menu > System > Communications > Serial I/O > Port Status** screen.

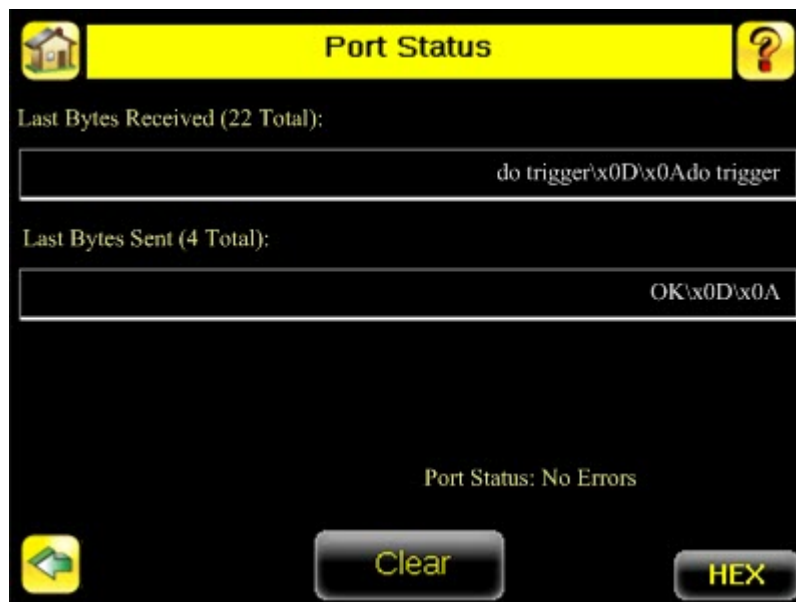

2. On the requesting device, transmit one or more bytes to the iVu sensor.
 - If the data byte values appear correct and the number sent by the requesting device matches the number received by the iVu sensor, then the transmit/receive functionality is working properly.
 - If the connection is incorrect (electrically) or if the baud rate is mismatched, no bytes will appear in the upper field on the Port Status screen.
 - If the connection is correct (electrically), bytes will appear in the upper field of the Port Status screen in the order they were received.
 - If the Port Status: Errors at the bottom of the Port Status screen highlights red, then the connection is correct electrically but there is likely a settings mismatch between the iVu sensor and the requesting device. Verify the settings on both devices.
 - If the bytes appear with no errors but appear incorrect or there are too many or too few, then the port settings (for example, baud rate) are likely mismatched in a way that does not generate serial hardware errors. Verify the settings on both devices match exactly.


6.3.5 Verifying Basic Transmit Functionality

The iVu command channel will only send response frames to the requesting device if it receives a valid end-of-frame delimiter from the requesting device. To verify transmit functionality:

1. Transmit an end-of-frame delimiter sequence from the requesting device to the iVu sensor. For example, in a terminal program, simply hit Enter.

If a valid end-of-frame delimiter is received, the iVu sensor will immediately transmit a short error message back to the requesting device (for example, ERROR 10000_COMMAND_MISSING).

2. Verify that the number of bytes sent by the requesting device are the same as the number shown in the lower field of the Port Status screen on the iVu sensor. Go to the **Main Menu > System > Communications > Serial I/O > Port Status** screen.

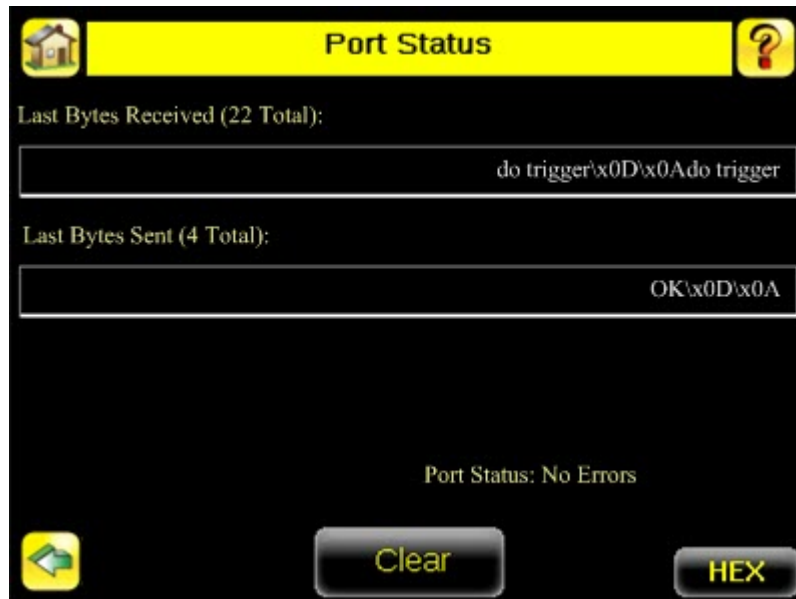

3. If the byte count does not match, re-verify that the settings on both devices match exactly. If no bytes are received, re-check the wiring.

If the correct response frame is received, then basic electrical and port settings are correct.

6.4 Command Channel Commands

All iVu command channel request command frames use the following syntax:

```
>> command group item value<EOF>
```

Notes

<EOF> is the end-of-frame delimiter. See below for a description.

All commands are in ASCII and are case-insensitive

command

An action to be performed on a particular iVu group; for example, get, set, do, login, or logout.

group

Identifies the iVu group that the command should act upon; for example, info, system, trigger, or bcr_input.

item

Further qualifies the action by specifying an item within the identified group; for example, comparedata or status.

value

For set commands, this identifies the data that must be set for the specified group item.

Note: Item is not used with get commands.

<EOF>

Identifies the end-of-frame for the command so that the iVu knows to begin processing. The iVu will return a response that includes the end-of-frame delimiter. The options for the <EOF> are set in the iVu Serial I/O menu, and are as follows:

- <comma>
- <colon>
- <semicolon>

- <CR>
- <CR><LF>
- <LF><CR>
- <ETX>



NOTE: When data is displayed on iVu screens such as the Port Status screen, printable delimiters are displayed as expected. Non-printable characters, such as <CR> are displayed in hex notation (\x0D).

6.4.1 Command Flow

The command flow should be such that a new command request should not be issued until the iVu command channel acknowledges the previous command request.

For example, the following is a series of command requests and responses. The first request sets the trigger mode to command and, once the sensor responds with an "OK," the next command request is issued to do (or execute) the trigger.

```
>> set trigger mode command\x0D\x0A
<< OK\x0D\x0A

>> do trigger\x0D\x0A
<< OK\x0D\x0A
```

6.4.2 String Delimiters and Escaping

By default setting, all strings used in commands are enclosed in quotation marks ("). All text in quotes is part of the command. Quotes (") or back-slashes (\) that are part of the string must be escaped with a back-slash. For example:

```
"abc\def"ghi\jkl"
```

Set the String Delimiter parameters to 'None' if strings should not be enclosed in quotation marks.

6.4.3 Command Channel Command Synopsis

There are a number of general types of commands to do, set, and get sensor data.

Do Commands

Do commands are actions (methods) to perform on the sensor, such as trigger, reboot, and the like.

Command	Group	Description
Reboot	System	Reboots the sensor. Pre-emptes other commands except Save.
Save	System	Saves inspection and configuration parameters. Blocks until finished. Should be used sparingly.
ClearSystemError	Status	Clears the system error LED and sets the internal flag to false.

Command	Group	Description
Immediate	Trigger	Initiates a single trigger. The sensor does not transmit a response until the sensor has completed the action.
Gated	Trigger	Initiates gated triggering. The sensor does not transmit a response until the sensor has completed the action.
AbortGated	Trigger	Aborts gated triggering. The sensor does not transmit a response until the sensor has completed the action, then it will respond with two responses.
NextTrigger	Teach	Sets the sensor to teach on the next trigger
Clear	History	Clears all history fields (for example pass, fail, etc.).

Get Commands

Get commands are used to retrieve information from the sensor (for example, get the status of the sensor).

Command	Group	Description
CompanyName	Info	The company name as a string.
ModelNumber	Info	The sensor model number as a string.
FirmwareVersion	Info	The sensor firmware version as a string.
SerialNumber	Info	The sensor serial number as a string.
Name	Info	The sensor name as a string.
BootNumber	Info	The number of sensor bootups
UpTimer	Info	The elapsed time the sensor has been running in the format hh:mm:ss:msec.
HourCount	Info	The number of hours the sensor has been running.
RemoteConnected	Info	The remote display connected status as a boolean value (true or false)
RemoteModelNumber	Info	The model number of the remote display as a string.
RemoteSerialNumber	Info	The serial number of the remote display as a string.
Ready	Status	Flag indicating whether the system is ready to trigger (true) or busy (false)
SystemError	Status	Flag indicating whether a system error is active (true) or cleared (false)
Mode	Trigger	Sets trigger mode to one of the valid trigger modes for the sensor.
Passed	History	The number of passed inspections.

Command	Group	Description
Failed	History	The number of failed inspections.
MissedTriggers	History	The number of missed triggers.
StartFrameNumber	History	The starting frame number.
EndFrameNumber	History	The ending frame number.
MinInspectionTime	History	The minimum elapsed time (msec) of the inspection.
MaxInspectionTime	History	The maximum elapsed time (msec) of the inspection.
MinBarcodeCount	History	The minimum number of barcodes read.
MaxBarcodeCount	History	The maximum number of barcodes read.
Status	Inspection	This status of the most recent inspection either Pass, Fail, or Idle (no triggers).
FrameNumber	Inspection	The most recent inspection frame number
ExecutionTime	Inspection	The most recent inspection execution time in msec.
ReadNoRead	Inspection	The barcode decoder status either read or barcode not found.
CompareData	BCR_INPUT	The compare data string. This string must start and end with the double quote character.
CompareMask	BCR_INPUT	The compare string mask in binary format; that is, masked characters are indicated by a "1" and unmasked characters are "0." Note that the mask character string must match the length of the compare string.
Count	BCR_RESULT	The total number of barcodes found in the last inspection.
Data	BCR_RESULT	The barcode data strings that were read in the last inspection. Each string starts and ends with the double quote character. Multiple strings are separated by the field delimiter
Type	BCR_RESULT	The type(s) of barcodes read in the last inspection. Multiple values are separated by the field delimiter.
MaxPercentMatch	MATCH_RESULT	(New Item Please Add Description Here)

Set Commands

Set commands set some group item on the sensor (for example, set compare data for the BCR).

Command	Group	Item	Value
Set	BCR_INPUT	CompareData	<VALUE>

Command	Group	Item	Value
Set	BCR_INPUT	CompareMask	<MASK >
Set	Trigger	Mode	ContinuousScan
Set	Trigger	Mode	ExternalSingle
Set	Trigger	Mode	ExternalGated
Set	Trigger	Mode	Command

Command Channel Response Frames

The iVu responds to all request frames with one or two responses depending on the type of command.

Do commands

All do commands are followed by one response that identifies the command status. For example:

```
>>  do trigger\x0D\x0A
<<  OK\x0D\x0A
```

Get commands

All get commands are followed by two responses: the first identifies the status of the command, and the second contains the retrieved information. For example:

```
>>  get bcr_input comparedata\x0D\x0A
<<  OK\x0D\x0A
<<  "012345ABCDEF"\x0D\x0A
```

Set commands

All set commands are followed by one response that identifies the command status. For example:

```
>>  set bcr_input comparedata "012345ABCDEF"\x0D\x0A
<<  OK\x0D\x0A
```

Command Channel Command Status

The command status is either OK or ERROR. If OK, then the command has fully and successfully completed. If an error is returned it is in the form *ERROR nnnnn_ERROR_IDENTIFIER* (for example ERROR 10001_COMMAND_NOT_RECOGNIZED). Refer to [Command Channel Error Codes](#) on page 72 for a list of errors.

6.5 Conventions Used for Examples

There are a number of command channel examples included here, and the following are the conventions used in the examples:

- All examples use <CR><LF> for the end-of-frame delimiter, and this delimiter is always denoted in hex (\x0D\x0A) since that is what is displayed in the iVu logs and, for example, the Port Status screen.
- All commands are in **bold** text.
- For each example, a command request to the iVu sensor is prefaced with a >>, and a command response frame from the iVu sensor is prefaced by a << as shown below. These are only used to make the documentation clearer.

```
>> get info companyname\x0D\x0A
<< OK\x0D\x0A
<< "Banner Engineering Corp."\x0D\x0A
```

6.6 Examples

6.6.1 Example 1: How to Trigger the Sensor and Retrieve Barcode Data using the Command Channel

To trigger the sensor and retrieve barcode data, do the following

1. Set Trigger to Command. Go to the **Main Menu > Imager > Trigger** screen, and from the drop-down select Command
2. Issue a trigger command as follows:

```
>> do trigger\x0D\x0A
<< OK\x0D\x0A
```

3. Check that the inspection passed.

```
>> get inspection status\x0D\x0A
<< OK\x0D\x0A
<< Pass\x0D\x0A
```

4. Get the barcode data read by the iVu sensor.

```
>> get bcr_result\x0D\x0A
<< OK\x0D\x0A
<< "0043000011201"\x0D\x0A
```

6.6.2 Example 2: How to Modify Barcode Compare Data Using the Command Channel

1. Set Trigger to Command. Go to the **Main Menu > Imager > Trigger** screen, and from the drop-down select Command
2. Set the compare data.

```
>> set bcr_input comparedata "0043000011201"\x0D\x0A
<< OK\x0D\x0A
```

3. Trigger the sensor.

```
>> do trigger\x0D\x0A
<< OK\x0D\x0A
```

4. Check that the inspection passed.

```
>> get inspection status\x0D\x0A
<< OK\x0D\x0A
<< Pass\x0D\x0A
```

5. Get the barcode data read by the iVu sensor.

```
>> get bcr_result data\x0D\x0A
<< OK\x0D\x0A
<< "0043000011201"\x0D\x0A
```

6.7 iVu Command Channel Reference

6.7.1 BCR_INPUT Command Group

Command	Group	Item	Description
get	bcr_input	comparedata	Returns the compare string.
get	bcr_input	comparemask	Returns the compare string mask. Masked characters are indicated by a "1" and unmasked characters are "0." Note that the mask character string must match the length of the compare string.
set	bcr_input	comparedata	Sets the compare string.
set	bcr_input	comparemask	Sets the compare string mask. Masked characters need indicated by a "1" and unmasked characters are "0," and the mask character string must match the length of the compare string.

Examples:

```
>> get bcr_input comparedata\x0D\x0A
<< OK\x0D\x0A
<< "0043000011201"\x0D\x0A

>> get bcr_input comparemask\x0D\x0A
<< OK\x0D\x0A
<< "1111000000000"\x0D\x0A

>> set bcr_input comparedata "0043000011201"\x0D\x0A
<< OK\x0D\x0A

>> set bcr_input comparemask "1111000000000"\x0D\x0A
<< OK\x0D\x0A
```

6.7.2 BCR_RESULT Command Group

Command	Group	Item	Description
get	bcr_result	count	Returns the number of barcodes found
get	bcr_result	data	Returns the barcode data that the iVu sensor read.
get	bcr_result	type	Returns the type of the barcode read. Multiple items are separated by a field delimiter.

Examples:

```

>> get bcr_result count\x0D\x0A
<< OK\x0D\x0A
<< 1\x0D\x0A

>> get bcr_result data\x0D\x0A
<< OK\x0D\x0A
<< "0043000011201"\x0D\x0A

>> get bcr_result type\x0D\x0A
<< OK\x0D\x0A
<< EAN13\x0D\x0A

```

6.7.3 History Command Group

Command	Group	Item	Description
get	history	passed	Returns the number of passed inspections.
get	history	failed	Returns the number of failed inspections.
get	history	missedtriggers	Returns the number of missed triggers.
get	history	startframenumbers	Returns the start frame number.
get	history	endframenumbers	Returns the end frame number.
get	history	mininspectiontime	Returns the minimum elapsed time of the inspection.
get	history	maxinspectiontime	Returns the maximum elapsed time of the inspection.
get	history	minbarcodecount	Returns the minimum number of barcodes read.
get	history	maxbarcodecount	Returns the maximum number of barcodes read .
do	history	clear	Clears all history fields (for example pass, fail, etc.).

Examples:

```

>> get history passed\x0D\x0A
<< OK\x0D\x0A
<< 13\x0D\x0A

>> get history startframenumbers\x0D\x0A
<< OK\x0D\x0A
<< 3\x0D\x0A

>> get minbarcodecount\x0D\x0A
<< OK\x0D\x0A
<< 1\x0D\x0A

>> do history clear\x0D\x0A
<< OK\x0D\x0A

```

6.7.4 Info Command Group

Command	Group	Item	Description
get	info	companyname	Returns the company name.

Command	Group	Item	Description
get	info	modelnumber	Returns the sensor model number.
get	info	firmwareversion	Returns the sensor firmware version.
get	info	serialnumber	Returns the sensor serial number.
get	info	bootnumber	Returns the number of sensor bootups.
get	info	name	Returns the sensor name.
get	info	uptimer	Returns the elapsed time the sensor has been running in the format hh:mm:ss.ms.
get	info	hourcount	Returns the number of hours the sensor has been running.
get	info	remoteconnected	Returns the whether a remote display is connected as a boolean value (true or false).
get	info	remoteserialnumber	Returns the the serial number of the remote display.
get	info	remotemodelnumber	Returns the model number of the remote display.

Examples:

```

>> get info companyname\x0D\x0A
<< OK\x0D\x0A
<< "Banner Engineering Corp."\x0D\x0A

>> get info bootnumber\x0D\x0A
<< OK\x0D\x0A
<< 42\x0D\x0A

>> get info uptimer\x0D\x0A
<< OK\x0D\x0A
<< 4:42:42:324\x0D\x0A

```

6.7.5 Inspection Command Group

Command	Group	Item	Description
get	inspection	status	Returns either Pass, Fail, or Idle.
get	inspection	readnoread	Returns either Read (found) or NoRead (not found).
get	inspection	framenummer	Returns the frame number.
get	inspection	executiontime	Returns the inspection execution time.

Examples:

```

>> get inspection status\x0D\x0A
<< OK\x0D\x0A
<< "Fail"\x0D\x0A

>> get inspection readnoread\x0D\x0A
<< OK\x0D\x0A
<< Read\x0D\x0A

>> get inspection executiontime\x0D\x0A

```

```
<< OK\x0D\x0A
<< 37.739\x0D\x0A
```

6.7.6 Status Command Group

Command	Group	Item	Description
get	status	ready	Returns either True (ready for trigger) or False.
get	status	systemerror	Returns either True or False.
do	status	clearsystemerror	Resets SystemError to False.

Examples:

```
>> get status ready\x0D\x0A
<< OK\x0D\x0A
<< True\x0D\x0A

>> get status systemerror\x0D\x0A
<< OK\x0D\x0A
<< False\x0D\x0A

>> do status clearsystemerror\x0D\x0A
<< OK\x0D\x0A
```

6.7.7 System Command Group

Command	Group	Item	Description
do	system	save	Saves inspection and configuration parameters. Blocks until finished. Should be used sparingly.
do	system	reboot	Reboots the sensor. Pre-empted all commands except save.

```
>> do system save\x0D\x0A
<< OK\x0D\x0A
```

6.7.8 Teach Command

Sets the sensor to teach on the next trigger

Example:

```
>> do teach\x0D\x0A
<< OK\x0D\x0A
```

6.7.9 Trigger Command Group

Command	Group	Item	Description
set	trigger	mode	Sets trigger mode to one of the valid trigger modes for the sensor: ContinuousScan, External, ExternalGated, or Command.
get	trigger	mode	Returns the trigger mode.
do	trigger		Initiates a single trigger. The sensor does not transmit a response until the sensor has completed the action.
do	trigger	gated	Initiates gated triggering. The sensor does not transmit a response until the sensor has completed the action.
do	trigger	abortgated	Aborts gated triggering. The sensor does not transmit a response until the sensor has completed the action, then it will respond with two responses (one from the previous gated trigger and one for the abort).

Examples:

```
>> set trigger mode command\x0D\x0A
<< OK\x0D\x0A

>> get trigger mode\x0D\x0A
<< OK\x0D\x0A
<< Command\x0D\x0A

>> do trigger\x0D\x0A
<< OK\x0D\x0A
```

The following example shows a gated trigger that is taking too long so an do trigger abortgated command is executed.

```
>> do trigger gated\x0D\x0A
>> do trigger abortgated\x0D\x0A
<< OK\x0D\x0A
<< OK\x0D\x0A
```

6.7.10 Command Channel Error Codes

Numeric ID	Text ID	Description
00000	SUCCESS	Command processed successfully
10000	EMPTY_FRAME_RECEIVED	Indicates that the request was empty. The command channel requires a command, any arguments, and an end-of-frame delimiter.
10001	COMMAND_NOT_RECOGNIZED	The command specified is not recognized
10100	GROUP_MISSING	A Group ID must be specified immediately after the command

Numeric ID	Text ID	Description
10101	GROUP_NOT_FOUND	The specified Group ID is invalid / unknown
10102	GROUP_ITEM_MISSING	A Group Item ID must be specified immediately after the Group ID
10103	GROUP_ITEM_NOT_FOUND	The specified Group Item ID is invalid / unknown
10152	NOT_READABLE	Attempt to get a value that is not readable
10153	NOT_WRITEABLE	Attempt to set a value that is not writeable
10250	NOT_A_METHOD	Method ID specified is not a method
10251	WRONG_ARGUMENT_COUNT	Total method arguments specified do not match method
10252	COMMAND_NOT_FINISHED	Attempt to issue command when a previous command has not finished
10300	INVALID_ARGUMENT_TYPE	Item ID specified must be a item (not a group or method)
10301	DATA_VALUE_MISSING	Command missing item's data value
10350	ARGUMENTS_DETECTED	Get command received with unneeded arguments
10351	INVALID_ARGUMENT_TYPE	Item ID specified must be a item (not a group or method)
10340	MINIMUM_VALUE_EXCEEDED	New item value is below the minimum
10341	MAXIMUM_VALUE_EXCEEDED	New items value is above the maximum
10500	DATA_SET_EMPTY	Data export operation returned no results.
10900	SENSOR_NOT_READY	Command specified requires sensor to be in the READY state.
10920	SENSOR_TYPE_NOT_ACTIVE	Command specified belongs to a different sensor type.
15000	VALUE_INVALID	Text value is invalid / unknown
15050	VALUE_INVALID	Text value is invalid - expecting True or False
15100	STRING_TOO_LONG	String value specified exceeds maximum allowable length
20000	BARCODE_TIMEOUT	Attempt to obtain Barcode result data when decoder has timed out
20001	NO_BARCODES_FOUND	Attempt to obtain Barcode result data when no barcodes were found
20002	COMPARE_DATA_DISABLED	Operation requires Barcode compare to be enabled
20003	COMPARE_MASK_INVALID	Compare mask invalid. Expecting string of 1's and 0's with length equal to compare data string

Numeric ID	Text ID	Description
20004	NUMBER_TO_FIND_NOT_ONE	Barcode number to find must be set to one for this operation.
80000	REMOTE_DISPLAY_NOT_CONNECTED	Remote Display must be connected to obtain this value
80001	REMOTE_DISPLAY_NOT_SUPPORTED	This sensor does not have Remote Display capability
80100	COMMAND_MODE_EXPECTED	The Trigger Mode must be set to "Command" perform this operation
80101	COMMAND_TIMED_OUT	The command timed out before finishing
80102	TRIGGER_REQUIRED	Access to the specified data requires a triggered inspection
80103	TRIGGER_NOT_GATED	Command requires a active Gated Trigger
80150	COMMAND_TIMED_OUT	The command timed out before finishing
80200	SYSTEM_ERROR_NOT_ACTIVE	The System Error must be active to execute this command

7 iVu Series: Updating the Sensor

7.1 Update Process

Banner Engineering may release new versions of the sensor firmware in the future. New firmware releases can be downloaded from Banner's website or can be obtained by ordering the latest Product CD. The following steps will guide you through the process of updating the iVu firmware.

Step 1: Copy firmware of desired product to USB Thumb Drive.

1. Launch the iVu Series software

From Product CD:

- Place the latest Product CD into your CD ROM drive. The iVu Series Software will automatically start.
- If your computer is not set for Auto-Play, you may start the iVu Series Software by browsing to the CD drive from My Computer screen and double-clicking on 'iVuSeries.exe'.

From Banner Website:

- Visit Banner's Website: <http://www.bannerengineering.com>
 - Browse to Vision Products page and select the iVu product you are using.
 - Click on the **Software** tab to view software releases.
 - Determine which version you want to download (Current Version recommended, for example "iVu Series Software Version 2010R4").
 - Click on the circular **Download** button. This will initiate the download process. Depending on your browser settings, you may be asked to confirm or provide a location to save the file. Choose to download on your desktop. Note the file name.
 - Double-click the file to start extracting the files and run the iVu Series Software.
2. Select the product you are using and browse to **Firmware Update** page.
3. Click on 'Run Firmware Update Wizard' and program will start.
4. Follow on-screen instructions. Clicking on 'Copy firmware to USB' will copy the selected firmware to the USB Thumb Drive.

Step 2: Install firmware on iVu

1. Remove the USB Thumb Drive from the PC, and plug it into the sensor.
2. On the sensor, select System -> Firmware Update. The name of the firmware file you copied on the USB Thumb Drive will be displayed.
3. Choose correct file and click on the 'Load' button.
4. Follow the steps on the screen to update the firmware.

7.2 How to Set or Modify a Sensor Name

You can set a Sensor Name for your iVu Series sensor or modify an existing name on the sensor using the software keypad. You can also change the sensor name this using the iVu Emulator as described below.



NOTE: If you are in a language other than English, you cannot modify the sensor name using the software keypad. Use the procedure described below.



NOTE: If you have not set the sensor previously, then folders will be named using the first 8-characters of the sensor serial number.

1. Plug a USB Thumb Drive into the sensor.
2. Save Sensor Configuration to the USB Thumb Drive (**Main Menu > System > Sensor Configuration > Save to USB**). The location of these files on the USB Thumb Drive will be displayed after the operation is complete—the sensor configuration is saved in <USB>:\BANNER\<SENSOR_NAME>. For example, if the sensor name is **myName**., the path will be <USB>:\BANNER\my-Name).
3. Remove the USB drive from the sensor and insert it into an available USB drive on a Windows PC.
4. If running the Emulator from the USB, launch the iVuEmulator.exe program. If running the Emulator installed on a PC, make sure the Emulator is not running, and copy the Sensor Configuration from the USB Thumb Drive to the folder where the Emulator is installed on the PC. For example, if the sensor name is myName and the iVu Emulator is installed in the default location on the PC, copy the file <USB>:\BANNER\myName\CONFIG.CFG to C:\Program Files\Banner Engineering\iVu Series.
5. Launch the iVuEmulator.exe program.
6. Go to the Sensor Information screen (**Main Menu > System > Sensor Information**).
7. Click the white box next to the Sensor Name label, and enter the desired Sensor Name.
8. Click the Back button on the lower-left corner of the screen to save the Sensor Name.
9. Close the Emulator program and the Sensor Name will be saved to the CONFIG.CFG file.
10. If running the Emulator on the PC, copy the CONFIG.CFG file back to the original folder on the USB drive—<USB>:\BANNER\<SENSOR_NAME> (for example <USB>:\BANNER\myName).



NOTE: The sensor will look in the original folder (for example, myName) for the CONFIG.CFG file.

11. Remove the USB Thumb Drive from the PC, and connect to the sensor.
12. Restore the configuration to the sensor.
 - a. Go to **Main Menu > System > Sensor Configuration > Load from USB** .
 - b. Select the Configuration to restore.
 - c. Click the Load button to start the restore sensor configuration.



NOTE: Once the new sensor name is restored in the sensor, all files saved to USB will now reside in the folder corresponding to the new sensor name.

You will need to reboot the sensor when the restore is complete.



NOTE: If a Sensor Configuration from one sensor is loaded onto another sensor, the Sensor Name from the Sensor Configuration will not be stored in the sensor.

7.3 How to Reset the Sensor Password

If you forget the password for your sensor, you can remove the current password using a reset key that is generated by the **Password Reset Utility**, which is located on the Product CD. The following steps will guide you through the specific steps to reset the password:

1. On your iVu Series sensor, click the **Forgot?** button located on the bottom of the **Enter Current Password** screen.
2. Write down the 6-digit **Device Key**.
3. On a Windows PC, insert the iVu product CD into the CD ROM drive.
4. From the product CD menu (started upon inserting the CD), launch the **Password Reset Utility**.
5. Enter the **Device Key** into the text box in the Utility—identified as **Step 1** in the **Password Reset Utility**.

6. Click the **Generate Reset Key** button.
7. Write down the four-digit **Password Reset Key**—identified as **Step 2** in the **Password Reset Utility**.
8. On the iVu Series sensor, check the **Next** button on the **Password Reset** screen.
9. Enter the 4-digit reset key on the **Enter Reset Key** screen.
10. Click **Apply**.

The password is now cleared.

7.4 How to Use Bitmap Image Files with the iVu Emulator

You can use bitmap (.bmp) image files with the iVu Emulator for developing and simulating iVu inspections. The iVu Emulator only accepts image files in .bmp format. If you have other image file formats, use an image viewer/editor program, such as PhotoShop, Gimp, or Paint, to convert the files to 8-bit grayscale .bmp format.



NOTE: Images smaller than 640 X 480 will be black-filled starting in the upper-right. Images larger than 640 X 480 will be cropped starting in the upper-left.

1. Copy the .bmp files into the InspLog folder in the iVu Emulator install folder.

For example, copy .bmp files into the C:\Program Files\Banner Engineering\iVu Series\InspLog folder.



NOTE: Remove any existing .bmp or Log files in that folder to avoid confusion because the Emulator automatically runs all .bmp/Log files sequentially according to filename.

2. Launch the iVu Emulator program.
3. Select Internal Trigger on the Trigger Selection screen (**Main Menu > Image > Trigger**) and select Internal.
4. Set the Trigger Interval as desired.


The iVu Emulator will be running using the .bmp files from Step 1.



NOTE: Banner does not recommend setting up inspections using these 8-bit grayscale images because you will always end up modifying the configuration after loading it on the sensor on the line. A better choice would be to set up the inspection on the emulator using Inspection Logs from the sensor.

8 LED Indicator Troubleshooting

In normal operation, the Power LED is steady green, and the Pass/Fail is green or red depending on the triggered inspection. The Ethernet I/O LED will be lit or off depending on connection status.

	1	Power LED	Green: Power Red: Error
	2	Pass/Fail LED	Green: Pass Red: Fail
	3	Ethernet I/O LED	Green: Connected No Light: Disconnected

The iVu also indicates abnormal conditions as described below.

8.1 Errors

Problem Indicator	Solution
The Pass/Fail LED is blinking green a number of times, separated by an LED red blink, and the sensor repeats this pattern over and over. This indicates that no inspections are occurring.	Reboot the sensor.
The Power LED is lit steady red. These type of errors are reported in the System log and appear highlighted in red.	Do the following: <ol style="list-style-type: none"> 1. Look in the System Log to see the error. 2. Clear the LED; that is, go to the Main Menu > Logs > System Logs and press the Clear System Error button at the bottom of the screen (a sensor reboot is not required). 3. If the error occurs again, you can try rebooting the sensor to see if that fixes the problem. If the problem persists, contact Banner customer support.

8.2 Warnings

Warnings are atypical conditions that the sensor detects and fixes. Warning are highlighted in yellow in the System Log, and can typically be ignored.

Index

A

Advanced 30
auto exposure 31

C

command channel log 59
command channel sample application 55
Communication Logs 44

D

data export log 59
Display Settings menu 29

E

exposure 31
external strobe 34

F

fail hold time 29
field of view 35
firmware update 30
focus number 33

G

gain 32

I

imager
 auto exposure 31
 exposure 31
 gain 32
imager menu 31
Inspection Logs 42
inspection menu 36
internal strobe 35

L

LCD Timeout 30

Load from USB 22
lock sensor 23
logs
 command channel 59
 data export 59
 communication 44
 inspection 42
 system 44

M

menu
 Display Settings 29
 Sensor Configuration 21
 Sensor Mode 21
 System 20

S

sample application
 command channel 55
Save to USB 22
Sensor Configuration menu 21
Sensor Information 22
Sensor Mode menu 21
serial communications 56
strobe
 external 34
 internal 35
System Logs 44
System menu 20

T

Touchscreen Calibration 30

U

USB
 loading from 22
 saving to 22