




www.naturepowerproducts.com
1-800-588-0590

User manual

Power Bank 5.0

Thank you for purchasing the Power Bank 5.0. You will now be able to travel great distances, make your digital life powerful.

Instructions

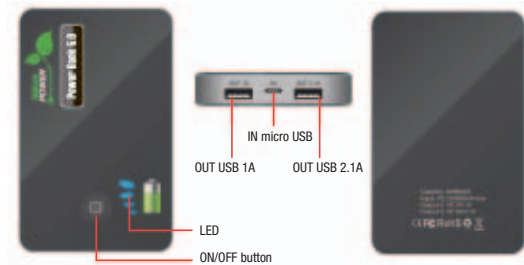

ON/OFF Button

Quickly press the button will indicate the power status by LEDs. Hold the ON/OFF button once to begin charging and again to stop charging.

LED

all LEDs on: 80%-99% capacity
3 LEDs on: 55%-80% capacity
2 LEDs on: 30%-55% capacity
1 LED on: 5%-30% capacity
All LEDs out: less than 5% capacity

OUTPUT & Compatibility

USB OUT 1: 5V/1A for iPod, iPhone and mobile phones, etc
USB OUT 2: 5V/2.1A for iPad, Samsung P1000, Moto MH900 and MID etc

Product accessory

AC with USB Adapter, Micro USB Connector

Features

Inside micro computer control
Low static power consumption
Intelligent capacity indication by LEDs, all on one press.

Dual USB - large current output and high convert efficiency
Stop outputting automatically once MID/Mobile phones full charged
Intelligent protection: over-charge, over-discharge, over-current, short-circuit protection etc.

Maintenance

To keep your Power Bank 5.0 operating to its fullest potential, make sure to do the following:

1. Re-charge your Power Bank 5.0 once every three months when not in use.

2. Keep your Power Bank 5.0 dry and away from moisture and corrosive materials.
3. Do not wash the Power Bank 5.0 with harsh chemicals, soaps or detergents.

Warranty

We are dedicated to making the best quality products we can. To back this up, your Power Bank 5.0 is warranted for 1 year from the date of purchase.

Warning

Read all instruction and warnings prior to using this product. Improper use of this product may result in product damage, excess heat, toxic fumes, fire or explosion, for which damages you (purchaser), and not manufacturer are responsible.

- Do not store battery in high temperature environment, including intense sunlight heat. Do not place battery in fire or other excessively hot environments.
- Be cautious of excessive drops, bumps, abrasions or other impurities. If there is any damage to the battery such as dents, punctures, tears, deformities of corrosion, due to any cause, discontinue use and contact

manufacturer or dispose of in an appropriate manner.

- Do not disassemble this battery or attempt to repair or modify it.
- Do not expose this battery to moisture or submerge it in liquid at all times.
- Do not attempt to charge battery using any other method, or connection other than the device's USB connector. For questions or instructions for the various ways to charge the Power Bank 5.0 refer to the product's user manual.
- Do not attempt to replace any part of this battery.
- If this battery is intended by purchaser to be used by a minor, an adult should agree to provide detailed instructions and warnings to any minor

prior to use. Failure to do so is sole responsibility of purchaser, who agrees to indemnify manufacturer for any unintended use of misuse by a minor.

- All batteries have gone through a thorough quality assurance. If you find that your battery is excessively hot, is emitting odor, is deformed, abraded, cut or is experiencing or demonstrating an abnormal phenomenon, immediately stop all battery use.
- Never dispose of batteries in the garbage. Disposal of batteries in the garbage is unlawful under state and federal environmental laws and regulations. Always take used batteries to your local battery recycling center.

This battery is meant for use only in conjunction with the appropriate mobile

entertainment device. Manufacturer shall not in any way be liable to you or to any third party for any damages you or any third party may suffer as a result of use, intended or unintended, or misuse of this battery in conjunction with any device or accessory other than the appropriate mobile entertainment device for which this battery is designed. Manufacturer will not be responsible for any damages you or any third party may suffer as a result of misuse of this battery as outlined above. If you are responsible for battery use with an unintended mobile entertainment device and damages result from such use, you agree to indemnify manufacturer for any resulting injuries to any third part(ies).