

Smurf ASP1 User Manual

AirLinkWiFi.Net

P2P IP Camera H.264 1.0 MP WIFI + SD Slot



IPC5earch 2.1 Language: English -Web ??TFTP Local IP: 192.168.1.108 NOTE:Please Input Correct Local IP! No. S... Mask DevT GateWay H. . Version Name The program will automatically search for existing IP cameras signals, but if the search is not automatic, just click in Search



PC Set Up (cont.):

4

After scanning for all available IP cameras, select the desired one and double click on it (This will open an Internet Explorer Window)

R	👰 IPCSearch 2.1											- 🗆 🗵			
Language: English 💌 Search Web ??TFTP Local IP: 192.168.1.108 NOTE:Please Input Correct Local IP!											IP!				
[No. S IP DevID							Name	Mask	GateWay H		MAC	Version		
	1	+	192.168.1.	. 136	QVKipVghJFQdb	CiHfDeSNPR	AeSzhHNhv	IPCAM	255.255.255.0	192.168.1.1	80	00:11:7F:7E:57:36	V1.2.6.8-X10-Build:201		
											_				
					eipCAM - Windo	ws Internet Ex	olorer						Internet Fx	nlore	

C C thtp://192.168.1.136/web/index.html	<u>ا- م</u>	🗟 🖅 🗶 <i> 🍯</i> ipCAM	internet Explore
			Window
			1
	User name	: 	
	Password	:	
	Language	English	
	Stream	MainFlow	
		Download Player	
		Login 🗖 Auto Login	

5


For firs time users of IPCSearch: Download the IPCSearch player and install it in your PC

User name	admin				
Password					
Language	English	×			
Stream	MainFlow				
	Download Player				
	Login	Auto Login			
Do you want to open or save IPCameraSetup.zip (940 KB) from 192	2.168.1.136?		Open Save	▼ Cancel	×
1					_




PC Set Up (cont.):

After installing the IPCSearch player login using the predetermined user name: admin and password: admin (Which can be edited after you access the PCSearch platform)

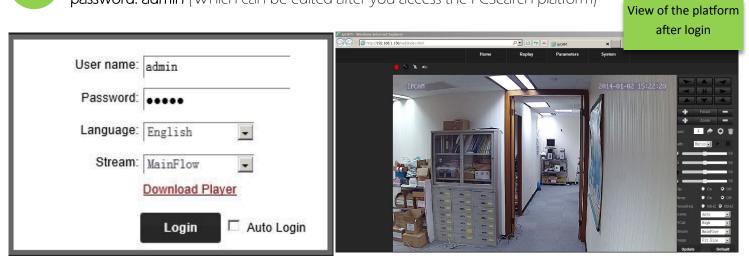

6

7 WIFI Settings			попе	8	Re	ріаў	Palaii	leters	System		
, , , , , , , , , , , , , , , , , , ,	∷≡	Media		Wifi Sta	tus:	_					
		Video	÷	Enable		7					
		OSD	►	CurHotF SSID:	oint	AirLinkWiF	i				
1) Click "Parameters" then under		PTZ	►	Connect S	tatus:	Connected					
network click "WIFI" to enter the se	et-	Network		SSID	SID Signal Auth Mode						
tings		Basic Settings	►	WiFi-11N AirLinkWil	Fi	89	9% [WPA		CMP][ESS]		<u></u>
2) Wifi Status: Tick the blank t	.0	DDNS	►	AirLinkWil AirLinkWil				\2-PSK-CO \-PSK-CCI	CMP][ESS] MP][ESS]		
enable the Wifi.		E-Mail	►	WIRELES			5% [ESS 2% [ESS				
3) Search: Click it, the wifi aroun	DI	Wifi	►	AirLinkWil AirLinkWil			1% [ESS)% [ESS				
the camera will appear		P2P		AirLinkWil powwell2	Fi)% [ESS)% [WP#		P+CCMP][WPA2-PSK-T	KIP+CCMP][ESS]	
4) Select the desired WIFI and ir	n-	FTP	►	ezbank powwell			SK-TKIP+CCMP][ESS]	-			
sert the password		Event		SSID:		AirLinkWi	Fi	_		Sear	ch
5) Apply the changes		Motion Detect	►	Auth Mo	de:	WPA/WPA2	•				_
	-	Occlusion Detect	►	Passwor	rd:	•••••	••••	□ s	Show Password		
		Alarm in out	►	Test							
		Auto capture	►								
		Record	►								
	≣	Cradle					Apply		Cancel		
		Cruise Path	Þ				Арріу		Cancer		

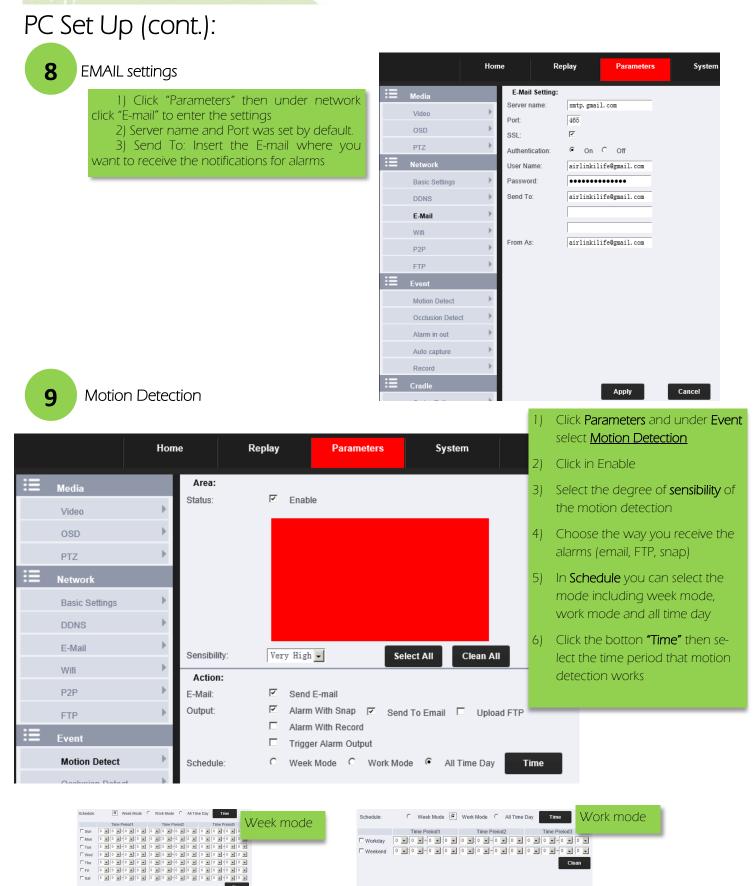

AirLinkWiFi.Net

AirLinkWiFi.Net

www.airlinkwifi.com

PC Set Up (cont.):


10

1

SD Card Settings

If you want to record into the SD card.

- 1) Click **Parameters** then under **Event** click **<u>Record</u>**
- 2) Manual record: On
- 3) Choose the File time for the record

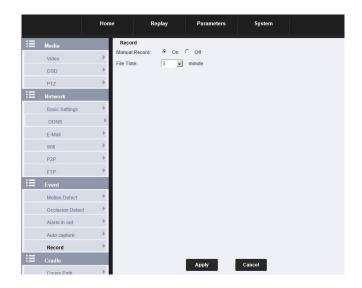

After you finish all the PC settings you can UNPLUG your camera from the access point and install it in your desired location

Hardware Installation

Location and environment precautions

- The environment temperature should be between -54° to 55°C
- Do not install it near any strong electromagnetic interference source



Connect camera to power adaptor

Install to desired location with screwdriver

2





Connect power adaptor to power source (12V)



Mobile Set Up:

1 Download the app "P2PCamLi	ve" and install it in your sma	artphone	
 Image: Second se	Available on the iPhone		
Р2РСаmLive РАТRICK К ОРЕІ			
2 Add Camera	ALL	Scan QR Code	Insert UID number manually
Add Camera	😥 Add Camera		Several Add Camera Device Setting
Camera AIRLINK Z4S9UN6FDUE9K5CWUMEJ Online	UID:		UID: Z4S9UN6FDUE9K5CWU Scan Sear
Click here to add camera	Scan Search	X	OK Cancel Z4S9UN6FDUE9K5CWUMEJ
 Scan the QR Code from the camera with the app 	Name: Camera	Home	1 2 3 4 5 6 7 8 9 0 Replay Parameters
2) Manually directly insert the UID No. written QR Code	n in the camera under the	Media P2P: Video ID: OSD Passwo	F Enable Z4S9UN6FDUE9K5CWUMEJ rd: admin
**You can find the UID also in PCSearch software under Para		PTZ	
3) Insert the Security Code (The predetermined	security code is admin)	E-Mail Wifi P2P	

Voice and Screenshot features



- Talk through the camera: If you connect speakers in your P2P IP Camera, you can talk through your phone and the people close to the camera can hear.
- Hear the environment: If you connect a microphone to the camera you can hear the environment in your phone.
- Taking snapshots: You can take individuals snapshots from your phone
- Viewing your snapshots: You can find the pictures in the gallery icon next to the camera icon.

Snapshot feature

3

Voice Features