

User Manual

eGlide Steal Tablet



eGlide Steal

7" Tablet PC

User Manual

Please read this manual before operating your device. Keep it for future reference.

IMPORTANT CUSTOMER INFORMATION

This manual contains important safety measures and information about how to correctly use this device. To avoid an accident, make sure you carefully read this manual before operation.

Many services and applications offered through this device may be provided by third parties. Before you use, link to or download a service provided by a third party, or an application such as a location-based GPS-type service, chat room, marketplace or social network from your device, you should review the terms of such service or application and applicable privacy policy. Personal information you submit may be read, collected or used by the service or application provider and/or other users of those forums. Ematic is not responsible for any information, content or services you access, download, or use from the Internet. You are responsible for maintaining virus and other Internet security protections when accessing []

This manual may not reflect your actual device's operation. All information is subject to change without prior notification. Please follow your actual device's operational procedures.

Table of Contents

| | | | |
|--|----|--|----|
| Section 1: Getting Started | 1 | Backup & Reset | 13 |
| Understanding this User Manual | 1 | Language & Output | 13 |
| Special Text | 1 | Date & Time | 14 |
| Battery Management | 2 | About Tablet | 14 |
| Turning the Device ON/OFF | 3 | Section 4 Connections | 15 |
| Micro SD Card | 4 | Wi-Fi | 15 |
| Section 2: Understanding Your Device | 5 | Web Browser | 16 |
| Features | 5 | Section 5 Using Pre-Loaded Apps | 19 |
| Home Screen | 6 | Music Player | 19 |
| Navigation | 7 | Camera | 20 |
| System Bar | 8 | Camcorder | 20 |
| Notifications | 8 | Gallery | 20 |
| App Shortcuts | 9 | Section 6 Safety | 21 |
| Applications | 10 | Important Safety Precautions | 21 |
| Section 3: Settings | 11 | Section 7: Care and Maintenance | 22 |
| Display | 11 | Section 8: Troubleshooting | 23 |
| Application Settings | 12 | Section 9: Specifications | 24 |
| | | Section 10: Warranty Information | 25 |

Section 1: Getting Started

This section helps you to quickly start using your device.

Understanding this User Manual

This manual gives operation instructions according to the default factory settings. If you change the default settings, navigation steps may be different.

Unless otherwise specified, all instruction in this manual assumes starting from the *HOME* screen. To get to the *HOME* screen, the device may first need to be *unlocked*.

Special Text

Notes, Cautions, and Warnings



NOTE: Indicates important information that helps you make better use of your device.



CAUTION: Indicates potential damage to hardware or loss of data if instructions are not followed.



WARNING: Indicates a potential for property damage, personal injury, or death.

Battery Management

This device is powered by a built-in polymer battery and is designed and manufactured to be used and recharged frequently. As with all batteries, the capacity of the battery reduces each time it is charged/depleted. However, you can prolong the battery's lifetime by following the suggestions below:

- Use your Tablet at least once a week.
- Deplete and re-charge the battery fully at least once per month.
- Never leave the battery fully discharged for a long period of time.
- Always keep the device and the battery away from heat.

The battery is not fully charged out of the box, so it is recommended the battery be charged for at least 4 hours before starting to use the device.



NOTE: The first two times the battery is charged, it may take as long as 6 hours to fully charge the battery.

Battery Indicator

The battery icon in the System Bar shows the battery power level.

In the event the battery becomes low on power, the follow will occur:

- The battery icon will show no power
- Device will power OFF automatically
- Operation buttons will not respond
- Red signal appears in right corner of device

Should any of the above conditions occur, charge the battery before attempting to use the device.

Charging the battery

- 1 Plug the power adapter into an electrical wall outlet.
- 2 Connect the power adapter to the device's power interface port to fully charge the battery before use (approximately 4 hours).
 - a. While charging, the battery indicator light in the system bar will fill with an image of a lightning bolt.

- b. When fully charged, the battery indicator light is green.



NOTE: The device can be used while the battery is charging, although the charging time is longer when operating and charging at the same time.

Turning the Device ON/OFF

To turn the device ON:

- 1 Press and hold the POWER button for 3 seconds.
- 2 Release the POWER button.



NOTE: It may take a few minutes for the system to start-up. Wait before proceeding.

To turn the device OFF:

- 1 Press and hold the POWER button until the option to “Power OFF” is displayed.
- 2 Tap “Power OFF”.
- 3 Tap “OK”.

Micro SD Card

Installing a Micro SD Card

- 1 Power OFF the device.
- 2 Open the Micro SD Card slot and carefully insert a Micro SD Card as gently until it click into place.

Removing a Micro SD Card




CAUTION: Use care to properly remove the Micro SD Card. Any sudden removal may cause damage to the device or to data stored on the Micro SD Card.

- 1 Confirm all files or programs running from the Micro SD Card have been closed.
- 2 Carefully press the Micro SD Card to cause it to automatically eject.
- 3 Remove the Micro SD Card from the slot.

Section 2: Understanding Your Device

 Features

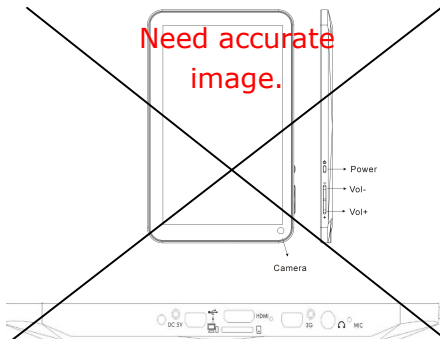


- **Touch Screen:** 7" Touch Screen
- **Volume Key:** Press the Volume button "+" or "-" for volume adjustment.
- **Camera Lens:** Use when taking pictures and recording video.

- **Power ON/OFF:** Press and hold to turn the device on or off, or to access Silent mode, Airplane mode, or Restart your device when the device is turned on. Press to lock the device, or to wake the screen for unlocking.
- **3.5mm Headphone Interface:** Connects to earphones and automatically switches audio output from the audio speakers to the headset
- **HDMI Video Output:** Connects directly to a High Definition (HD) TV to output video/voice signal to the TV display.
- **Micro SD Card Slot:** Insert a Micro SD Card into the Micro SD Card Slot for storage of files.
- **(2) Mini USBs:** Connect to a PC for data transfer and charging; or to an external USB flash drive.


Home Screen

 The *HOME* screen is the starting point for using your device. After powering ON the device, the “^T æ” logo will be displayed, then the “Android” logo, and then the *HOME* screen below:

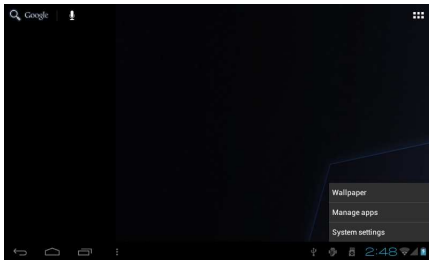

Display Settings

The display settings can be customized to your preferences.

Tap  to display the menu for *Wallpaper*, *Manage Apps*, and *System Settings*.

Application - Software which allows you to perform a specific task. Your device is preloaded with a variety of applications, and additional ones can be downloaded from the A]] Å@] .

Widget - A small application which resides on the Desktop screen and provides quick and easy access to information.

Shortcut - A link you can put on your P[{ ^ Screen to provide quicker access to an application or a folder containing contacts or bookmarks.

SHh gBar - Always present at the bottom of the screen to show notifications, system status, and navigation buttons.

Navigation

Your device has a multi-touch screen that allows quick, easy and convenient navigation for all applications.



CAUTION: A touch screen responds best to a light touch from the pad of your finger. Using excessive force or a metallic object when pressing on the touch screen may damage the tempered glass surface and void the warranty.

Throughout this User Manual, you are instructed to use the following navigation methods:

Tap: Quickly tap and release one time on the screen.

- Selects the items on the screen including options, entries, images, and icons.
- Starts applications.
- Presses the buttons on the screen.
- Inputs text using the on-screen keyboard

Ä

Swipe: Touch and slide your finger across the screen and then release.

- Moves items such as images and icons on the screen.
- Moves the adjustment icon along a track to change a setting (i.e., volume, brightness, screen unlock, etc.).
- Moves the desktop screen horizontally to expose additional display space.

Touch and Hold: Touch and hold in place approximately 2 seconds and then release.

- Displays an options window.
- Moves applications from the **All Application** screen to the desktop or a folder.
- Deletes email accounts and contacts.

System Bar


The System Bar offers navigation tools, plus information about your device's current status.




HOME

Tap  **Home** to display the *HOME* screen.


BACK

Tap  **Back** to return to the previous screen, option, or file.

RECENT APPS

Tap  **Recent Apps** to view apps you recently launched. From Recent Apps, tap an app to re-launch it.

Menu

Tap  to view the menu options available for the screen displayed.

Notifications



The right side of the System Bar shows the current time, network, battery status and other details, including these icons.



Battery Level: Shown fully charged.



Charging Indicator: Battery is charging.



Device Power Critical: Charge immediately to avoid device shut down.



USB Charging Indicator: Connected to PC via USB cable. When connected to a PC, the battery only charges when the device is turned off.



USB Connected: Connected to a PC using a USB cable.



Download in progress: An application is being downloaded to the device.



Airplane Mode: Airplane Mode is active. You cannot access online information.



New Email Message: You have new email. Touch the icon for additional information.



Configure input methods: When the keyboard is displayed, touch for a menu of quick keyboard settings.



Music Player: A song is playing. Touch the Music icon or Status details to see the song title and controls.



Wi-Fi Active: Wi-Fi is connected, active, and communicating with a Wireless Access Point (WAP).



Navigation Active: Navigation App is active.


App Shortcuts

Use App shortcuts to quickly access applications from the *HOME* screen,

Adding Shortcuts from the HOME Screen

- 1 Touch and Hold on the screen
- 2 Tap App Shortcuts to display available shortcuts. Scroll the shortcuts by swiping your finger right or left.
- 3 Tap a shortcut to add it to the *HOME* screen. –OR– Touch and Hold a shortcut, then drag it to the *HOME* screen.

Adding shortcuts from Apps


- 1 Touch  *Apps*.
- 2 Touch and hold on an app, then drag it to the *HOME* screen.

Removing Shortcuts

- 1 Touch and hold the Shortcut until the option to Delete/Trash appears.
- 2 Drag the shortcut to the Delete/Trash icon.

Applications

The *ALL APPLICATION* screen holds all applications installed on your device.

1. From the *HOME* screen, touch  **Apps**.
2. Swipe your finger left or right to browse the available applications.
3. Tap an icon to launch the application.

Apps pre-loaded on your device include:



Browser: Access the Internet..



Calculator: Perform mathematical calculations.



Calendar: Record events and appointments to manage your schedule.



Camera: Take pictures or record videos.



Clock: Schedule alarms to remind you of appointments or events, or as a wake-up.



Email: Send and receive email from your device.



File Manager: View and manage information stored on your device or on an installed memory card.




Music Player: Play music.

Section 3: Settings

Display


Brightness

Set the default screen brightness.

- 1 From the Applications list, touch the Settings Icon  → Display → Brightness.
- 2 Swipe the slider to set the brightness, or touch Automatic Brightness.
- 3 Touch OK to save the setting.

Screen display

Set the wallpaper background for the Home and Lock screens.

- 1 From the Applications list, touch the Settings Icon  → Display.
- 2 Touch an option, then follow the prompts:

- **Home screen:** Touch Wallpaper to select a background for the *HOME* screen, from Super-HD player, Live Wallpapers, or preloaded Wallpapers.

- **Lock screen:** Touch Wallpaper to select a photo from Super-HD player.


Auto-rotate screen

When enabled, the screen's orientation changes automatically when you rotate the device.

- 1 From the HOME screen, touch Settings → Display.
- 2 Touch Auto-Rotate screen to enable or disable automatic screen rotation. When enabled, a check mark displays.

 
Sleep

Set the length of delay between the last key press or screen touch and the automatic screen timeout (dim and lock).

- 1 From the Applications list, touch the Settings Icon  → Display → Sleep.
- 2 Tap a setting to select it.

Application Settings


You can download and install applications from Google Play, or create applications using the Android APK and install them on your device. Use Applications settings to manage applications on your device.

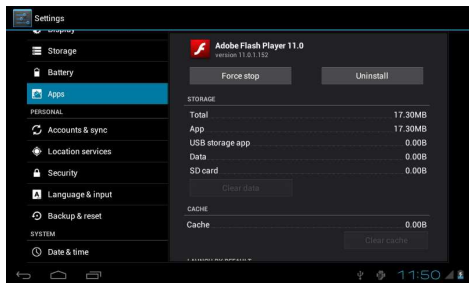


NOTE: Some applications are workable only from the Micro SD Card. Not all third-party software is suitable for this device.

Manage applications


Manage and remove applications from your device.

- 1 From the Applications list, touch the Settings Icon  → Apps
- 2 Tap an application to view and update information about *Downloaded*, *All* or *Running* applications, including memory usage, default settings and permissions.

 Backup & Reset

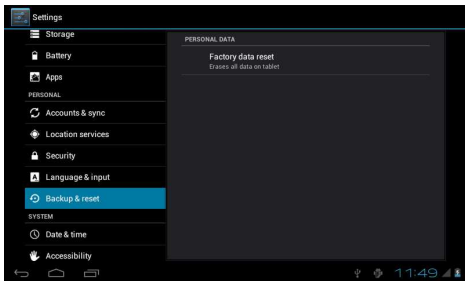

Restores device to factory settings.

- 1 From the Applications list, touch the Settings Icon  → *Backup & reset*.
- 2 Tap *Factory data reset*.




CAUTION: This process erases all data on the device.


Language & input

Select a language for your device's screens, manage a dictionary of words you've added to the device, and configure other input options.

Select language


- 1 From the Applications list, touch the Settings Icon  → *Language & input* → *Select Language*.
- 2 Tap a language from the list.

Personal dictionary

- 1 From the Applications list, touch the Settings Icon  → *Language & input* → *Personal Dictionary*.
- 2 Tap words to edit or delete them from the dictionary.
- 3 Tap *Add* on the Application bar to add a word.

Date & time

By default, your device receives date and time information from the wireless network. When you are outside network coverage, you may want to set date and time information manually using Date & time settings.

- 1 From the Applications list, touch the Settings Icon  → *Date & time*.
- 2 Tap a setting to configure:
 - **Automatic date & time:** Touch to enable or disable automatic date and time updates from the wireless network. When enabled, a check appears in the check box.
 - **Set date:** Enter the current date (only available when the Automatic date & time setting is disabled).
 - **Set time:** Enter the current time (only available when the Automatic setting is disabled).


- **Select time zone:** Choose your local time zone (only available when the Automatic date & time setting is disabled).

- **Use 24-hour format:** Set the format for time displays.

- **Select date format:** Set the format for date displays.

About Mci f'Hublet

View information about your tablet, including status, legal information, hardware and software versions, and a tutorial.

- 1 From the Applications list, touch the Settings Icon  → *System* → *About tablet*.
- 2 Touch items to view details:

Section 4 Connections

Your device includes features to connect to the internet and to other devices.

Wi-Fi

Wi-Fi is a wireless networking technology that provides access to local area networks.


Wi-Fi communication requires access to an existing Wireless Access Point (WAP). WAPs can be Open (unsecured), or Secured (requiring you to provide login credentials).

Configuring Wi-Fi Settings

Configure your device's Wi-Fi settings.

Wi-Fi Settings

Set up and manage wireless access points.

- 1 From the Applications list, touch the Settings Icon  → Wi-Fi
- 2 Touch settings to configure:
Å

- **Wi-Fi:** Touch to turn Wi-Fi On/Off.

- **Network notification:** When enabled, your device notifies you when Wi-Fi networks are available.

- **Wi-Fi disconnect policy:** Specify when to automatically turn off Wi-Fi. This setting can affect the behavior of devices you connect to your device, such as when tethering or using your device as a portable hotspot.

- **Add Network:** Enter the Network SSID and security

Turning Wi-Fi On/Off


When you turn Wi-Fi service on, your device automatically searches for available, in-range Wireless Access Points (WAPs).

- 1 From the Applications list, touch the Settings Icon  → *Wireless & networks*.

- 2 Touch *Wi-Fi* to turn Wi-Fi On or Off. When on, a check appears in the checkbox.

Scanning/Connecting to a Wi-Fi Network

When you turn on Wi-Fi, your device searches for available Wi-Fi connections, then displays them on screen.

1. From the Applications list, touch the Settings Icon 
2. Touch **Wi-Fi** to turn Wi-Fi On or Off. When on, a check appears in the checkbox.
3. When your device completes a scan, touch a Wi-Fi network to connect. If the Wi-Fi network is open, you will be automatically connected. If the Wi-Fi network is secured, enter the password at the prompt to connect.

Web Browser

Your device is equipped with a full HTML Browser, which allows you to access the internet.

Command Keys

- Touch **Back** in the window header to return to the previous page, or touch **Forward** to go forward to a recent page.
- Touch and hold **Back** in the System bar to display bookmarks.

Touching and dragging

- Touch and drag your finger on the screen to navigate pages, and to reposition pages within the screen.

Entering text in a field

- While browsing, touch a text field to display the virtual QWERTY keyboard to enter text.

Zoom

- Tap the screen twice to zoom in or out.
- Use two fingers, such as your index finger and thumb, to make a pinch motion on the screen. Pinch to zoom in, and sweep your fingers outward to zoom out.

Selecting items on a page

While browsing pages, use gestures and menus to navigate:

- Touch an item to select it.
- Touch a hyperlink to follow the link.
- Touch and hold on a hyperlink for options.

Entering a URL

Access a website quickly by entering the URL.

- 1 From the Home screen, tap Browser.
- 2 Tap the URL field at the top of the screen, then enter the URL using the virtual QWERTY keyboard.
- 3 As you enter characters, potential matches display.

Continue entering characters, or touch a match to complete the URL, then touch **Go** to load the page.

Copying text

Copy information from a web page.

- 1 From the Home screen, select Browser.
- 2 Browse to the desired website.

- 3 Touch and hold on the text to enable the text selector, then use the onscreen tools.

Using Browser Tabs

You can have multiple tabs open at one time, and you can switch between tabs.

- 1 From the Home screen, touch Browser.
- 2 To open a new tab, touch on a new tab.
- 3 To switch between tabs, touch the tab headers.
- 4 To close a tab, touch on the tab header.

Using Bookmarks

While browsing, bookmark a site to quickly access it later.

Creating a bookmark

- 1 From the Home screen, tap Browser.
- 2 Browse to the desired website, then touch Bookmark this page.
- 3 At the prompt, confirm the Label and Address for the bookmark, choose a bookmark folder, then touch OK.

Accessing bookmarks and history

- 1 From the Home screen, select Browser.
- 2 Touch Bookmarks .
- 3 On the tabs, use these options:
 - Touch an item to load the page.
 - Touch and hold on an item for options.
 - Touch **Menu** for more options.



Browser Menu

- 1 From the Home screen, tap the Browser.
- 2 While viewing a web page, touch Menu for options:
 - **New tab**: Open a new browser tab. The previous browser windows remain open in the background (touch tab headers to switch between windows).
 - **New incognito tab**: Open a new tab, to browse without leaving traces on your device.
 - **Find on page**: Search for content on the current tab.

- **Share page**: Send the current URL via Bluetooth, Email, or Gmail.
- **Settings**: Access more browser settings.

HDMI/TV

Your device has the ability to connect directly to a High Definition (HD) TV via an HDMI connection.

- 1 Connect one end of an HDMI cable to the device's HDMI port.
- 2 Connect the other end of HDMI cable to your TV's HDMI port.
- 3 Set the video output to HDMI mode  .
- 4 Tap the *Vortex Player*  to select a video for viewing.

Section 5 Using Pre-Loaded Apps

Music Player

Music plays songs stored on your device.

- 1 From the Home screen, tap *Music Player*.
- 2 *Music Player* scans your device's memory and displays your songs in a carousel view. Swipe left or right to spin the carousel and browse through your new and recent music
- 3 Touch a song or playlist to begin playback.
- 4 Touch an album to open it, then touch a song to begin.
- 5 During playback, use the sound and playlist controls:

- **Volume:**

Press the Volume Key on the side of the device to adjust playback volume.

- **Playback controls:**



Tap to advance to the next song. Touch and hold to scan forward through the current song.



Tap to go back to the previous song. Touch and hold to scan backward through the current song.



Tap to pause playback. Tap to resume playback.



Tap to repeat the current song, repeat all songs, or disable repeat mode.



Tap to set the shuffle mode to random order, or in the order they appear in List view.





Tap to display the current playlist.

Camera

Use your device's built-in Camera to take pictures and record video.


Taking Pictures

- 1 From the Applications list, tap Camera .
- 2 Using the display as a viewfinder, compose your picture by aiming the lens at the subject.
- 3 To take the picture, touch the Capture button .

Camcorder

Use your device's built-in Camcorder to record video.

Capturing Video

- 1 From the Applications list, tap  then slide the mode button to Camcorder.
- 2 Using the display as a viewfinder, compose your shot by aiming the lens at the subject.
- 3 To start recording, touch *Record*. During recording, the Record icon flashes.


- 4 To stop recording, touch again.
- 5 After recording, touch Image Viewer to view the video.

While viewing the video, use these options:

- Pinch the screen to zoom in or out, or double-tap to zoom all the way in or out.
- Tap *Slideshow* to view all pictures as a slideshow.
- Tap *Delete* to erase the video.
- Tap *Menu* to view Details about the video.
- Tap *Back* to return to the Camcorder to record more videos.

Gallery

Use Gallery to view, capture, and manage pictures and videos.

- 1 From the Home screen, tap Gallery .
- 2 Choose items to display by making selections from the menus in the Application bar.
- 3 Options depend on the type of item:
- 4 While viewing, tap *Menu* for options.

Section 6 Safety

Important Safety Precautions



Always follow these basic safety precautions when using your device. This reduces the risk of fire, electric shock, and injury.

- Never use the player while driving or when operation any vehicle, as this could cause an accident. Take care when using the player outdoors, especially when crossing the street.
- Do not operate the player in areas where the use of wireless equipment is forbidden or when the usage of the player may cause interference and danger.
- Excess use of headphones at high volume may cause permanent hearing impairment.
- Avoid using this product in the following conditions: high and low temperature, dust, strong magnetic fields and long-term exposure to sunlight.
- Do not use the player in extremely dry environments as this can lead to static discharge, which can damage the player.
- Protect the power cord. Route power cords so they are not likely to be walked on or pinched by items placed on or against them. Pay particular attention to the point where the cord attaches to the device.
- Only use the AC adapter included with the device. Using any other power adapter voids your warranty.
- This product is a high-precision electronic device. Do not remove the cover or disassemble in any way. There are no user-serviceable parts inside.
- Disconnect the player from the power source before cleaning.

Section 7: Care and Maintenance

Your device is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years:

Keep your Device away from:

- ***Liquids of any kind***

Keep the device dry. Precipitation, humidity, and liquids contain minerals that will corrode electronic circuits. If the device does get wet, do not accelerate drying with the use of an oven, microwave, or dryer, because this may damage the device and could cause a fire or explosion. Do not use the device with a wet hand. Doing so may cause an electric shock to you or damage to the device.

- ***Extreme heat or cold***

Avoid temperatures below 0°C / 32°F or above 45°C / 113°F.

- ***Microwaves***

Do not try to dry your device in a microwave oven. Doing so may cause a fire or explosion.

- ***Dust and dirt***

Do not expose your device to dust, dirt, or sand.

- ***Cleaning solutions***

Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.

- ***Shock or vibration***

Do not drop, knock, or shake the device. Rough handling can break internal circuit boards.

- ***Paint***

Do not paint the device. Paint can clog the device's moving parts or ventilation openings and prevent proper operation.

Section 8: Troubleshooting

Device fails to turn on.

- Check battery power level.
- Connect to adaptor and re-check.
- If device fail to start up after charging, please contact distributors or service personel.

No sound via earphone.

- Check if volume is set at the lowest.
- Check if audio file is damaged. Play other audio to re-confirm. Damaged file may result in noise or static only.

Copy function is not working, fails to play music.

- Check if device is properly connected to PC.
- Confirm whether storage space is full.
- Confirm whether USB cable is damaged.
- Confirm USB is properly connected.

Twinkling screen after turn-on or sudden shut off after starting up.

- Battery low, charge the device.

Section 9: Specifications

| | |
|-------------|---------------------------------------|
| OS | Android 4.0 |
| CPU | 1.0Ghz |
| Storage | 4GB |
| RAM | 1GB RAM |
| Micro SD | Support 128MB-32G |
| Display | 1024*600 pixels |
| Battery | Rechargeable 5500mAH Lithium |
| Mini USB | 2.0 OTG |
| 3D G-sensor | 4 directions |
| Recorder | Built in MIC |
| Video | MKV(H.264HP).AVI.RM/BMVB.FLV.MPEG-1/2 |
| Audio | MP3.WMA.APE.FLAC.AAC.AC3.WAV |
| Photo | JPEG.BMP.GIF.PNG.TIF |

Section 10: Warranty Information

Limitations of Liability Statement

Links to Third Party Sites

The Ematic User Manual may contain links to third-party sites, however, please be aware that Ematic is not responsible for and cannot control these other sites. Ematic makes no representations or claims whatsoever about any other website which you may access through this user manual. When you access a non-Ematic website, even one that may contain an Ematic logo, please understand that is independent from Ematic, and that Ematic may have no control over the content on that website. In addition, a link to a non-Ematic website does not mean Ematic endorses or accepts any responsibility for the content, or the use, of such website. It is up to you to take precautions to ensure that whatever you select for your use is free of such items as viruses, worms, Trojan horses and other items of a destructive nature. The Ematic User Manual is for your exclusive benefit and you assume all risks, losses and/or damages of whatever nature that may result in using the

Ematic User Manual.

Limitation of Liability and Indemnity

To the maximum extent permitted by applicable law, Ematic shall not be liable for any damages suffered as a result of using, modifying, contributing, copying, distributing, or downloading the materials, use of the Ematic User Manual or use of any Ematic product and/or software. In no event shall Ematic be liable for any indirect, extraordinary, exemplary, punitive, special, incidental, or consequential damages (including, without limitation, loss of data, revenue, profits, use or other economic advantage) however arising, whether for breach or in tort, even if Ematic has been previously advised of the possibility of such damage. You agree that you have sole responsibility for adequate protection and backup of data and/or equipment used in connection with the product and software and will not make a claim of any nature against Ematic for lost data, inaccurate output, work delays or lost profits resulting from

the use of the materials. You agree to indemnify, hold harmless and defend Ematic, together with its affiliates, parent and subsidiary entities, successors, assigns, partners, managers, members, employees, officers, directors and shareholders, from and against any and all damages, liens, liabilities, losses, demands, actions, causes of action, claims, costs and expenses (including, without limitation, reasonable attorneys' fees, charges and disbursements, as well as the cost of in-house counsel and appeals) arising from or related to Ematic, the use of The Ematic User Manual or any Ematic product and/or software. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Android is a trademark of Google Inc. Use of this trademark is subject to Google Permissions.

© 2012 Ematic Inc. All rights reserved.

The Bluetooth® word mark, figure mark (stylized “B Design”), and combination mark (Bluetooth word mark and “B Design”) are registered trademarks and are wholly owned by the Bluetooth SIG.

Adobe and Flash are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

Wi-Fi®, the Wi-Fi CERTIFIED logo, and the Wi-Fi logo are registered trademarks of the Wi-Fi Alliance.

Google, the Google logo, Google Calendar, Search, Gmail, Maps, Navigation, Places, Google Talk, YouTube, Picasa, Android and Android Market are trademarks of Google, Inc