

Personal Audio System

Operating Instructions



©2013 Sony Corporation Printed in China

ZS-RS70BT

http://www.sony.net/



Europe Only



Disposal of waste batteries (applicable in the European Union and other European countries with separate collection systems)

This symbol on the battery or on the packaging indicates that the battery provided with this product shall not be treated as household waste. On certain batteries this symbol might be used in combination with a chemical symbol. The chemical symbols for mercury (Hg) or lead (Pb) are added if the battery contains more than 0.0005% mercury or 0.004% lead. By ensuring these batteries are disposed of correctly, you will help prevent potentially negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling of the battery. The recycling of the materials will help to conserve natural resources.

In case of products that for safety, performance or data integrity reasons require a permanent connection with an incorporated battery, this battery should be replaced by qualified service staff only. To ensure that the battery will be treated properly, hand over the product at end-of-life to the applicable collection point for the recycling of electrical and electronic equipment.

For all other batteries, please view the section on how to remove the battery from the product safely. Hand the battery over to the applicable collection point for the recycling of waste batteries.

For more detailed information about recycling of this product or battery, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

Licence and Trademark Notice

- MPEG Layer 3 audio coding technology and patents licensed from Fraunhofer IIS and Thomson.
- Windows Media is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.
- This product contains technology subject to certain intellectual property rights of Microsoft. Use or distribution of this technology outside of this product is prohibited without the appropriate license(s) from Microsoft.
- The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Sony Corporation is under license.
- The N Mark is a trademark or registered trademark of NFC Forum, Inc. in the United States and in other countries.
- Android™ and Google Play™ are trademarks of Google Inc.
- Other trademarks and trade names are those of their respective owners. In this manual, ™ and ® marks are not specified.

WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

To reduce the risk of fire or electric shock, do not expose this apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on the apparatus.

The main plug is used to disconnect the unit from the mains, connect the unit to an easily accessible AC outlet. Should you notice an abnormality in the unit, disconnect the main plug from the AC outlet immediately.

The unit is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the unit itself has been turned off.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet. Excessive sound pressure from earphones and headphones can cause hearing loss. Do not expose the batteries (battery pack or batteries installed) to excessive heat such as sunshine, fire or the like for a long time. The nameplate is located on the bottom exterior.

Notice for customers: the following information is only applicable to equipment sold in countries applying EU directives


This product has been manufactured by or on behalf of Sony Corporation, 1-7-1 Konan Minato-ku Tokyo, 108-0075 Japan. Inquiries related to product compliance based on European Union legislation shall be addressed to the authorized representative, Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Germany. For any service or guarantee matters, please refer to the addresses provided in the separate service or guarantee documents.

Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

Power Sources

Connect the AC power cord **A**, or insert six R14 (size C) batteries (not supplied) into the battery compartment **B**. For models with a voltage selector, set VOLTAGE SELECTOR **C** to the local power line voltage.

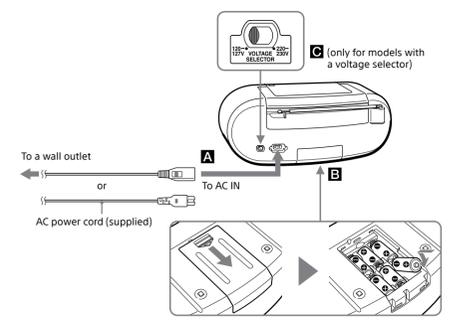


- Replace the batteries when the OPR/BATT indicator **18** dims, or when the unit becomes inoperable. Replace all of the batteries with new ones. Before you replace the batteries, be sure to remove any CD and disconnect any USB devices or optional components from the unit.
- To use the unit on batteries, disconnect the AC power cord from the unit and the wall outlet.

To use the power-management function

This unit is equipped with an automatic standby function. With this function, the unit enters standby mode automatically after about 15 minutes if there is no operation or audio signal output. To turn standby mode on or off, press DISPLAY **16** while holding down **13**. Each time you press the buttons, "AUTO STANDBY ON" or "AUTO STANDBY OFF" appears on the display.

- The displayed content starts flashing on the display about 2 minutes before entering standby mode.
- In standby mode with the AC power cord connected, "STANDBY" appears on the display (European models only).
- The automatic standby function is not available with the FM/AM function (and the AUDIO IN function except for European models).

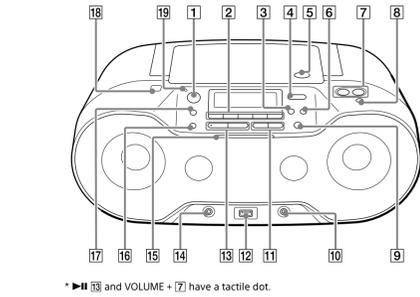

* **13** and VOLUME + **7** have a tactile dot.

Lighting effects for audio output

Lighting effects (both sides of the illumination are lit in red) are created that synchronize with the music source. You can turn this function on or off as desired (See "To turn off the light sync function").

Indication of function change

When switching to one of five functions, the center of the illumination (white) increases in intensity to notify the user of a function change. When switching to the Bluetooth function, both sides of the illumination are also lit in blue.

Before using the unit

To turn the power on or off
Press POWER (or OPERATE) **1**. You can also turn on the power of this unit using the direct power-on function (below). In this manual, operations are mainly explained using the direct power-on function.

To use the direct power-on function
Press CD **2**, USB **2**, BLUETOOTH **2**, RADIO FM/AM **2** or AUDIO IN **2** while the unit is turned off as desired (See "To turn off the light sync function").

To adjust the volume
Press VOLUME + or - **7**. The volume level of this unit is adjustable in steps from 0 to 31. For the 31st step, "VOL MAX" is displayed.

To listen through headphones

Connect headphones to the **1** (headphones) jack **18**.

To reinforce the bass

Press MEGA BASS **8**. "MEGA BASS" lights up on the display. To return to normal sound, press the button again.

To turn off the automatic demonstration (Latin American models only)

Since demonstration mode is enabled by default, the demonstration will start automatically in the following cases:
—when the unit is turned off.
—when there is no audio output in the CD and USB function.
—when the Bluetooth connection is not established in the Bluetooth function (when "NO BT" is displayed).
To turn off the automatic demonstration, hold down MODE **17** until "DEMO MODE OFF" appears on the display.

Note
Demonstration mode does not function when operating using batteries.

To turn off the light sync function

The light sync function creates lighting effects that synchronize with the music source. By default, this function is on, but you can turn it off as desired.
Hold down LIGHT SYNC **16** until "LIGHT SYNC OFF" appears on the display.
To turn on the function, hold down the button again until "LIGHT SYNC ON" appears.

Playing a music disc

You can play the following types of discs with this unit.

- Audio CDs on which CD-DA tracks are recorded in CD-DA disc format.
- CD-R/CD-RW discs on which MP3 or WMA audio files are recorded in ISO 9660 Level 1/Level 2 or Joliet.


1 Press CD **2** to turn on the CD function.

2 Press PUSH OPEN/CLOSE **5**, and place a disc in the CD compartment with the label side up.

3 Press PUSH OPEN/CLOSE **5** to close the CD compartment.
(Example: when an audio CD is loaded)




4 Press **11** **13** to start playback.

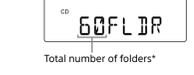

* If MP3/WMA files are present only on the root directory ("ROOT" folder), "FLDR" appears on the display.

5 Press **11** **13** to start playback.
Track or MP3/WMA file number

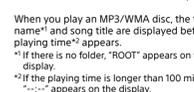

When you play an MP3/WMA disc, the folder name* and song title are displayed before the playing time** appears.
* If there is no folder, "ROOT" appears on the display.
** If the playing time is longer than 100 minutes, "----" appears on the display.

Other operations


To	Do this
Pause playback	Press 11 13 . To return to playback, press the button again.
Stop playback	Press 11 13 . When you press 11 13 after playback is stopped, playback starts from the beginning of the track/ file you were last playing (Resume Play).
Cancel Resume Play	Press 11 13 twice. When you press 11 13 after you cancel Resume Play, playback starts from the beginning of the first track/file.
Select a folder on an MP3/WMA disc	Press 14 (Folder) + or - 4 .
Select a track/file	Press 14 or 11 11 . You can skip tracks/files one by one.
Find a point in a track/file	Hold down 14 or 11 11 during playback, and release the button at the desired point. When locating a point while paused, press 11 13 to start playback after the desired point is found.

Tip
Resume Play is cancelled if you press **11** **13**, open the CD compartment or turn off the unit.

Lighting effects for audio output

Lighting effects (both sides of the illumination are lit in red) are created that synchronize with the music source. You can turn this function on or off as desired (See "To turn off the light sync function").

Example of folder structure and playing order

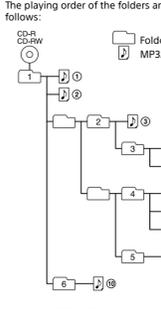

Notes on MP3/WMA discs

- When a disc is loaded, the unit reads all the files on that disc. During this time, "READING" is displayed. If there are many folders or non-MP3/WMA files on the disc, it may take a long time for play to begin or for the next MP3/WMA file to start to play.
- We recommend that non-MP3/WMA files or unnecessary folders are excluded when creating MP3/WMA discs.
- During playback, folders that contain no MP3/WMA files are skipped.
- The audio formats supported by this unit are as follows:
—MP3: File extension "mp3"
—WMA: File extension "wma"
Note that even if the file name has the correct file extension but the actual file was created in a different audio format, this unit may produce noise or may malfunction.
• MP3 PRO format is not supported.
• WMA files encoded in WMA DRM, WMA Lossless and WMA PRO formats cannot be played back.
• This unit cannot play audio files in a disc in the following cases:
—When the total number of audio files exceeds 511.
—When the total number of folders on a single disc exceeds 511.
—When the directory level (folder depths) exceeds 9 (including the "ROOT" folder).
- Folder names and file names can be displayed with up to 32 characters, including quotation marks.
- Characters and symbols that cannot be displayed by the unit will appear as "-".
—This unit conforms to version 1.0, 1.1, 2.2, 2.3 and 2.4 of the ID3 tag format for MP3 files and the WMA tag format (defined by ASF (Advanced Systems Format) specification) for WMA files. When a file has the ID3 or WMA tag information, song title, artist name, and album name will be displayed. If a file does not have the tag information, the unit displays as follows:
—File name instead of the song title.
—"NO ARTIST" message instead of the artist name.
—"NO ALBUM" message instead of the album name.
ID3 and WMA tag information can be displayed up to 32 characters.

To change play modes

Press MODE **17** repeatedly while the disc is stopped. For details, see "Selecting play mode" on the back page.

Listening to music on a USB device

You can listen to audio files stored on a USB device (a digital music player or USB storage media). Audio files in MP3 and WMA formats* can be played on this unit. For compatible USB devices, see "Compatible USB devices" on the back page.


- Files with DRM (Digital Rights Management) copyright protection or files downloaded from an online music store cannot be played on this unit. If you try to play one of these files, the unit plays the next uncopyrighted audio file.

1 Connect the USB device to the **14** (USB) port **18**.

2 Press USB **2** to turn on the USB function. The volume label* scrolls once, then the total folder number appears on the display.



3 Press **11** **13** to start playback. The folder name and song title are displayed, and then the file number and playing time appear.

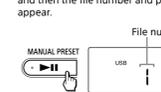

* If the playing time is longer than 100 minutes, "----" appears on the display.

Other operations

To	Do this
Pause playback	Press 11 13 . To return to playback, press the button again.
Stop playback	Press 11 13 . When you press 11 13 after playback is stopped, playback starts from the point where you stopped playback (Resume Play).
Cancel Resume Play	Press 11 13 twice. When you press 11 13 after you cancel Resume Play, playback starts from the beginning of the first file.
Select a folder	Press 14 (Folder) + or - 4 .
Select a file	Press 14 or 11 11 . You can skip files one by one. To skip files continuously, hold down 14 or 11 11 and release the button at the desired track/file.
Find a point in a file	Hold down 14 or 11 11 during playback, and release the button at the desired point. When locating a point while paused, press 11 13 to start playback after the desired point is found.
Remove a USB device	Hold down 11 13 until "NO DEV" appears on the display, and then disconnect the USB device.

* When playing a VBR MP3/WMA file, playback may restart from a different point.

Note

When removing a USB device, always hold down **11** **13** until "NO DEV" appears on the display. Removing the USB device without performing this step may corrupt the data on the USB device or damage the device itself.

To change play modes
Press MODE **17** repeatedly while the USB device is stopped. For details, see "Selecting play mode" on the back page.

Notes on the USB device

- It may take a long time before playback starts when:
—the folder structure is complex.
—the USB device is close to capacity.
- Do not save non-MP3/WMA files or unnecessary folders to a USB device that contains MP3/WMA files.
- During playback, folders that contain no MP3/WMA files are skipped.
- The audio formats supported by this unit are as follows:
—MP3: file extension "mp3"
—WMA: file extension "wma"
Note that even if the file name has the correct file extension but the actual file was created in a different audio format, this unit may produce noise or may malfunction.
• MP3 PRO format is not supported.
• WMA files encoded in WMA DRM, WMA Lossless and WMA PRO formats cannot be played back.
• This unit cannot play audio files on a USB device in the following cases:
—when the total number of audio files in a single folder exceeds 999.
—when the total number of audio files on a single USB device exceeds 5,000.
—when the total number of folders on a single USB device exceeds 255 (including the "ROOT" folder).
—when the directory level (folder depths) exceeds 8 (including the "ROOT" folder).
- The folders may vary depending on the file and folder structure.
- Compatibility with all encoding/writing software is not guaranteed. If audio files on the USB device were originally encoded with incompatible software, those files may produce noise or interrupted sound, or may not be played back at all.
- Folder names and file names can be displayed using up to 32 characters, including quotation marks.
- Characters and symbols that cannot be displayed by the unit will appear as "-".
—This unit conforms to version 1.0, 1.1, 2.2, 2.3 and 2.4 of the ID3 tag format for MP3 files and the WMA tag format (defined by ASF (Advanced Systems Format) specification) for WMA files. When a file has the ID3 or WMA tag information, song title, artist name, and album name will be displayed. If a file does not have the tag information, the unit displays as follows:
—File name instead of the song title.
—"NO ARTIST" message instead of the artist name.
—"NO ALBUM" message instead of the album name.
ID3 and WMA tag information can be displayed up to 32 characters.

Recording music from a disc to a USB device

You can record a whole disc (Synchro Recording) or a currently playing track or file (single track recording) to a USB device (digital music player or USB storage media, etc.). When recording from a CD, the tracks are recorded as MP3 files at 128 kbps. When recording from an MP3/WMA disc, MP3/WMA files are recorded with the same bit rate as the original MP3/WMA files. For compatible USB devices, see "Compatible USB devices" on the back page.

1 Connect the USB device to the **14** (USB) port **18**.

2 Place a disc you want to record in the CD compartment.


To record a whole disc
Proceed to step 3.

To record MP3/WMA files in a specific folder
Press **14** (Folder) + or - **4** repeatedly to select the folder you want.

To record only your favorite tracks/files
Perform steps 1 to 5 of "Creating your own program (Program Play)" on the back page.

To record a single track/file
Select and start playback of the track/file you want to record.

3 Press REC CD **15** **15**. "REC" flashes and the unit starts calculating the amount of free space on the USB device.

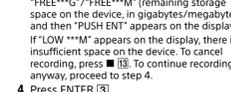

When the calculation is finished, "FREE**G"/"FREE***M" (remaining storage space on the device, in gigabytes/megabytes), and then "PUSH ENT" appears on the display. If "LOW ***M" appears on the display, there is insufficient space on the device. To cancel recording, press **11** **13**. To continue recording anyway, proceed to step 4.

4 Press ENTER **3**.

Recording starts. Do not remove the USB device while recording. Playback stops automatically when Synchro Recording is completed. Playback continues when recording of a single track/file is completed.

Other operations

To **Do this**
Stop recording Press **11** **13**. An MP3/WMA file is created up to the point the recording was stopped.

Remove a USB device Press USB **2**, then hold down device **11** **13** until "NO DEV" appears on the display, and then disconnect the USB device.

To erase audio files or folders from the USB device

- Select the audio file or folder you want to erase. Press **14** or **11** **11** to select an audio file. Press CD (Folder) + or - **4** to select a folder.
- Press ERASE **6**. "ERASE?" appears on the display.
- Press ENTER **3**. "TRACK ERASE?" or "FOLDER ERASE?" appears on the display.
- Press ENTER **3**. The selected audio file or folder is erased, and "COMPLETE" appears on the display.

* Recording a whole disc, MP3/WMA files in a specific folder and only your favorite tracks/files (Program Play).

*A folder name of up to 32 characters can be assigned.

*Folder names are assigned in sequential order up to a maximum of 255 (including the "ROOT" and "MUSIC" folders).

*A new file is recorded to the "RECT" folder each time single track recording is performed.

Notes

- If you start recording in shuffle play or repeat play mode, the selected play mode is automatically changed to normal play.
- Do not remove the USB device during recording or erase operations. Doing so may corrupt the data on the device or damage the device itself.
- While recording from an MP3/WMA disc, no sound is output and "Hi-SPEED" appears on the display.
- CD-TEXT information is not transferred in the created MP3 files.
- Recording stops automatically if:
—the USB device runs out of space during recording.
—the number of audio files and folders on the USB device reaches the limit that the unit can recognize.
—the function is cancelled.
- If a folder or file that you are trying to record has the same name as folder or file already existing on the USB device, a sequential number is added after the name without overwriting the original folder or file.
- You cannot erase MP3/WMA folders during playback or pause.
- Non-MP3/WMA format files or sub folders in the folder to be erased are not erased.
- Radio sound cannot be recorded to a USB device.

Note on copyright-protected content

The recorded music is limited to private use only. Use of the music beyond this limit requires permission from the copyright holders.

Making a wireless connection with Bluetooth devices

You can enjoy music wirelessly via the Bluetooth function built in to your devices. Choose one of the following three connection methods best suited for the Bluetooth device. For details on how to operate your device, refer to the operating instructions supplied with the device.

Pairing with a Bluetooth device:

Bluetooth devices need to be "paired" with each other beforehand.

Connecting with a paired device:

To listen to music with a Bluetooth device that has been paired, see this pattern.

One touch connection with a smartphone (NFC):

Using an NFC-compatible smartphone, you can establish a Bluetooth connection by just touching the unit with it.

Check the following before operating the unit.
• Both the unit and the device are placed within 1 m of each other.
• The unit is connected to the AC power cord, or the OPR/BATT indicator **18** is lit.

Pattern A

1 Press BLUETOOTH **2** to turn on the Bluetooth function.

2 Turn on the Bluetooth function of the Bluetooth device.

For details, refer to the operating instructions supplied with the device.

If no devices have been paired, such as when you press BLUETOOTH **2** for the first time after you purchase the unit, the unit automatically enters pairing mode, and the Bluetooth indicator **6** and "PAIRING" on the display flash. In this case, proceed to step 4.

3 Hold down BLUETOOTH-PAIRING **2** until two beeps are heard.

The unit enters pairing mode, and the Bluetooth indicator **6** and "PAIRING" on the display flash.



4 Perform the pairing procedure on the Bluetooth device to detect the unit.

5 Select "SONY-ZS-RS70BT/BTB" shown on the display of the Bluetooth device. If "SONY-ZS-RS70BT/BTB" does not appear on the device's display, repeat from step 2.

Note
Some devices cannot display a list of detected devices.

6 If Passcode* input is required on the display of the Bluetooth device, input "0000".

The Bluetooth connection is established. "BT AUDIO" appears on the display. *Passcode* may be referred to as "Passkey," "PIN code," "PIN number," or "Password."




Tip
To pair with another Bluetooth device, repeat steps 2 to 6 for each device.

Notes
• Pairing mode of the unit is cancelled after about 5 minutes, and the Bluetooth indicator **6** flashes. If pairing mode is cancelled while performing this procedure, start over from step 3.

• The passcode of the unit is fixed as "0000". This unit cannot be paired with a Bluetooth device whose Passcode is not "0000".

• Once Bluetooth devices are paired, there is no need to pair those devices again. However, in the following case, you

Other Operations

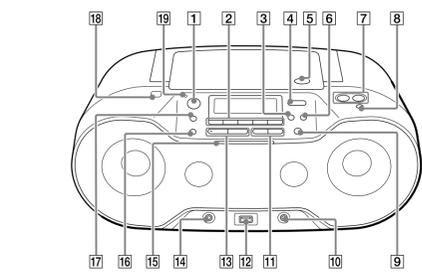

- * **▶** **II** and **VOLUME** + **[7]** have a tactile dot.

Using the display

Checking MP3/WMA file information

Press **DISPLAY** **[16]** repeatedly while playing an MP3/WMA file on the disc/USB device.



Checking the free space on the USB device

- Press **MODE** **[17]** repeatedly to cancel folder play mode, folder repeat play mode, program play mode or program repeat play mode.



- Press **DISPLAY** **[16]** while the USB device is stopped.

*FREE***G/'FREE***M' (remaining storage space on the device in gigabytes/megabytes) appears on the display.

Checking the connected Bluetooth device name

- Press **DISPLAY** **[16]** while connecting the Bluetooth device.



The display changes as follows:
Presets number **↔** Frequency

- Press **ENTER** **[3]** to return to the normal display.


* A preset number is displayed only when you are listening to the preset radio station.

Selecting play mode

You can set the unit to play tracks or files repeatedly or in random order while a disc/USB device is stopped.

Press **MODE** **[17]** repeatedly.

Each time you press the button, the indication changes as follows:

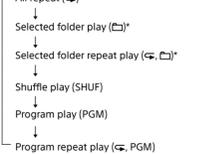

* These functions are available only when playing MP3/WMA files on an MP3/WMA disc or USB device.

Playing tracks/files repeatedly (Repeat Play)

You can set the unit to repeatedly play CD-DA tracks on an audio CD, or MP3/WMA files on a CD-R/CD-RW disc, or on a USB device in normal and program play modes.

- Press **CD** **[2]** or **USB** **[2]** to turn on the CD or USB function.



- Proceed as follows.

To repeat	Do this
A single track/file	1 Press MODE [17] repeatedly until ⇐ 1 appears. 2 Press ⇐ or ▶ [11] to select a track/file that you want to repeat. When you want to specify a folder that contains MP3/WMA files, press ⇐ (Folder) + or ⇐ first to select a folder, and then press ⇐ or ▶ [11] to select a file. 3 Press II [13] to start Repeat Play.

All tracks/files

- Press **MODE** **[17]** repeatedly until **⇐** appears.
- Press **II** **[13]** to start Repeat Play.

A selected folder on an MP3/WMA disc or USB device

- Press **MODE** **[17]** repeatedly until **⇐** (Folder) and **⇐** appear.
- Select a folder by pressing **⇐** (Folder) + or **⇐**.
- Press **II** **[13]** to start Repeat Play.

Programmed tracks/files

- Program tracks/files (see "Creating your own program (Program Play)").
- Press **MODE** **[17]** until "PGM" and **⇐** appear on the display.
- Press **II** **[13]** to start Repeat Play.


To cancel Repeat Play

Press **II** **[13]** to stop playback, and then press **MODE** **[17]** repeatedly until **⇐** (or **⇐ 1**) disappears from the display.

Presetting radio stations

You can store radio stations in the unit's memory. You can preset up to 30 radio stations, 20 for FM and 10 for AM.


- Press **RADIO FM/AM** **[2]** repeatedly to select a band.

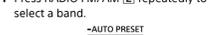

- Hold down **RADIO FM/AM-AUTO PRESET** **[2]** until "AUTO" flashes on the display.




- Press **ENTER** **[3]** to store the station. The stations are stored in memory from lower frequencies to higher ones.

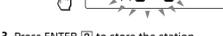

If a station cannot be preset automatically


You need to preset a station with a weak signal manually.

- Press **RADIO FM/AM** **[2]** repeatedly to select a band.

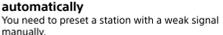

- Tune to the desired station.


Hold down **MANUAL PRESET** **[13]** until "FM-xx" or "AM-xx" flashes on the display. (Example: FM)

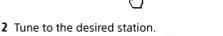

- Press **PRESET** + or **⇐** **[11]** until the preset number for the station you want flashes on the display.



- Press **ENTER** **[3]** to store the station. If another station is already assigned to the selected preset number, that station is replaced by the new one.

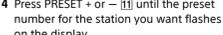


Creating your own program (Program Play)

You can arrange the playing order of up to 25 tracks/files on a disc/USB device.


- Press **CD** **[2]** or **USB** **[2]** to turn on the CD or USB function.



- Press **MODE** **[17]** repeatedly until "PGM" appears on the display.

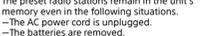


- Press **⇐** or **▶** **[11]** to select a track/file.

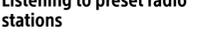

When you want to specify a folder that contains MP3/WMA files, press **⇐** (Folder) + or **⇐** first to select a folder, and then press **⇐** or **▶** **[11]** to select a file.

- Press **PRESET** + or **⇐** **[11]** to select a stored preset number for the desired radio station.

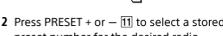


- Press **ENTER** **[3]**.



The track/file is programmed. The program step number appears, followed by the total playing time. (Example: audio CD)



Last programmed track number

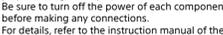


Total playing time*



* "----" appears when programming an MP3/WMA disc/USB device or when the total playing time is longer than 100 minutes.

- Repeat steps 3 and 4 to program additional tracks/files.

Press **▶** **[11]** to start Program Play. The created program remains available until you open the CD compartment, remove the USB device or turn off the power of the unit. To play the same program again, press **II** **[13]**.

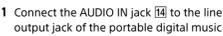

Note

- If connected to the manual output jack of a digital music player, sound may not be emitted through the right speaker of the unit.
- If connected to the line out jack of a digital music player, distortion may occur. If the sound is distorted, connect to the headphones jack instead.
- If connected to the headphones jack of a digital music player, increase the volume of the digital music player, and then adjust the volume of the unit.

Tip

Resume Play is available when using Program Play mode in the USB function. Press **▶** **[11]** after you have stopped Program Play by pressing **II** **[13]**. Program Play starts from the point where you stopped.

To display programmed track/file information

After creating your own program, you can check information about programmed tracks/files.

Press **DISPLAY** **[16]** repeatedly and the display changes as follows:

Total programmed step number **↔** Last programmed track/file number and the total playing time*

* "----" appears for MP3/WMA discs and USB devices.

To cancel Program Play

Press **II** **[13]** to stop playback, and then press **MODE** **[17]** repeatedly until "PGM" disappears from the display.

To delete all tracks/files in the current program

Stop playback, and then press **II** **[13]**. "NO STEP" appears and you can create a new program, following the procedure "Creating your own program (Program Play)".

Notes

- If connected to the manual output jack of a digital music player, sound may not be emitted through the right speaker of the unit.
- If connected to the line out jack of a digital music player, distortion may occur. If the sound is distorted, connect to the headphones jack instead.
- If connected to the headphones jack of a digital music player, increase the volume of the digital music player, and then adjust the volume of the unit.

Interference from other devices

Microwaves emitting from a Bluetooth device may affect the operation of electronic medical devices. Turn off the unit and other Bluetooth devices in the following locations, as it may cause an accident.

- where inflammable gas is present, in a hospital, train, airplane, or a gas station
- near automatic doors or a fire alarm

Notes

- To be able to use the Bluetooth function, the Bluetooth device to be connected requires the same profile as the unit's.
- Note also that even if the same profile exists, devices may vary in function depending on their specifications.
- Due to the characteristic of Bluetooth wireless technology, the sound played on the unit is slightly delayed from the sound played on the Bluetooth device during listening to the music.
- This unit supports security capabilities that comply with the Bluetooth standard to provide a secure connection when the Bluetooth wireless technology is used, but security may not be enough depending on the setting. Be careful when communicating using Bluetooth wireless technology.
- We do not take any responsibility for the leakage of information during Bluetooth communication.
- A device featuring the Bluetooth wireless technology is required to conform to the Bluetooth standard specified by Bluetooth SIG, and be authenticated. Even if the connected device conforms to the above mentioned Bluetooth standard, some devices may not be connected or work correctly, depending on the features or specifications of the device.
- Noise or sound skips may occur depending on the Bluetooth device connected with the unit, the communication environment or the usage environment.

Additional Information

Compatible devices

Compatible USB devices

Compatibility requirements for the USB devices are as follows. Before using a device with this unit, check that it meets the requirements.

- Compliance with USB 2.0 (Full Speed)

- Supports Mass Storage mode


* Mass Storage mode is a mode that allows a USB device to become accessible to a host device, enabling file transfers. Most USB devices support Mass Storage mode.

To select a memory on the device for playback or recording

If the USB device has more than one memory (for example, an internal memory and a memory card), you can select which memory to use and then start playback or recording. Make sure to select a memory before starting playback or recording as you cannot select a memory during operation.

- Connect the USB device to the **↔** (USB) port **[12]**.

- Press **USB** **[2]** to turn on the USB function.
- Press **USB-MEMORY SELECT** **[2]** until "SELECT?" appears on the display.

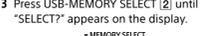

- Press **ENTER** **[3]**.
- Press **⇐** or **▶** **[11]** repeatedly to select a memory number.

The memory name appears. The name will be displayed in various ways, depending on the specifications of the USB device. If only one memory can be selected, proceed to step 6.

- Press **ENTER** **[3]**.

Notes on the USB device

- Operation is not always guaranteed, even if the USB devices meet the compatibility requirements.
- When a USB device is connected, the unit reads all the files on the device. If there are many folders or files on the device, it may take a long time for the unit to finish reading them.
- Do not connect a USB device to the unit through a USB hub.
- When some connected USB devices, after an operation is performed, there may be a delay before it is performed by this unit.
- This unit may not support the functions provided with a connected USB device.
- The playback order on this unit may differ from the playback order on a connected USB device.
- This unit cannot be used to charge USB devices.

Compatible Bluetooth devices

Compatibility requirements for the devices are as follows. Before using a device with this unit, check that it meets the requirements.

- Devices must conform to Bluetooth Standard version 3.0.
- Devices must support A2DP (Advanced Audio Distribution Profile) and AVRCP (Audio/Video Remote Control Profile).
- NFC capability (required only when using the NFC pairing function of the unit).

For the latest information on compatible Bluetooth devices, including NFC-compatible smartphones, check the websites below.

For customers in Europe: <http://support.sony-europe.com/>

For customers in Latin America: <http://esupport.sony.com/LA>

For customers in other countries/regions: <http://www.sony-asia.com/support>

Tip

The preset radio stations remain in the unit's memory even in the following situations.


- The AC power cord is unplugged.
- The batteries are removed.

Listening to preset radio stations


- Press **RADIO FM/AM** **[2]** repeatedly to select a band.




- Press **PRESET** + or **⇐** **[11]** to select a stored preset number for the desired radio station.

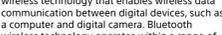


- Press **ENTER** **[3]**.

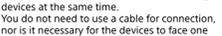


The track/file is programmed. The program step number appears, followed by the total playing time. (Example: audio CD)

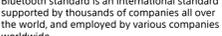

Last programmed track number

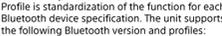


Total playing time*

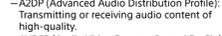

* "----" appears when programming an MP3/WMA disc/USB device or when the total playing time is longer than 100 minutes.

- Repeat steps 3 and 4 to program additional tracks/files.

Press **▶** **[11]** to start Program Play. The created program remains available until you open the CD compartment, remove the USB device or turn off the power of the unit. To play the same program again, press **II** **[13]**.

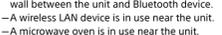

Note

- If connected to the manual output jack of a digital music player, sound may not be emitted through the right speaker of the unit.
- If connected to the line out jack of a digital music player, distortion may occur. If the sound is distorted, connect to the headphones jack instead.
- If connected to the headphones jack of a digital music player, increase the volume of the digital music player, and then adjust the volume of the unit.

Tip

Resume Play is available when using Program Play mode in the USB function. Press **▶** **[11]** after you have stopped Program Play by pressing **II** **[13]**. Program Play starts from the point where you stopped.

To display programmed track/file information

After creating your own program, you can check information about programmed tracks/files.

Press **DISPLAY** **[16]** repeatedly and the display changes as follows:

Total programmed step number **↔** Last programmed track/file number and the total playing time*

* "----" appears for MP3/WMA discs and USB devices.

To cancel Program Play

Press **II** **[13]** to stop playback, and then press **MODE** **[17]** repeatedly until "PGM" disappears from the display.

To delete all tracks/files in the current program

Stop playback, and then press **II** **[13]**. "NO STEP" appears and you can create a new program, following the procedure "Creating your own program (Program Play)".

Notes

- If connected to the manual output jack of a digital music player, sound may not be emitted through the right speaker of the unit.
- If connected to the line out jack of a digital music player, distortion may occur. If the sound is distorted, connect to the headphones jack instead.
- If connected to the headphones jack of a digital music player, increase the volume of the digital music player, and then adjust the volume of the unit.

Interference from other devices

Microwaves emitting from a Bluetooth device may affect the operation of electronic medical devices. Turn off the unit and other Bluetooth devices in the following locations, as it may cause an accident.

- where inflammable gas is present, in a hospital, train, airplane, or a gas station
- near automatic doors or a fire alarm

Notes

- To be able to use the Bluetooth function, the Bluetooth device to be connected requires the same profile as the unit's.
- Note also that even if the same profile exists, devices may vary in function depending on their specifications.
- Due to the characteristic of Bluetooth wireless technology, the sound played on the unit is slightly delayed from the sound played on the Bluetooth device during listening to the music.
- This unit supports security capabilities that comply with the Bluetooth standard to provide a secure connection when the Bluetooth wireless technology is used, but security may not be enough depending on the setting. Be careful when communicating using Bluetooth wireless technology.
- We do not take any responsibility for the leakage of information during Bluetooth communication.
- A device featuring the Bluetooth wireless technology is required to conform to the Bluetooth standard specified by Bluetooth SIG, and be authenticated. Even if the connected device conforms to the above mentioned Bluetooth standard, some devices may not be connected or work correctly, depending on the features or specifications of the device.
- Noise or sound skips may occur depending on the Bluetooth device connected with the unit, the communication environment or the usage environment.

Precautions

Discs that this unit CAN play

- Audio CD (CD-DA)* tracks
- CD-R/CD-RW that contains MP3/WMA files and is finalized** correctly.

* CD-DA is the abbreviation for Compact Disc Digital Audio. It is a recording standard used for audio CDs.

** Finalizing is the process to make the CD-R/CD-RW discs playable on the consumer disc player products, and the finalizing can be enabled or disabled as optional settings during disc creation in most recording software.

Discs that this unit CANNOT play

- CD-R/CD-RW other than those recorded in audio CD format or formats conforming to ISO 9660 Level 1/Level 2 or Joliet
- CD-R/CD-RW of poor recording quality, CD-R/CD-RW with scratches or that is dirty, or CD-R/CD-RW recorded using an incompatible recording device
- CD-R/CD-RW that is unfinalized or finalized incorrectly

Notes on discs

- Before playing, clean the CD with a cleaning cloth. Wipe the CD from the center out. If there are scratches, dirt or fingerprints on the CD, a tracking error may occur.
- Do not use solvents such as benzene, thinner, commercially available cleaners or anti-static spray intended for vinyl LPs.
- Do not expose the CD to direct sunlight or heat sources such as hot air ducts, or leave it in a car parked in direct sunlight as there can be a considerable rise in temperature inside the car.
- Do not stick paper or a sticker on the CD, or scratch the surface of the CD.
- After playing, store the CD in its case.

Note on DualDiscs

A DualDisc is a two sided disc product which mates DVD recorded material on one side with digital audio material on the other side. However, since the audio material side does not conform to the Compact Disc (CD) standard, playback on this product is not guaranteed.

Notes on the USB device

- Operation is not always guaranteed, even if the USB devices meet the compatibility requirements.
- When a USB device is connected, the unit reads all the files on the device. If there are many folders or files on the device, it may take a long time for the unit to finish reading them.
- Do not connect a USB device to the unit through a USB hub.
- When some connected USB devices, after an operation is performed, there may be a delay before it is performed by this unit.
- This unit may not support the functions provided with a connected USB device.
- The playback order on this unit may differ from the playback order on a connected USB device.
- This unit cannot be used to charge USB devices.

Compatible Bluetooth devices

Compatibility requirements for the devices are as follows. Before using a device with this unit, check that it meets the requirements.

- Devices must conform to Bluetooth Standard version 3.0.
- Devices must support A2DP (Advanced Audio Distribution Profile) and AVRCP (Audio/Video Remote Control Profile).
- NFC capability (required only when using the NFC pairing function of the unit).

For the latest information on compatible Bluetooth devices, including NFC-compatible smartphones, check the websites below.

For customers in Europe: <http://support.sony-europe.com/>

For customers in Latin America: <http://esupport.sony.com/LA>

For customers in other countries/regions: <http://www.sony-asia.com/support>

Tip

The preset radio stations remain in the unit's memory even in the following situations.

- The AC power cord is unplugged.
- The batteries are removed.

Listening to preset radio stations

- Press **RADIO FM/AM** **[2]** repeatedly to select a band.



- Press **PRESET** + or **⇐** **[**