

M-15V 15" TFT LCD PANEL DISPLAY

User Manual

Table of Contents

PRECAUTIONS	2
INSTALLATION	2
WARNING ON POWER CONNECTION	2
MAINTENANCE.....	2
TRANSPORTATION.....	3
GETTING STARTED	4
PACKAGE CONTENTS	4
IDENTIFYING PARTS AND CONTROLS	5
SETUP	7
SETUP	7
SETTING THE INPUT SIGNAL PRIORITY.....	9
INSTALLING INFORMATION FILE FOR MICROSOFT WINDOWS 95/98/2000/ME/XP	9
CUSTOMIZING YOUR MONITOR.....	10
WORKING WITH OSD GROUPS	10
SELECTING THE INPUT	11
PICTURE ADJUSTMENT	11
AUDIO SETTING.....	13
COLOR TEMPERATURE	13
OSD SETTING	14
MISC SETTING	15
PIP VIDEO QUALITY (<i>OPTIONAL</i>).....	17
PIP ENABLE (<i>OPTIONAL</i>).....	18
PIP SETTING (<i>OPTIONAL</i>)	19
INPUT SELECT (<i>OPTIONAL</i>).....	20
PICTURE ADJUSTMENT (AV MODE) (<i>OPTIONAL</i>)	21
AV MODE (<i>OPTIONAL</i>).....	22
VOLUME/MUTE ADJUST	23
OSD LOCK FUNCTION	24
WARNING MESSAGES AND TROUBLESHOOTING	25
WARNING MESSAGES.....	25
TROUBLESHOOTING	26
TECHNICAL FEATURES AND SPECIFICATIONS	27
SPECIFICATIONS.....	28
REGULATIONS	29
FCC COMPLIANCE	29
TCO'95	30

Installation

- Do not cover or block the ventilation holes in the case.
- Do not install the monitor near heat sources such as radiators or air ducts, or in a place subject to direct sunlight, excessive dust, mechanical vibration or shock.
- Beware not to get your hands caught between the panel and base, when adjusting the viewing angle of the monitor.
- The power cord set shall have power supply cord according to IEC 60227 and relevant national standard with conductors providing a cross-sectional area of 3G , 0.75mm² minimum, type H05VV-F.

Warning on power connection

- Use an appropriate power cord for your local power supply.
- The outlet should be installed near the monitor and be easily accessible.
- Do not allow anything to rest on the power cord.
- Disconnect the power plug from the power outlet under following conditions:
 - If you will not use it for an indefinite period time.
 - When the power cord or plug is damaged or frayed.
 - If the product has been dropped or the cabinet has been damaged.
 - If the product exhibits a distinct change in performance, indicate a need for service.

Maintenance

- Clean the cabinet, glass, and controls with a soft cloth lightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder or solvent, such as alcohol or benzene.
- Do not rub, touch, or tap the surface of the screen with sharp or abrasive items such as a pen or screwdriver. This type of contact may result in a scratched glass.
- Do not insert sharp objects or spill liquid into the monitor through ventilation holes. They may cause accident fire, electric shock or failure.

- Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage potentials or other risks.

Transportation

- When you transport this monitor for repair or shipment, use the original carton and packing materials.

Getting Started


Package Contents

Before using this monitor, check the following items are included in your carton box:

- Monitor (*1)
- Power cord (*1)




- D-sub 15-pin VGA signal cable (*1)

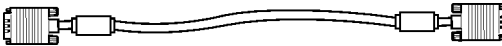

- Video signal cable adapter (Mini-dim 8-pin connector to S-VHS connector and CVBS jack) (*1) (*Optional*)




- S-VHS video signal cable (*1) (*Optional*)

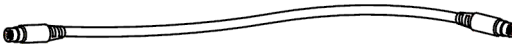

- USB cable (*1)




- Audio cable (*1)

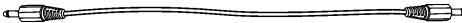

- Floppy/CD-ROM (containing Windows information file and user's manual)



Identifying Parts and Controls

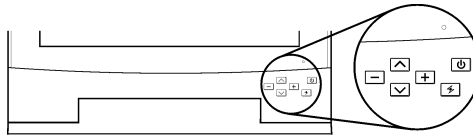

Front view



Power switch

Turns the monitor on or off.




LED indicator

The indicator lights up in green when the monitor is turned on, and lights up in orange when the monitor is in power saving mode.



AUTO button

Adjust the picture position and performance automatically.

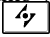You are recommended to press the button the first time you use the monitor or every time you change the resolution and/or refresh rate of the input signal. The  (AUTO) function will not work if the input signal is coming from VIDEO-IN connector (DVD, VCD, VCR players, etc.).



UP button

Activates the On-Screen Display menu.

Move the selected item clockwise.



Down button

Activates the On-Screen Display menu.

Move the selected item counterclockwise.



Increase button

Activates the On-Screen Display menu.


Function as the “+” (increase) button when adjusting.



Decrease button

Activates the On-Screen Display menu.

Function as the “-” (decrease) button when adjusting.

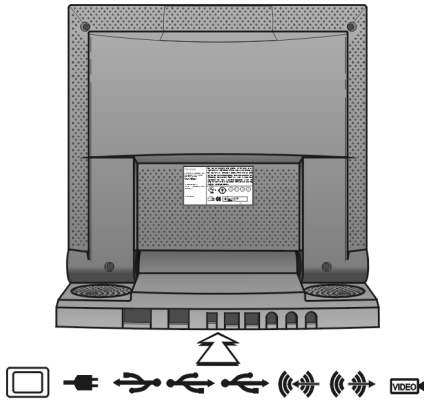

Rear View



VGA In

D-sub 15-pin connector for VGA signal.



AC power inlet

Provides AC power to the monitor.



USB upstream port

Connects to USB port of computer.



USB downstream port

Connects to USB devices.



Line In

Connects to input audio signal.



Line Out

Connects to external speakers.




Video In (*Optional*)

Mini-dim 8-pin connector for S-Video or CVBS signal.

Setup


Please follow the steps one by one to setup your monitor.

1. Fold the stand of monitor and split the dust-proof plastic sheet
Fold the stand out, so you can locate the monitor on the table. Split the dust-proof plastic sheet from the screen surface of monitor.

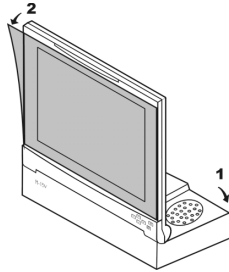


2. Connect the monitor to the computer or video source
With the computer or other video source switched off, connect the video signal cable to the monitor.

➤ **Connecting to an IBM PC/AT or compatible computer**

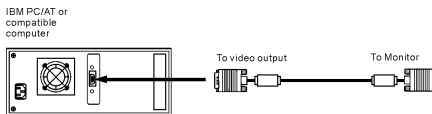

➤ **Connecting to a Macintosh or compatible computer**

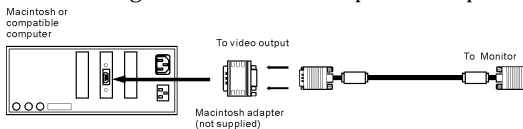

➤ **Connecting to a video source with S-Video connector. (Optional)**




➤ **Connecting to a video source with CVBS jack. (Optional)**




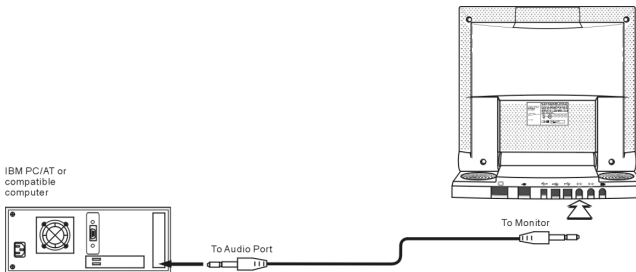
3. Connect the power cord

With the monitor switched off, connect the power cord to the monitor, and the other end of the power cord to a power outlet.

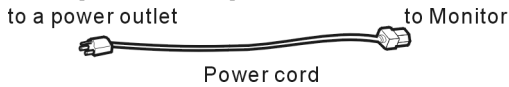


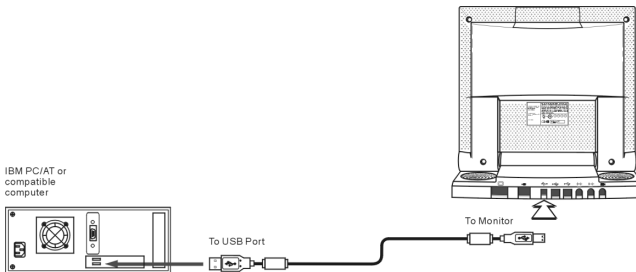
4. Connect the audio cable.

Connect the audio cable to the  (Line In) port at back of monitor. And connect the other end to the audio output port of computer or video source.




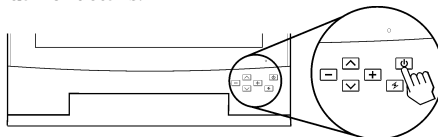
5. Connect the USB cable.


Connect the USB cable to the  (USB upstream) port at back of monitor. And connect the other end to the USB port of computer.




6. Turn on the monitor and computer or video source


Turn on your computer or other video source. And press  (Power) switch to turning on your monitor. You should see the picture on your monitor now. If not, please check the "Warning Signal and Troubleshooting" section of this user manual for details.



7. Use 1024x768 resolution and press  (AUTO) button for best performance (If you connect to a video source such as DVD or VCR player, please skip this step.)

Before starting to work, you are recommended to adjust the resolution of video signal from your computer to 1024x768 at 60Hz for best picture performance. (Please check the user manual of your computer to learn how to adjust the resolution and refresh rate.)

You are also recommended to press the  (AUTO) button to adjust the picture performance automatically and to ensure the tolerance-free picture.

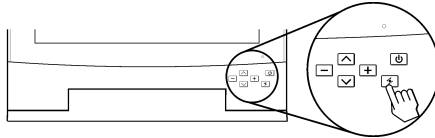

Setting the input signal priority


This monitor will detect the video input source (VGA-In or VIDEO-In) automatically. You may switch the input signal priority if both inputs are connected. Please refer to “Customizing Your Monitor” section for details.

Installing information file for Microsoft Windows 95/98/2000/ME/XP

The information file (also known as driver) for Microsoft Windows 95/98/2000/ME/XP are available in the attached floppy disk or CD-ROM. You may install it for better communication between your monitor and Windows 95/98/2000/ME/XP. Please refer to the text file of “readme.txt” in the attached floppy disk or CD-ROM for details.

Customizing Your Monitor

Working with OSD Groups

1. Press the UP  button to open the OSD main window.
OSD functions are divided into Groups. Icons representing these groups appear across the top of the OSD display. From left to right, the OSD Groups are:



Picture Adjustment



Audio Setting



Color Temperature



OSD Setting



Misc Setting (miscellaneous adjustments)



PIP (Picture In Picture) Video Quality *(Optional)*









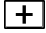
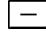




PIP Enable *(Optional)*

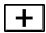

PIP Setting *(Optional)*




Input Select


2. To select an OSD Group, with the OSD window open, press the DOWN  or UP  buttons until the desired Group's icon is highlighted and that Group's setting items are listed.
3. Press the INCREASE  or DECREASE  button once to enter the setting menu Group.
4. Use the DOWN  or UP  buttons to select the desired setting from the Group's displayed menu.
5. With the setting selected, use the INCREASE  or DECREASE  buttons to change the settings as listed under each setting in the following section.
6. Use the DOWN  or UP  buttons to select a new menu item.
7. Push the AUTO  button once to save settings and return to the Group selection menu.
8. Push the AUTO  button again to exit the OSD.





The OSD Groups contain adjustment functions as described in the following sections:

Selecting the Input

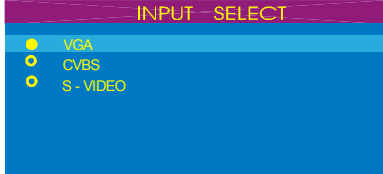The input source is detected automatically when you turn on the monitor. If more than one device is connected to the monitor, you can select the device you want from the Input Select screen.


1. Push the DOWN  button on the front of the monitor.






2. Use the DOWN  or UP  buttons to move through the items.
3. Use the INCREASE  and DECREASE  buttons to select the input source.

Note! If you select an input source that is not connected to the monitor, you will get a “No Signal” warning.

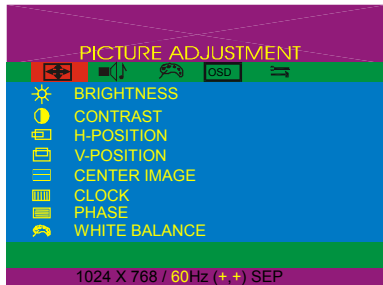


Picture Adjustment



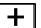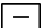


Brightness & Contrast

1. To fine-tune the monitor’s brightness and contrast, select the item from the menu.
2. Use the INCREASE  and DECREASE  buttons to set the display as desired on the 0-100 scale that appears at the bottom of the window.
3. Push the AUTO  button once to save settings and return to the Group selection menu.




Horizontal & Vertical Position

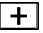1. To fine-tune the display's position on the monitor screen, select the item from the menu.
2. Use the INCREASE  and DECREASE  buttons to set the display as desired on the 0-100 scale that appears at the bottom of the window.
3. Push the AUTO  button once to save settings and return to the Group selection menu.




Center Image

1. To center the display's position on the monitor screen, select the item from the menu.
2. Use the INCREASE  and DECREASE  buttons to toggle between YES and NO.
3. Push the AUTO button  once to save settings and return to the Group selection menu.

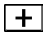
Clock & Phase

1. To fine-tune picture performance to compensate for drifts in the computer signal, select the item from the menu.
2. Use the INCREASE  and DECREASE  buttons to set the display as desired on the 0-100 scale that appears at the bottom of the window.
3. Push the AUTO  button once to save settings and return to the Group selection menu.


White Balance

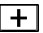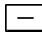1. To enable the monitor's auto white balance capability, select the item from the menu.
2. Use the INCREASE  and DECREASE  buttons to toggle between YES and NO.
3. Push the AUTO button  once to save settings and return to the Group selection menu.


Audio Setting

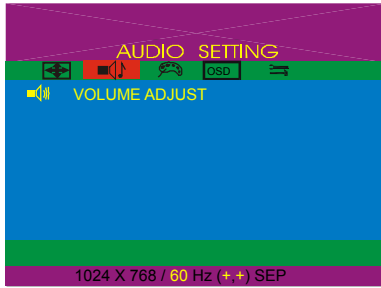

Volume Adjust

1. To adjust the monitor's built-in speaker volume, select the item from the menu.
2. Use the INCREASE and DECREASE buttons to set the volume as desired on the 0-100 scale that appears at the bottom of the window.
3. Push the AUTO button  once to save settings and return to the Group selection menu.

Color Temperature

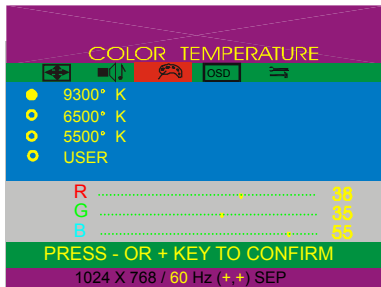


Selecting a Color Temperature setting

The following conditions are recommended for the available settings:








Setting	Use
9300K	General Use
6500K	Color Management
5500K	Photo Retouching

1. Select the desired setting from the menu.
2. Use the INCREASE and DECREASE buttons to enable the item.


3. Push the AUTO button  once to save settings and return to the Group selection menu.

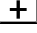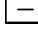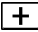Selecting a User-Defined Color Balance Setting




You can fine-tune the red/green/blue picture settings according to your preference or specific application.

1. Select the color category from the menu.
2. Use the INCREASE  and DECREASE  buttons to enable the item.
3. Use the INCREASE  and DECREASE  buttons to set each color as desired on the 0-100 scale.
4. Use the DOWN  or UP  buttons to select the next color.
5. Push the AUTO button  once to save settings and return to the Group selection menu.


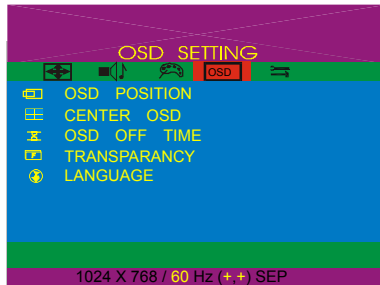
OSD Setting

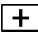


OSD Position

1. To position the OSD window to your preference, select the item from the menu.
2. Use the INCREASE  and DECREASE  buttons to move the display through its available positions.
3. Push the AUTO button  once to save settings and return to the Group selection menu.


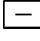

Center OSD

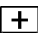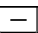1. To center the OSD's position on the monitor screen, select the item from the menu.
2. Use the INCREASE  and DECREASE  buttons to toggle between YES


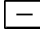

and NO.

3. Push the AUTO button  once to save settings and return to the Group selection menu.


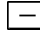

OSD Off Time

1. To set the duration of the OSD window's display, select the item from the menu.
2. Use the INCREASE  and DECREASE  buttons to set the time as desired: off, 10, 20, 30, 40, 50, 60 seconds.
3. Push the AUTO button  once to save settings and return to the Group selection menu.


Transparency

1. To enable transparency of the OSD window, select the item from the menu.
2. Use the INCREASE  and DECREASE  buttons to toggle between YES and NO.
3. Push the AUTO button  once to save settings and return to the Group selection menu.





Language

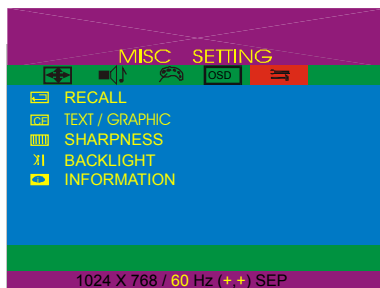1. To select the language for the OSD interface, select the item from the menu.
2. Use the INCREASE  and DECREASE  buttons to toggle through the available languages shown at the bottom of the window.
3. Push the AUTO button  once to save settings and return to the Group selection menu.




Misc Setting



Recall




1. To return the monitor's settings to the factory default, select Recall from the menu.
2. Use the INCREASE  and DECREASE  buttons to toggle between YES and NO.
3. A. Select YES and push the AUTO button . A warning screen is displayed, and the monitor is reset to the factory defaults.
B. Select NO and push the AUTO button  once to return to the Group selection menu without making changes.

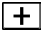Text/Graphic




1. To choose between the monitor's automatic sharpness optimization for text or graphic use, select the item from the menu.
2. Use the INCREASE  and DECREASE  buttons to toggle between YES and NO.
3. Push the AUTO button  once to save settings and return to the Group selection menu.

Note! For better performance, change to "Text" mode when display resolution is set at 720 x 400 and change to "Graphics" mode when display resolution is set to 640 x 350.

Sharpness

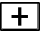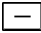1. To set the sharpness of the display, select Sharpness from the menu.
2. Use the INCREASE  and DECREASE  buttons to set the sharpness as desired on the Softer-Sharper scale.
3. Push the AUTO button  once to save settings and return to the Group selection menu.

Backlight

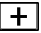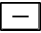1. To set the brightness of the monitor's backlight, select Backlight from the menu.
2. Use the INCREASE  and DECREASE  buttons to set the brightness as desired on the 1-100 scale.
3. Push the AUTO button  once to save settings and return to the Group selection menu.

Information

Select Information from the menu to display the monitor's model number.

PIP Video Quality *(Optional)*




PIP (Picture In Picture) allows you to view a small video window in the middle of your full-screen display. Depending on your input source, this feature can be used for watching TV while using your computer. It can also be used in videoconferencing to see how you appear to the other members in the conference.

The following screens allow you to change settings for PIP. These changes do not effect full-screen display settings.




Brightness/Contrast/Saturation/Hue/Sharpness

Note! Before you can make changes to the PIP video quality screen, you must enable the PIP feature and choose the source. Refer to the following PIP Enable section for details.

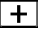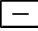
1. To fine-tune these settings for the PIP window, select the item from the menu.
2. Use the INCREASE  and DECREASE  buttons to set as desired on the 0-100 scale that appears at the bottom of the window.
3. Push the AUTO  button once to save settings and return to the Group selection menu.

PIP Enable (*Optional*)


To enjoy your monitor's PIP feature, you should first connect your input source to the rear of the monitor (see Making Connections on page 4). In the following screen, first enable PIP and then select the input source that is connected to the monitor.

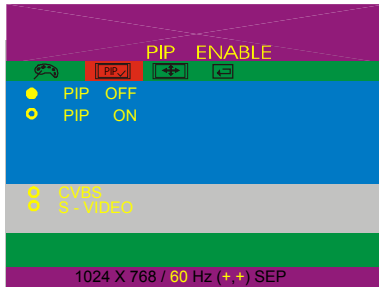

PIP Off/PIP On

1. Select PIP ON from the menu.
2. Use the INCREASE and DECREASE buttons to enable PIP. (Notice the PIP window appears on your screen.)
3. Use the DOWN or UP buttons to select the input source for the PIP window: CVBS; S-VIDEO.
4. Use the INCREASE and DECREASE buttons to enable the input source for the PIP window.
5. Push the AUTO button  twice to save settings and return to the Group selection menu.

PIP Setting (Optional)

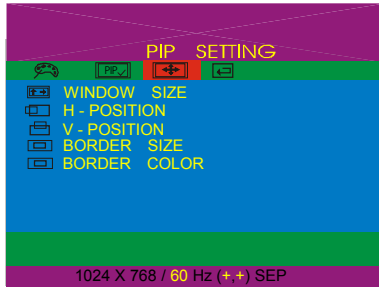

Window Size

1. To resize the PIP window, select the item from the menu.
2. Use the INCREASE and DECREASE buttons to set as desired on the 0/50/100 scale that appears at the bottom of the window.
3. Push the AUTO button once to save settings and return to the Group selection menu.

H-Position & V-Position


1. To change the horizontal and vertical position of the PIP window on the monitor screen, select the item from the menu.
2. Use the INCREASE and DECREASE buttons to set the display as desired on the 0-100 scale that appears at the bottom of the window.
3. Push the AUTO button once to save settings and return to the Group selection menu.

Border Size & Border Color

1. To change the border size and color of the PIP window, select the item from the menu.
2. Use the INCREASE and DECREASE buttons to set as desired on the 0-100 scale that appears at the bottom of the window.
3. Push the AUTO button once to save settings and return to the Group selection menu.

Input Select *(Optional)*

If you only want to change the input source, you can select a simplified version of the following screen by pushing the DOWN button. (See page 11.)

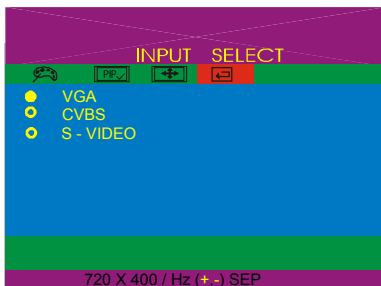


VGA/CVBS/S-VIDEO

1. To choose the monitor's input source, select the item from the menu.
2. Use the INCREASE and DECREASE buttons to select the input source.






Note! If you select an input source that is not connected to the monitor, you will get a "No Signal" warning.

Picture Adjustment (AV mode) *(Optional)*

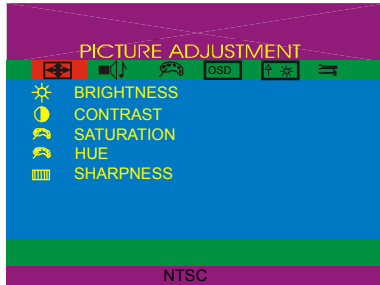If an external video device is connected to the monitor, the PICTURE ADJUSTMENT screens will automatically change as follows.




Brightness/Contrast/Saturation/Hue/Sharpness

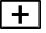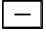




1. To adjust these settings, use the DOWN  or UP  buttons select the item from the menu.
2. Use the INCREASE  and DECREASE  buttons to set as desired.
3. Push the AUTO  button once to save settings and return to the Group selection menu.

AV mode *(Optional)*



The AV Mode screen lets you adjust the contrast for the connected video device.

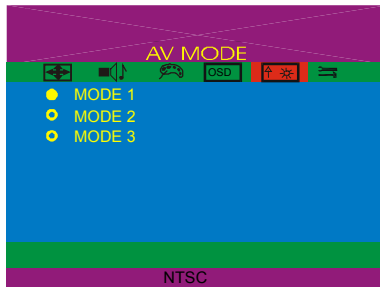Setting	Use
Mode1	Sets contrast at 25%
Mode 2	Sets contrast at 50%
Mode 3	Sets contrast at 75%

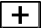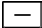






1. To adjust these settings, use the DOWN  or UP  buttons select the item from the menu.
2. Use the INCREASE  and DECREASE  buttons to set as desired.
3. Push the AUTO  button once to save settings and return to the Group selection menu.

Volume/Mute Adjust

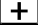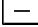Use the INCREASE  and DECREASE  buttons to quickly adjust the volume of the monitor's built-in stereo speakers.




Volume

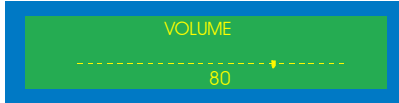

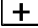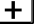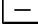1. Push the INCREASE  button to open the Volume adjust window.
2. Use INCREASE  and DECREASE  buttons to set the volume as desired.
3. Push the AUTO button  once to save your setting and close the Volume adjust window.

Audio Enable/Mute



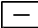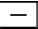

1. Push the DECREASE  button to open the Audio Enable/Mute window.
2. Use the DECREASE  button to enable Audio Mute.
3. Push the AUTO button  once to save your setting and close the Audio Enable/Mute window.

OSD Lock Function

Use the OSD lock function to prevent unwanted adjustment of the monitor's settings. Once the OSD controls are locked, none of the OSD settings including the volume is accessible.

Lock/unlock OSD

Refer to the following to lock the OSD:

1. Press and hold the DOWN  and AUTO  buttons together for 15 seconds. The following screen appears:


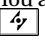


2. Keep pressing both buttons until the counter reaches zero and the screen closes.


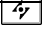
If you try to access the OSD, a "MAIN CONTROL MENU LOCKED" screen appears. Repeat the above procedure to unlock the OSD.

Warning Messages and Troubleshooting

Warning Messages

If the message appears on the screen	Check the items
CAN NOT DISPLAY THIS INPUT SIGNAL	<p>The input signal is not acceptable by the monitor.</p> <ul style="list-style-type: none"> • Please check the video resolution and frequency range is within that specified for the monitor. • Please refer to the “Technical Specifications” section of this user manual for details.
NO SIGNAL INPUT	<p>No signal inputs are detected from neither VGA-In nor Video-In connector.</p> <ul style="list-style-type: none"> • Check that the power switch of your computer or video source is in the “ON” position. • Check that the video signal cable is properly connected. • Ensure that no pins are bent or pushed in the video input connector.
MAIN CONTROL MENU LOCKED	<p>The main control menu (On-Screen Display menu) is locked to avoid unwanted adjustment.</p> <ul style="list-style-type: none"> • Press  button for 15 seconds to unlock the main control menu.
NO VIDEO SIGNAL FROM VGA-IN	<p>No signal input is detected from VGA-In connector.</p> <ul style="list-style-type: none"> • Check that the power switch of your computer is in the “ON” position. • Check that the VGA cable is properly connected to VGA-IN connector. • Ensure that no pins are bent or pushed in the video input connector. <p>No signal input is detected from Video-In connector.</p> <ul style="list-style-type: none"> • Check that the power switch of your video source is in the “ON” position. • Check that the video cable is properly connected to Video-In connector.
WAIT FOR AUTOMATIC ADJUSTMENT	<p>The monitor is detecting the input signal and then adjusting automatically the monitor parameters accordantly.</p> <ul style="list-style-type: none"> • It takes around 5 seconds to finish the whole process. • You are recommended to run auto adjustment by pressing  button every time you changed the resolution or refresh rate.
USE 1024X768 FOR BEST PERFORMANCE	<p>The current resolution of video signal is not 1024 by 768.</p> <ul style="list-style-type: none"> • The performance of this monitor is optimized for resolution of 1024 by 768. You are recommended to change the resolution to 1024 by 768. • Please refer to the user manual of your computer to learn how to change the resolution of video signal.

Troubleshooting

Symptom	Check Items
<ul style="list-style-type: none"> No picture LED power indicator is not lit 	<ul style="list-style-type: none"> Check that the power switch of monitor is turned on. Check that the power code is properly connected to the monitor. Check that the power cord is properly connected to power outlet. Check there is electrical power coming from the power outlet. Use another device to check for power.
<ul style="list-style-type: none"> No picture The LED power indicator is orange color 	<ul style="list-style-type: none"> Ensure the computer is not in the power saving mode. (Move the mouse or press a key on the keyboard to wake up the computer.) Check that the power switch of your computer or video source is in the "ON" position. Check that the video signal cable is properly connected.
<ul style="list-style-type: none"> The texts are not solid 	<ul style="list-style-type: none"> Change the resolution of the video signal to 1024 by 768 if it is not. Press  button to run the automatic adjustment. Adjust Clock and Phase in the OSD menu to fine tune. (Please refer to the "Customizing Your Monitor" section of this user manual for details.) Adjust Sharpness in the OSD menu if you are not in 1024 by 768 resolution. (Please refer to the "Customizing Your Monitor" section of this user manual for details.)
<ul style="list-style-type: none"> Screen image is not Centered properly 	<ul style="list-style-type: none"> Press  button to run the automatic adjustment. Adjust H. Position and V. Position to fine tune. (Please refer to the "Customizing Your Monitor" section of this user manual for details.)
<ul style="list-style-type: none"> Some lines missing There are red, green, blue or black tiny dots on the screen. 	<ul style="list-style-type: none"> The TFT LCD panel is made of millions of small transistors. And each defect transistor will cause a missing red, green, or blue dot. It's guarantees maximum 3 missing dots in every single monitor. It's around the industrial standard.
<ul style="list-style-type: none"> The USB hub does not work. 	<ul style="list-style-type: none"> Ensure that the USB cable is properly connected to the USB port on the PC and on the base of the monitor. Ensure that the USB drivers for your PC are properly loaded and configured. <ol style="list-style-type: none"> Right-click on the "My Computer" icon on your Windows desktop and select "Properties". Select the "Device Manager" tab and scroll until you see a entry heading "Universal Serial Bus controllers". Click on the small + sign and check to make sure that both a USB Universal Host Controller and a USB Root Hub are listed, and that there are no yellow circles with an exclamation point or red "X" for either of the devices. Unplug your USB device and remove the USB drivers in your PC, reinstall your device by following the instruction from screen. Some USB device may conflict with another – remove one of them or contact their suppliers.

Technical Features and Specifications

Power Saving Function

This monitor meets the power-saving guidelines set by VESA and Energy Star, as well as the more stringent NUTEK.

If the monitor is connected to a computer that is VESA DPMS (Display Power Management Signaling) compliant, the monitor will automatically reduce power consumption in the three stages as shown below.

Mode	Screen	Power Consumption	LED indicator
Normal	Active	< 48 W	Green
Standby	Blank	< 5W	Orange
Power-off	Blank	<5 W	Off

Plug & Play

This monitor complies with the DDC1 and DDC2B Display Data Channel (DDC) Standards of VESA.

Preset and User Modes

This monitor has factory preset modes for the 14 most popular industrial standards. Another 14 user modes are also available to store user adjustments.

NO.	Resolution	Horizontal Frequency	Vertical Frequency	Mode
1	640x350	31.5KHz	70Hz	IBM VGA
2	640x480	31.5KHz	60Hz	IBM VGA
3	640x480	35.0KHz	67Hz	Macintosh
4	640x480	37.9KHz	72Hz	VGA/72
5	640x480	37.5KHz	75Hz	VGA/75
6	720x400	31.5KHz	70Hz	IBM VGA
7	800x600	35.2KHz	56Hz	SVGA/56
8	800x600	37.9KHz	60Hz	SVGA/60
9	800x600	48.1KHz	72Hz	SVGA/72
10	800x600	46.9KHz	75Hz	SVGA/75
11	832x624	49.7KHz	75Hz	Macintosh
12	1024x768	48.4KHz	60Hz	XGA/60
13	1024x768	56.5KHz	70Hz	XGA/70
14	1024x768	60.0KHz	75Hz	XGA/75

Specifications

Electrical characteristics		
Screen size		15.0" (381mm) diagonal
Pixel format		1024 x 768 vertical stripe
Horizontal frequency		30kHz – 60kHz
Vertical frequency		50Hz – 75Hz
Maximum pixel clock		80MHz
Connections		Power: 3-pin AC plug
Power	AC	100 ~ 240V, 50~60Hz
	Consumption	< 48W (ON) < 5W (Standby) < 5W (OFF)

Physical characteristics		
Weight		Net: 7.0Kg (15.4 lb) Gross: 9.0Kg (19.8 lb)
Tilt Angle		5°~90°
Temperature		Operating: 0° - 40°C Storage: -20° - 60°C
Humidity		Operating: 10% - 90% Storage: 5% - 95%

Regulations

FCC compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Any unauthorized modification to this equipment could result in the revocation of the authorization to operate the equipment and void the product warranty.



TCO'95

Congratulations!

You have just purchased a TCO'95 approved and labelled product! Your choice has provided you with a product developed for professional use. Your purchase has also contributed to reducing the burden on the environment and also to the further development of environmentally adapted electronics products.

Why do we have environmentally labelled computers?

In many countries, environmental labelling has become an established method for encouraging the adaptation of goods and services to the environment. The main problem, as far as computers and other electronics equipment are concerned, is that environmentally harmful substances are used both in the products and during the manufacturing. Since it has not been possible for the majority of electronics equipment to be recycled in a satisfactory way, most of these potentially damaging substances sooner or later enter nature.

There are also other characteristics of a computer, such as energy consumption levels, that are important from the viewpoints of both the work (internal) and natural (external) environments. Since all methods of conventional electricity generation have a negative effect on the environment (acidic and climate-influencing emissions, radioactive waste, etc.), it is vital to conserve energy. Electronics equipment in offices consume an enormous amount of energy since they are often left running continuously.

What does labelling involve?

This product meets the requirements for the TCO'95 scheme which provides for international and environmental labelling of personal computers. The labelling scheme was developed as a joint effort by the TCO (The Swedish Confederation of Professional Employees), Naturskyddsforeningen (The Swedish Society for Nature Conservation) and NUTEK (The National Board for Industrial and Technical Development in Sweden).

The requirements cover a wide range of issues: environment, ergonomics, usability, emission of electrical and magnetic fields, energy consumption and electrical and fire safety.

The environmental demands concern restrictions on the presence and use of heavy metals, brominated and chlorinated flame retardants, CFCs (freons) and chlorinated solvents, among other things. The product must be prepared for recycling and the manufacturer is obliged to have an environmental plan which must be adhered to in each country where the company implements its operational policy.

The energy requirements include a demand that the computer and/or display, after a certain period of inactivity, shall reduce its power consumption to a lower level in one or more stages. The length of time to reactivate the computer shall be reasonable for the user.

Labelled products must meet strict environmental demands, for example, in respect of the reduction of electric and magnetic fields, physical and visual ergonomics and good usability.

On the back page of this folder, you will find a brief summary of the environmental requirements met by this product. The complete environmental criteria document may be ordered from:

TCO Development Unit

S-114 94 Stockholm, Sweden

Fax: +46 8 782 92 07

Email (Internet): development@tco.se

Current information regarding TCO'95 approved and labelled products may also be obtained via the Internet, using the address: <http://www.tco-info.com/>

TCO'95 is a co-operative project between **TCO** (The Swedish Confederation of Professional Employees), **Naturskyddsforeningen** (The Swedish Society for Nature Conservation) and **NUTEK** (The National Board for Industrial and Technical Development in Sweden).

Environmental requirements

Brominated flame retardants

Brominated flame retardants are present in printed circuit boards, cables, wires, casings and housings. In turn, they delay the spread of fire. Up to thirty percent of the plastic in a computer casing can consist of flame retardant substances. There are related to another group of environmental toxins, PCBs which are suspected to give rise to similar harm, including reproductive damage in fish-eating birds and mammals, due to the bio-accumulative processes. Flame retardants have been found in human blood and researchers fear that disturbances in foetus development may occur.

TCO'95 demand requires that plastic components weighing more than 25 grams must not contain organically bound chlorine and bromine.

Lead**

Lead can be found in picture tubes, display screens, solders and capacitors. Lead damages the nervous system and in higher doses, causes lead poisoning. TCO'95 requirement permits the inclusion of lead since no replacement has yet been developed.

Cadmium**

Cadmium is present in rechargeable batteries and in the colour-generating layers of certain computer displays. Cadmium damages the nervous system and is toxic in high doses. TCO'95 requirement states that batteries may not contain more than 25 ppm (parts per million) of cadmium. The colour-generating layers of display screens must not contain any cadmium.

Mercury**

Mercury is sometimes found in batteries, relays and switches. Mercury damages the nervous system and is toxic in high doses. TCO'95 requirement states that batteries may not contain more than 25 ppm (parts per million) of mercury. It also demands that no mercury is present in any of the electrical or electronics components concerned with the display unit.

CFCs (freons)

CFCs (freons) are sometimes used for washing printed circuit boards and in the manufacturing of expanded foam for packaging. CFCs break down ozone and thereby damage the ozone layer in the stratosphere, causing increased reception on earth of ultraviolet light with consequent increased risks of skin cancer (malignant melanoma).

The relevant TCO'95 requirement: Neither CFCs nor HCFCs may be used during the manufacturing of the product or its packaging.

1

**Bio-accumulative is defined as substances, which accumulate within living organisms*

***Lead, Cadmium and Mercury are heavy metals which are Bio-accumulative.*