

# **Marking Thickness Gauge**

# **User Manual**

Digital measurement of pavement marking thickness





#### DISCLAIMER

# The information contained in this document is subject to change without notice.

DELTA LIGHT & OPTICS MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS MATERIAL, INCLUDING, BUT NOT LIMITED THE TO, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. DELTA LIGHT & OPTICS SHALL NOT BE LIABLE FOR ERRORS CONTAINED HEREIN OR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE FURNISHING, PERFORMANCE OR USE OF THIS MATERIAL.

**Caution**: Changes / modifications not approved by the responsible party could void the user's authority to operate the equipment.

Rev. December 2014



### **TABLE OF CONTENTS**

- 1. General information
- 2. Calibration
- 3. Measurement procedure
- 4. Battery replacement
- 5. Interface data transfer
- 6. Delivery
- 7. Specifications



#### **1. GENERAL INFORMATION**

The Marking Thickness Gauge is a digital devise to measure the thickness of pavement markings dry after application. The Marking Thickness Gauge is a robust instrument which will last many years if handled with care and transported in the original transportation box.

The Marking Thickness Gauge has a measurement range of -12.7 mm to +12.7 mm or -0.5 inch to +0.5 inch.

#### **2. CALIBRATION**

Calibration of the Marking Thickness Gauge (MTG) is done by the following steps:

- 1. Place the MTG on an even surface of the object to be measured.
- 2. Switch on the digital indicator by pushing the green ON/OFF button (1).
- 3. Hold the MTG with one hand and push the measuring arm (4) down with the other hand until it reaches the surface.
- 4. Press the blue origin button (2) as far as it will go and keep it for 2 seconds. The display will now show 0.00. The instrument is ready to measure.
- 5. By pushing the +/- button (3) the display can show + or values as required.





#### **3. MEASURING PROCEDURE**

To measure the thickness of a pavement marking make the following steps.

- 1. Switch on the MTG.
- 2. Calibrate the MTG as described in section 2.
- 3. Place the MTG besides the marking to be measured.
- 4. Press the measurement arm downwards until the arm firmly touches the marking, then read the measured value.





#### **4. BATTERY REPLACEMENT**

The MTG uses a silver oxide battery (SR44)

- 1. Remove the battery holder by using a screwdriver or the like
- 2. Remove the current battery
- 3. Set a new battery into the holder with its positive (+) side facing the front
- 4. Set the battery holder into its original position

#### 5. INTERFACE – DATA TRANSFER

Information to be provided.

#### **6. DELIVERY**

The following parts are contained in the Marking Thickness Gauge delivery:

- \* 1 Marking Thickness Gauge
- \* 1 Transportationn box
- \* 1 User manual



During carriage the MTG is to be handled with proper care. DELTA recommends to transport and store the instrument in the original transportation box. If the instrument should be damaged, contact DELTA or one of our authorised dealers for assistance.



## 7. SPECIFICATIONS

Dimensions	
Material	
Mitutoyo Absolute Digimatic Indicator	
Resolution	0.01 mm
Range	
Accuracy	
Display	LED
Battery	
Battery ID	SR44
Battery type	silver oxide
Battery life	Approx. 20.000 hours under normal use
Dust / water protection level	IP42
Warranty	