



User Manual

- V1403





Table of Contents

SAFETY PRECAUTIONS/MEASURES	6
PHONE LAYOUT	7
1 GETTING STARTED	8
1.1 Removing the battery cover.....	8
1.2 Removing the battery	8
1.3 Inserting the SIM card.....	8
1.4 Inserting the Memory card.....	9
1.5 Re-Inserting the battery	9
1.6 Putting back the battery cover.....	9
1.7 Switching On/Off the handset.....	9
2 BASIC FUNCTION	10
2.1 MAKE A CALL.....	10
2.2 MAKE AN INTERNATIONAL CALL	10
2.3 ANSWER OR REJECT A CALL.....	10
2.3.1 Answer a Call.....	10
2.3.2 Reject a Call	10
2.3.3 End a Call	10
2.4 CALLING OPTIONS	10
3 CALL HISTORY	11
3.1 SIM 1 CALL HISTORY	11
3.1.1 SIM 1 missed calls.....	11
3.1.2 SIM 1 dialed calls.....	11
3.1.3 SIM 1 received calls.....	11
3.1.4 Delete SIM 1 call logs.....	11
3.1.5 SIM 1 call time	11
3.1.6 SIM 1 call cost	11
3.1.7 SIM 1 SMS counter.....	11
3.1.8 SIM 1 GPRS counter	11
3.2 SIM 2 CALL HISTORY	11
4 FUN & GAMES	12
5 SERVICES	13
5.1 SIM APPLICATOR / STK	13
5.2 WAP.....	13
5.3 DATA ACCOUNT	13
6 PHONEBOOK	14
6.1 QUICK SEARCH	14
6.2 SEARCH CONTACT.....	14
6.3 ADD NEW CONTACT.....	14



6.4	COPY ALL.....	14
6.5	DELETE.....	15
6.6	CALLER GROUPS.....	15
6.7	MY vCARD.....	15
6.8	vCARD VERSION.....	15
6.9	BLACKLIST.....	15
6.10	SPEED DIAL.....	15
6.11	SETTINGS.....	16
6.12	MEMORY STATUS.....	16
7	MESSAGES.....	17
7.1	SMS.....	17
7.1.1	Write Message.....	17
7.1.2	Inbox.....	17
7.1.3	Outbox.....	18
7.1.4	Templates.....	18
7.1.5	SMS settings.....	18
7.2	MMS.....	19
7.2.1	Write MMS.....	19
7.2.2	Inbox.....	19
7.2.3	Outbox.....	19
7.2.4	Drafts.....	19
7.2.5	Templates.....	19
7.2.6	MMS settings.....	19
7.3	E-MAIL.....	20
7.3.1	Send and receive.....	20
7.3.2	Write E-mail.....	20
7.3.3	Inbox.....	20
7.3.4	Outbox.....	20
7.3.5	Sent.....	20
7.3.6	Drafts.....	20
7.3.7	Clear mailbox.....	20
7.3.8	Delete marked.....	20
7.3.9	E-mail accounts.....	20
7.3.10	Templates.....	21
7.4	VOICE MAIL SERVER.....	21
7.5	BROADCAST MESSAGE.....	21
8	USER PROFILES.....	22
9	SETTINGS.....	23
9.1	DUAL SIM SETTINGS.....	23
9.2	PHONE SETTINGS.....	23
9.3	DISPLAY CHARACTERISTICS.....	23
9.4	GENERAL CALL SETTINGS.....	24
9.5	NETWORK SETUP.....	24





9.5.1	Network selection	24
9.5.2	Preferred network	25
9.6	SECURITY SETUP.....	25
9.6.1	SIM 1 security setup	25
9.6.1.1	SIM 1 lock	25
9.6.1.2	Fixed dial	25
9.6.1.3	Change password	25
9.6.2	SIM 2 security setup	25
9.6.3	Auto keypad lock	25
9.6.4	Phone lock	25
9.6.5	Change password.....	25
9.6.6	Intimacy Protection	25
9.6.7	Mobile Tracker	26
9.7	RESTORE FACTORY SETTINGS.....	26
9.8	SOUND EFFECT.....	26
10	MULTIMEDIA	27
10.1	CAMERA.....	27
10.2	IMAGE VIEWER	28
10.3	AUDIO PLAYER	28
10.4	VIDEO RECORDER	28
10.5	VIDEO PLAYER.....	28
10.6	FM RADIO	28
10.7	SCHEDULE FM RECORDER	29
10.8	SOUND RECORDER	29
10.9	FILE MANAGER	29
11	ORGANISER.....	30
11.1	ALARM	30
11.2	CALENDAR	30
11.3	TO DO LIST	30
11.4	BLUETOOTH.....	30
11.5	CALCULATOR	31
11.6	UNIT CONVERTER.....	31
11.7	CURRENCY CONVERTER.....	31
11.8	WORLD CLOCK	31
11.9	HEALTH.....	32
11.9.1	BMI (Body Mass Index)	32
11.9.2	Menstrual.....	32
11.10	E-BOOK READER	32
11.11	STOPWATCH	32
11.11.1	Typical stopwatch	32
11.11.2	nWay stopwatch	32





APPENDIX I: TROUBLESHOOTING 33

APPENDIX II: ABBREVIATIONS AND EXPLANATION 35



SAFETY PRECAUTIONS / MEASURES

Please comply with these precautions/measures to avoid dangerous or illegal situations and to ensure peak performance of your phone.



ROAD SAFETY COMES FIRST

Do not use the phone hand-held while driving. Park the vehicle on the road side, if phone is hand-held.



SWITCH OFF IN AIRCRAFT

Switch your phone off while boarding an aircraft. Signal from your phone can affect aircraft system. You are legally obliged to comply with this recommendation.



SWITCH OFF NEAR EXPLOSIVES

Switch your phone off when entering any explosive area. Observe any provided guidelines or regulations.



SWITCH OFF WHEN REFUELING

Do not use your phone when refueling. You should keep your phone away from fuel and chemicals.



SWITCH OFF IN HOSPITALS

Switch the phone off in hospitals. Follow any instructions if provided.



ENHANCEMENTS AND BATTERIES

Use only approved enhancements and batteries. Do not connect incompatible products.



AVOID INTERFERENCE WITH PACEMAKERS

Maintain a minimum distance of 15 centimetres between mobile phone and pacemaker to avoid potential interference.




USE QUALIFIED SERVICING

Only open the phone to replace the battery, SIM and microSD card. Do not open the battery under any other circumstances. All other changes to this device are strictly prohibited and will invalidate the guarantee.




PHONE LAYOUT


Front

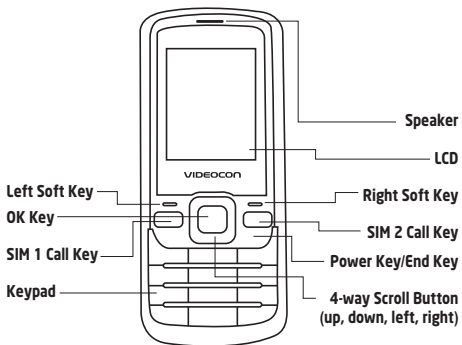

Back

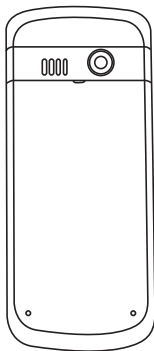 


1 GETTING STARTED

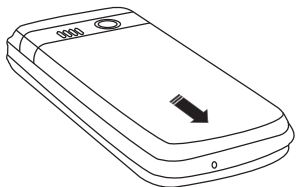 


1.1 Removing the battery cover:

 - 1.1.1 Ensure that the phone is switched off
- 1.1.2 Press the battery back cover to unlock and slide it downwards to open the back cover

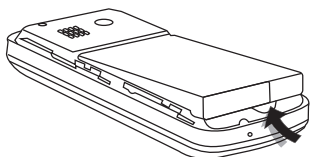


1.2 Removing the battery from the compartment:

 - 1.2.1 Locate the battery groove at the bottom middle of the battery compartment
- 1.2.2 Lift the battery up with your fingers
- 1.2.3 Remove the battery out from the phone

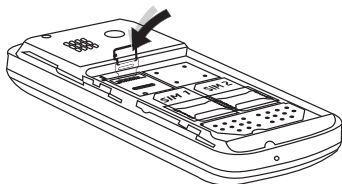


1.3 Installation of Memory Card:

 - 1.3.1 Locate the Memory Card slot in top left end of the battery compartment
- 1.3.2 Push the Memory Card cover in the direction indicated by the arrow to unlock and pull it upwards to open
- 1.3.3 Place the Memory Card into Memory Card slot with the metal connectors of the Memory Card facing down
- 1.3.4 Close the Memory Card cover and push it in the opposite direction to lock the Memory Card cover

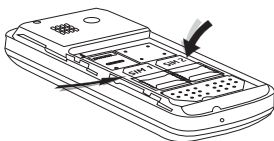


1.4 Installation of SIM Card:

 - 1.4.1 Locate the SIM Card sockets
- 1.4.2 Slide the SIM Cards into SIM Card sockets (as shown below)

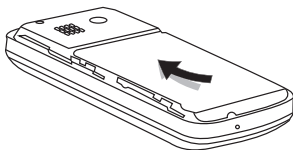


1.5 Installing the battery:

 - 1.5.1 Slide the battery into the compartment in such a way that the metal connectors of the battery are aligned with the metal connectors of the phone
- 1.5.2 Push the battery down into the compartment and ensure that the battery is securely placed in the compartment

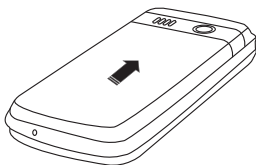

1.6 Putting the battery cover:

 - 1.6.1 Place the battery back cover over the phone squarely with arrow on the battery cover facing up
- 1.6.2 Slide the back cover in upward direction to engage the locks

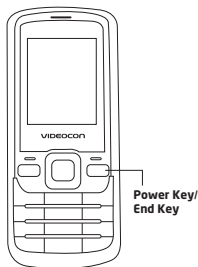

1.7 Switch On/Off the handset by gently pressing the Power Key/ End Key:

- 1.7.1 Gently press the Power/ End Key and keep it pressed for 3-5 seconds to Switch On/Off the handset



2 BASIC FUNCTION

2.1 MAKE A CALL

In idle screen, enter a phone number and press the Dialing key 1 to make a call from SIM 1 card or press Dialing key 2 to make call from SIM2 card.

Press the end key to end a call.

2.2 MAKE AN INTERNATIONAL CALL

Double press " * " Key for entering an international call prefix (the "+" character replaces the international access code) then enter the country code followed by the area code and the phone number. Press the calling key to make a call from the SIM 1 card or the SIM 2 card.

2.3 ANSWER OR REJECT A CALL

2.3.1 Answer a Call

To answer a call, Press Talk key.

During the conversation, click Options to display the menu which includes: **Hold single call, End single call, New Call, Phonebook, Messages, Sound Recorder, Background sound, Pitch shift, Mute and DTMF.**



2.3.2 Reject a Call

During the incoming call, press End Key to reject a call.

2.3.3 End a Call

During a call, press End Key to end a call.

2.4 CALLING OPTIONS

During an active call, you can select the following options by pressing Left Soft Key:

- **Hold single call:** To put a call on hold.
- **End single call:** End a call.
- **New call:** To make a new call during an active call.
- **Phonebook:** Shortcut to Phonebook menu.
- **Messages:** Enter the Message box, read, write and send SMSes.
- **Sound recorder:** Record the call sound.
- **Background sound:** To enable background sound.
- **Pitch Shift:** To change the pitch during the call.
- **Mute:** To mute the call.
- **DTMF:** Can select On or Off.
On pressing Right Soft key user get the following option:
- **H-Free:** To use the phone in hands free mode.



3 CALL HISTORY

On standby mode, press the dialing key¹ to directly access the dialed call logs of the SIM 1 card, and press the dialed key 2 to directly access the dialed call logs of the SIM 2 card.

3.1 SIM 1 CALL HISTORY

3.1.1 SIM 1 missed calls

You can see the latest 30 missed calls.

3.1.2 SIM 1 dialed calls

You can see the latest 30 dialed calls.

3.1.3 SIM 1 received calls

You can see the latest 30 received calls.

3.1.4 Delete SIM 1 call logs

Delete Missed calls, Dialed calls, Received calls and Delete all calls from SIM 1 card.

3.1.5 SIM 1 call time

View **Last call's time, Dialed calls time, Received calls time** and **Reset all** the call's time on SIM 1 card.

3.1.6 SIM 1 call cost

View **Last call cost** and **Total call cost** on SIM 1 card. You can also **Reset cost** and set the **Maximum cost** along with the **Price per unit** on SIM 1 card. It requires network support.

3.1.7 SIM 1 SMS counter

View and reset the numbers of short messages sent and received on SIM 1 card.

3.1.8 SIM 1 GPRS counter

View the volume of GPRS last sent, last received, all sent and all received on SIM 1 card. You can also reset the GPRS counter on SIM 1 card.

3.2 SIM 2 CALL HISTORY

Please refer to the content in **"SIM 1 call history"**.



4 FUN & GAMES

Select **Menu > Fun & Games > Games**, to access the games.

Game interface offers option to select a game, the user can select the following games from the interface:

- **F1 race**
- **Riches**

On selecting a particular game, users receive the following options:

Start Game: To start the game.

Game Level: Enables to configure the game level.

Best Grades: Enables to see best grades/score.

Game Help: Display the introduction how to play the game

Game interface also displays the Game settings option:

Games Settings:

You can configure your game settings such as background music, sound effect, vibration and volume by this option.





5 SERVICES

5.1 STK

STK (SIM Application Toolkit) is shown only if it is provided on your SIM card. For further details, please contact your network operator.

5.2 WAP

WAP function enables you to use the phone to surf the internet.

Homepage: Enables to connect the browser to the homepage, you have set.

Bookmark: The phone displays a list of stored bookmarks. To add a page to bookmarks go to **Bookmarks > Options > Add bookmark**.

Recent pages: Displays the recent pages visited.

Input address: Enables to enter the web address of a website, you want to visit.

Service inbox: This folder stores all the messages from the operator and WAP functional messages.

Settings: Enables to set the browser settings, including Select **SIM**, **Edit account**, **Browser options**, **Service message settings**, **Clear cache**, **Clear cookies** and **Trusted certificates**.

5.3 DATA ACCOUNT

This function enables to set the following account information:

GSM data: Enables you to set Account name, Number, User name, Password, Line type, Speed and DNS.

GPRS: Enables you to set Account name, APN, User name, Password and Authentication type.





6 PHONEBOOK

You can save 500 phone numbers in your phone memory. You can access the Phonebook to search all records saved in the mobile phone and your SIM card too.

6.1 QUICK SEARCH

Quick Search allows you to quickly search an entry in the Phonebook by entering the key letters or words of the name.

You can quickly locate the number of the person you want to contact. Please enter the initial letter of the person's name, and related records about it will display in the middle of the screen. Please use the Up / Down key to select the number as desired, and then press Talk Key to make a call.

6.2 SEARCH CONTACT

Search contact allows searching the specified contact by entering some words in the edit interface.

6.3 ADD NEW CONTACT

You can add a new contact entry to the phonebook of the SIM 1, SIM 2 and Phone memory.

On selecting SIM 1 and SIM 2 to save the phone number, you get the following fields to edit:

- Name
- Number

On selecting Phone memory to save the phone number, you get the following fields to edit:

- Name
- Number
- Home Number
- Company Name
- E-mail Address
- Office Number
- Fax Number
- Birthday
- Associated Picture
- Associated Sound
- Caller Group

6.4 COPY ALL

This function enables you to copy all entries from the SIM card to the phone/other SIM and vice-versa.



6.5 DELETE

You can delete entries from the both SIM card and the Phone memory.

To delete entries from SIM card or Phone, select “**From SIM 1**”, “**From SIM 2**” (if both are inserted in the phone) or “**From Phone**” respectively.

You can select “**One by One**” to delete entries by selecting particular phone numbers.

6.6 CALLER GROUPS

You can set group name, associated sound, associated picture and members for different caller groups.

6.7 MY vCARD

You can create your own card via vCard method. The options available are:

Edit my vCard: Enables you to edit the vCard by entering details in the following fields:

- **Name**
- **Number**
- **Home number**
- **Company name**
- **Email address**
- **Office number**
- **Fax number**

Send my vCard: Enable you to send your vCard.

6.8 vCARD VERSION

This function enables you to set the version of your vCard.

6.9 BLACKLIST

This function enables you to add the number in the blacklist and activating it enables you to block calls from that number.

6.10 SPEED DIAL

You can assign number keys from 2 to 9 as a shortcut to dial important phone numbers. Press and hold the corresponding number key to dial a number.



6.11 SETTINGS

It enables you to set/configure the following:

Preferred Memory Storage: Enables you to select your preferred storage location, when saving a phone number.

Fields: Enables you to configure and set different fields.

Extra numbers: Enables you to set the **Owner number** and the **Service dialing number** in both the SIM cards and the **SOS number** in the phone.

6.12 MEMORY STATUS

This function enables you to check out the memory status individually, for both the SIMs and the phone.



7 MESSAGES

7.1 SMS

7.1.1 Write Message

You can create and send message by this option:

Select **Menu > Messages > SMS > Write Message**. You can write a message maximum of 612 characters. It also displays the length indicator which counts backwards, from 160 to 0, but it varies from page to page as you can write a 4 page message too.

Selecting **Option** provides the following sub-options to perform:

Done: It provides the option to select SIM 1 or SIM 2 and after selecting a SIM the following options appear: **Send only, Save and Send, Save and Send by group**.

Use Templates: It provides option to insert the templates available in the phone.

Insert Object: It provides option to insert object such as Picture, Animation, Melody and Sound from their respective folders.

Format Text: It enables you to configure Text Size, Text style, Alignment of the message text and lets you insert a new paragraph.

Insert Number: It enables to insert any number from the phonebook in the message.

Insert Name: Enables to insert the name from the phonebook in the message.

Insert Bookmark: Enables to insert any bookmark from the saved bookmark list in the message.

Input Method: It enables to select the method and language to edit the message.

7.1.2 Inbox

All received messages are saved in the inbox. You can edit or forward these messages.

Select **SMS > Inbox > SIM 1 or SIM 2** (if both SIM cards are used), then press **Option** to display the following options:

Reply: Enables you to reply the message.

Delete: Enables you to delete the current message.

Edit: Enables you to edit the current message.

Forward: Enables you to forward messages.

Call: Enables you to call the phone number from which the message is received.

Delete Same Number: Enables you to delete all the messages received from a number.

Copy to Phone/SIM: Enables you to copy the message.

Move to Phone/SIM: Enables you to move the message.

Delete all: Enables to delete all the messages.

Copy all: Enables to copy all the messages.

Move all: Enables to move all the messages.

Use number: Enables you to extract the number from the message and then provides the option to dial or save the number in the phonebook.

Use URL: Enables you to extract/use the URL address from the message.

Use E-mail address: Enable you to extract/use the E-mail address from the message.

7.1.3 Outbox

This folder contains the messages which couldn't reach the destination. It also contains the messages which are opted to be saved.

7.1.4 Templates

Your phone contains 10 SMSes which can be used commonly. You can Edit or Erase them.

7.1.5 SMS settings

SMS settings help in to edit the settings for the text messages. It provides the following options:

Profile Settings:

Enables you to select the profile you have configured in your mobile phone.

Common settings:

- **Delivery report:** Enables you to get the delivery notification by making the status ON/OFF.

- **Reply path:** Enables you to power ON/OFF the reply path.

Memory status:

It enables you to check the SIM and Phone memory status.

Preferred Storage:

It enables you to select your preferred storage location as "SIM memory" or "Phone memory"



Note:

If either of your storage location is already full, the phone will automatically save your message to a corresponding location.



7.2 MMS

Your phone also supports Multimedia Messaging Service (MMS). It enables you to send images, sound files and text.

7.2.1 Write message

You can create multimedia messages by this option. The fields which can be inserted are:

To: Enables to insert the main recipient number.

Cc: Enables to enter carbon copy recipient.

Bcc: Enables to enter blind carbon copy recipient.

Subject: Enables to enter and edit subject.

Edit content: Enable to edit content.

7.2.2 Inbox

This folder contains the multimedia messages received from other users.

7.2.3 Outbox

This folder contains the messages which are unsuccessful to reach the destination. It also contains the messages which are opted to be sent and save both.

7.2.4 Drafts

This folder is a temporary storage place for MMS that are waiting to be sent.

7.2.5 Templates

Your phone contains five default templates of multimedia messages.

7.2.6 MMS settings

MMS settings help in to edit the settings for multimedia messages. The different options are:

Compose: Enables you to configure the settings for creating the multimedia message including **Creation mode**, **Picture resizing**, **Best slide duration**, **Auto signature** and **Signature**.

Send: Enables you to set Validity period, Delivery report, Read report, Priority, Slide timing and Delivery time for sending multimedia messages.

Retrieve: Enables to set retrieve options, Read report and Delivery report for multimedia messages.

Filter: Enables to allow/reject multimedia messages on some criteria:

Anonymous – Allow/Reject

Advertisement – Allow/Reject

Server profile: Enables you to activate and edit the server profile. Please contact your service providers for settings.

Memory Status: Enables you to view the memory usage ratio, i.e. the used space and the free space available for multimedia messaging.

7.3 E-MAIL

Your phone is capable of creating, receiving and sending E-mails. To enable this feature you have to create/configure your mail account in the phone by using the option E-mail Accounts. The different options available under this function are as follows:

7.3.1 Send and receive

This function enables you to send and receive the E-mail.

7.3.2 Write an E-mail

This function enables you to write and send the E-mail.

7.3.3 Inbox

This folder contains the email received on your account.



Note:

In the inbox you can only see the Subject/Header of the e-mail received.

7.3.4 Outbox

This folder contains e-mails which contain the messages to be sent or messages which are still under the sending process.

7.3.5 Sent

This folder contains the e-mails which have been sent.

7.3.6 Drafts

This folder contains all the e-mails which have been saved previously or currently.

7.3.7 Clear mailbox

This function enables you to delete the e-mails from your mailbox.

7.3.8 Delete marked

This function enables you to delete the e-mails which are marked.

7.3.9 E-mail accounts

This function enables you to configure the e-mail account and save it. During configuration of the e-mail accounts, the user has to fill the following fields:

- **E-mail Address** – For example: ish@gmail.com
- **Protocol** – POP3 or HTTP
- **Data Account** – GSM/GPRS
- **Incoming Server** – gmail.com
- **Outgoing Server** – gmail.com
- **Username** – For example: ISH
- **Password** – For example: asdefe



7.3.10 Templates

Your phone contains 10 default templates for e-mails. You can edit and erase them.

7.4 VOICE MAIL SERVER

Voice Mail Server is a network service to which you may need to subscribe. For more information, contact your service provider.

Select **Message > Voice Mail Server**, to access this option.

7.5 BROADCAST MESSAGE

Broadcast Message enables you to receive messages on various topics, such as weather or traffic conditions from your service provider (network service). For available topics, relevant topic numbers and more information, contact your service provider.

The options available under this are:

Receive mode: Enables to make receiving mode ON/OFF.

Read message: Enables to read the messages received.

Languages: Enables to set the preferred language.

Channel settings: Enables to set the preferred channel.





8 USER PROFILES

You can select your own user profile for the phone.

Select **Menu > User Profile**, to access different profiles:

- **General**
- **Meeting**
- **Outdoor**
- **Indoor**
- **Headset**
- **Bluetooth**
- **Power save**

You can activate and customise them as per your need.

Activate: Enables you to select a particular profile and activate it.

Customise: Enables you to set Tone setup, Volume, Alert type, Ring type, Extra tone and Answer mode.





9 SETTINGS

9.1 DUAL SIM SETTINGS

You can set the dual SIM settings on you mobile phone according to the following options:

- **Dual SIM open**
- **Only SIM1 open**
- **Only SIM2 open**
- **Flight mode**

While on a flight (where the use of mobile phone is prohibited), you can select the flight mode so that the phone will not connect to any network. However, alarm and the calendar reminder will remain on. You can still use the multimedia features.

9.2 PHONE SETTINGS

Select **Menu > Settings > Phone Settings**, to get access to these options:

Time and Date: Enables to set time and date by setting home city, time, date and format.

Scheduled power on/off: Enables to set the time for automatic power on/off.

Language: Enables to select the desired language for the display text.

Preferred input methods: Enables to select the desired input method for the default input method.

Shortcuts: Enables to set the shortcuts for the function you use often.

Dedicated key: Enables to configure shortcut functions for the up, down, left, and right key respectively.

Auto update of date and time: Enables to On/Off the auto update process of time and date.

9.3 DISPLAY CHARACTERISTICS

You can set your own display characters. Select **Menu > Settings > Display characteristics** to access this feature. The characteristics offered under this feature are as follows:

Wallpaper: Enables to set the wallpaper of your own choice.

Screensaver: Enables to set the screensaver.

Themes: Enables to select and set the theme.

LCD backlight: Enables to set the time duration and brightness of backlight.

Greeting text: Enables to edit and enter the words as your greeting text, once you switch on the phone.

Menu effect: Enables to set the different type of display effects for Menu and Sub-menu.

Show date and time: Enables to set and display the date and time.



9.4 GENERAL CALL SETTINGS

This function enables you to set and enable the general settings required by your phone for different calling options such as:

SIM 1 call settings

Enables to set different call settings as follows:

Call waiting: Enables to Activate/Deactivate call diversion and check the query status.

Activate: If activated, an incoming call is signaled by a call waiting tone when you are on the other call. The number/name of the incoming call is displayed simultaneously.

Deactivate: Enables to cancel all the call waiting functions.

Query Status: Enables to enquire the current query status from the network.

Call divert: Enables to set Divert all voice calls, Divert if unreachable, Divert if no answer, Divert if busy, Divert all data calls and Cancel all diverts.

Call barring: It allows you to restrict the calls that you make and receive on your phone. You can set outgoing calls, incoming calls, cancel all or change barring password. It is a network based service.

SIM 2 call settings

Please refer to "SIM 1 call settings".

Call time reminder: Enables to set the call time reminder as **Off / Single / Periodic**.

Call time display: Enables to display the call time. It can be set **On/Off**.

Auto redial: Enables to set the auto redial **On/Off**.

Auto quick end: You can use this feature to end your call automatically by specifying the time.

You can set this feature ON/OFF or set the time limit between 1 – 9999 seconds.

Connect notice: Enables to receive the notification of connecting to a call, when activated (vibration).

Background sound: Enables to set different background sound effects.

Pitch shift: Enables to change your voice to some different pre-burned 8 kind of inflexion sounds.

9.5 NETWORK SETUP

9.5.1 Network selection

New search or select network can help search the network where you are. You can select the selection mode as: Automatic or Manual. When you select automatic, the phone will make the preferential selection according to the network. When you select manual, you are required to select the same network as the registered network.



9.5.2 Preferred network

Select the preferred networks. The default network is the network to which the SIM card belongs.

9.6 SECURITY SETUP

9.6.1 SIM 1 security setup

9.6.1.1 SIM 1 lock

The PIN number can prevent the illegal use of your SIM card. You can set SIM 1 lock On/Off by this feature.



Note:

If you input the wrong PIN code thrice you will be asked for the PUK code. PUK is used to release and modify the locked PIN. If the PUK code is not provided or missed, please contact your network operator.

9.6.1.2 Fixed dial

This function enables to set the fixed dial option on or off.

9.6.1.3 Change password

This option let you to change the password of your phone.

9.6.2 SIM 2 security setup

Please refer to the content in "SIM 1 security setup".

9.6.3 Auto keypad lock

You can lock or unlock the phone keyboard and set the key lock time between 5 seconds – 5 minutes.

9.6.4 Phone lock

You can lock or unlock the phone. Enter the password to activate or deactivate the phone lock. When the phone is locked, you will be required to enter the phone password.

9.6.5 Change password

This option let you to change the password of your phone

9.6.6 Intimacy Protection

This feature enables you to set privacy settings for your content such as:

- SMS
- MMS
- Phonebook
- Call history

On activating this function, access to this feature/content will require password.

9.6.7 Mobile Tracker

This function enables you to trace the phone incase it gets lost. Your default password is "0000". If someone inserts another SIM card in to your lost mobile, you will receive a SMS from the new SIM card indicating the new user. The different options which are to be configured are:

Status:

Enables to set the Status to **On** or **Off**

Receive Stolen SMS Number:

Receive stolen SMS number is the number to which the information could be sent. You will get SMS to that number from stolen phone when a new SIM card is inserted in your lost phone.

Change Password:

Enables you to edit/change the password.

9.7 RESTORE FACTORY SETTINGS

All settings can be restored to factory settings with this function.

The Lock code for the phone in factory settings is 0000.



Note:

On restoring the phone to factory settings, the default network setting will remain the same which was previously configured.

9.8 SOUND EFFECT

Enables to set/configure the audio effect for your mobile phone.



10 MULTIMEDIA

10.1 CAMERA

Your phone has an in-built camera to take images and record video clips. The lens of the camera is on the back of the phone and the display screen is used as the viewing window. Some key options in camera are as under:

Photos: This option enables you to directly access to the photo albums.

Camera settings:

You can adjust your camera settings through these options:

- **EV** – You can adjust the exposure value to improve the image quality according to original condition. The different options in this are: **EV -2, EV -1, EV 0, EV 1** and **EV 2**
- **AE meter** – Auto / Average / Weight / Spot.
- **Banding** – The different banding options are 50 and 60 Hz.
- **Delay timer** – The different delay time options are 5secs, 10secs, 15secs or Off
- **Cont. Shot** – The different cont. shot are 1, 3, 5 shots or Off.

Image settings:

- **Image size** – You can take and store pictures in various sizes. The different size offered by the phone are:
128 x 104
352 x 288
- **Image quality** – You can set quality of your images by selecting option from **Normal / Low / High**.

White balance: You can make your photo look cooler or warmer by adjusting the colour balance.

Scene mode: You can select scene mode of your choice.

Effect settings: You can add a distinct appeal to your pictures by applying the effects.

Storage: You can select the Phone memory or Memory card to save your pictures.

Restore default: You can restore your camera parameters to factory settings.



10.2 IMAGE VIEWER

Image Viewer provides you with a quick view of the picture functions. You can view the pictures from the photo's folder.

Browse style: You can view images in List style or Matrix style.

Storage: Set the storage location for the picture.



Note:

Maximum supported image size is 640 x 480 pixels.

10.3 AUDIO PLAYER

Audio player allows you to play audio files. You need to save music files to **My Music** folder to play directly.

Play: Play the music files.

Details: Check the details of music files.

Add to ringtones: Add the music to ringtones.

Refresh list: Update the playlist.

Settings: Settings includes Pre-playlist, Automatically generated list, Repeat, Shuffle and Background play.

The types of files which can be played are: **MP3, WAV** and **AMR**.

10.4 VIDEO RECORDER

You can record videos from your phone by the in-built vivid camera. It enables you to capture your special moments.

You can record your special moments at **2-3 frames per second**.

10.5 VIDEO PLAYER

Video player allows you to play video files and recorded video files.

Video player plays the file at **10-12 frames per second**.

10.6 FM RADIO

You can use your phone to listen to FM radio stations once the original Headset is plugged into the accessories connector.

Select **Menu > FM Radio**, to access radio controls, it also provides following options:



Channel List: Enables check out the list off all the available channels.

Manual Input: Enables to set the channel and receive the channel manually.

Preset Auto Search: Enables to search the channel automatically and reset the channel list.

Settings: Enables to set the settings for "Background Play", "Skin", "Loud Speaker", "Record Format", "Audio Quality" and "Channel Effect".

Record: Enables to record FM program while you are enjoying it

Append: If there is any record, then you can append record after it.

File List: Enables to skim over all of the records.

10.7 SCHEDULE FM RECORDER

You can schedule to record one or more FM programmes at a time, as per you configure. You can set up to four sets of recordings.



Note:

Make sure you have enough free memory on your Phone or the Memory card to store the recordings.

10.8 SOUND RECORDER

Your phone supports two kinds of recording formats: AMR and WAV. Select a format from settings in options. A call can also be recorded and saved to the Phone or the memory card.

10.9 FILE MANAGER

You can use File Manager to organise your files in folders in the Phone and Memory card.

If a Memory card is inserted, the files stored on it are organised separately.

Select Phone or Memory card and select Options to browse, copy, delete, and move files in folders.



11 ORGANISER

11.1 ALARM

You can set the device to sound an alarm at a desired time.

Select **Menu > Organiser > Alarm**, to access the alarm.

To set the Alarm, select the time and set the Options: On /Off, Time, Repeat Type, Snooze time and Alert type.

You can repeat the alarm **Once, Everyday** or as **User Defined**.

11.2 CALENDAR

You can use the phone's calendar to keep track of reminders, calls you need to make, meetings and birthdays. You can set the calendar to sound an alarm for your task.

Press the left soft key for "Options" which enables you to View Tasks, Add task, Jump To Date and Go to weekly view.

View tasks: Enables to view tasks list and add tasks.

Add task: Use Navigation key for moving to the day you want and press Options to select Add task. You can select task type such as: Reminder / Meeting / Course / Date / Call / Anniversary.

Jump to date: Enables you to input a date to jump to that date.

Go to weekly view: Enables you to access monthly view and weekly view.

11.3 TO DO LIST

You can use your phone to keep a track of Reminder, Meeting, Course, Date, Call and Anniversary.

11.4 BLUETOOTH

Your phone is enabled with Bluetooth technology. Bluetooth technology allows you to connect the device to a compatible Bluetooth device within 10 metres.

Select **Menu > Organiser >Bluetooth**, to access this feature. On selecting Bluetooth you will get following options:

Power: Enables to switch On/Off the Bluetooth.

Inquiry audio device: Enables to search all the other Bluetooth enabled audio devices in its surrounding.

My device: Enables to enquiry for new devices

Active devices: Enables to check the active Bluetooth devices.

Settings: Enables to edit/configure settings such as:

- **Visibility**
- **Change device name**
- **Authentication**
- **Audio path**
- **Storage**
- **FTP settings**

About: Displays complete information about your mobile phone's **Bluetooth** feature.



Note:

Bluetooth audio device can only be used only for calling.

11.5 CALCULATOR

You can use your phone's calculator to add, subtract, multiply and divide.

1. Press the # key to enter decimal point.
2. Press the up, down, left and right key and OK key to select +, -, x, /, + and = respectively.
3. Press Clear to delete the figure.

11.6 UNIT CONVERTER

You can make the units conversion for weight and length.

In the first entry field, select the format from which unit you want to convert and to which.

In the second entry field, enter the value to be converted.

After entering the value and press **OK** to automatically convert it into required value.

11.7 CURRENCY CONVERTER

You can use your phone for converting currency. You have to select the amount and currency rate to which it has to be converted.

11.8 WORLD CLOCK

You can scroll to browse every city's time zone in the world map. The related date and time will display at the bottom of the screen.



11.9 HEALTH

Your phone is a complete health calculator, it offers two different calculations:

11.9.1 Menstrual

This feature enables you to calculate menstrual calculation, by entering the details in the field:

Last menses date: Enter the last menstrual date.

Average Period: Enter the average period in days.

11.10 E-BOOK READER

Your phone can be used to read the books by storing them in ***.txt file*** format.

Select **Menu > Organiser > E-Book Reader**, to access/read the books stored in your E-book folder.

11.11 STOPWATCH

11.11.1 Typical stopwatch

- **Split timing:** To take intermediate timings in a sequence. To start the time observation, press Start. Press Split every time you want to take an intermediate time. To stop the time observation, press Stop. To start the time observation again, press Resume and the new time will be added to the previous time.
- **Lap timing:** To record repetitive lap timing, reset each period to zero. To start the time observation, press Start. Press Lap every time you complete a lap and want to reset for the next lap. To start the time observation again, press Resume and the new time will be added to the previous time.
- **View record:** Enables to View, Add, Edit, Delete and Delete all the list of records.

11.11.2 nWay stopwatch

- It offers to take the intermediate time for all the directions by pressing up/down/left/right key. The total time is displayed on the top of the screen.

APPENDIX I: TROUBLESHOOTING

If you encounter problems while using the phone or if it performs erratically, you can consult the information in the following table. If a particular problem cannot be resolved by using the following information, contact the dealer from whom you had purchased the phone.

Problems	Possible causes	Possible solutions
Poor reception	The network signal is too weak at your current location, for example, in a basement or near a tall building since wireless transmissions cannot reach there effectively.	Move to a location where you can receive the network signal properly.
	The network is busy at the current time, for example, during peak times there may be too much of network traffic to handle additional calls.	Avoid using the phone at such time or try again after waiting for awhile.
	You are too far from a base station for your service provider.	You can request a service area map from your service provider.
Echo or noise	Poor network trunk quality on the part of your service provider.	Press the ending key and dial again. You may be switched to a better quality network trunk or phone line.
	Poor local telephone line quality.	Press the ending key and dial again. You may be switched to a better quality network trunk or phone line.
Battery not charging properly	The battery or battery charger is damaged.	Contact the dealer.
	The temperature of the phone is below -10°C or higher than 55°C.	Adjust the battery charging environment to avoid extremes of temperature.
	Poor contact between the battery and charger.	Check all connectors to make sure all connections have been made properly.
Shortened standby time	The standby time is related to your service provider system configuration. The same phone used with different service providers' systems will not provide exactly the same length of standby time.	If you are located in an area where signaling is weak, temporarily switch off the phone.

	The battery is depleted. In high temperature environments, battery life gets shortened.	Use a new battery.
	If you are not able to connect to the network, the phone will continue to send out signals as it attempts to locate a base station. Doing so consumes battery power and will consequently shorten standby time.	Change your location to one where the network is accessible or temporarily turn off your phone.
You cannot switch your phone on	Battery power has exhausted.	Recharge the battery.
SIM card error	SIM card malfunctions or gets damaged.	Take the SIM card to your service provider for testing.
	SIM card is inserted improperly.	Insert the SIM card properly.
	Debris on the SIM card metal area.	Use a soft and dry cloth to clean the SIM card metal area.
Unable to connect to network.	SIM card invalid.	Contact your service provider.
	You are not within the service area of the service	Check the service area with your provider.
	Poor signal.	Move to an open space or if you are inside a building, move closer to a window.
PIN code is blocked	You have entered an incorrect PIN code three consecutive times.	Contact your service provider. If the service provider provides the PUK code of the SIM card, use the PUK code to unlock the SIM card.
Unable to enter information into the phonebook	The memory of the phonebook is already full.	Delete unnecessary data from the phonebook.
Unable to select certain features	Your service provider does not support these features or you have not applied for services that provide these features.	Contact your service provider.

APPENDIX II: ABBREVIATIONS AND EXPLANATION

GSM	Global System of Mobile Communication
GPRS	General Packet Radio Service
SMS	Short Message Service
WAP	Wireless Application Protocol
FDN	Fixed Dialing Numbers
SIM	Subscriber Identity Module
PIN	Personal Identification Number
PUK	Personal Unblocking Key
IMEI	International Mobile Equipment Identity
MCC	Mobile Country Code
MNC	Mobile Network Code
Call Waiting	A service provided by the network, which allows you to answer another incoming call without interrupting the active call, but it is different from a conference call. You can only talk to one party at a time, while another party is put on hold.
Call Divert	A service provided by the network, which allows you to divert an incoming call to a specified number according to different circumstances.
Roaming	The phone is not used in the area of its local registered network. It includes international and domestic roaming. In this manual it refers to international roaming only.
STK	SIM Application Toolkit