

 LAKELAND

USER MANUAL



The Lakeland Guarantee....

is probably the simplest guarantee in the world!
If you are not satisfied at any time, you receive your money back!
This is our promise.

Lakeland

Alexandra Buildings, Windermere, Cumbria LA23 1BQ
Tel: 015394 88100 Web: www.lakeland.co.uk

GLASS KETTLE

Model: 12680

Helpline No: 015394 88100

INTRODUCTION

Thank you for choosing this Lakeland Glass Kettle, and we hope you enjoy using it. Please take a few moments to read these instructions before using the kettle for the first time, and keep them in a safe place for future reference.



FEATURES

1. Lid
2. Spout
3. Release button for lid
4. Handle
5. 1.6 litre glass body
6. Water level indicator
7. On/off switch & power indicator light
8. 360° base
9. 3kW concealed stainless steel element

Operating voltage: 220-240V~50Hz

IMPORTANT SAFEGUARDS

When using this kettle, please follow these basic safety precautions.

1. Please read all instructions before using.
2. This kettle is for household use only. It is not suitable for commercial use, or for use outdoors.
3. This kettle has been designed for the purpose of boiling drinking water only. It must only be used with the 360° base supplied by the manufacturer.
4. Place the kettle well away from the edge of your worktop or table during use. Ensure the surface is level, clean and dry.

5. Do not let the power cord hang over the edge of the worktop or table, touch any hot surfaces or become tangled.
6. Do not place the kettle on or near a hot gas or electric burner, or in or near a heated oven.
7. To protect against electric shock, do not immerse the kettle, base, power cord or plug in water, or allow them to come into contact with moisture.
8. Plug the kettle into the mains socket before switching it on.
9. To prevent scalding, do not remove the lid during the boiling cycle.
10. Do not touch hot kettle surfaces. Use the handle for lifting and carrying.
11. Always unplug the kettle when not in use, and before cleaning. Grasp the plug, not the power cord.
12. The kettle is not intended for use by children or infirm people unless they have been adequately supervised by a responsible person to ensure they can use it safely. Children should be supervised to ensure they do not play with the kettle. It must not be left unattended during use.
13. Do not use the kettle if the power cord or plug show any signs of damage, or if the appliance is dropped, damaged or working incorrectly. Call the helpline on 015394 88100 to arrange a repair or replacement. Never try to repair the kettle yourself as this may cause electric shock.

USING YOUR KETTLE FOR THE FIRST TIME

Carefully unpack the kettle and remove any packaging. The kettle is cordless and its 360° base is suitable for left or right-handed use. Before using the kettle to make drinks, we recommend you fill it with fresh water and boil two or three times, then discard the water. This will remove any dust or residue left behind by the manufacturing process.

BOILING WATER

1. Ensure the kettle is switched off. Open the lid by gently pressing the release button.
2. Fill with fresh, cold water, paying attention to the MIN and MAX marks on the water level indicator. Boiling water may escape from the spout if the kettle is too full.
3. Press down the lid, and place the kettle onto the 360° base, with the spout facing away from you. Plug the power cord into a socket and switch on. Press down the kettle on/off switch. The indicator light will show the kettle is working.
4. The kettle will switch off automatically when the water has boiled, and the power indicator light will turn off. The kettle can be switched off at any time before the water boils, simply by lifting up the on/off switch.
5. Lift the kettle by its handle and pour the water. To re-boil, press the on/off switch again. After use, the kettle should be emptied of water and stored on its base. Switch off at the socket and unplug.

HELPFUL HINTS

- Always use fresh, cold water each time you boil the kettle.
- Ensure the lid is securely in place whenever the kettle is in use.
- If the kettle is accidentally switched on with too little water, the boil-dry mechanism will automatically switch it off to prevent overheating.
- If water is spilled onto the 360° base, please disconnect the kettle from the mains supply before mopping up the liquid. Ensure that the base and central socket are completely dry before using the kettle.

CARE AND CLEANING

Allow the kettle to cool completely before cleaning, and disconnect from the mains supply. The outside of the kettle may be wiped over with a damp cloth and polished with a soft, dry cloth. Do not use chemicals, steel wool or abrasive cleaners on the inside or outside of the kettle. **CAUTION:** never immerse the kettle, base, cord or plug in water or any other liquid.

DESCALING

Over time, limescale in tap water can build up and clog the kettle, reducing its efficiency. We recommend descaling the kettle regularly using a proprietary brand of descaler, following the instructions on the packaging. The frequency will depend upon the hardness of water in your area.

RECYCLING YOUR ELECTRICALS

Along with many other high street retailers, Lakeland has joined a scheme whereby customers can take their unwanted electricals to recycling points set up around the country. Visit www.recycle-more.co.uk to find your nearest recycling point.




ELECTRICAL CONNECTIONS

THIS APPLIANCE MUST BE EARTHED

This appliance is fitted with a fused three-pin plug to BS1363 which is suitable for use in all homes fitted with sockets to current specifications. If the fitted plug is not suitable for your socket outlets, it should be cut off and carefully disposed of. To avoid an electric shock, do not insert the discarded plug into a socket.

Fitting a new plug

If for any reason you need to fit a new plug, the flexible mains lead must be connected as shown here. The wires in the mains lead fitted to this appliance are coloured in accordance with the following code:

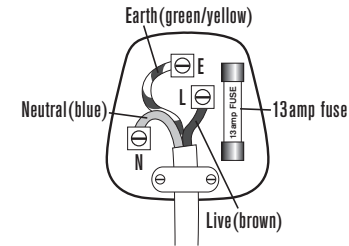

Connect BLUE to Neutral (N)

Connect GREEN & YELLOW to Earth (E)

Connect BROWN to Live (L)

13 amp fuse to be used

If the colours of the wires in the mains lead of this appliance do not correspond with the coloured markings identifying the terminals in your plug, proceed as follows. The wire which is coloured green and yellow **MUST** be connected to the terminal which is marked with the letter E (Earth) or coloured green. The wire which is coloured blue **MUST** be connected to the terminal which is marked with the letter N (Neutral) or coloured black. The wire which is coloured brown **MUST** be connected to the terminal which is marked with the letter L (Live) or coloured red.

Before refitting the plug cover, check that there are no cut or stray strands of wire inside the plug. Use a 13 amp BS1362 fuse. Only BSI or ASTA approved fuses should be used. If you are at all unsure which plug or fuse to use, always refer to a qualified electrician.

Note: after replacing or changing a fuse on a moulded plug which has a fuse cover, the cover must be refitted to the plug; the appliance must not be used without a fuse cover. If lost, replacement fuse covers can be obtained from an electrical shop. This appliance complies with the following EEC Directives: 73/23 EEC (Low Voltage Directive) and 89/336 EEC (EMC Directive).

