

# crypto

## Peggy II



## User Manual

Version 1.0

**Contents**

**1. Introduction..... 2**

**2. Music Play ..... 3**

**3. Record Mode..... 4**



**4. Radio Mode ..... 5**

**5. Text..... 5**

**6. Settings ..... 6**

**7. Technical Specifications..... 7**

# 1. Introduction

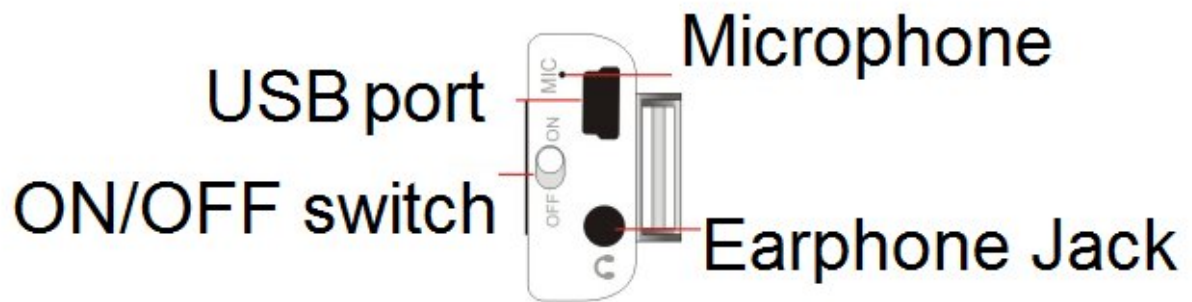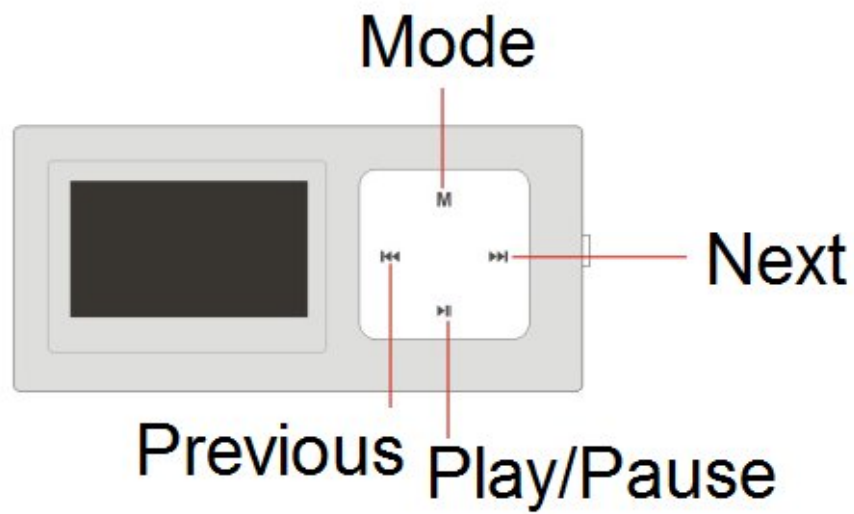

## 2. Music

Switch the **On/Off** switch to turn on the player.

In the Main Menu page, select Music mode and press **M** button to enter Music.

Press  button to start/pause the selected song.

When music is playing press **M** button to display music submenu.

- **Volume:** increase or decrease the volume level.
- **Repeat:** select the repeat mode you like between Normal, Repeat One, Folder, Repeat Folder, Repeat All, Random, Intro.
- **Equalizer:** select the equalizer you like. Natural, Rock, Pop, Classic, Soft, Jazz, DBB
- **Replay:** Press Replay to select a part of the song that you like to replay. Press > button to select the start and then press > again to select the end of replay. Press M button to disable replay function.
- **Replay times:** Select the repeat times of the replay.
- **Replay Gap:** Select the pause between each replay.
- **Exit:** Exit to music.

When Music is paused you can press **M** button to enter folder submenu.


- **Local Folder:** Select music files from the memory of the device.
- **Delete file:** Delete the current selected file.
- **Delete All:** Delete all files.
- **Exit:** Exit to music.

While Music is playing long press **M** button to display lyrics of a song.

The lyrics must be stored in memory with same name like the song in LRC file format.

Note: Greek LRC files display correct only when Greek is selected as language in the main menu.

### 3. Record Mode

Press  button to start recording. Press again to pause or press **M** button to save your recording and stop.

While recording is stopped press **M** button to enter record submenu.

- **Volume:** increase or decrease the volume level.
- **Local Folder:** Select if you want to save your recordings in the local memory.
- **REC type:** Select the recording quality you want

- 32,64,128,192,384 Kbps
- **Exit:** Exit to music.

You can play your recording in the Music menu.


## 4. Radio Mode

Press < > buttons to change radio stations manually.

Press **M** button to enter Radio submenu.

- **Volume:** increase or decrease the volume level.
- **Save:** Press to save the current playing station in one of the 20 preset memories of the device.
- **Delete Station:** Delete the selected station from the memory.
- **Delete All:** Delete all stations
- **Auto Search:** Auto search and store stations in the memory.
- **Record:** Record your favorite station. Long press **M** to save your record and return to radio mode.
- **Exit:** Exit to radio.

## 5. Text

Select the TXT file you want to view by pressing  button.

When viewing a txt file press **M** button to open txt submenu.

**Bookmark select:** Select a stored bookmark

**Bookmark add:** Add a new bookmark.

**Bookmark delete:** Delete the selected bookmark.

**Exit:** exit to txt.

Note: Greek txt files display correct only when Greek is selected as language in the main menu.

## 6. Settings

- **Backlight:** Select how many seconds the screen light will remain ON. Set 0 if you want the display to stay always ON.
- **Language:** Select the menu language.
- **Power Off:** Select power off and sleep time.
- **Contrast:** Select the display contrast.
- **Memory Info:** View memory info.
- **Firmware Version:** View firmware version.
- **Firmware Upgrade:** Press and connect device to PC for firmware upgrade.
- **Exit:** Exit to main menu.

## 7. Technical Specifications

### Audio File Types

- MP3
- WMA
- WAV

### Audio Specifications

- MP3 Bit Rate: 8-320Kbps
- WMA Bit Rate: 5-320Kbps
- SNR: 85db

### FM Radio

- Frequency: 87MHz-108MHz
- Radio Stations: 20 Preset Channels

### Recording Specifications

- 32-64-128-192-384 Kbps

### Computer Connection

- USB2.0

### Power Supply

- Lithium rechargeable  
120mAh
- Battery Life approx 8H

### Screen

- LCD display

### OS Compatibility

- Windows 2000/XP/VISTA/7

### Physical Specifications

- Dimensions: 50\*28\*14 mm
- Weight: 18.5gr

Technical specifications are subject to change without prior notice.

### Disposal of old electrical and electronic equipment



If you see this symbol on the product or on its packaging, you should hand the product over to the applicable collection point for the recycling of electrical and electronic equipment. Do not throw it away with household wastes.

The improper disposal of these products may have negative consequences for the environment and human health.

For more information about the recycling of this product, please



contact your local city office, your household waste disposal service or the shop where you purchased it.

**Declaration of Conformity\***

This product is with conformity with the council EMC directive 2004/108/EC

\*For copy of the Declaration of Conformity please contact Crypto S.A.

